


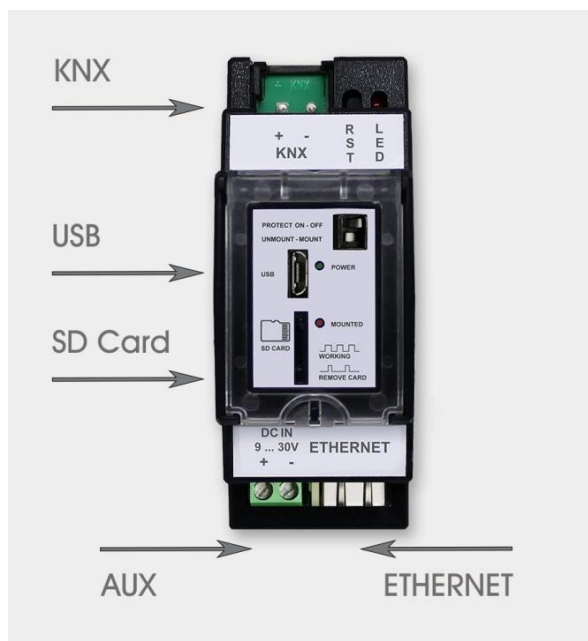
KNX-GW-II-IP-2TE	Article	Description	Article No.
Document: 7031_e3_KNX-GW2-IP-2TE.pdf			
		<p>IP gateway for coupling the KNX bus to Ethernet networks.</p> <p>Use: ETS programming / tunneling / Routing / freely programmable / visualization / special solutions</p>	
	KNX-GW2-IP-2TE	<p>Memory RAM: 1GB, Memory FLASH: 8GB Operating voltage: 9 .. 30 VDC / 1.5W Operating temperature: -25 .. +55 ° C REG housing: 2TE (35 mm) IP20</p>	40400003

Content

1 Getting Started.....	2
2 Overview	3
3 Network Settings	4
4 KNX-IP	5
5 Address Tables.....	7
6 Time Server Settings	8
7 Security & Reboot	9
8 KNX-Group Monitor	10
9 KNX Telegram Logger.....	11
10 Events & Automation	12
11 Visualization.....	15
12 Dynamic Visualization	17
13 Installation Instructions.....	19
14 Technical Data.....	19
15 General Information	19
Imprint.....	20

1 Getting Started

By confirming the IP address in the address line of your browser, you will get to the overview.
In order to be able to use the gateway, the connections KNX + ETHERNET + POWER or KNX + USB must be established. If a DHCP server is available you can connect the device by name (e.g. ArcusIPGW-II.fritz.box).



As soon as all connections are established and your router or a server in your network is working as a DHCP server (Dynamic Host Configuration Protocol), the IP gateway in your ETS can be selected as a possible connection.

Gefundene Verbindungen

- Realtek PCIe GBE Family Controller (3) - 224.0.23.12
- ArcusIPGW - 192.168.1.188 (MAC: 00:04:A3:E3:D3:47)

The default name on delivery is *ArcusIPGW-II*. In addition, a sticker is attached to the device itself, which bears the unique MAC address, so an assignment via the MAC address is possible if several KNX IP gateways are used.

In this example, the IP gateway has been assigned the *IP address 192.168.1.188*.

Further settings can then be made directly via the device's web interface. To do this, the standard browser of the PC is opened and the IP address is entered in the address line.

If the name server is working, the gateway can also be reached under '*IP-Gateway-Name*'.*your.domainname*. (e.g. *ArcusIPGW.fritz.box* with a fritzbox as a name server).

Ethernet over USB:

When the gateway is connected to a PC via USB, a network 169.254.1.x is established and the device can be reached via the IP address 169.254.1.1. Here the gateway is the DHCP server, the connection does not require any further settings.

2 Overview

The appearance of the following pages can change depending on the software version. By confirming the IP address in the address line, you get to the overview.

arcus-eds KNX-IP-GatewayII v. 3.04c DE EN

Overview

Functions

- Tunneling with up to 16 channels
- Routing
- Group monitor for HTML-Browser (only browsers with websockets)
- Bus monitor (only with routing deactivated)
- Own Acknowledge-table
- NTP-Client with KNX time server function
- Data logging on SD-Card with lists and graphs on browser
- Up to 32 events, time- and group- based for command line functions and scripts
- Messenger client for XMPP (Jabber)
- SMTP client for Email notifications
- Local group cache for lowering the busload on read requests with exception table
- Simple framework for HTTP-requests
- Simple HTML-Visualisation with standard HTML syntax
- Up to 256 Timers organized in groups
- USB network device for local configuration

New

- OpenVPN preinstalled
- Softether-VPN preinstalled
- MQTT(Mosquitto server) preinstalled
- NODE-RED preinstalled
- Button server with up to 256 buttons, 64 stations und 256 groups
- Configurable Arcus-Visualisation with browser-based configuration and password protection

Security

- SSH/SFTP ssl-encrypted
- Different passwords for different functions
- Protect switch for hardware-deactivation of different functions

Open system

- Data access with sftp
- Text console with ssl

Arcus-EDS GmbH

[Visit us on www.arcus-eds.com](http://www.arcus-eds.com)

Arcus-EDS KNX-IP Gateway
Date: 2020-12-05

This view provides an overview of the general functions and options. The left tabs are used to navigate through the device's setting options; the following window appears once per session:

Under factory settings the Username and password are not assigned. To continue, press Enter or Log In. If no settings pages can be opened, the safety switch may be deactivated. Enable it for unrestricted access.

arcus-eds KNX-IP-GatewayII v. 3.03 DE EN

Overview

Login

Username:

Password:

Arcus-EDS KNX-IP Gateway
Date: 2020-12-05

3 Network Settings

Device name in the network (standard: *ArcusIPGW-II*) can be changed as required and is used for identification in the network. MAC address: Cannot be changed and corresponds to the address attached to the outside of the gateway.

The screenshot shows the web interface of the arcus-eds KNX-IP-GatewayII v. 3.04c. The interface has a sidebar on the left with navigation links: Overview, Network Settings (selected), KNX-IP, Address tables, Time server settings, Security & reboot, KNX group monitor, KNX telegram logger, Events & scripts, HTML-Visualisation, Timers, and Logout. The main content area is titled 'Network' and contains the following settings:

- Device name in network:** ArcusIPGW-II-LABOR
- MAC-Address:** 54:10:EC:38:E3:8C
- DHCP:** ☒
- IP-Address:** 192.168.1.22
- Network gateway address:** 192.168.1.1
- Network mask:** 255.255.255.0
- DNS name server:** 192.168.1.1
- Save** button
- OPEN-VPN:**
 - Use VPN:** ☐
 - Save** button
 - Config File (.ovpn):**
 - Durchsuchen... Keine Datei ausgewählt.
 - Upload** button
- SOFTETHER-VPN (www.softether.org):**
 - Use softether:** ☐
 - VPN server address:** 192.168.30.2
 - Save** button
 - Reset server** button
- Startpage:**
 - Startpage of the webserver:** [empty field]
 - Save** button

At the bottom of the interface, it says: Arcus-EDS KNX-IP Gateway, Date: 2020-12-05.

DHCP: Active / Inactive can be selected

No manual intervention required. The following fields are only used to display the current configuration. The values are provided by the DHCP server.

DHCP inactive:

Manual configuration required. IP address, gateway address, network mask and DNS name server must be configured manually. Please ask your system administrator for the permissible settings.

The screenshot shows the DHCP inactive configuration form. It contains the following fields:

- DHCP:** ☐
- IP-Address:** 192.168.1.22
- Network gateway address:** 192.168.1.1
- Network mask:** 255.255.255.0
- DNS name server:** 192.168.1.1
- Save** button

OPEN-VPN:

Open-VPN is pre-installed and can be used to integrate the gateway into remote networks. An Open VPN configuration file (.ovpn) provided by the system administrator can be used for the setup.

Softether VPN:

Softether vpn offers an easy way to set up and use ad-hoc networks. The gateway can then be reached in the virtual network using the VPN server address to be entered. Caution: Depending on the setting, Softether can bypass firewalls ("hole punching"). This should definitely be approved by the responsible system administrators. "Reset server" deletes all defined connections, these must then be created again. Utilities are available at www.softether.org.

Start page:

It can be specified which page is used as the start page (e.g. "/ visu / index"), without specifying "/overview.html" is used.

After changes have been made in the input fields, these must be confirmed with "Save" in order to be adopted.

4 KNX-IP

Port:

The standard port for KNX-IP is 3671. If there is a change, the automatic detection by the ETS will not work. However, you can also adjust the port in the communication settings of the ETS and thus set up an individual KNX-IP network.

Multicast address:

The standard multicast address for KNX IP routing is 224.0.23.12. This address is reserved. If there is a change, the standard routing will not work. However, if you operate several devices with a different address, you can set up an individual KNX-IP routing network.

Physical addresses:

Up to 16 physical addresses can be created for tunneling connections. So 16 connections can be open at the same time.

The default settings for the **physical addresses** are **15.0.0** and **15.0.1**.

These must be adapted to your KNX topology.

Tunneling:

Tunneling can be deactivated. Then no tunneling connection is possible.

Routing:

Routing can be activated. The default setting is 'deactivated' to avoid unwanted effects when operating multiple gateways without correct routing tables.

Discovery:

Discovery is activated so that the device can be localized in the network using the ETS.

If automatic detection is not possible, the connection must be configured manually in the ETS.

Local group storage:

If the group cache is activated, the telegrams are answered directly by the gateway in the event of a read request with low priority, provided that data is already available. In the ETS you will find telegram responses in the group monitor. No responses are displayed in the HTML group monitor, which reproduces the telegrams on the bus.

Initialize at startup:

"Initialize at start" fills the group cache with the last values of the data logger when restarting.

Clear cache:

"Empty cache" completely resets the group cache.

After changes have been made in the input fields, these must be confirmed with "Save" in order to be adopted.

Bus voltage monitoring:

The bus voltage can be read periodically and saved to a fictitious group address in the data logger. The value is also available in the group monitor of the web view.

.esf / .xml project file:

In order to be able to select the group addresses by name in some input fields, an .esf file or an XML file from the ETS can be loaded onto the device.

Additional software:

Additional software packages are available for activation under Extra Software.

These can be from third-party providers (e.g. Node Red) or enable internal functions (e.g. Arcus visualization)..

5 Address Tables

All settings related to acknowledge, logging and routing tables are made in this tab.

Acknowledge tables

Acknowledge tables are helpful when it comes to reducing the traffic on the KNX bus. As soon as a telegram is not confirmed in the KNX bus, it is sent again up to 5 times. This unnecessary bus load disrupts the process and, in the worst case, data packets can be lost.

Logging tables

Logging tables determine which addresses are recorded and saved in the KNX bus. The data is backed up on a 32 GB µSD card, which is inserted into the front of the device. Alternatively, the data can be stored in the internal memory (not recommended for high bus traffic). By default, all traffic is saved. (µSD card not included in delivery)

Cache exception table:

Group addresses from the exception table are not saved in the local group memory, every group request is forwarded to the bus.

Routing tables:

Routing tables are only active when routing is activated (KNX-IP).

Routing tables are required as soon as KNX values are to be transferred to the IP or from IP to KNX. This filtering regulates the traffic so that only specially selected objects are forwarded. Any further communication is excluded.

The parameterization for the acknowledge and routing tables can be done **for** group addresses and **for** physical addresses.

.html routing file:

A filter table from the ETS can be uploaded in HTML format.

The routing information is transferred to the tables via "Use"

The screenshot shows the web interface of the arcus-eds KNX-IP-GatewayII v. 3.04c. The interface is in German and English. The main menu on the left includes: Overview, Network Settings, KNX-IP, Address tables (selected), Time server settings, Security & reboot, KNX group monitor, KNX telegram logger, Events & scripts, HTML-Visualisation, Timers, and Logout. The main content area is titled 'Address tables' and contains three sections:

- Acknowledge tables:**
 - Group addresses: 1-4/*
 - Group addresses ACK: 1-4/*
 - Physical addresses: 1-4/*
- Logging tables:**
 - Group addresses: 1-4/*
 - Group cache exclude: 1-4/*
- Routing tables:**
 - Group Address forward IP to KNX: Broadcast (0/0/0) [checked]
 - Physical Address forward IP to KNX: Default () [checked]
 - Group Address forward KNX to IP: Broadcast (0/0/0) [checked]
 - Physical Address forward KNX to IP: Default () [checked]
 - .html (ETS) Routing file: File: Not loaded

At the bottom, there are buttons for 'Datei auswählen', 'Keine Dat...usgewählt', and 'Upload'. The footer shows 'Arcus-EDS KNX-IP Gateway' and 'Date: 2020-12-05'.

Examples for valid table syntaxes:

//*	All telegrams
1/1/0	Filtering on the group address 1/1/0
1/1/0 1/5/0	Filtering on the group addresses 1/1/0 and 1/5/0
1/1/*	Filtering on the subgroup 1/1 / xxx
1/1,3,22/*	Filtering on the subgroups 1/1 / xxx, 1/3 / xxx and 1/22 / xxx
1/1-6/4,5,30	Filtering on the group addresses 1/1/4, 1/1/5, 1/1/30, 1/2/4, 1/2/5, 1/2/30, 1/3/4, 1/3/5, 1 / 3/30, 1/4/4, 1/4/5, 1/4 / 30, 1 / 5/4, 1/5/5, 1/5/30, 1/6/4, 1/6 / 5, 1/6/30

6 Time Server Settings

The KNX-IP gateway can obtain its time from an NTP time server (Network Time Protocol) if an NTP time server can be reached.
By choosing the correct time zone and specifying the automatic daylight saving time, the local time is set relative to UTC time (formerly GMT).
The gateway can be used as a KNX time server. The date and time are then sent regularly at the following intervals:

- Don't send
- Every minute
- Every hour
- 1x daily

When sending every minute, it is sent at the beginning of the minute, with daily sending around 2:00 a.m. As soon as the addresses for time and date have been inserted in the format (x / x / xxx), the time server is active.

The correct connection to the time server can be checked using the time stamp. If the time server cannot be reached from the network, the time should be synchronized with the computer time using the Set Time button.

If there is no permanent network connection, the internal clock continues to run even in the event of a power failure. However, a lower accuracy must be expected.

CAUTION !

For correct data logging, the time must be set or an NTP server must be accessible!

7 Security & Reboot

Change login and passwords

The login name and password are unset by default, but should be changed individually.

An independent user and password is required to use SSH / SFTP. Then the device can be reached via telnet or putty as well as an sftp client.

A separate password can be selected for the visualization.

Update

As soon as software-updates are available, they can be downloaded from our website (www.arcus-eds.de). Customer-specific adaptations are also delivered as updates via packed files.

Action safety switch

All selected functions are switched off when the safety switch is actuated (see detailed front view).

Restart


A complete system restart is carried out. The device can no longer be addressed for a few seconds.

Configuration

System settings can be saved and restored.

System settings contain all settings from the following tabs:

- Network settings
- KNX-IP
- Address tables
- Time server settings
- Security & restart
- Automation
- visualization

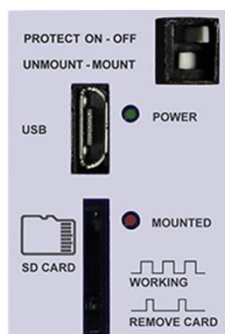

- ← Sicherheitsschalter
- ← Mount/ Unmount µSD Card
- ← Power LED
- ← USB Host
- ← Status LED µSD Karte
- ← Zugang µSD Karte


The power LED lights up as soon as AUX is connected. If the LED does not light up, please check the supply terminal.

The µSD card is inserted and mounted using a switch.

Status LED µSD card indicates the current status:

off	µSD not available
Short blink	µSD on mount/unmount process
Flashing steadily	µSD trying to mount new card
Permanently on	µSD is mounted and ready for use

8 KNX-Group Monitor

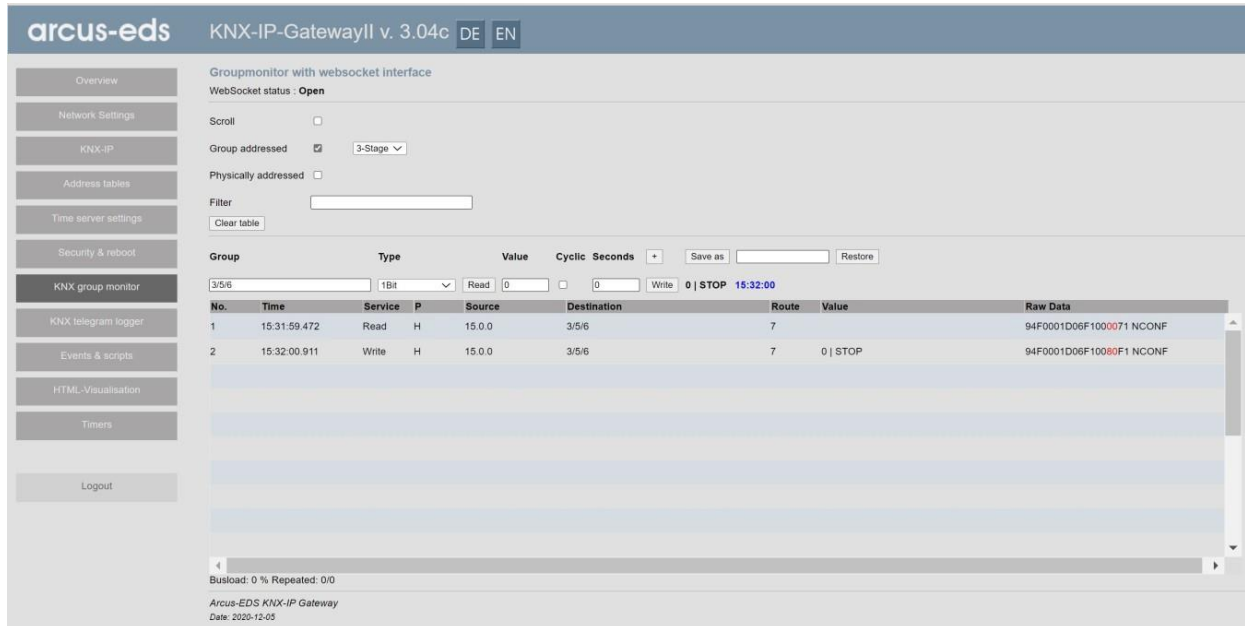

With the KNX group monitor it is possible to monitor or send telegrams on the KNX bus in real time. The side of the KNX group monitor is divided into a configuration area and a telegram area.

In order to operate the browser must support websockets.

A 2-level or 3-level addressing can be selected in the configuration and the communication of the physical addresses can be hidden.

Automatic scrolling can be activated or deactivated for the display and an address filter can be set to monitor specific addresses. The filter can be applied to individual addresses, entire main groups and subgroups or to address ranges.

Filter examples:

[empty]	All telegrams are displayed
1/1/0	Only telegrams with group address 1/1/0 are displayed.
1/1/0 1/5/0	All telegrams of the group address 1/1/0 and 1/5/0 are displayed.
1/1/*	All telegrams of subgroup 1/1 / are displayed.
1/1,3,22/*	All telegrams of the subgroups 1/1 /, 1/3 / and 1/22 / are displayed.
1/1-6/4,5,30	All telegrams of the group address are 1/1/4, 1/1/5, 1/1/30, 1/2/4, 1/2/5, 1/2/30, 1/3/4, 1/3/5, 1 / 3/30 1/4/4, 1/4/5, 1/4/30, 1/5/4, 1/5/5, 1/5/30, 1/6/4, 1/6/5, 1 / 6/30 displayed.

In the group monitor itself, several lines (maximum 100 lines) can be displayed for different group addresses. A value can be written or read to the respective group address per line. The last written value is then at the end of the line with a time stamp. In addition to sending once, cyclical sending is also possible. For recurring tasks, the configuration can be saved by a name (locally on the PC) and restored later.

The table below the lines shows all telegrams that match the set filter. The approximate bus load and the number of repetitions are displayed every second under the table.

9 KNX Telegram Logger

The KNX IP gateway is able to save telegrams.

This can be done internally on the eMMC of the gateway or on a used SD card.

The internal storage must be confirmed with a tick "Internal (eMMC)".

The stored telegrams can be called up, they can be filtered by time period and address.

The number of lines to be loaded can be entered in the "Lines" control field and the lines loaded last are displayed when "Scroll" is activated.

The loading of the telegrams is started via "Retrieve data" and the number of x lines is loaded. When you click on "More", the next x lines are loaded. Alternatively, the data can be downloaded to the PC in CSV format.

Up to ten different group addresses can be output in a graph to visualize the data.

A separate y-axis can be used for each address or the axis of the first curve is used.

arcus-eds KNX-IP-GatewayII v. 3.04c DE EN

Overview
Network Settings
KNX-IP
Address tables
Time server settings
Security & reboot
KNX group monitor
KNX telegram logger
Events & scripts
HTML-Visualisation
Timers
Logout

Datenlogger internal/SD-Karte
SD-Card 3.63GB total / 3.37GB free
☒ Internal (eMMC)

From Date 14.10.2021 Time 12:48 Last 24h
To Date 19.10.2021 Time 12:48


Rows 10000
Filter 31/7/55

Data request More... Clear table 3-Stage Download to file!

No.	Time	Service	P	Source	Destination	Route	Value	Raw Data
1	14.10.2021/12:48:17.288	Write	L	15.0.1	31/4/55	4	5646 62.00	BCF001FC37C30080160E
2	14.10.2021/12:48:25.200	Write	L	14.1.3	31/7/55	4	12077 587.84	BCE103FF37C300802F2D
3	14.10.2021/12:48:52.100	Write	L	14.2.3	31/5/55	4	11958 549.76	BCE203FD37C300802EB6
4	14.10.2021/12:49:17.316	Write	L	15.0.1	31/4/55	4	5671 63.00	BCF001FC37C300801627
5	14.10.2021/12:49:25.216	Write	L	14.1.3	31/7/55	4	12093 592.96	BCE103FF37C300802F3D
6	14.10.2021/12:49:52.108	Write	L	14.2.3	31/5/55	4	11958 549.76	BCE203FD37C300802EB6
7	14.10.2021/12:50:17.376	Write	L	15.0.1	31/4/55	4	5696 64.00	BCF001FC37C300801640
8	14.10.2021/12:50:25.232	Write	L	14.1.3	31/7/55	4	12093 592.96	BCE103FF37C300802F3D
9	14.10.2021/12:50:52.112	Write	L	14.2.3	31/5/55	4	11961 550.72	BCE203FD37C300802EB9
10	14.10.2021/12:51:17.372	Write	L	15.0.1	31/4/55	4	5696 64.00	BCF001FC37C300801640

The diagram is generated after loading the telegrams using the "Diagram" button.

If data has been reloaded, the graphs must be updated.

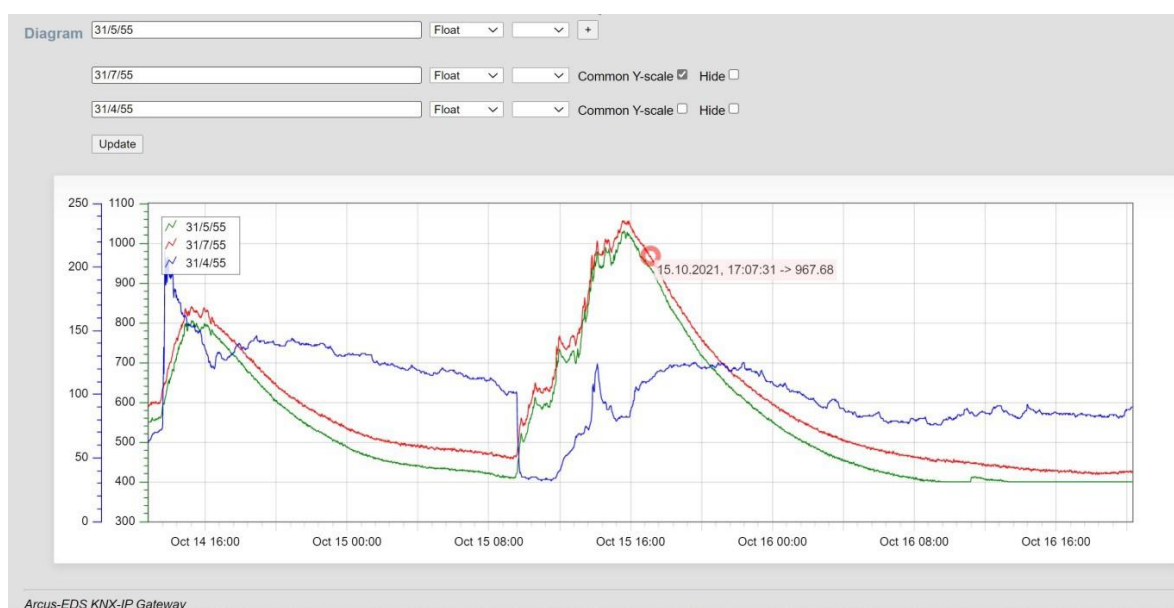

10 Events & Automation

In order to receive notifications, an e-mail and / or XMPP messenger client must be configured. For the correct setting of the SMTP server, ask your system administrator or your provider. If an SMTP connection is configured, a service mail can be sent to an e-mail address in the event of problems with the µSD card.

Attention!

If the configuration is incorrect, it is not possible to send an e-mail or an instant message!

E-Mail / XMPP

Presence simulation

Stored group telegrams can be played back with an offset of a maximum of 28 days, provided that data from the data logger is available. This is activated or deactivated using a group address. The group addresses (or address ranges) to be sent must be set.

Presence simulation:

Active ☒

Timeshift in days Daily from until

Enable object Enable value Disable value

Group address(es)

Group address(es)

Events

A maximum of 11 event-controlled actions can be implemented. Either the command to be executed is written directly into the "Execute" line or the corresponding script file is selected. Linux Bash or Python are available as scripting languages for the user.

Events are:

- Time-controlled daily or hourly
- Object-controlled in the event of an update or change with an object value equal to zero or not equal to zero
- Once at system start (after X minutes)

The event can be executed by pressing the "Test" button.

Events:

Active: ☒ Eventtype: Time:

Execute:

Remark:

Scripting files

File 1:

☒ Dos2Unix

Http-request-scripts

☒ Dos2Unix

Arcus-EDS KNX-IP Gateway
Date: 2020-12-05

Script files

Here you select the available scripts. Please note that Dos2Unix is ticked. If you remove this check mark, conversion errors between Windows and the operating system of the IP gateway can occur. As a result, your transferred scripts will not be executed correctly. The only exception would be a compiled program. The script files can also be downloaded for modification.

HTTP request scripts

The "myrequest" script can be executed via the address <my-gateway> / http / myrequest. This can also return data.

Timer

Timer groups can be created in these groups, timers are defined to output values on the bus. Once created, they can be activated and changed on the "Timer" page (see Timer result).

Timers:

Hide
Add group

Active	Name	GA	GA-Type	Value	Time	Weekdays	
Selection: active	Aussenbeleuchtung						Save Remove Add timer
Always active	Terasse	1/5/77	1-Bit	1	18:00	<input type="checkbox"/> Sun <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input type="checkbox"/> Sat	Save Remove
Always active	Terasse	1/5/77	1-Bit	0	06:30	<input type="checkbox"/> Sun <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input type="checkbox"/> Sat	Save Remove
Selection: active	Wintergarten						Save Remove Add timer
Always active	Fenster 1	5/6/33	1-Bit	1	19:00	<input checked="" type="checkbox"/> Sun <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input checked="" type="checkbox"/> Sat	Save Remove
Always active	Fenster 1	5/6/33	1-Bit	0	07:00	<input checked="" type="checkbox"/> Sun <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input checked="" type="checkbox"/> Sat	Save Remove

Timer result

arcus-eds KNX-IP-GatewayII v. 3.04c DE EN


Overview
Network Settings
KNX-IP
Address tables
Time server settings
Security & reboot
KNX group monitor
KNX telegram logger
Events & scripts
HTML-Visualisation
Timers
Logout

Timers:

Active	Name	Time	Weekdays	
<input checked="" type="checkbox"/>	Aussenbeleuchtung			
	Terasse	18:00	<input type="checkbox"/> Sun <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input type="checkbox"/> Sat	Save
	Terasse	06:30	<input type="checkbox"/> Sun <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input type="checkbox"/> Sat	Save
<input checked="" type="checkbox"/>	Wintergarten			
	Fenster 1	19:00	<input checked="" type="checkbox"/> Sun <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input checked="" type="checkbox"/> Sat	Save
	Fenster 1	07:00	<input checked="" type="checkbox"/> Sun <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input checked="" type="checkbox"/> Sat	Save

Arcus-EDS KNX-IP Gateway
Date: 2020-12-05

11 Visualization

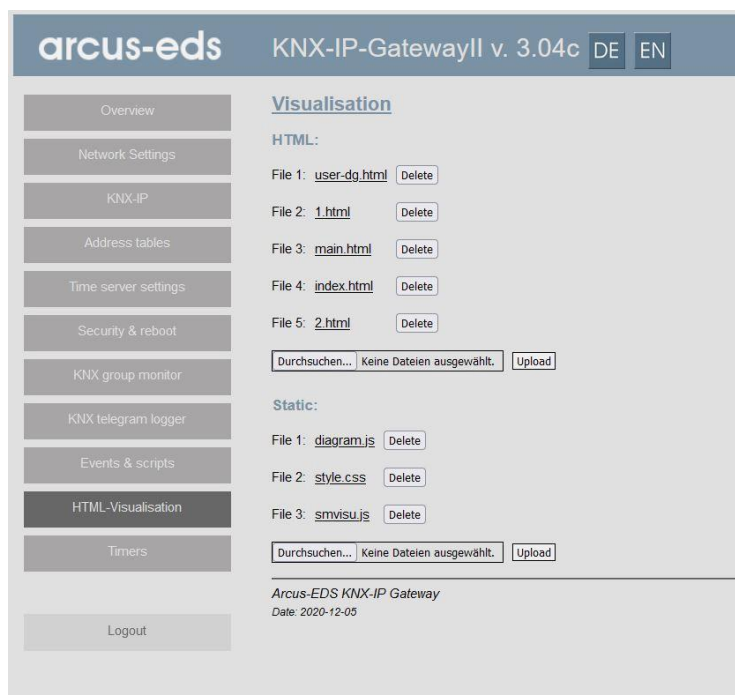

The gateway can link HTML pages with KNX data and visualize them on any browser, provided it supports web sockets.

The visualization can be reached at **<http://gatewayname/visu/>** or **<http://gatewayname/visu/index.html>**.

(Example: **<http://arcusipgw.fritz.box/visu/>** or **<http://arcusipgw.fritz.box/visu/index.html>**)

Elements

A page index.html must exist, further pages can be added as required.

The pages are precompiled and can include a higher-level structure page (main.html in the example).

The appearance can be individually designed using a stylesheet "style.css".


The KNX elements are HTML input elements that are filled with data via a script (smvisu.js).

The sample files can be downloaded to the PC and modified.


Some single icons and icon sequences are available for standard KNX applications.

The KNX data can be processed and sent out using Javascript using input elements of the 'hidden' type.


Any web designer with HTML knowledge can be consulted for a professional design.

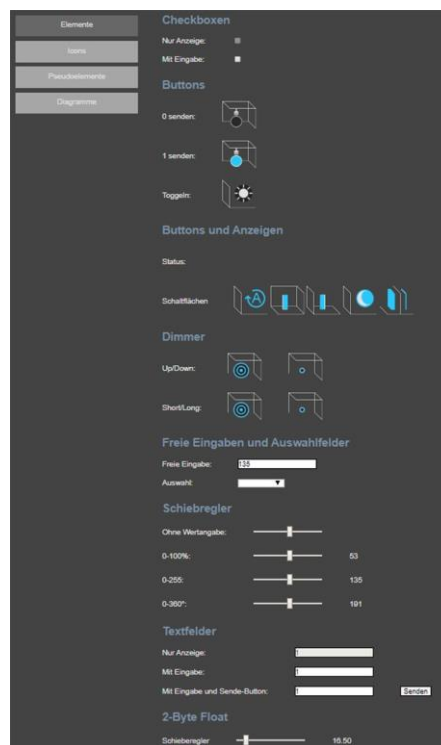


Icons

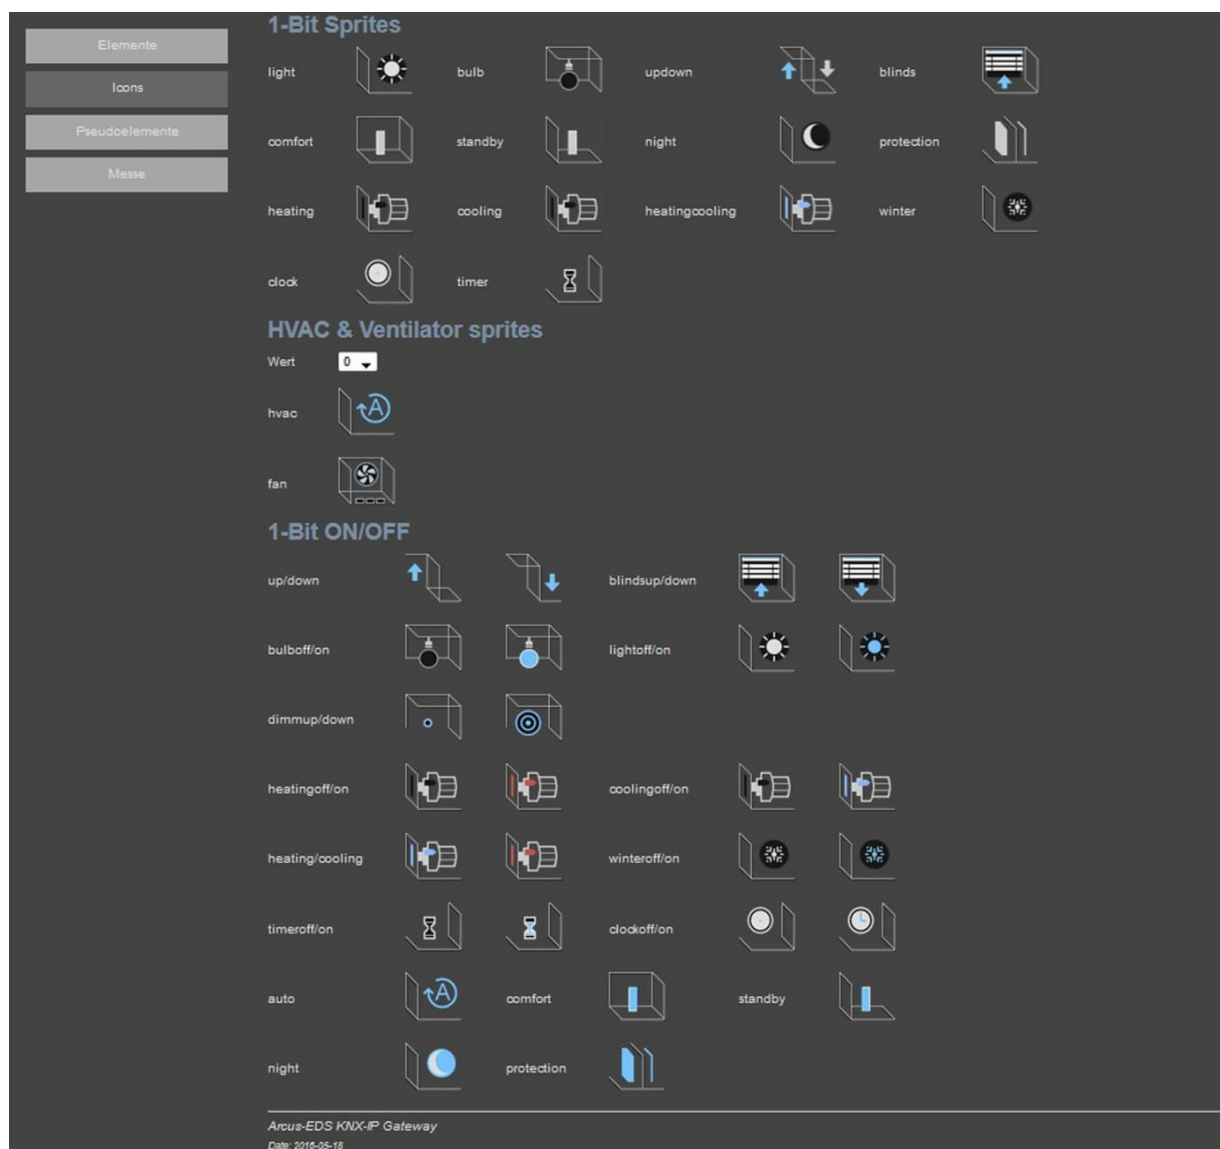

Pseudoelemente

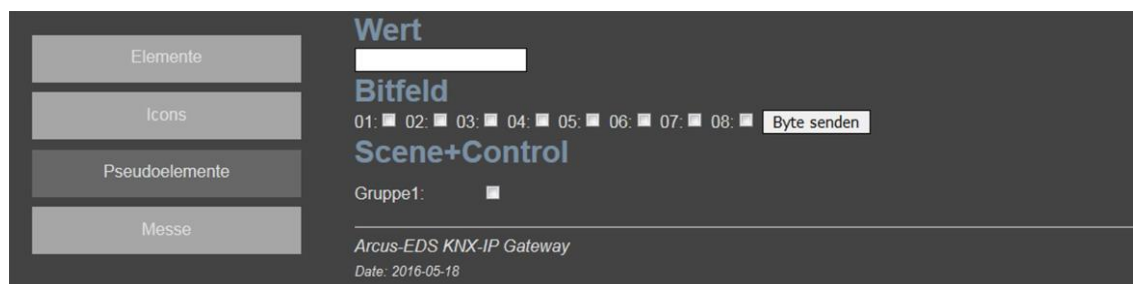


Example for a simple HTML visualization

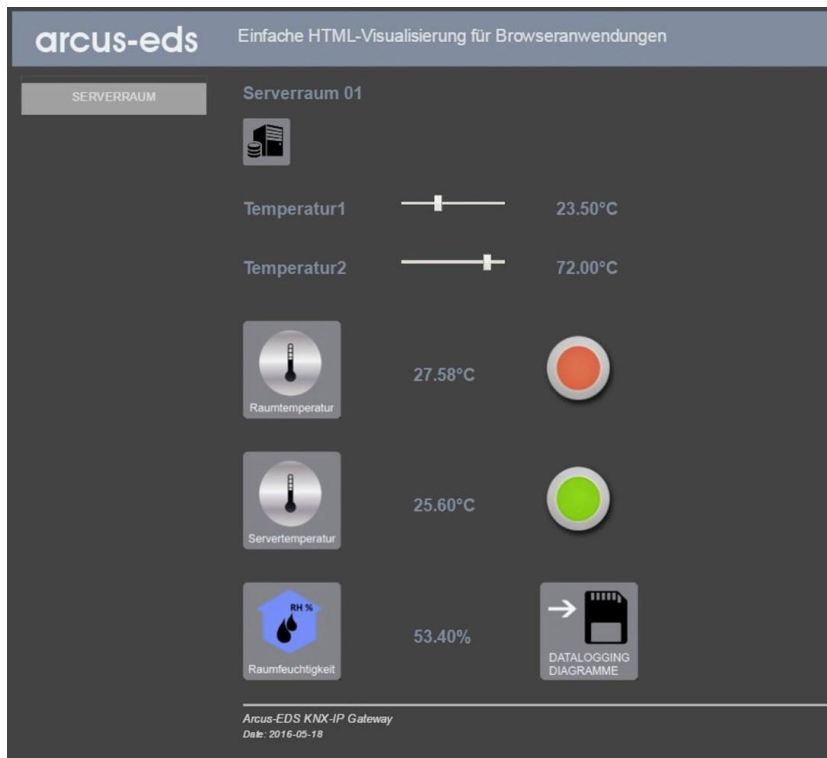


12 Dynamic Visualization

As soon as the use of the Arcus visualization is activated on the KNX-IP side (see point 4 KNX-IP Additional Software), the browser-parameterizable visualization can be started under Overview → Dynamic visualization.

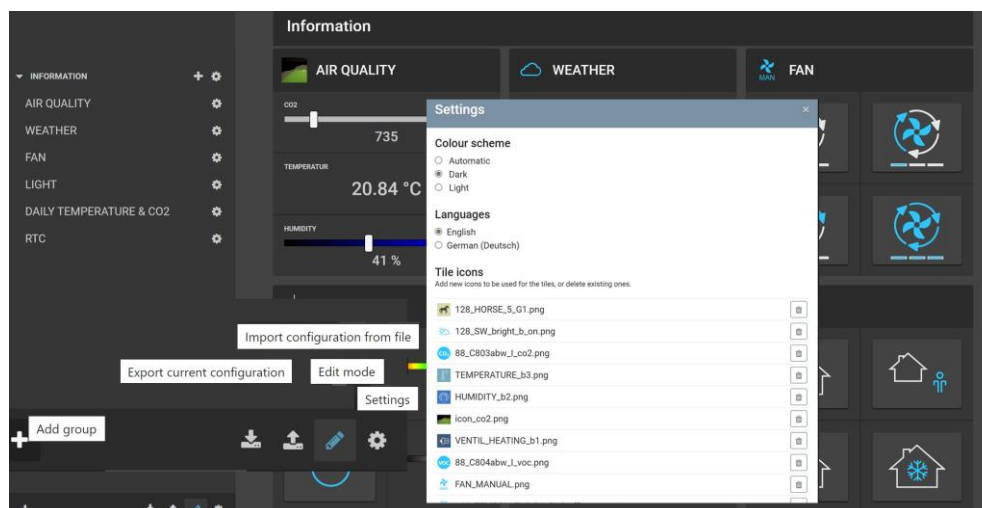

Organize your devices by adding them to tiles. You can then combine the different tiles again in groups. Move existing tiles or entire groups via drag and drop within the sidebar. You can load and save configuration as *.json

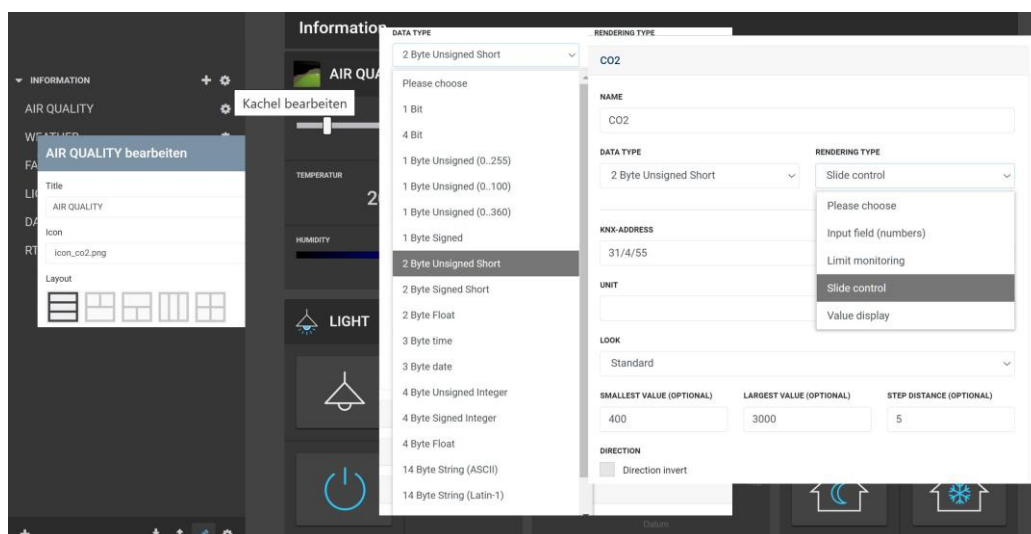


Each tile has a heading, an individual icon and various layout options for the individual devices.

You can add up to four different devices to each tile.

Each KNX device or data source requires an individual configuration. First select a data type.

You receive a selection of suitable display options for each data type. These differ fundamentally for each data type.

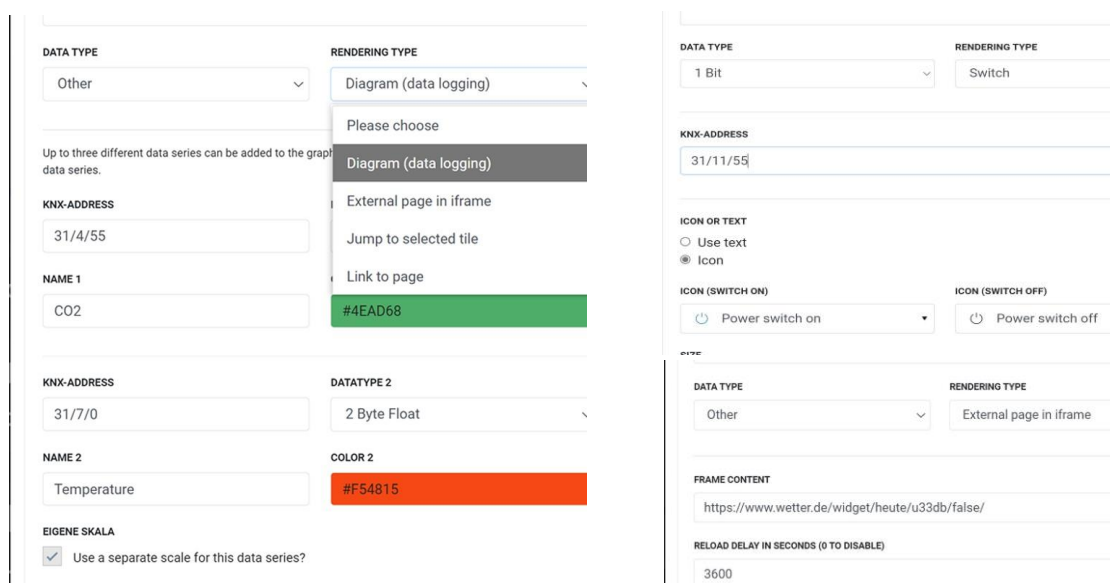

The maximum number of tiles that fit next to each other (per group) depends on the resolution of the end device.

In addition, the number of tiles can be gradually influenced with "Ctrl + +" and "Ctrl + -".



13 Installation Instructions



The KNX-GW-II-IP-2TE is used to couple the ETS (PC software tool) via Ethernet to the KNX bus for addressing and programming KNX components.

With the integrated KNX group monitor it is possible to monitor or send telegrams on the KNX bus in real time. The side of the KNX group monitor is divided into a configuration area and a telegram area.

The KNX IP gateway is able to save telegrams. The KNX telegram logger lists the stored telegrams. Both the time period and the group addresses can be filtered for this.

Up to three different group addresses can be output in a graph to visualize the data.

The gateway can link HTML pages with KNX data and visualize them on any browser, provided it supports web sockets.

All selected functions are switched off when the safety switch is operated.

14 Technical Data

Technical data - KNX-GW2-IP-2TE

Operating voltage	9 .. 30VDC max. 1.5W 2-pole screw terminal
Bus voltage connection	KNX 2-pole terminal (red / black)
Power consumption (KNX)	ca. 120mW (bei 24VDC)
Ambient temperature	Storage -25 .. + 85 ° C Operation -25 . + 55 °
Ethernet	10/100 Mbit/s RJ45
USB	Ethernet-Over USB Device
Protection class	IP20
Montage	DIN rail mounting
Housing	Plastic REG housing 2TE (35 mm) black
Artikelnummer	40400003

15 General Information

In order to be able to use the group monitor and the telegram logger, your browser must support web sockets. If this is not the case, a message will appear on the relevant pages.

Under unfavorable circumstances, especially if the device is switched off immediately after a configuration change, the configuration data can be lost. The red RESET LED then flashes periodically when the system is restarted. The device must now be reset to the factory settings by holding down the RST button during start-up until the RESET LED briefly lights up and then goes out again. After changing the configuration, to be on the safe side, always wait 10 seconds before disconnecting the device from the supply voltage. Back up your configuration so that you can restore it without any loss.

To mount a µSD card, insert the card with the mount switch deactivated and then set the switch to "Mount". If no µSD card is mounted, set the switch to "Unmount" again, remove the card and repeat the process.

Imprint

Publisher: Arcus-EDS GmbH, Rigaer Str. 88, 10247 Berlin Responsible for the content: Hjalmar Hevers, Reinhard Ebeneow
Reprinting, even in part, only with the approval of Arcus-EDS GmbH. All information without guarantee, technical changes and price changes reserved.

Liability

The selection of the devices and the determination of the suitability of the devices for a specific purpose is the sole responsibility of the buyer. No liability or guarantee is assumed for these. The information in the catalogs and data sheets do not represent a guarantee of special properties, but result from empirical values and measurements. Liability for damage caused by incorrect operation / configuration or malfunctions of the devices is excluded. Rather, the operator / project planner has to ensure that no further damage can occur due to incorrect operation, incorrect configuration and malfunctions.

Safety rules

Caution! Installation and assembly of electrical devices may only be carried out by a qualified electrician.

The buyer / operator of the system must ensure compliance with the relevant safety regulations of the VDE, TÜV and the responsible energy supply company. No guarantee is given for defects and damage caused by improper use of the devices or non-compliance with the operating instructions.

Guarantee

We provide warranty within the scope of the legal provisions.

In the event of a fault, please contact us and send the device with a description of the fault to our company address below.

Manufacturer



Registered trademarks

The CE mark is a free trade mark that is addressed exclusively to the authorities and does not guarantee any properties.



Registered trademark of the Konnex Association

