



KNX-GW-DMX		Product Group 1
	Document: 4200_ex_KNX-GW-DMX.pdf	Article No.
	KNX-GW-DMX	The KNX-GW-DMX is a gateway between the KNX-Bus and the DMX512-Bus used by a wide range of devices for lighting applications.
	KNX-GW-DMX-2TE	
	Parametrization is done by the dedicated program DMX-Configurator. Free download at www.arcus-eds.com	40120186
		40120182

2.1 Application Description	1	2.2 Initial Operation	5
2.3 Technical Data	6	Imprint	

2.1 Application Description

Active Principle and Application Area

The KNX-DMX Gateway is an Interface between the KNX bus and the DMX512 bus. It combines elements of building automation with a multitude of lighting and special effects devices for every need.

Application and Functionality


The KNX-DMX Gateway is unidirectional, receives data telegrams on the KNX bus and transmits the data onto the DMX512 bus. The interface allows the DMX512 actuators to communicate via the KNX bus using the full range of the channel.

The KNX-DMX Gateway contains 8 adjustable sequence positions within the whole channel range. Individual scenes with all 512 channels can be saved and retrieved using KNX group addresses.

This function allows all channels to be connected simultaneously to one single object without causing any undo load on the KNX bus. The sequences are saved internally and can be retrieved even after a power outage.

(A sequence can only be saved 10000 times during the lifetime of the device. The automatic save function should not be set for short intervals). The set value in sequence 8 is also „on“ for all channels when using 1 bit objects.

The KNX-DMX Gateway is ready to use and can be positioned to the main group addresses with an S1 rotary switch. It is not necessary to project via the ETS.

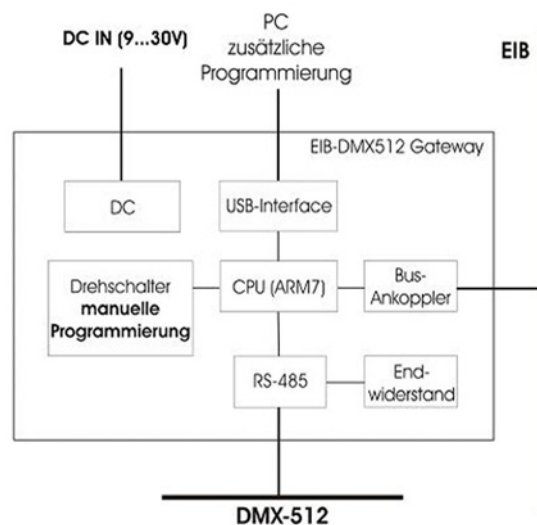

The KNX-DMX Gateway has 1556 objects with three types of telegrams available:

DPT	1.001	(1-bit	switch)	single channel
DPT	1.001	(1-bit	switch)	save sequence and retrieve
DPT	3.007	(4-bit	relative dimming)	single channel
DPT	5.001	(1byte	show value)	single channel

The S2 rotary switch adjusts the transition period from one preset brightness to the next, 15 (F) being immediate, 0 a time period of 1 second from 0% to 100%.

The S3 rotary switch automatically sets the dimming function (s.u.) parameters, 0 is no automatic dimming, otherwise dimming time = 1.5 sec * switch value (S3 = 1 .. 15 (F)) in increments of 1% (dimming value 0111b or 1111b).

The rotary switch settings will be prompted when starting and can be readjusted during operation by using the T1 button.

Necessary requirements are a KNX bus, DMX 512 bus and a power supply.

The KNX-DMX Gateway in REG casing IP20 is available in sizes of 6 units.
Firmware upgrades can be done with ArcSuite via USB port.

Automatic Dimming Function

Automatic dimming function can be switched on or off for all channels using an object, or can be parameterized by S3 when booting up.

Thereby the properties are controlled when a dimming telegram (DPT 3.007) appears.

Automatic function	Off	(S3 = 0)
Automatic function	On	(S3 > 0)

A dimming object (4 bit) value range +7 .. -7 singularly reduces or increases the DMX value percentagewise. Appropriate for MicroVis dimming function (Standard 6% per rotary click) or similar rotary device.

A uniquely transmitted dimming setting is repeated during a time period (dimmer repetition) until it reaches a value of 0 or 100% or until it is manually stopped. When 100% is transmitted, the preset value in „dimming curve“ is used (basic setting 1%).

This function allows the integration of the KNX-Gateway for an installation with standard key buttons. A standard key button transmits a 100% upward or downward command in dimming function when pushed and held and a stop command when let go. A dimming setting can thus be set. The dimming time period can be adjusted separately using either the parameter repetition or the dimmer curve. The basic setting after booting up is 1% dimming. The repetition rate is controlled by the rotary switch S3 and gives a dimming time result of circa 1.5 sec * switching value (S3 = 1 .. 15 (F)).

Address Diagram

The KNX-DMX Gateway is a master device in the DMX bus. It possesses an internal data memory and constantly transmits the data at a DMX rate of 250k baud to all 512 DMX channels. When receiving valid KNX telegrams the values in the memory are changed.

The transfer of the KNX telegram is preconfigured so that individual programming is not necessary. The KNX data points are managed in 3 address rooms. That means that switching or dimming can be accessed on every channel.

The group addresses diagram must be set up using the S1 rotary switch before initial operation (voltage supply). Changes become effective after a reboot. The main group addresses from 0 – 15 are set up with the 16 stage rotary switch. The middle and lower group addresses are set by the predetermined address rooms (see table 1). The DPT 5.001 allocates the first 512 address on the KNX bus. After that the DPT 1.001 and DPT 3.007. Finally, the sequence commands, a test function and dimming parameters are coded.

Group Address Allocation Lower Group (bi-level KNX Address Room)
Set Channel Value with DPT 5.001 1 byte value (0 .. 100%)

Addresses 0 - 511

To set a 1 byte value, use the lower group addresses 0-511 which correspond to the channels 1-512 on the DMX bus.

Switch Channel Value with DPT 1.001 1 bit value (switch)

Addresses 512 - 1023

Using a switch, this function can be used to switch every channel separately. When the value is 0 the channel is switched off (0), when it is 1 the saved value in sequence 8 is accessed and transmitted to the DMX512 bus. Every DMX channel can be independently switched.

Before the values are transmitted, there must be defined values saved in Sequence 8. This is the case for default settings at the time of delivery (255 for all channels). To reset the default settings use either the defined value with DPT 5.001 (group address x/0-511) or the function „Central On“ (group address x/1552) all values to 255. Then save this to Sequence 8 (group address x/1551). This establishes a maximum value for every channel.

Dimming Channel with DPT 3.007: 4 bit Value (Dimming)

Addresses 1024 - 1535

Table 1

Possible Dimming Value as 4 bit Object:

0	=	Stop	
1	=	100%	down
2	=	50%	down
3	=	25%	down
4	=	12%	down
5	=	6%	down
6	=	3%	down
7	=	1%	down
8	=	Stop	
9	=	100%	up
10	=	50%	up
11	=	25%	up
12	=	12%	up
13	=	6%	up
14	=	3%	up
15	=	1%	up

Using the automatic dimming function affects the performance when a dimming telegram is received.

Choose Sequence with DPT 1.001 1 bit Value (Switch)

Addresses 1536 - 1543

A complete sequence with 512 channels can be output via the DMX bus. All previously saved values are displayed on channels 1-512. There is a choice of 8 sequences at the addresses 1536-1543. The default value at the time of delivery is 255 for sequence 8 and 0 for sequences 1-7.

Save Sequence with DPT 1.001 1 bit Value (Switch)

Addresses 1544-1551

Here the current DMX values can be saved in one of the 8 sequences. The current brightness will be saved. There is a choice of 8 sequences at the addresses 1544-1551.

Central On with DPT 1.001 1 bit Value (Switch)

Address: 1552

All 512 channels display 100% when a 1 is transmitted and 0% when a 0 is transmitted.

Dimmer Repetition Rate

with DPT 5.001 1 byte Value (0 .. 250)

Address: 1553

Set repetition rate parameters

The repetition rate affects the dimming time. At increments of 1%, a dimming time of 1.5 sec * is achieved.

Standard settings can be set using S3 (1 .. 15 (F)).

Suggested values are 2-40.

Downwards Dimming Curve

with DPT 3.007 4 bit Value (Dimming)

Address: 1554

Set dimming down to 100%.

When the automatic dimming function is chosen, the command „0001b“ (100% dim down) is received and the programmed dimming setting will be repeated (see Repetition Rate Object 1553) until 0 has been reached or until it is manually stopped.

Standard setting „0111b“ = -1%

Possible dimming values as 4 bit object, see **table 1****Upwards Dimming Curve**

with DPT 3.007 4 bit Value (Dimming)

Address: 1555

Set dimming up to 100%.

When the automatic dimming function is chosen, the command “1001h” (100% dim up) is received and the programmed dimming setting will be repeated (see Repetition Rate Object 1553) until 255 has been reached, or until it is manually stopped.

Standard setting „1111b“ = +1%

Possible dimming values as 4 bit object, see **table 1****Activate Automatic Dimming**

with DPT 1.001 1 bit Value (Switching)

Address: 1556

Automatic Dimming

Standard setting 0 if S3=0, otherwise 1

0 = automatic dimming switches off, no repetition of dimming.

1 = automatic dimming switches on, repetition of dimming.

2.2 Initial Operation

Connection	Pin	Assignment	
Clamp RS485 / DMX	Ground D - D +	DMX GND (0V) DMX Data - (B) DMX Data + (A)	Screw clamp are included
Clamp DC IN (9 .. 30V)	minus plus	0V VDC 9 .. 30V VDC	Screw clamp are included
Clamp KNX-Bus			Clamp block KNX are included


Switch on the voltage supply.

The group addresses are coded by **S1** when the DC voltage in KNX-DMX Gateway is switched on. Soft-start (slow start-up to protect lights) can be adjusted using **S2** and **S3** sets the dimming function. Turning the rotary switch afterwards has no Effect unless restarting the device or pushing the T1-Button. When pushing the **T1-Button** you can **switch all DMX-Channels simultaneously on/off**.

The **prog**-button on the mainboard inputs the physical addresses via a dummy application into the ETS.

The Jumper **J1 (120R TERM)** times the RS485 Bus with 120 Ohm load resistance in its initial state.

The KNX bus is galvanically separated from the DMX 512 bus !
 The power supply is galvanically separated from the DMX 512 bus and the KNX bus !

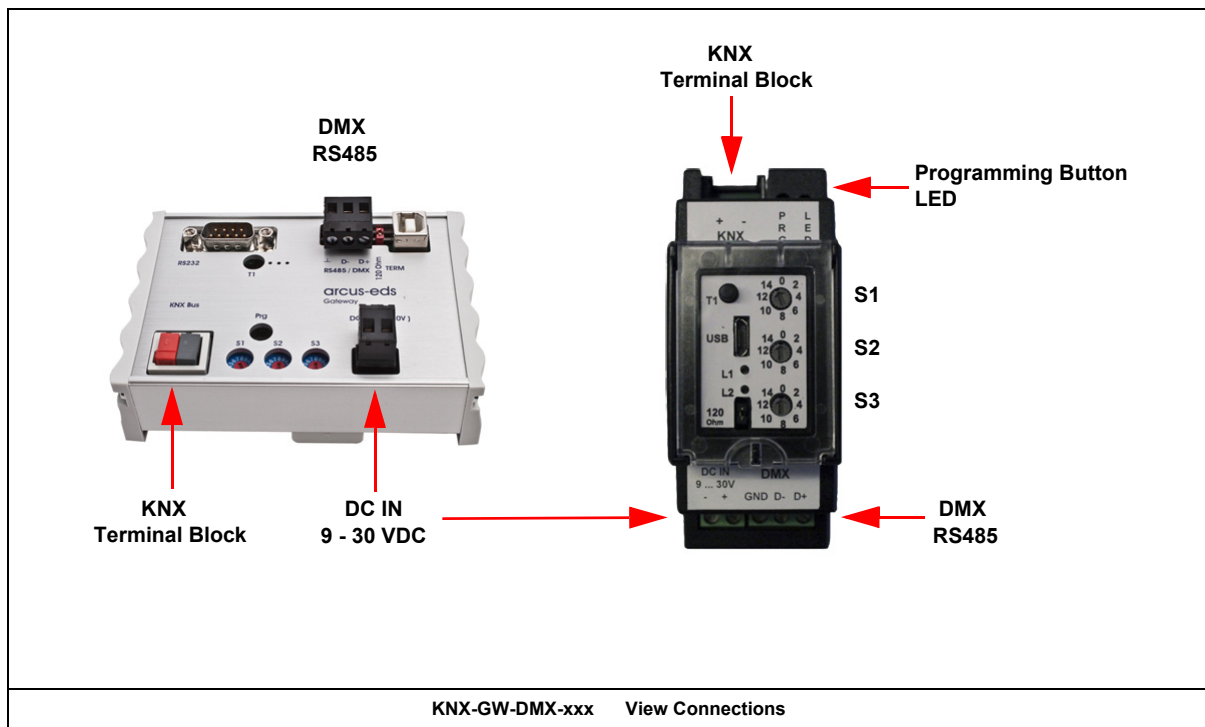

2.3 Technical Data

Dimensions KNX-GW-DMX	107 x 75 x 31 mm Rail Mounted Device (6 TE)
Dimensions KNX-GW-DMX-2TE	35 x 90 x 63 mm Rail Mounted Device (2 TE)
Protection Class	IP20
Temperature Range	-5 °C .. 45 °C
Controls	3 16-level Rotary Switch 1 Button User 2 LED User 1 EIB Button+LED
KNX-Connection	KNX Terminal Block
KNX-Supply	20 .. 32VDC / ca. 150mW
DMX-Connector	3x Screw clamp 0,8mm ²
Terminating Resistor RS485	120 Ohm via Jumper
Forth - Programmierung	USB-Slot with PC-Software Arcsuite (Only Forth-User, for additional tools)
Power Supply	9 .. 30VDC, 100mA, internal galvanically separated, polarized, defect-proof
DMX512 Bus	RS485 - 250 Kbaud, incl. galvanic separation DMX512 log Please note the DMX512 specific connecting configurations (bus connection, number of receiving slaves, bus topology).

Group Addresses Diagram (three stages)

KNX 3 Level Structure				DMX512	Sequence	KNX-DMX Gateway	
Main Groups	MG	UG	Value	Channel No.	No.	Function	Details
0-15 (S1)	0	0-255	0 .. 255	001-256	-	DPT 5.001 transmit 1byte value (Absolute Value)	1 byte value is stored into the corresponding DMX-Channel directly.
0-15 (S1)	1	0-255	0 .. 255	257-512	-	DPT 5.001 transmit 1byte value (Absolute Value)	
0-15 (S1)	2	0-255	0 / 1	001-256	-	DPT 1.001 value transmission (Switch)	When a 1 is received the value stored in scene Nr. 8 is sent to the corresponding DMX- Channel. When a 0 is received the DMX-Channel is turned off.
0-15 (S1)	3	0-255	0 / 1	257-512	-	DPT 1.001 value transmission (Switch)	
0-15 (S1)	4	0-255	-7 .. +7	001-256	-	DPT 3.007 value transmission (Dimming)	Relatively lighter or darker dimming than the current level. See description below.
0-15 (S1)	5	0-255	-7 .. +7	257-512	-	DPT 3.007 value transmission (Dimming)	
0-15 (S1)	6	0-7	0 / 1	All Channel	0 - 7	DPT 1.001 value transmission (Switch) access saved scene	The selected scene values of all 512 channels are transmitted on the DMX512 bus.
0-15 (S1)	6	8-15	0 / 1	All Channel	0 - 7	DPT 1.001 value transmission (Switch) save new scene	All current DMX- values in channels 1-512 are stored in the selected scene position
0-15 (S1)	6	16	0 / 1	All Channel	-	DPT 1.001 value transmission (Switch) all channels central on	All 512 channels display 100% when 1 is transmitted, 0% when 0 is transmitted.
0-15 (S1)	6	17	0 .. 255	All Channel	-	DPT 5.001 value transmission, repetition rate parameters	Repetition rate of 10msec is multiplied with this value default 3.
0-15 (S1)	6	18	0 .. 7	All Channel	-	DPT 3.007 value transmission, set downward dimming curve	Dim down repetition value. default 15=1% see Table 1
0-15 (S1)	6	19	0 .. 7	All Channel	-	DPT 3.007 value transmission, set upward dimming curve	Dim up repetition value. Default 15=1% see Table 1
0-15 (S1)	6	20	0 / 1	All Channel	-	DPT 1.001 value transmission (Switch) deactivate automatic dimming	Disables automatic dimming when value=0.

Group Addresses Diagram

Group Addresses Diagram (two stages)						
KNX 2 Level Structure			DMX512	Sequence	KNX-DMX Gateway	
Main Groups	Sub Groups	Value	Channel No.	No.	Function	Details
0-15 (S1)	000 - 511	0 .. 255	001-512	-	DPT 5.001 1 byte value transmission (Absolute Value)	1 byte value is stored into the corresponding DMX-Channel directly.
0-15 (S1)	511 -1023	0 .. 255	001-512	-	DPT 1.001 value transmission (Switch)	When a 1 is received the value stored in sequence No. 8 is sent to the corresponding DMXChannel. When a 0 is received the DMXChannel is turned off.
0-15 (S1)	1024 - 1535	-7 .. +7	001-512	-	DPT 3.007 value transmission (Dimming)	Relatively lighter or darker dimming than the current level. See description below.
0-15 (S1)	1536 - 1543	0 / 1	All Channel	0 - 7	DPT 1.001 value transmission (Switch) access saved scene	The selected scene values of all 512 channels are transmitted on the DMX512 bus.
0-15 (S1)	1544 - 1551	0 / 1	All Channel	0 - 7	DPT 1.001 value transmission (Switch) save new scene	All current DMX values in channels 1-512 are stored in the selected scene position
0-15 (S1)	1552	0 / 1	All Channel		DPT 1.001 value transmission (Switch) all channels central on	All 512 channels display 100% when 1 is transmitted, 0% when 0 is transmitted.
0-15 (S1)	1553	0 .. 255	All Channel		DPT 5.001 value transmission, repetition rate parameters	Repetition rate of 10msec is multiplied with this value default 3.
0-15 (S1)	1554	0 .. 7	All Channel		DPT 3.007 value transmission, set downward dimming curve	Dim down repetition value. Default 15=1%, see Table 1
0-15 (S1)	1555	0 .. 7	All Channel		DPT 3.007 value transmission, set upward dimming curve	Dim up repetition value. Default 15=1% see Table 1
0-15 (S1)	1556	0 / 1	All Channel		DPT 1.001 value transmission (Switch) deactivate automatic dimming	Disables automatic dimming when value=0.

2 Adress Space, 32-Channel and Group-Dimming-Function

The **Firmware 0.12**, which can be uploaded to the gateway, is an extension of the firmware 0.10 .

The firmware supports 32 Channels, 64 Scenes and 4 Sequences.

Upload of the firmware and setup of the gateway with scenes and sequences is done by the Program „DMX-GW-Configurator“.

With this program, you can also mask the channels, that are to be used inside the scene. With this Firmware one Middle-group (Set up by **S1** and **S2**) is occupied. **S2=8 .. 15** equals **S2=0 .. 7** with an additional switching-ramp of about 3 Seconds.

Group Addresses Diagram (three stages)

KNX 3 Level Structure				DMX512	Sequence	KNX-DMX Gateway	
Main Groups	MG	UG	Value	Channel No.	No.	Function	Details
0-15 (S1)	0-7 (S2)	0-31	0 .. 255	001-32	-	DPT 5.010 1byte value	1 Byte value is stored into the corresponding DMX-Channel directly.
0-15 (S1)	0-7 (S2)	32-63	0 / 1	001-32	-	DPT 1.001 value transmission (Switch)	When a 1 is received the value stored in sequence Nr. 64 is sent to the corresponding DMX-Channel. When a 0 is received the DMX-Channel is turned off.
0-15 (S1)	0-7 (S2)	64-95	-7 .. +7	001-32	-	DPT 3.007 value transmission (Dimming)	Relatively lighter or darker dimming than the current level. See description below.
0-15 (S1)	0-7 (S2)	96-159	0 / 1	All Channel	1-64	DPT 1.001 value transmission (Switch) access saved scene	The selected scene values of all 32 channels are transmitted on the DMX-bus.
0-15 (S1)	0-7 (S2)	160-223	0 / 1	All Channel	1-64	DPT 1.001 value transmission (Switch) save new scene	All current DMX- values in channels 1-32 are stored in the selected scene position.
0-15 (S1)	0-7 (S2)	224	0 / 1	All Channel	-	DPT 1.001 value transmission (Switch) all channels central on/off	All 32 channels display 100% when 1 is transmitted, 0% when 0 is transmitted.
0-15 (S1)	0-7 (S2)	225	0 .. 63	All Channel	1-64	DPT 5.010 1byte access saved scene	The selected scene values of all 32 channels are transmitted on the DMX bus.
0-15 (S1)	0-7 (S2)	226	0 .. 63	All Channel	1-64	DPT 5.010 1byte save new scene	All current DMX- values in channels 1-32 are stored in the selected scene position.
0-15 (S1)	0-7 (S2)	227	0 .. 4	All Channel	1-64	DPT 5.010 1byte Playback sequence	The sequences 1 to 4 are played back. On 0 all sequences are stopped.
0-15 (S1)	0-7 (S2)	228	0 .. 255	All Channel	-	DPT 5.010 value transmission, repetition rate parameters	Repetition rate of 10msec is multiplied with this value. default 3
0-15 (S1)	0-7 (S2)	229	0 .. 7	All Channel	-	DPT 3.007 value transmission, set downward dimming curve	Dim down repetition value. Default 15=1% see Table 1
0-15 (S1)	0-7 (S2)	230	0 .. 7	All Channel	-	DPT 3.007 value transmission, set upward dimming curve	Dim up repetition value. Default 15=1% see Table 1
0-15 (S1)	0-7 (S2)	231	0 / 1	All Channel	-	DPT 1.001 value transmission activate automatic dimming	Disables automatic dimming if value=0
0-15 (S1)	0-7 (S2)	232-247	-7 .. +7	All Channel	-	DPT 3.007 value transmission (Dimming)	Relative lighter or darker dimming for a group defined by the scenes 1 to 16 . All active channels in the scene are dimmed.
0-15 (S1)	0-7 (S2)	248-255	0 .. 255	All Channel	-	DPT 5.010 1byte channel set (absolute value)	Absolute value set for an entire group. The group is defined by scene 1-8

Imprint

Editor: Arcus-EDS GmbH, Rigaer Str. 88, 10247 Berlin

Responsible for the contents: Hjalmar Hevers, Reinhard Pegelow

Reprinting in part or in whole is only permitted with the prior permission of Arcus-EDS GmbH.

All information is supplied without liability. Technical specifications and prices can be subject to change.

Liability

The choice of the devices and the assessment of their suitability for a specified purpose lie solely in the responsibility of the buyer. Arcus-EDS does not take any liability or warranty for their suitability. Product specifications in catalogues and data sheets do not represent the assurance of certain properties, but derive from experience values and measurements. A liability of Arcus-EDS for damages caused by incorrect operation/projecting or malfunction of devices is excluded. The operator/project developer has to make sure that incorrect operation, planning errors and malfunctions cannot cause subsequent damages.

Safety Regulations

Attention! Installation and mounting must be carried out by a qualified electrician.

The buyer/operator of the facility has to make sure that all relevant safety regulations, issued by VDE, TÜV and the responsible energy suppliers are respected. There is no warranty for defects and damages caused by improper use of the devices or by non-compliance with the operating manuals.

Warranty

We take over guarantees as required by law.

Please contact us if malfunctions occur. In this case, please send the device including a description of the error to the company's address named below.

Manufacturer



Registered Trademarks



The CE trademark is a curb market sign that exclusively directs to authorities and does not include any assurance of product properties.



Registered trademark of the Konnex Association.