

BAB TECHNOLOGIE GmbH

INTERCOMMODULE Documentation

Version: 1.0.3 Type: IP Item No.: 10582

> Manual version 1 Issue 11/2019 Date: 08. Sep. 2020

ΕN



BAB TECHNOLOGIE GmbH

Hörder Burgstraße 18 D-44263 Dortmund

info@bab-tec.de

Tel.: +49 (0) 231 – 476 425 - 30 Fax.: +49 (0) 231 – 476 425 - 59 www.bab-tec.de



TABLE OF CONTENTS

1	Intro	duction	.5
	1.1 1.2 1.3 1.4	Function overview INTERCOMMODULE operating principles Technical data Scope of delivery and interfaces	.6 .6 .7
2	Mou	nting INTERCOMMODULE IP	.8
	2.1	LED status	.9
3	Initia	al operation	10
	3.1 3.2 3.3 3.3. ⁷ 3.4	Language System requirements Establishing connections Adjusting the network settings of your computer Adjusting the Network settings of the INTERCOMMODULE	10 10 11 11 11
4	Conf	iguration INTERCOMMODULE	17
	4.1 4.2 4.3 4.4 4.5 4.6 4.7	Saving the configuration General Network User administration Remote servicing Backup the settings System / flrmware update	17 17 18 19 19 21 22
5	Conf	igurations Intercom stations	24
	5.1 5.2 5.3 5.4 5.4.7	Outdoor station Indoor stations Call buttons Configuration for EIBPORT INTERCOMMODULE in CONTROL L	25 26 27 27 28
6	Conf	iguration examples	31
	6.1 6.2 6.3 6.4 6.5	Configuration example on a Doorbird outdoor station with three buttons	31 34 37 39 43



LIST OF FIGURES

Figure 1: INTERCOMMODULE IP	5
Figure 2: Connection drawing INTERCOMMODULE	8
Figure 3: Windows - network and sharing centre	11
Figure 2. Ethernet "tratus	12
Figure 4. "Elements states of the LAN connection	12
Figure 5: TCD / ID/A properties	12
Figure 6. FCF / FFV4 properties	14
Figure 7. INTERCOMMODULE WED INTERACE ING III.	14
rigure 8: Log in dialog	14
Figure 9: Web interface – open configuration	15
Figure 10: Network settings	16
Figure 11: General configurations	17
Figure 12: INTERCOMMODULE network settings	18
Figure 13: User administration	19
Figure 14: Remote servicing	20
Figure 15: Backup / restore	21
Figure 16: Configuration – system	22
Figure 17: Keep network configuration	23
Figure 18: Perform update	23
Figure 19: INTERCOMMODULE configuration page	24
Figure 20: Configuration outdoor station without gateway	25
Figure 21: Configuration outdoor station with gateway	25
Figure 22: Configuration outdoor station. call buttons	26
Figure 23: Configuration indoor station	26
Figure 24: Configuration call buttons	27
Figure 25: Activation of intercommon the FIRPORT	27
Figure 25: Intercom WER sign in	20
Figure 20. Intercom WEB login accent security rick	20
Figure 27. WED regin accept security fish	20
Figure 26. Access to the INTERCOMMODULE	29
Figure 29. Current computation alter registration at EIBFORT	29
Figure 30: CONTROLL Communication window	30
Figure 3 I: Doorbird SIP settings	31
Figure 32: DoorBird SIP numbers configure	32
Figure 33: DoorBird SIP configure	32
Figure 34: DoorBird SIP call buttons	32
Figure 35: 2N SIP configuration	34
Figure 36: 2N Phone numbers of the user	35
Figure 37: 2N Configuration HTTP API	36
Figure 38: Welcome IP gateway network settings	37
Figure 39: Welcome IP gateway device settings	37
Figure 40: Welcome IP gateway create user	37
Figure 41: INTERCOMMODULE configuration Welcome	38
Figure 42: INTERCOMMODULE – Outdoor station configuration AGFEO	39
Figure 43: INTERCOMMODULE – Indoor station configuration AGFEO	40
Figure 44: INTERCOMMODULE – Call buttons configuration AGFEO	40
Figure 45: AGFEO Network	41
Figure 46: AGEEO Video	41
Figure 47: AGEEO Doorbell buttons / ringers	42
Figure 48: ACECO SIP-configuration	42
Figure 40: MGROTIV T25 Settings	12
Figure 43. MODOTIX 125 Settings	11
Figure 50, MODOTIX 125 Energet internet internet.	44
Figure 51. MODOTIX 125 Metu - Audio dilu voir Leiepitotiy	44
FIGURE 52. NODOTIX 125 SIF-CHERIC-SELLINGS	44
Figure 53: MUBUTIX 125 Uutgoing calls settings	45
Figure 54: MOBULIX 125 Menu Video-door-station	45
Figure 55: MOBOTIX 125 Bell behaviour and video mailbox	46
Figure 56: MOBOTIX T25 Automatic configuration	46
Figure 57: INTERCOMMODULE – Outdoor station configuration MOBOTIX	47
Figure 58: INTERCOMMODULE – Indoor station configuration MOBOTIX	47
Figure 59: INTERCOMMODULE – Call button configuration MOBOTIX	47



1 INTRODUCTION

We would like congratulate you for purchase of the new **INTERCOM**MODULE and we would like thank you for your trust. That you're able to cope right with the new device from the beginning, we recommend that you carefully read the operating manual.

That's how you get to know the **INTERCOM**MODULE quickly and comprehensively. In addition, the operating manual is given you advices for installing and using your new device.

BAB TECHNOLOGIE



Figure 1: INTERCOMMODULE IP

Product name:INTERCOMMODULE IPUsage:The INTERCOMMODULE (ICM) provides the connection between an IP-capable
video intercom system and a visualization application, such as CONTROL-L
based on EIBPORT or a client, equipped with the CONTROL T 2 software.Mounting:Optional with KNX/TP interface (in preparation)
DIN rail mounting
10582 (IP)

1.1 FUNCTION OVERVIEW

With the **INTERCOM**MODULE it will be able to display on a SMARTSURFACE via Software CONTROL **T** 2 an IP-capable video door-station system. In connection with the EIB**PORT** or **CUBEVISION**MODULE (in preparation) there is possibility, through the integrated visualizations on e.g. touch screen, receiving the sound and video image of a video door-station and also controlling these.

The **INTERCOM**MODULE is intended for usage in small systems and can provide up to 18 outdoor intercom stations and 18 indoor stations.

A special feature of the **INTERCOM**MODULE is that video door intercom station cab be mixed from different manufacturers.

1.2 INTERCOMMODULE OPERATING PRINCIPLES

The **INTERCOM**MODULE is an application server for video and VoIP (Voice over IP) based on the open source software FreeSWITCH. SIP compatible control units can communicate with it. It is important to distinguish whether the video door station is a SIP server or a SIP client. The SIP port 5060 is enabled for external communication of the **INTERCOM**MODULE.

A SIP server is e.g. the ABB Welcome. The ABB Welcome has an IP gateway (83342) that works as a server where it is required to be log in (at the **INTERCOM**MODULE). Other intercom systems, such as the DoorBird or 2N only work as a client and therefore it isn't required to be explicitly configured in the **INTERCOM**MODULE.

The **INTERCOM**MODULE supports both SIP client and SIP server video door station. Thus, intercom door station can be operated in both versions as "client mode" as well as "server mode".

a) Currently supporting "Client Mode" video door stations:

The company DoorBird (Generic type, anonymous client mode) The company Firma 2N (Generic type, anonymous client mode) The company AGFEO (Generic type, registered client mode) The company MOBOTIX (Generic type, registered client mode)

b) Currently supporting "Server mode" video door stations:

Company ABB / Busch-Jaeger Welcome together with the IP Gateway 83342

As indoor intercom station will be installed the software CONTROL **T** 2 on Windows Touch Panel PCs (for example **SMART**SURFACE). The Touch Panel PC must be equipped with microphone and loudspeaker. To improve the voice quality, we recommend the use of a DSP chip (Digital Sound Processor), e.g. the CLEAR VOICE MODULE.

Another indoor intercom station is used the EIBPORT. The configuration for the EIBPORT is done by a TOKEN, which is generated by the INTERCOMMODULE. Thus, the intercom function can be used for CONTROL L. Other applications such as for CUBEVISIONMODULE are still in the development progress. Due to automatic configuration, automatically generated clients emerge in the configuration of the INTERCOMMODULE which are not editable but only erasable. The maximum number of clients is 18. It should be noted that the INTERCOMMODULE does not automatically delete automatically logged on clients. By repeatedly deleting the browser cache of the Control-L it can happen that the maximum number is reached and no new clients are accepted. Then the user himself has to remove clients in the INTERCOMMODULE.



1.3 TECHNICAL DATA

Article No. 10582 (IP)

- Operating voltage: 12–32V DC
- Typical power consumption: 300 mA / 12 V DC
- Power consumption: <= 5 W
- Connection: Power supplier over screw-type terminal
- Resistant to climate: EN 50090-2-2
- Ambient temperature: -5 to + 35 °C
- Rel. humidity (non-condensing): 5 % to 80 %

Mechanical data

- Mounting: DIN-rail housing 4 units
- Dimensions (W x H x D) in mm: 72 x 90 x 63
- Housing: Plastic
- Protection class: IP20 (according to EN 60529)

Interfaces:

• Ethernet over RJ45-feamle connector

Specific features

Software requirement

- Operating system: independent
- Communication: Network interface
- Browser: current standard browser

1.4 SCOPE OF DELIVERY AND INTERFACES

The **INTERCOM**MODULE will be delivered in carton with the following contents:

- 1x INTERCOMMODULE
- 1x screw-type terminal 2-way power supplier

A power supply unit for the device is NOT included in the scope of delivery!

In addition to the connection for the power supply (<u>12-32 V DC</u>), the **INTERCOM**MODULE has the following interfaces

- 1x RJ 45: Ethernet 100Mbit/s Full Duplex
- 4x USB-terminal (not supported)

Factory setting by delivery

- IP-address 192.168.1.221
- User name admin
- Password admin
- Device Name INTERCOMMODULE



2 MOUNTING INTERCOMMODULE IP

The device on picture is the **INTERCOM**MODULE IP, DIN-rail housing 4 units. Dimensions (width x height x depth): 70 x 90 x 63 mm

- So that the power supply can be connected easily, the screw-type terminals (see figure below) can be taken off.
- Now the cable of the power supply is connected to the screw-type terminals (see figure below).
 Please observe the polarity!
- Next, the screw-type terminals can be inserted again on the **INTERCOM**MODULE.
- Now the device can be snapped onto the DIN rail, according to DIN EN 60715.



Figure 2: Connection drawing INTERCOMMODULE

	INTERCOMMODULE features
(1)	Power supplier via screw-type terminal 12-32V DC
(2)	RJ45-female connector for Ethernet LAN
(3)	USB-terminal (not in use)
(4)	Power / Boot LED



2.1 LED STATUS

The **INTERCOM**MODULE has two DUO LEDs ("Power / Boot" and "Status"). Each DUO LED has one green and one red LED. The upper LED is for power / boot, the lower LED is the status LED.

LED display	Status
OFF	The device is not ready for operation. No operating voltage is supplied
GREEN	The device is ready for operation.
Flashing ORANGE	The device is booting.

STATUS-LED

LED display	Status
OFF	The device is booting.
Flashing GREEN	The device has been started; the LED simulates a "heartbeat". The flashing interval increases depending on the device utilisation.

Explanation:

The green "Power/Boot" LED lights up as soon as the **INTERCOM**MODULE is supplied with power. Two or three seconds after the power supply has been switched on, this LED also starts to flash red (flashing orange) until the booting process has been completed. Then the LED is permanently illuminated green, while the "Status" LED flashes green (simulates a "heartbeat"). The flashing frequency increases depending on the device utilisation.

The **INTERCOM**MODULE takes for starting approx. <u>2 minutes</u> for starting.



3 INITIAL OPERATION

If the **INTERCOM**MODULE has been mounted and started as described in chapter "<u>Mounting</u>", now can be continued the commissioning as specified below.

Factory setting by delivery:

IP-address 192.168.1.221

Subnet mask 255.255.255.0

Username admin

Password admin

Device name INTERCOMMODULE

Note: The password must be changed immediately when logging in for the first time. If the password is lost, the device cannot be reset!

3.1 LANGUAGE

Web interface

The language used for the **INTERCOM**MODULE Web interface is based on the language set in the browser. German and English are currently available in the **INTERCOM**MODULE. If the browser is set to a language other than German or English, English is displayed in the **INTERCOM**MODULE interface.

3.2 SYSTEM REQUIREMENTS

Current browser (e.g. Firefox, Chrome, Safari etc.)
 Do not use Internet Explorer

In order to configure the **INTERCOM**MODULE, a current browser and a network connection to the device are required. If the device is in the condition of delivery, it can be accessed at the abovementioned IP address and the network settings must be adjusted to the address range, where necessary. Please follow the information given in the chapter "*Adjusting the network setting of your computer*" for this purpose.

3.3.1 ADJUSTING THE NETWORK SETTINGS OF YOUR COMPUTER

In order to adjust the network settings of your computer and establish a connection to the device, please proceed as described below:

- Open the IP address settings (under Windows 7):
- Click "Start Button" --> "Control Panel" --> "Network"
- Select "Network Connection", then "LAN Connection" ("Intel PRO1000 GT" in the figure below).



Figure 3: Windows - network and sharing centre

• Then click "Properties":



Figure 4: "Ethernet"status

Select "Internet protocol Version 4 (TCP/IPv4)" and click "Properties" again:

<u>₽</u>	Control Panel\Network and Internet\Network Connection	s – 🗆 🗙
Image: Second secon	rk and Internet I+ Network Connections	✓ (C) Search Network Connections
Nicht identifüertes Netzwerk Controller der Familie Realtek PCI	Connect using: Connect using: Controller der Familie Reatek PCIe GBE Cortigure This connection uses the following items: PG QG S Packet Scheduler Australia Protocol Network Adapter Multiplexor Protocol Aufrichager Topology Discovery Mapper I/O Diver Aufrichager Topology Discovery Responder Aufrichager Topology Discovery Responder Aufrichager Protocol Version 6 (TCP/IPV6) Versionent Protocol Version 1 (TCP/IPV6) Install Uninstall Description Transmission Control Protocol/Internet Protocol. The default	(2)
3 items 1 item selected Controller der Familie Realtek PCle GBE	Wee area network protocol mar provides communication across diverse interconnected networks.	₿Ⅲ 🖬 IM Computer

Figure 5: Properties of the LAN connection

- Now note down the current IP address settings or take a screenshot in order to ensure that you can reset the IP address setting following the configuration of the **INTERCOM**MODULE.
- Now change the IP address settings (IP address and subnet mask) as required:

Image: The sected Im	2	Contro	ol Panel\Network and Interne	t\Network Connections	5		>
ie Edit View Tools Advanced Help Organise Disable this network device Disable this network d	🕣 🍥 👻 🕇 😰 🕨 Control Par	nel 🕨 Network and li	nternet 🔸 Network Connections		v ♂ Se	arch Network Connections	٩
Artemative Livis server:		ed Help	ternet → Network Connections	automatically if your network site automatically if your network site at a skyour network adminis at cally if 192 . 168 . 1 . 200 255 . 255 . 0 automatically r addresses: 	v C Se × his connecti tries × poports trator	on » 🐺 🔻 🔃	۲
litems 1 item selected III			Validate settings upon exit	Advar	Cancel		
	items 1 item selected						

Figure 6: TCP / IPv4 properties

Example of a valid configuration for the factory settings of the **INTERCOM**MODULE:

- Free IP-address: 192.168.1.228
- Subnet mask: 255.255.255.0
- Now confirm your input with "OK".
- Close all windows until the "Windows Network and Sharing Centre Settings" window is shown.

Thus, you have adjusted the network settings of your PC to those of the **INTERCOM**MODULE. You can access the web interface of the **INTERCOM**MODULE by means of the browser. Restore the original network settings of your PC by following the steps described above as soon as you have configured the **INTERCOM**MODULE correspondingly.

If the IP address of your PC and your **INTERCOM**MODULE are in the same network mask, you can continue with the configuration.

3.4 ADJUSTING THE NETWORK SETTINGS OF THE INTERCOMMODULE

If the network prerequisites have been created, you can now access the configuration of the **APP**MODULE in order to adjust the network settings to the local requirements there. To do this, please proceed as described below:

• Enter the IP address of the **INTERCOM**MODULE in the address line of your browser (for factory settings: 192.168.1.221).



Figure 7: INTERCOMMODULE web interface log in

- The start page of the **INTERCOM**MODULE opens. Click on "Log in" on the left edge of the screen (see figure above, orange circle)
- A login dialog appears. For factory settings, the login data is as follows:

Username: Password: admin admin

me		1- C		L ca la
me		Log In		gm
	Username			
	Password			
	Cancel		ок	
		Figure 8: Log in dialog		

Note: The password must be changed immediately when logging in for the first time. If the password is lost, the device cannot be reset!

Note: Logging in only works if the browser is authorised to save cookies!

- The view on the home page is changing. Now you can reach the following levels:
 - Intercom Configuration
 - Configuration
 - Information
 - Log Out
- To change the IP address of the **INTERCOM**MODULE please click on "CONFIGURATION"



Figure 9: Web interface – open configuration

The configuration menu opens. In the menu item "Network" the following settings can be done:

IP-address/ subnet mask / gateway:	Field for the static assignment of IP addresses. Please make also sure that the subnet mask (often 255.255.255.0) and the gateway entry are correct. (Often the IP address of the WLAN router). Note: Without a correct gateway entry, the device will not be able to communicate with the Internet.
DNS server:	DNS is the abbreviation for Domain Name System. The DNS server converts Internet addresses, for example "www.bab-tec.de" into the IP addresses "85.214.89.170" and vice versa. Without a valid DNS entry, NTP-, weather- or UPnP services do not work. (Often the IP address of the router. Alternatively, you can enter a public DNS server).
NTP server:	NTP is a free service for synchronising the system time of Internet-compatible devices. If it is not possible to establish the connection to an NTP-Server, the system time must always be checked and adjusted manually. NTP-Server list: e.g. <u>http://www.pool.ntp.org/zone/europe</u>

> Start > Configuration			✓ Save Configuration
General	Network		
Network	IP Address	192.168.1.221	
Remote Servicing	Netmask	255.255.255.0	
Backup / Restore	Gateway	192.168.1.1	
	DNS Server		
	DNS Server #1	192.168.1.1	
	DNS Server #2		
	DNS Server #3		
	NTP Server		
	NTP Server #1	0.de.pool.ntp.o	rg
	NTP Server #2	2.2.2.2	
	NTP Server #3		
			✓ Save Configuration

Figure 10: Network settings

Change the IP address settings as required. In order to save the settings made, click "Save Configuration". The server in the device is restarted; the browser automatically connects to the new IP address if possible.

Note: Please bear in mind that you might have to reset the IP address of your computer to the initial value in order to be able to access the INTERCOMMODULE after the change has been made.

4.1 SAVING THE CONFIGURATION

As soon as you have made changes to the configuration, such as the name or the IP address of the **INTERCOM**MODULE, click on the field "Save configuration".

4.2 GENERAL

General	>	General		
		And a state of the		
Network				
User Administration		Device Name	IntercomModule	
Remote Servicing		System Time	01.07.2019 16:55	
Backup / Restore				
Sustem		Time Zone	Europe/Berlin	\sim

Click on "Configuration" to make changes to the general settings.

Figure 11: General configurations

- Device name: Here, you can assign an individual device name for your **INTERCOM**MODULE. This name is then displayed in the "Discovery Tool" and BAB STARTER.
- System time: The current system time of the device is shown. Clicking the button synchronises the system time of the device with that of the local PC. To synchronise the system time automatically, please use the NTP service. See chapter "<u>Network</u>".

Location: Edit the installation site so that the correct time zone can be set.

Note: The system time must be correct for the software to run properly. Please make sure that the system time is always correct. If synchronisation with NTP is not possible, correct the system time manually.



4.3 NETWORK

The **INTERCOM**MODULE has no DHCP. The **INTERCOM**MODULE and the outdoor stations / gateways must have a fixed IP address. If the outdoor stations / gateways don't have a setting for a static (fixed) IP address, they must receive a permanently assigned IP address by the DHCP service inside from router or server.

IP-address / network mask / gateway:	The network settings must be carried out statically. In case of doubt, contact your network administrator as to which settings are to be carried out. Please note that an IP address may never be assigned twice!
DNS server:	DNS is the abbreviation for Domain Name System. The DNS server converts Internet addresses, for example "www.bab-tec.de" into the IP addresses "85.214.89.170" and vice versa. Without a valid DNS entry, NTP-, weather- and UPnP-service do not work. (Often the IP address of the router. Alternatively, you can enter a public DNS server).
NTP server:	NTP is a free service for synchronising the system time of Internet-compatible devices. If time synchronisation is not possible, please correct the system time

manually. NTP server list: e.g. <u>http://www.pool.ntp.org/zone/europe</u>

Start > Configuration			✓ Save Configuration
Seneral	Network		
Network >	IP Address	192 168 1 221	
Iser Administration		152.100.1.221	
emote Servicing	Netmask	255.255.255.0)
stem	Gateway	192.168.1.1	
	DNS Server		
	DNS Server #1	192.168.1.1	
	DNS Server #2		
	DNS Server #3		
	NTP Server		
	NTP Server #1	0.de.pool.ntp.	org
	NTP Server #2	2.2.2.2	
	NTP Server #3		
			 Save Configuration

Figure 12: INTERCOMMODULE network settings



4.4 USER ADMINISTRATION

The user data required to access the **INTERCOM**MODULE Web interface is managed here. To change or add users, click "User administration" in the "Configuration" menu item.

Note: Make sure that you always assign secure passwords and follow standard password guidelines.

DISABLE PASSWORD RECOVERY

If this option is selected, the password cannot be reset and the device must be sent in if you lose the password.

> Start > Configuration			✓ Save	Configuration
General	User Administration			
Network	Disable Dassword Decovery			
User Administration				
Remote Servicing	List of Users	admin		^
Backup / Restore				
Backup / Restore System				
Backup / Restore				
Backup / Restore				
Backup / Restore				~

Figure 13: User administration

4.5 REMOTE SERVICING

Remote Servicing is available as of firmware version 1.3.7.

Activate the Remote Servicing Access of the **INTERCOM**MODULE. Select a time between 2-12 hours after which the Remote Servicing Access is automatically closed. Remote Servicing Access is also deactivated again if the **INTERCOM**MODULE is restarted; this is independent of the set time. Remote Servicing Access can be deactivated at any time by clicking on "Deactivate Remote Servicing Access". Activate the Remote Servicing Access by clicking on "Activate Remote Servicing Access". Remote Servicing access is started. This process takes a few seconds and the Remote Servicing Access ID is displayed. Copy the ID and send it to info@bab-tec.de.

 scart > Conrigulation 		✓ Save	Configuration
General	Remote Servicing		
Network			
User Administration	Deactivate in	2h	\sim
Remote Servicing >		Activate Remote Servic	ing Access
Backup / Restore			
System			

Figure 14: Remote servicing

Before you activate Remote Servicing Access, contact Support!

4.6 BACKUP THE SETTINGS

The configuration data of the **INTERCOM**MODULE should be backed up at regular intervals in order to ensure that the current configuration status can be restored at any time.

eneral	Backup Settings		
etwork	Modules	Configuration	
Jser Administration	Modules	comgaration	•
Remote Servicing		States & History	
Backup / Restore	Comment		
iystem			
		Create a Backu	P
	Restore Settings		
	Select Backup File	💩 Select Backu	p File
	Modules	Configuration	
	Modules	Configuration States & History	
	Modules Backup creation date	Configuration States & History	
	Modules Backup creation date Firmware Version	Configuration States & History	
	Modules Backup creation date Firmware Version Comment	Configuration States & History	
	Modules Backup creation date Firmware Version Comment	Configuration States & History	
	Modules Backup creation date Firmware Version Comment	Configuration States & History	
	Modules Backup creation date Firmware Version Comment	Configuration States & History	
	Modules Backup creation date Firmware Version Comment	Configuration States & History	

Figure 15: Backup / restore

CREATING BACKUP

Select the checkboxes under "Modules" to set which configuration data is to be backed up.

• *Configuration:* All configuration data of the **INTERCOM**MODULE.

Note: The network settings are not backed up; these are separate from the backup data.

Comments regarding the backup can be added in the "Comments" field.

- Click on "Create backup" to launch the backup process.
- The backup file is generated by the system and provided automatically for download using the browser download dialogue.



RESTORE A BACKUP

- Select an **INTERCOM**MODULE backup file using the "Select backup file" button. The files have the extensions "*.icm.bkp".
- The "Modules" field shows which modules are available in the selected backup file. You can also use the checkboxes to select which modules are to be restored.
- Information for the selected file is displayed in the "Backup created on", "Firmware version" and "Comments" fields.
- *Configuration:* All configuration data except for the app configuration data.

Note: The network settings are not part of the backup file.

4.7 SYSTEM / FIRMWARE UPDATE

SERVICE

Here the device can be restarted.

FIRMWARE UPDATE

Each **INTERCOM**MODULE can be updated. The firmware update is free of charge. The current firmware files can be found on the BAB homepage. Proceed as follows to update the device:

- Download the current firmware image from the download area <u>www.bab-tec.de</u>.
- Unpack the file to any folder.

Note: Generate a new backup before you launch the update "*Backup the settings*"). The update process restores the factory settings.

Open "Configuration" – "System".

 Start > Configuration 		✓ Save Configuration
General	Service	
Network	Pahaat Davisa	Living Debase
Jser Administration		Initiate Redoot
Remote Servicing	Firmware Update	
Backup / Restore		
System >	Current Firmware	1.0.1
	Select Update File	💩 Select Update File
	Update Type	
	Version	
	Update Options	Keep Configuration 🗸
		Perform Update



- Select the firmware image file (*.bin extension) using the "Select update file" dialogue. Update type and version are displayed.
- Please choose one of the update options
 - 1. Keep Configuration: All settings, apps and instances will be preserved
 - 2. *Keep Network Settings:* Only the network settings will be preserved.
 - Caution: all other settings as well as all your apps and their instances will be deleted
 - 3. *Reset Configuration:* The device will be reset to factory defaults during the update.

Version		
Update Options	Keep Configuration	~
	Keep Configuration	
	Keep Network Settings	
	Reset Configuration	

Figure 17: Keep network configuration

• Start the update process by clicking on "Start update".



Figure 18: Perform update

• Wait until the update is complete. The Web interface is updated automatically once the process has been successfully completed.

The update restores the device factory settings (except for the network settings; see above). Individual settings are only loaded again when you restore a backup (see "*Backup the settings*")



5 CONFIGURATIONS INTERCOM STATIONS

Before one of the supported door intercoms can be configured into the **INTERCOM**MODULE, it must be configured with the software provided by the manufacturer and integrated into the network. The following examples will be described only the settings in software of manufacturer which are important for the **INTERCOM**MODULE. If you have any questions about the settings or the software of the door intercom systems, please contact yourself the manufacturer of the door intercom system. For further procedure the basic knowledge about SIP communication of door intercom systems is required.

INTERCOMMODULE Version 1.0.2-pre4		()	BAB Technolo	ЭG
Outdoor Stations			~	
	Add	Edit	Delete	
Indoor Stations			^	
			~	
	Add	Edit	Delete	
Call Buttons			^	
			~	
	Add	Edit	Delete	
Instant configuration token				
		Generate token		
		~	Save Settings	

Figure 19: INTERCOMMODULE configuration page



5.1 OUTDOOR STATION

Here you can configure one or more outdoor stations. Click on "Add" to configure an outdoor station. Enter a name, without spaces, for the outdoor station and then select the type of door intercom according to your outdoor station. Some outdoor intercom stations without a gateway (e.g. Doorbird), the configuration of the intercom system is already completed with a click on the OK button; it is very different depending on the manufacturer.

In case it is used an outdoor intercom system with gateway (ABB Welcome IP gateway), the IP address of the gateway as well as the user name and password of this gateway must be entered. This data requires the **INTERCOM**MODULE to log in to the gateway. The IP gateway must have a static IP address, since the **INTERCOM**MODULE will not notice a possible change of IP address by DHCP.

Outdoor Station Configuration			
Outdoor Station Name	Außenstation-1-Haustür		
Type of door communication	Doorbird		
	Generic type		
Cancel	Generic gateway type		
ABB Welcome IP-Gateway			
	2N		
	Doorbird		

Figure 20: Configuration outdoor station without gateway

Outdoor Station Configuration				
Outdoor Station Name	Außenstation-2-Einfahrt			
Type of door communication	ABB Welcome IP-Gateway			
IP address of gateway	192.168.1.85			
Username of ComfortPanel (SMART SUF	RFACE)			
	tester			
Password of ComfortPanel (SMART SURFACE)				
•••••				
Cancel OK				

Figure 21: Configuration outdoor station with gateway

The integration of further manufactures of door intercom stations is in preparation. Currently the following door intercom stations are supported:

- ABB Welcome IP-Gateway (Generic gateway type, server mode)
- 2N (Generic type, anonymous client mode)
- DoorBird (Generic type, anonymous client mode)
- AGFEO IP-Video TFE 1 (Generic client type, registered client mode)
- MOBOTIX T25 (Generic client type, registered client mode)

In the SIP communication of the door stations is distinguished between the server and client mode, wherein the client mode can be executed as anonymous or as a registered client. The SIP port 5060 is enabled for external communication of the **INTERCOM**MODULE.



> Start > Intercom Configuration			
INTERCOMMODULE			
Outdoor Stations	All call butto	ons	~
	Add	Edit	Delete

Figure 22: Configuration outdoor station, call buttons

Note:

The display of the call buttons depends on the selected outdoor station. You must assign each external station its own SIP ID of call buttons. It is best to make a note of all the call buttons IDs (and identifiers) assigned to the outstations before assigning them to the **INTERCOM**MODULE (by call button configuration). If more than two outdoor stations are configured, select an outdoor station to display only the call buttons added for the selected outdoor station. Select "All call buttons" to display all call buttons configured in the **INTERCOM**MODULE for all outstations.

5.2 INDOOR STATIONS

Here you can configure one or more indoor stations (e.g. Windows client with CONTROL **T** 2). Click on "Add" to connect an indoor station via its individual SIP ID to the **INTERCOM**MODULE and CONTROL **T** 2.

The configuration data of the indoor station such as "name of the indoor station" (without space), password of the indoor station "as well as the 1-9-digit individual" SIP ID of the indoor station "can be specified here and must be taken over in the CONTROL **T** 2 software. (See documentation CONTROL **T** 2).

Indoor Station Configuration			
Indoor Station Name	Livingroom		
Indoor Station Password	•••••		
Indoor Station SIP ID	102		
Cancel	ок		

Figure 23: Configuration indoor station

Note:

Indoor stations can be assigned outdoor station with multiple call buttons (see "Call Button Configuration" for more detailed information). You can even assign an indoor station call buttons from different outdoor stations.

Up to 18 different indoor stations (Windows client with CONTROL T 2) can be configured.



5.3 CALL BUTTONS

Here you can assign the call buttons to the indoor and outdoor stations. The call buttons must previously been configured in the outdoor system software. How to configure the call buttons in the software of outdoor system refer to the documentation of the outdoor system.

Click on "Add" to connect a call button via its individual SIP ID to the associated outdoor station. Continue to assign the call button to the (already configured) indoor station (s) by selecting them under "Assign Indoor Units". Up to 18 different call buttons can be configured.

Ca	ll Button Configuration
Call Button Name	Indoor-hall
Call Button SIP ID	2000
Outdoor Stations	Outdoor-gate-1
A	ssign Indoor Stations
Indoor-hall (101)	V
Livingroom (102)	
Office (103)	
Cancel	ок

Figure 24: Configuration call buttons

5.4 CONFIGURATION FOR EIBPORT

In order to adopt the settings for the indoor station at EIB**PORT**, now can be generated a TOKEN. This TOKEN must be copied to insert it into the configuration of the visualization at EIB**PORT**. All settings are transmitted by using the TOKEN, but it is still necessary to specify whether the connection to the **INTERCOM**MODULE should be activated by all configured call buttons or make your selection.

▼ Intercom	
IP-Adresse	192.168.2.224
Token	wzz018ta0srvm1eoi6we2bsrv6yyj5ma
Ruftasten	
Automatisch (alle)	0
Manuell	Abfragen
Tuer Taste_1 100000	\checkmark
Ruftaste 2	
Ruftaste 3	
Ruftaste 4	
Ruftaste 5	
Ruftaste 6	
Ruftaste 7	
Ruftaste 8	

Figure 25: Activation of intercom in the EIBPORT

5.4.1 INTERCOMMODULE IN CONTROL L

At CONTROL L visualization the **INTERCOM**MODULE can be used to generate an integrated communication window. The configuration is quite simple and will be described in detail below. At first insert the TOKEN of **INTERCOM**MODULE into the basic settings of your CONTROL L visualization and activate the required call buttons. By saving, the required settings are already done. The communication window itself generates automatically when a call is received.

Note:

The TOKEN contains the connection settings for communication with the **INTERCOM**MODULE. In this respect, it is not necessary to generate a new TOKEN for device-specific settings and changes. However, the new settings must be saved in the device after being changed.

At last, only the connection between the **INTERCOM**MODULE and the EIB**PORT** has to be established, which will be done at first time when the visualization is opened.



Due to the necessary use of secured connections, corresponding messages appear in the browser. To establish the connection between the modules, you must allow the security exceptions accordingly. This is done for both modules.

l.	Warning: Potential Security Risk Ahead
	Firefox detected a potential security threat and did not continue to 192.168.2.223. If you visit this site, attackers could try to steal information like your passwords, emails, or credit card details.
	What can you do about it?
	The issue is most likely with the web site, and there is nothing you can do to resolve it.
	If you are on a corporate network or using anti-virus software, you can reach out to the support teams for assistance. You can also notify the web site's administrator about the problem.
	Learn more
	Go Back (Recommended) Advanced
	Report errors like this to help Mozilla identify and block malicious sites
Web sites that is no	prove their identity via certificates. Firefox does not trust this site because it uses a certificate t valid for 192.168.2.223.
Error cod	e: SEC_ERROR_UNKNOWN_ISSUER
View Cerl	ificate
	Go Back (Recommended) Accept the Risk and Continue

Figure 27: WEB login accept security risk

After establishing the connection, you must sign-in into the **INTERCOM**MODULE.





Figure 28: Access to the INTERCOMMODULE

The connection between the modules is active and you can see these connections in the "Intercom configuration" of the **INTERCOM**MODULE; it is listed as an indoor station and the connection to the call buttons.

INTERCOMMODULE	
INTERCOMMODULE	· · · · · · · · · · · · · · · · · · ·
Outdoor Stations	DB
	Add Edit Delete
Indoor Stations	CONTROL-L-Firefox-Windows10-CUUAK ControlT (12)
	Add Edit Delete
Call Buttor	n Configuration
Call Button Name	Mustermann
Call Button SIP ID	109
Outdoor Stations	DB
Assign In-	door Stations
ControlT (12)	Ø
Automatically	Configured Clients
CONTROL-L-firefox-Windows10-CUUAKozk (1046195064)	M
Cancel	ОК

Figure 29: Current configuration after registration at EIBPORT

When the call button is activated, a communication window opens automatically in the visualization of CONTROL L. When the call is accepted, the video connection to the door station is streamed.

Note:

Do not forget to activate the access (release) for loudspeakers, microphone and camera as well for the IP of used device in your browser application. Cookies must also be allowed.



Figure 30: CONTROL L communication window

Note:

Every new establishment of connection to the EIB**PORT** generates a new connection as an indoor station in the **INTERCOM**MODULE. In practice the connection is only established once and used permanently. If necessary, not used connections can be deleted manually.

6 CONFIGURATION EXAMPLES

6.1 CONFIGURATION EXAMPLE ON A DOORBIRD OUTDOOR STATION WITH THREE BUTTONS

Prerequisite is that the DoorBird was set up in the network and works with the DoorBird app (iOS, Android). The station setup is only complete when you hear the announcement from the door station: "Successfully connected to internet". If you do not hear this message, check the connection of your door station or, if necessary, contact the manufacturer of this device.

The following settings must now be done in the DoorBird APP.

- 1. Enter to the settings and log into administrations account.
- 2. Navigate to the SIP settings and open them.
- 3. Activate SIP
- 4. Enter the IP address of the **INTERCOM**MODULE under SIP Proxy.
- 5. For SIP user enter a freely selectable 1-9-digit number, which is comparable to a telephone number. That SIP account will be needed later in CONTROL **T** 2
- 6. A SIP password is not required.
- 7. Allow incoming calls

Other settings are not required for the INTERCOMMODULE. Save the settings.

(••)	〈 Zurück	SIP Einstellungen	Speichern
0	SIP EINSTELLUNGEN		
ŵ	SIP aktiviert		
	SIP Proxy		192.168.1.221
	SIP Benutzer		100
	SIP Passwort	0	Passwort
	DTMF		\bigcirc
	Eingehende Anrufe erlauben		

Figure 31: DoorBird SIP settings

- 8. Navigate to SIP numbers and open the settings.
- 9. Click Add.
- 10. Enter a freely selectable 1-9-digit number in the "name" field. This number may not be the same number that was entered under SIP user (see in fig: DoorBird SIP settings).
- 11. Enter the number in the "SIP address" field as it was previously entered in the "name" field followed by a @ and the IP address of the INTERCOMMODULE, then save the settings. Example: <u>101@192.168.1.221</u>

For each bell button must have configured its own freely selectable 1-9-digit number that does not match with another number and the SIP address, as described in point 10 and point 11.



(0)	Հ Zurück	SIP Nummern	Speichern
\bigcirc	Name		101
ŵ	SIP Adresse		101@192.168.1 📀

Figure 32: DoorBird SIP numbers configure

- 12. Navigate to Settings configuration buttons and open the settings.
- 13. Open the configuration buttons of the button you want to configure.
- 14. Assign a freely selectable display name.
- 15. Choose a validity type. In each validity type you have to activate SIP.
- 16. Weekly schedule
- 17. Select in weekly schedule the category "SIP calls"



Figure 33: DoorBird SIP configure

• Date range

Activate the respective number of button for "SIP Call" under "Actions" in the validity type "Date Range".

101 □ 102 ☑ 103 □	SIP ANRUF	
102 V	101	
103	102	
	103	

Figure 34: DoorBird SIP call buttons

• Unique.

Activate the respective number of button for "SIP Call" under "Actions" in the validity type "Unique".



Information about the validity types can be found in the DoorBird documentation.

For a door intercom system with call buttons (bell buttons) we recommend the validity type "weekly schedule" and an activation 24/7. If you set other activation times in the weekly schedule or select a different validity type, please note that DoorBird does not establish a connection via SIP to the **INTERCOM**MODULE during the deactivation period and by that the call isn't forwarded to the indoor station.

Note: The DoorBird outdoor intercom system obtains it IP address via DHCP. For a faultless connection to the **INTERCOM**MODULE it is important to assign a fixed IP address from the DHCP service to the DoorBird outdoor station.



6.2 CONFIGURATION EXAMPLE ON A 2N HELIOS IP VERSO OUTDOOR STATION

Prerequisite is that the 2N is set up into the network, a user is set up for each bell button, for SIP phone (web interface 2N) and an HTTP API account with camera access is activated.

		2N Helios IP Verso CZ EN DE FR IT ES RU Abmelde	n
$(\mathbf{\bullet})$	Services	SIP 1 SIP 2 Anrufe Audio Video 2N Indoor Touch	
	Talafan	Identität der Sprechanlage ×	
Ω		Name anzeigen 1000	
K.4	Streaming	Telefonnummer (ID) 1000	
\mathbf{X}	Onvif	Domain 192.168.1.221	
	E-Mail	Testanruf	
	Mobile Key 욿	Authentifizierung ~	1
	A	Benutzerauthentifizierungs-ID	
	Automatisierung	Authentifizierungs-ID 1000	
	HTTP API	Passwort	
	Benutzertöne		_
		SIP-Proxy ~	1
	webserver	Proxy-Adresse 192.168.1.221	
	Audio-Test	Proxy-Port 5060	
	SNMP		_

Figure 35: 2N SIP configuration

The following settings must now be done in the 2N web interface.

- 1. Log in to the web interface of your 2N.
- 2. Navigate to services / phone and configure the SIP (see fig: 2N SIP configuration)

Identity of the intercom

- *Display name:* This field is not important for the **INTERCOM**MODULE configuration.
- *Telephone ID:* Assign any 1-9-digit number here.
- *Domain:* Enter the IP address of the **INTERCOM**MODULE here.

Authentication is optional. For the **INTERCOM**MODULE the authentication isn't necessary.

<u>SIP proxy</u>

- *Proxy address:* Enter the IP address of the INTERCOMMODULE here.
- *Proxy port:* The proxy port is set to port 5060 by default.



Helios IP Eye Adresse



Figure 36: 2N Phone numbers of the user

Paralleler Anruf an folgende Nummer

3. Navigate to directory / user (see fig: 2N Phone numbers of the user) and assign each bell button its own 1-9 digit phone number. In this example, the 2N system has only one bell button. For each additional button you have to jump up one tab at the top.

Number:

- *Phone number:* Enter any 1-9-digit phone number here: Be sure to assign a separate phone number to each bell button.
- *Time profile:* A time profile isn't necessary for using the **INTERCOM**MODULE. Please note that a time profile has an influence on the behaviour of the 2N. If, for example, you limit the time of the SIP phone calls, that no SIP call is forwarded to the **INTERCOM**MODULE during this time.
- *Helios IP Eye address:* Isn't necessary for the operation of the INTERCOMMODULE.
- **Parallel call for the following number:** Activation for the parallel call to several clients isn't necessary at this item; you can also configure this function in the **INTERCOM**MODULE.
- 4. Navigate to the HTTP API and enable an account (see fig: 2N Configuration HTTP API). These settings are important for video transmission in CONTROL **T** 2.

User settings:

- Username: This name is required for authenticating the client where CONTROL **T** 2 is installed.
- Password: The password is required for authenticate the client where CONTROL **T** 2 is installed.

User permissions:

• Here you must activate the camera access for monitoring. All other settings are not necessary for video transmission.

		2N Helios IP Verso	CZ EN DE FR IT ES	RU Abmelden
¢	Services	Leistungen Konto 1 Konto 2 Konto 3	Konto 4 Konto 5	
.h		✓ Konto aktiviert		
502	Telefon	 Nutzereinstellungen v 		
<u> </u>	Streaming	Benutzername	bab	
	Onvif	Passwort	••••	
	E-Mail	Nutzerberechtigungen ×		
	Mobile Key 윓	BESCHREIBUNG	MONITORING	STEUERUNG
	Automatisierung	Systemzugang	~	✓
	HTTP API >	Zugang Telefon/Anrufe		✓
	Benutzertöne	Zugang I/O		✓
	Webserver	Schalterzugang		✓
	Audio-Test	Audio-Zugang		✓
	SNMP	Kamerazugang		
		E-Mail-Servicezugang		✓
		UID (Karten & Wiegand) Zugang		
		Zugang Tastatur		
				_

Figure 37: 2N Configuration HTTP API

6.3 CONFIGURATION EXAMPLE ON AN ABB WELCOME WITH IP-GATEWAY 3 BUTTON OUTDOORSTATION

The prerequisite is that the IP gateway and the Welcome outdoor station are set up in the network. The following settings must be done in the IP gateway.

Network configuration:

For a faultless connection to the **INTERCOM**MODULE the IP gateway must get a static IP address. If you work with DHCP, it may happen that the IP gateway gets a different IP address than what you entered during the configuration. These must be checked and re-entered in case of a faulty connection.



Figure 38: Welcome IP gateway network settings

Device settings:

Here you must add at least one outdoor station.

				logout
Network Configuration Basic settings		Device settings		
Modify Password Network Information	Add Device	Refresh camera list	Device ID	Name
Device settings	1 <u>Modify</u> Delete	Outdoor station	1	Tuer
Portal Login	2 <u>Modify</u>	Level push Call		BuJ1
App Management				

Figure 39: Welcome IP gateway device settings

Associated ComfortPanel 3.x:

Create a user under "Associated ComfortPanel 3.x". You will need this user in the **INTERCOM**MODULE for the configuration of the outdoor station as well as in the CONTROL **T** 2 software for the configuration of the intercom system. The CONTROL **T** 2 software is described in a separate documentation.

						logout
Network Configuration Basic settings Modify Password Network Information Device settings Portal Login App Management Associated ComfortTouch 2 Associated ComfortTouch 2	.x 3.x	▶ Ac ID 1 I	ld User <u>Ilodify Delete</u>	Associated Comfort User Name tester	Touch 3.x	

Figure 40: Welcome IP gateway create user



Now configure your Welcome outdoor station.

For the INTERCOMMODULE there are three potentiometers on the back side of the outdoor station, call buttons.

there are important. Here you set the SIP ID of the



The left potentiometer indicates the address of the outdoor station.

The middle and right potentiometer indicate the address of the upper bell button of the outdoor station. The underlying bell buttons are numbered from top to bottom in order. Thus, for this example, a SIP ID for the upper bell button arises as follows.

- 1. Address of the outdoor station (Y) = 1
- 2. Now 6 zeros are added internally
- 3. Address of the indoor station composed of tens place (Z) and one place (E). Y00000ZE = 10000001

For the underlying bell button it then behaves as follows: Y00000ZE+1 = 10000002 Y00000ZE+2 = 10000003

Outdoor Stations	Tuer		~
	Add	Edit	Delete
Indoor Stations	CONTROL-L- tester (1)	firefox-Windo	ws10-atXlda ^
Call Buttons	Add Button_1 (1	Edit 00000001)	Delete
	Add	Edit	Delete
		-	_ !!
Instant configuration token	0rxn1vwu06	f8yqh51oied2i	7dk72xxm7

Figure 41: INTERCOMMODULE configuration Welcome

6.4 CONFIGURATION EXAMPLE ON AN AGFEO IP-VIDEO TFE 1

The prerequisite is that the AGFEO IP-VIDEO TFE 1 is set up and available in the network. Make sure that the AGFEO gets a static IP network address so that is possible a stable communication between the devices.

Now you can carry out the necessary configuration in the **INTERCOM**MODULE and then transfer these settings to the configuration of the AGFEO IP-VIDEO TF 1.

SETTINGS IN **INTERCOM**MODULE

Following setting must be made next:

- 1. Go to the menu: "Intercom configuration" / outdoor station; Under Add, select the outdoor station AGFEO as *Type of door communication*.
- 2. For the *Outdoor station name* enter your name.
- 3. *IP address of gateway/ outdoor station:* <IP of your AGFEO>: 8080

Note: Because the default port isn't used here, the port: 8080 must be added! The AGFEO must have a static IP network address, which you can assign as static via your system (router).

- 4. *SIP IDs of the outdoor station:* Your choice; a 1 to 9 digit number, not beginning with "0". This SIP ID is the authentication name for the AGFEO settings and must also be used as well as username. Both names must be the same!
- 5. *User of the outdoor station* and *password of the outdoor station*: Here you enter the login data of your AGFEO.
- 6. *SIP-ID (registration* of the AGFEO at the **INTERCOM**MODULE): as under item 4. the same authentication.
- 7. *Password (registration* of the AGFEO with the **INTERCOM**MODULE): Define a password A-Z, a-z; 0-9 and special characters are possible).

Outdoor Station Configuration				
Outdoor station name	AGFEO			
Type of door communication	AGFEO			
IP address of gateway / outdoor station	192.168.1.11:8080			
SIP IDs of the outdoor station	3000			
User of the outdoor station	admin			
Password of the outdoor station				
Keep light on for seconds	2			
Unlock door for seconds	2			
SIP ID (Registration at INTERCOMMODULE)	3000			
Password (Registration at INTERCOMMODULE)	test			
Video via HTTP instead of SIP	×			

Figure 42: INTERCOMMODULE – Outdoor station configuration AGFEO

8. For the settings of the indoor station please specify the settings as described in <u>chapter 5.2</u>. You need these settings, e.g. communication with CONTROL **T** 2. When integrated into the visualization of the EIB**PORT**, the configuration is carried out by using a TOKEN and after the EIB**PORT** has logged in to the **INTERCOM**MODULE.



Indoor Stal	tion Configuration
Indoor Station Name	CONTROL-L-chrome-Windows10-i4UdCwP
Indoor Station Password	
Indoor Station SIP ID	1484817842
Cancel	ОК

Figure 43: INTERCOMMODULE – Indoor station configuration AGFEO

To complete the settings at **INTERCOM**MODULE the call button of the AGFEO IP video TFE1 must still be created. Go to "Add" via the menu of the call button:

- 9. *Call button name*: Enter a name here. This name appears e.g. in the EIBPORT if integrated.
- 10. *Call button SIP ID*: Set a numeric ID. This must be entered then in the AGFEO.
- 11. *Outdoor stations*: Select here the connection to the AGFEO.

Call Button Configuration					
Call Button Name Test					
Call Button SIP ID	100				
Outdoor Stations	AGFEO •				
Assign Indoor Stations					
No assignable indoor stations configured yet!					
	Ø				
CONTROL-CITOTIE-WINDOWSTO-HODICWPD (1484817842)	_				
Cancel	ОК				

Figure 44: INTERCOMMODULE – Call buttons configuration AGFEO

If you use the intercom with the visualization at EIB**PORT** after the auto-registration of the EIB**PORT** at the **INTERCOM**MODULE (by using that TOKEN) the connection information appears in the configuration field of this window.

SETTINGS AT AGFEO IP-VIDEO TFE 1

Once the required settings have been defined and made in the **INTERCOM**MODULE these settings must now be taken over in the AGFEO.

Because of previous settings at **INTERCOM**MODULE you're already familiar with the access to your AGFEO. Log into your AGFEO and open the menu "Network (LAN)". If necessary, you can change the network settings of AGFEO here.

For the network settings make sure that the AGFEO IP video TFE 1 has a static IP network address. You can either assign a static address here in the settings or your system (router) assigns a static address.

AGFEO	AGFEO IP-Vide	eo TFE 1
einfach perfekt kommunizieren	LAN	
Network (LAN)	MAC-Address Method	00:09:40:80:27:a8
Video	 Dynamic (DHCP) Static 	
Audio	IP-Address	192.168.1.11
Ringers	Netmask	255.255.255.0
Relays	Gateway	192.168.1.1
SIP-Configuration	DNS	192.168.1.1 8.8.8.8
Namenlate		
Dianlay		
Display		
Advanced		
System		
Logout		

Figure 45: AGFEO Network

Further on open the menu item of AGFEO "Video", here you can make the desired settings and also you'll find URL addresses for image display, which you can use in various elements of the visualization. Please have attention to the privacy statements when using it.

AGFEO	AGFEO IP-Video TFE 1				
einfach perfekt kommunizieren	Resolution	640x480 V	Apply		
Network (LAN)	FPS	15 ~			
Video	Live video only during the	e call off			
Audio	URL-Addresses	for live images			
Ringers	Live (MJPEG-stream)	http://admin:admin@192.168.1.11:8080/?action=stream	Show		
Relavo	Image (JPG)	http://admin:admin@192.168.1.11:8080/?action=snapshot	Show		
Relays	Small image (JPG)	http://192.168.1.11/live_img.jpg?u=admin&p=admin	Show		



The next menu item is "Ringers" (doorbell button) and adjust the settings accordingly. Please note that the call duration is chosen to be sufficiently in time that a communication between the outdoor and the indoor stations can be established and the user has enough time to accept the call at the indoor station.

Dial number: as already assigned stated, here in the example SIP = 100. *Dial timeout*: duration: 30 seconds should be sufficient. *Max. talk time*: here in the example is limited to 600 seconds. Further settings are optional and not mandatory.

AGFEO	AGFEO IP-V	AGFEO IP-Video TFE 1				
einfach perfekt kommunizieren	Ringer 1	SIP HTTP Relays App	ly -			
Network (LAN)	Dial number	100				
Video	Dial timeout	30 主 sec				
Audio	max. talk time	600 🕏 sec				
Ringers	Relay 1	off 200 🖨 ms				
Relays	Relay 2	off 🔄 🔄 ms				

Figure 47: AGFEO Doorbell buttons / ringers

At last please open the settings for SIP- configuration. Enter here:

as server: <IP of the ICM>

Username and Authentication name (both equal): as already specified the numeric SIP Password: accordingly, as already defined in the **INTERCOM**MODULE settings of the door station. If all entries are correct and a connection to the **INTERCOM**MODULE has been established, the status changes to green.

AGFEO	AGFEO IP-Video TFE 1				
einfach perfekt kommunizieren	Registrar	on Apply			
Network (LAN)	Server	192.168.1.221			
Video	Username	3000			
Audio	Authentication name	3000			
Ringers	Status	•			
Relays	Answer	on			
SIP-Configuration	auto-answer				

Figure 48: AGFEO SIP-configuration

After successful configuration a first video connection may be taken a little longer time. If you have enabled storage for this connection in the browser, further connections / calls are much faster for establishing.

6.5 CONFIGURATION EXAMPLE ON A MOBOTIX T25

The prerequisite is that the MOBOTIX T25 is set up and available in the network. Make sure that the MOBOTIX gets a static IP network address so that is possible a stable communication between the devices.

Depending on, whether the MOBOTIX T25 already has been set up and configured, the required data for the communication must be transferred from the settings of the MOBOTIX to the configuration of the **INTERCOM**MODULE.

SETTINGS OF MOBOTIX, IF NOT CONFIGURED

If the MOBOTIX T25 has not been configured yet, you must do this before integrating it into the **INTERCOM**MODULE. The manufacturer offers a variety of tools and procedures. If you have any questions, please get in touch to manufacturer directly. So there is available application software, such as "MxSoftPanel" to check the functionality of your MOBOTIX station. This can be very helpful in testing communication with your system and detecting any differences in settings.

After the MOBOTIX T25 has been configured, please proceed further as described below.

SETTINGS OF MOBOTIX, IF ALREADY CONFIGURED

The MOBOTIX T25 has been configured accordingly and you have checked the audio / video connection by using the mentioned software. To register the MOBOTIX T25 at **INTERCOM**MODULE, log in to the settings of your MOBOTIX if enter the corresponding IP address in the browser. The required device settings can be found in the "Admin Menu".

мовотіх та	25 mx10-20-109-76	Live						0
	16 fps ↓ Display Mode	✓ Panorama	~ 0	3	HiQ HiQ			
Admin Menu						26	19-10-29 CET 14:10	:37
Setup Menu								
Arm & Record								
VoIP Home View								
MxPEG on								
MxPEG off								
Open Door								
Light ON/OFF								
UC Event								
Play Sound								
Play Last Event								
Event List								
Multiwatcher								
1x Zoom								
Zoom +								
Zoom -				STREET,	Contraction of the local distance			
Center Pan								
Normal Image								
Panorama Image								

Figure 49: MOBOTIX T25 Settings

After you have logged into the Admin menu, the device settings are required from the following menu items:

- Ethernet interface
- Audio- and VoIP telephony
- Video door station



Figure 50: MOBOTIX T25 Ethernet-interface

The menu item "Ethernet interface" is only for testing: Device name, activated, device in client mode.



Figure 51: MOBOTIX T25 Menu - Audio and VoIP telephony

From menu for the audio and VoIP telephony you need information like:

- SIP-client-settings
- Outgoing call settings

🏠 🔶 МОВОТІ	n 🔶 MOBOTIX T25 mx10-20-109-76 SIP Client Settings								
You can view the cur	You can view the current status and detailed messages of the SIP Client in the SIP Client: Messages, Calls, Status dialog.								
General Phone	General Phone Settings								
SIP Client:	SIP Client: Enabled Enable or disable SIP Client.								
Hangup on Outgoing Calls:	Hangup on Outgoing Disabled Calls: Call is triggered.								
Parallel Dialing:	Parallel Dialing: Enabled ~ Enable or disable simultaneous calls to multiple phones.								
SIP Accounts									
SIP A	ddress	Auth	entication	Sen	/er	Available as Proxy	Use as Registrar	Register Expiration	
User Name	Domain	User Name	Password	Hostname / Address	Port				
4001 @	4001 @ 192.168.1.221 4001 ••••••• ⓓ 192.168.1.221 : 5060 ☑ 5 min. ✓ Delete								
	Add new SIP account								
Network Setting	Network Settings								

Figure 52: MOBOTIX T25 SIP-client-settings

In the SIP-client-settings you must enter the SIP data of your **INTERCOM**MODULE. The numerical SIP-ID and "@ <IP of the INTERCOMMODULE>" is the complete SIP-address of your **INTERCOM**MODULE, whereby the communication is going via the port enabled in the INTERCOMMODULE. Please enter this port (5060) accordingly in the MOBOTIX settings.

Enter the login data / authentication exactly the same as in the outdoor station configuration of the **INTERCOM**MODULE. Password: A-Z; a-z; 0-9 and special characters are possible.

🏠 🗭 МОВ	3OTIX T25 mx10-20-109-76 Outgoing Calls Settings	
Name	call_1 > Test Note: Set the changes to a profile before you test it.	
Profile	Configuration	
call_1	Phone Number or SIP Address Dial Attempts Dial Timeout SIP Proxy	
Delete	200 1 ~ 20 ~ 192.168.1.221 (4001@192.168.1.221) ~	
	Add	
	Connection type: SIP Audio 🗸	
	Message name: DoorBell v	
	Confirm call with PIN code:	
	After the message has been sent: Intercom v If you intend to use all audio modes (Speak, List	en, Inte
	Camera Remote Control: Off V Note: configure the remote control parameters (e	.g. the
	Hangup after: Never ~	
	Add new profile	
Explanatio	on: Every profile can store several phone numbers or SIP addresses which will be tried in turns until the call is answered. Dial Timec	ut cont
Set	Factory Restore Close	

Figure 53: MOBOTIX T25 Outgoing calls settings

In the settings for outgoing calls the configuration takes place according to the call button configuration in the **INTERCOM**MODULE. (Telephone number = SIP ID of the call button). SIP Proxy is the SIP address of the **INTERCOM**MODULE. The profile name is specified by the system itself and must not be changed.



Figure 54: MOBOTIX T25 Menu Video-door-station

At menu of the video door station the following submenus are required for integration into the **INTERCOM**MODULE:

- Bell behaviour and video mailbox
- Automatic configuration

nteritaria 🖌 🖌 🖍 🖍 🖍 🖍	0-20-109-76 Bell Behavior and Vi	ideo Mailbox					
Basic Settings	Basic Settings						
Door Station Bell Sound	DoorBell ~	This sound is played by the door station after its bell button has been pressed.					
Automatically Stop Ringing	Enabled ~	Stops the ringing, if the door at the door station is opened manually. Note: A door sensor is required to use this feature.					
Danama Door Station Hoors							
Deer Station Licerc		Select the deer station user you would like to medify					
Door Station Osers		Select the door station user you would like to mouny.					
Name		Edit the name of the door station user. Note: The user name will be used in the <u>Entry Permissions</u> and <u>Entry Log</u> dialogs, for example.					
I							
Set Remote Stations for Door St	tation						
Remote Stations for Door Station	call_1 (Phone)	The profiles in this list (phone and network message profiles) can be used to signal ringing.					
Outgoing Call Profiles	- None - Add selected devices	Select the phone profiles from the list that are to be used as remote stations for the door station. Note: Open the <u>Outgoing Calls Settings</u> dialog to create and edit these profiles.					
IP Notify Profiles	MxCC-Alarm MxGuard-PopUp SimpleNotify MultipleNotify HttpRequest	Select the IP Notify profiles from the list that are to be used as remote stations for the door station. Note: Open the <u>IP Notify Profiles</u> dialog to create and edit these profiles.					
MOBOTIX App Device	- None - \vee	Select a MOBOTIX App Device to manipulate.					
Setzen Voreinstellun	g Wiederherstellen Schließen						

Figure 55: MOBOTIX T25 Bell behaviour and video mailbox

At menu "Bell behaviour and video mailbox" no settings should be required. But it is used to check that your settings have been correctly applied. Note, in case that the item "Set remote stations for door stations" isn't visible the extended view must be activated (bottom right button).

n 🕁 MOBOTIX T25 mx10-20-109-76 Automatic Configuration 200						
Automatic Configu	ration:		enabled $\!$			
Set	Factory	Restore	Close			

Figure 56: MOBOTIX T25 Automatic configuration

Note at menu item "Automatic configuration" that this is activated.

Thus, all necessary settings of the MOBOTIX T25 are made and now you have the required device settings to transfer them to the **INTERCOM**MODULE.

SETTINGS IN INTERCOMMODULE

At settings of **INTERCOM**MODULE the device settings of the MOBOTIX must be entered accordingly now.

Now transfer the data from the configuration of the MOBOTIX T25 to the outdoor station configuration of the **INTERCOM**MODULE (outdoor station -> Add). The host of the outdoor station is the IP of your MOBOTIX T25.

Type of door communication: MOBOTIX

IP address of gateway/ outdoor station: is the IP of your MOBOTIX T25.

SIP IDs of the outdoor station: corresponds to the user name of the SIP address and authentication of the MOBOTIX

User of the outdoor station and *password of the outdoor station*: Login data of the MOBOTIX T25

SIP ID (registration at **INTERCOM**MODULE): equal to the SIP ID of the outdoor station. *Password (registration at* **INTERCOM**MODULE): is the password for authentication.

Outdoor Station Configuration	
Outdoor station name	Mobotix
Type of door communication	Mobotix
IP address of gateway / outdoor station	192.168.1.10
SIP IDs of the outdoor station	4001
User of the outdoor station	admin
Password of the outdoor station	
Keep light on for seconds	30
Unlock door for seconds	2
SIP ID (Registration at INTERCOMMODULE)	4001
Password (Registration at INTERCOMMODULE)	
Video via HTTP instead of SIP	

Figure 57: INTERCOMMODULE – Outdoor station configuration MOBOTIX

For the settings of the indoor station please specify the settings as described in <u>chapter 5.2</u>. You need these settings, e.g. communication with CONTROL **T** 2. When integrated into the visualization of the EIB**PORT**, the configuration is carried out by using a TOKEN and after the EIB**PORT** has logged in to the **INTERCOM**MODULE.

Indoor Station Configuration	
Indoor Station Name	CONTROL-L-chrome-Windows10-i4UdCwP
Indoor Station Password	
Indoor Station SIP ID	1484817842
Cancel	ОК

Figure 58: INTERCOMMODULE – Indoor station configuration MOBOTIX

To complete the settings in the **INTERCOM**MODULE the call button of the MOBOTIX T25 must be added. Under "Add" enter the *Call button name* and *Call button SIP ID*. The *outdoor station* is MOBOTIX.

Call Button Configuration		
Call Button Name	Albert	
Call Button SIP ID	200	
Outdoor Stations	Mobotix	
Assign Indoor Stations		
No assignable indoor stations configured yet!		
Automatically Configured Clients		
CONTROL-L-chrome-Windows10-i4UdCwPb (1484817842)	R	
Cancel	ОК	

Figure 59: INTERCOMMODULE – Call button configuration MOBOTIX

After successful configuration an initial connection can take a little longer time. If you have enabled storage for this connection in the browser further connections / calls are establishing much faster.





