KNX[®] Power Supply System KNX PS640-IP

with Ethernet Interface

Item number 70142



Installation and Adjustment



Elsner Elektronik GmbH Control and Automation Engineering Sohlengrund 16 | 75395 Ostelsheim | Germany Tel.: +49 (0) 70 33 / 30 945 - 0 | Fax: +49 (0) 70 33 / 30 945 - 20 info@elsner-elektronik.de | <u>www.elsner-elektronik.de</u> Technical support: +49 (0) 70 33 / 30 945-250

Contents

Product description	3
Application	4
Technical data	6
Installation and commissioning	7
Instructions for installation	7
Installation	7
Operation (Settings at the Device)	9
Starting position	9
Line reset	9
Data memory	10
Operating data	11
Language	11
Setting of parameters (Software ETS)	13
General	
IP configuration	
Routing (KNX -> IP)	
Routing (IP -> KNX)	17
ETS Connection Manager	19

KNX PS640-IP from software version display 3.1, IP chip 2.0, ETS programme version 1.0 Version: 18.04.2016. Errors excepted. Subject to technical changes.

Product description

The Power Supply System KNX PS640-IP combines the central functions of a KNX bus line: Power supply with throttle, IP router and IP interface:

The **power supply unit** of the KNX PS640-IP delivers a 29 V bus voltage for the KNX system and 24 V DC supply voltage for 24 V devices. Special operating conditions such as short circuit, electrical surge, overcharge or excess temperature are recorded and may be read off on the display. The present power discharge is displayed as well. It is possible to reset the connected bus devices directly by means of the key pad.

The *IP router* of the KNX PS640-IP allows for forwarding of telegrams between different lines via a rapid LAN (IP) backbone. The KNX PS640-IP therefore also takes on the function of a line coupler.

In parallel, the KNX PS640-IP can be used as *interface for accessing the bus* via IP. Like this, the KNX system can be configured and supervised from any PC in the LAN (Tunnelling). Access via smartphone (KNX app) is also possible.

This device works according to the KNXnet/IP specification using the core, the device management, the tunnelling and the routing part. The router of KNX PS640-IP has a filter table and is able to buffer up to 150 telegrams.

Functions:

- Delivers a **29 V KNX bus voltage** (reduced), output current max. 640 mA, shortcircuit proof
- Delivers 24 V DC (not reduced), output current max. 150 mA
- **Reset** of a line directly on the device
- Record of operating hours, overload, external overvoltage, internal overvoltage, short circuit and excess temperature
- Display of operating data bus voltage, bus current and temperature of the device
- The display may be shown in German, English, French, Italian, Spanish or Dutch
- **Routing:** Transfer of KNX data via LAN (rapid backbone)
- Line coupler function via LAN
- **Tunnelling:** Configuration and supervising of the KNX system from any PC in the LAN, access via smartphone (KNX app)

Application

Coupler function (KNXnet/IP Routing)

The Power Supply System KNX PS640-IP can operate as a line and/or backbone coupler. In both cases, the LAN (IP) acts as a backbone.





The physical address assigned to the KNX PS640-IP determines whether the device operates as a line or backbone coupler. If the physical address is in the form of x.y.0 (x, y: 1..15), the router operates as a line coupler. If it is in the form of x.0.0 (x: 1..15), the router acts as a backbone coupler.

Attention: If the KNX PS640-IP is used as a backbone coupler (x.0.0), there must be no KNX IP Router in the topology beneath it. For example, if a KNX PS640-IP has the physical address of 1.0.0, there must be no KNX IP Router with the address 1.1.0.

If the KNX PS640-IP is used as a line coupler (x.y.0), there must be no KNX IP Router in the topology above it. For example, if a KNX PS640-IP has the physical address of 1.1.0, there must be no KNX IP Router with the address 1.0.0.

The KNX PS640-IP has a filter table and thus contributes to reducing bus load. The filter table is automatically generated by the ETS.

Because of the speed difference between the Ethernet (10 Mbit/s) and KNX (9.6 kbit/s), a far greater number of telegrams can be transmitted on IP. If several consecutive telegrams are transmitted on the same line, they must be buffered in the router to avoid telegram loss. The KNX PS640-IP 750 has a memory for 150 telegrams (from IP to KNX/EIB).

Bus access (KNXnet/IP Tunnelling)

The Power Supply System KNX PS640-IP can be used as an interface to KNX. KNX can be accessed from any point in the LAN. For this purpose, a second physical address must be assigned in the ETS. Please refer to chapter "ETS Connection Manager".

Technical data

Housing:	Plastic material
Colour:	White
Mounting:	Snap-on fitting on mounting rails
Protection category:	IP 20
Dimensions:	approx. 123 x 89 x 61 (W x H x D, mm), 7 width units
Weight:	approx. 395 g
Ambient temperature:	Operation -5+45 °C, Storage -25+70°C
Ambient air humidity:	max. 95% R.H., avoid bedewing
Operating voltage:	230 V AC , 50 Hz
Power consumption:	Full load: approx. 28 W
	Standby: approx. 2.7 W
Outputs:	 KNX bus voltage 29 V (reduced), Output current max. 640 mA, short-circuit proof
	• 24 V DC (not reduced), Output current max. 150 mA
	• LAN connector RJ45; 10BaseT (10Mbit/s), Supported internet protocols: ARP, ICMP, IGMP, UDP/IP and DHCP

The product conforms with the provisions of EU directives.

Installation and commissioning

Instructions for installation

Installation, testing, operational start-up and troubleshooting should only be performed by an electrician.

DANGER! Risk to life from live voltage (mains voltage)!

- There are unprotected live components inside the device.
- VDE and national regulations are to be followed.
- Ensure that all lines to be assembled are free of voltage and take precautions against accidental switching on.
- Do not use the device if it is damaged.
- Take the device or system out of service and secure it against unintentional use, if it can be assumed, that risk-free operation is no longer guaranteed.

The device is only to be used for its intended purpose. Any improper modification or failure to follow the operating instructions voids any and all warranty and guarantee claims.

After unpacking the device, check it immediately for possible mechanical damage. If it has been damaged in transport, inform the supplier immediately.

The device may only be used as a fixed-site installation; that means only when assembled and after conclusion of all installation and operational start-up tasks and only in the surroundings designated for it.

Elsner Elektronik is not liable for any changes in norms and standards which may occur after publication of these operating instructions.

Installation

Observe the correct installation. Incorrect installation may destroy the power supply system or connected electronic devices.

Housing



- 1 LAN connection (RJ45, for Ethernet patch cable)
- 2 Programming LED and programming button
- 3 Bus connection (KNX terminal + / -)
- 4 Input operating voltage 230 V AC, L / N / PE
- 5 Output direct current voltage 24 V DC, + / -

Connections 4 and 5 are suitable for solid conductors up to 1.5 mm² or conductors with fine wires.

Scheme



Operation (Settings at the Device)

Starting position

```
elsner elektronik
KNX PS640-IP
Normal Operation
Diagnostics >
```

The following may be read off and set on the display of the Power Supply System KNX PS640-IP:

- Reset of a line
- Recall of the data memory with operating hours, overcharge, external electrical surge, internal electrical surge, short circuit and excess temperature
- Recall of the operating data bus voltage, bus current and temperature
- Language of display

The backlight of the display will be switched off automatically if the temperature inside the housing exceeds 50°C. Thus a high thermal load is avoided.

In starting position, press key \triangleright once.

Line reset

elsner elektronik KNX PS640-IP Normal Operation Diagnostics >

Line	Reset	\geq	
Data Opero Langu	Memory > ating Data Jage	>	

Reset: Yes No 30 seconds Reset not active! Press key \triangleright once more in order to get into the sector "Line reset".

Move the cursor (flashing rectangle at right edge) to the desired setting with the keys ∇ or \triangle and confirm with key **Ok**.

Yes:	Reset is activated. The line is switched to neutral and shorted. The
	basic setting displays: "Reset is active!"

No: Reset not activated. The power supply system works in normal operation.

30 seconds: A reset of 30 seconds is started. Afterwards, the line is supplied with voltage as usual. During the reset state, which lasts 30 seconds, the basic setting displays: "Reset active: XX sec" (countdown).

With key \triangleleft , you return to the previous menu level.

Data memory

elsner elektronik KNX PS640-IP Normal Operation Diagnostics > In starting position, press key \triangleright once.

Line	Reset		\geq	
Data	Memor	y	\geq	
Oper	ating	Data	\geq	
Lang	uage		\geq	

Move the cursor (flashing rectangle at right edge) to the "Data memory" menu with the keys ∇ and \triangle and confirm with key \triangleright .

Hour	s ofOperation≻	
Over	load >	
Ext.	Overvoltage>	
Int.	Overvoltage>	

Short circuit > Excess Temperat. >

Move the cursor to the desired menu with the up and down keys and press key \triangleright .

Operating hours

Runtime: Øuears	The operating hours of the power supply system are
0 dau 0 hrs.	displayed in years, days and hours.
	With key \lhd you return to the previous menu level.
< = Back	

Overload

Overload detected	The number of overload incidents and the total time in
Ø times. Duration:	days, hours and minutes are displayed.
0 day. 0 hrs. 0 min	With key \lhd you return to the previous menu level.
$\leq = Back$	

External overvoltage

External Overvoltage	The number of external overvoltage incidents	is
was detected	displayed.	
Ø times.	With key \lhd you return to the previous menu level.	
< = Back		

Internal overvoltage

Internal Overvoltage The number of internal overvoltage incidents	
was detected displayed.	
\emptyset times. With key \triangleleft you return to the previous menu level.	
< = Back	

Short circuit

A short at the hus	The number of short circuit incidents at the bus is
was detected	displayed.
Ø times.	With key \lhd you return to the previous menu level.
< = Back	

Excess temperature

Excess Temperature	The number of excess temperature incidents on the
on the board	circuit board of the device is displayed.
was detected	With key \lhd you return to the previous menu level.
Ø times!	

Operating data

elsner elektronik
KNX PS640-IP
Normal Operation
Diagnostics >

In starting position, press key \triangleright once.

Line Reset	>
Data Memory	\rightarrow
Operating Data	>
Language	> _

Move the cursor (flashing rectangle at right edge) to the "Operating Data" menu with the keys ∇ and \triangle and confirm with key \triangleright .

Bus Voltage	29.4V
Bus Current	320 mA
Temperature	42.1°C

The current values of

- Bus voltage
- Bus current

• Temperature on the circuit board of the device are displayed.

With key \triangleleft you return to the previous menu level.

Language

```
elsner elektronik
KNX PS640-IP
Normal Operation
Diagnostics >
```

In starting position, press key \triangleright once.

Line Reset	>	
Data Memory	\geq	
Operating Data	÷	
Language	>	

Move the cursor (flashing rectangle at right edge) to the "Language" menu with the keys ∇ and \triangle and confirm with the key \triangleright .

Idioma :Espanol	Sprache Lanauade	:Deutsch 📕 :Enalish	
	Idioma	:Espanol	

Move the cursor to the desired language with the up and down keys and press the key ok. The display automatically jumps to the previous menu in the desired language.

With key \triangleleft you get back by one menu level to the basic setting.

Setting of parameters (Software ETS)

General

1.1.0 KNX PS640-IP			
General	General		
IP-Configuration 1 Routing (KNX -> IP) Bouting (IP -> KNX)	Device name	KNX PS640-IP	
	Monitoring of bus voltage	enable 🗸	
	IP-Address Assignment	automatic (DHCP)	
	OK Canc	el Default Info Help	

Device name	[free entry]	
The KNX PS640-IP can be assigned a name	of your choice. The device name should be	
descriptive (e. g. Line TF). It is used to searc	h for and recognize a device.	
Monitoring bus voltage failure	disable • enable	
If a KNX failure is detected, it is reported on	the IP. Return of the bus voltage is also	
reported.		
IP address assignment	automatic (DHCP) • manual	
Automatic (DHCP): The IP address is autom	atically assigned on the DHCP, i.e.	
additional settings are not required. To be able to use this function, there must be a		
DHCP server in the LAN (many DSL routers have an integrated DHCP server).		
Manual: In this case, the IP address, the subnet and the gateway IP address must be		
entered manually.		

IP configuration

1.1.0 KNX PS640-IP				X
General IP Configuration 1	IP-Configuration 1			
IP-Configuration 2 Routing (KNX -> IP)	IP Routing Multicast add	resse		
Routing (IP -> KNX)	Byte 1		224	
	Byte 2		0	×
	Byte 3		23	*
	Byte 4		12	
	IP-Address			
	Byte 1		0	* *
	Byte 2		0	*
	Byte 3		0	*
	Byte 4		0	* *
		OK Cance	el Default In	nfo Help

IP Routing Multicast address		
Byte 1 / 2 / 3 / 4	0 255	
This address is used for routing telegrams on IP. The multicast IP address 224.0.23.12 was reserved (KNXnet/IP) at the IANA (Internet Assigned Numbers Authority) for this purpose. If a different multicast IP address is required, it must lie within the range of 239.0.00 to 239.255.255.255.		
IP address		
Byte 1 / 2 / 3 / 4	0 255	
This is the IP address of the KNX PS640-IP.		

1.1.0 KNX PS640-IP				X
General IP:Configuration 1		IP-Config	uration 2	
IP-Configuration 2 Routing (KNX -> IP)	IP-Subnet			
Routing (IP -> KNX)	Byte 1		0	
	Byte 2		0	
	Byte 3		0	
	Byte 4		0	
	IP-Gateway address			
	Byte 1		0	
	Byte 2		0	
	Byte 3		0	
	Byte 4		0	
		OK Cancel	I Default Info Help	

IP subnet				
Byte 1 / 2 / 3 / 4	0 255			
Enter the subnet mask here. The device uses the values entered in this mask to determine whether there is a communications partner in the local network. If there is no partner in the local network, the device will not send the telegrams directly to the partner but to the gateway that routes the telegram.				
IP gateway address				
Byte 1 / 2 / 3 / 4	0 255			
Enter the IP address of the gateway here. Note: If the KNX PS640-IP will only be used in the local LAN, the entry of 0.0.0.0 can remain unchanged.				

Example of assigning IP addresses

A PC is to be used to access the KNX PS640-IP.IP address of the PC:192.168.1.30Subnet of the PC:255.255.255.0

The KNX PS640-IP is located in the same local LAN, i. e. it uses the same subnet. The subnet constrains the IP addresses that can be assigned. In this example, the IP address of the KNX PS640-IP must be 192.168.1.xx, where xx can be a number from 1 to 254 (with the exception of 30, which is already in use). It must be ensured that no numbers are assigned twice.

IP address of the KNX PS640-IP: 192.168.1.31

Subnet of the KNX PS640-IP: 255.255.255.0

Routing (KNX -> IP)

1.1.0 KNX PS640-IP		
General	Routing (KI	NX -> IP)
IP-Configuration 1 IP-Configuration 2 Routing (KNX -> IP)	Group telegrams (main groups 0 to 13)	filter
Routing (IP -> KNX)	Group telegrams (main groups 14 and 15)	route
	Group telegrams (main groups 16 to 31)	block
	Individual addressed telegrams	filter 💌
	Broadcast telegrams	route
	Acknowledge (ACK) of group telegrams	only if routed
	Acknowledge (ACK) of individual addressed telegrams	only if routed
	OK Cancel	Default Info Help

Group telegrams (main group 0 to 13)	block • route • filter	
Block: No group telegrams of this main group are routed to IP.		
Route: All group telegrams of this main group are routed to IP independent of the filter		
table. This setting is for testing purposes only.		
Filter: The filter table is used to check whether or not the received group telegram		
should be routed to IP.		
Group telegrams (main groups 14 and 15)	block • route	
Block: No group telegrams of main groups 14 and 15 are routed to IP.		
<i>Route:</i> All group telegrams of main groups 14 and 15 are routed to IP.		
Group telegrams (main groups 16 to 31)	block • route	
Block: No group telegrams of these main groups are routed to IP.		
Route: An additional page appears on which the routing of main groups 16 to 31 can be		
disabled or enabled in pairs.		
Note: The group addresses of main groups 16 to 31 are reserved addresses that can be		
used for special applications (e.g. in Easy Mode). These group addresses are not		
available in the ETS.		
Physically addressed telegrams	block • route • filter	
Block: No physically addressed telegrams are routed to IP.		
Route: All physically addressed telegrams are routed to IP.		
Filter: The physical address is used to check whether the received physically addressed		
telegram should be routed to IP.		
Broadcast telegrams	block • route	
Block: No received broadcast telegrams are routed to IP.		
Route: All received broadcast telegrams are routed to IP.		

Acknowledge (ACK) of group telegrams always • only if routed

Always: An acknowledge is generated for every received group telegram (from KNX).*Only if routed:* An acknowledge is only generated for received group telegrams (from KNX) if they are routed to IP.Acknowledge (ACK) of physicallyalways • only if routed • answer with

addressed telegrams NACK

Always: An acknowledge is generated for every received physically addressed telegram (from KNX).

Only if routed: An acknowledge is only generated for received physically addressed group telegrams (from KNX) if they are routed to IP.

Answer with

NACK: Every received physically addressed telegram (from KNX) is responded to with NACK (not acknowledge). This means that communication with physically addressed telegrams on the corresponding KNX line is not possible. Group communication (group telegrams) is not affected. This setting can be used to block attempts at manipulation.

Routing (IP -> KNX)

🗔 1.1.0 KNX PS640-IP			
General	Routing (IP -> KNX)		
IP-Configuration 1 IP-Configuration 2 Routing (KNX -> IP)	Group telegrams (main groups 0 to 13)	filter 💌	
Routing (IP -> KNX)	Group telegrams (main groups 14 and 15)	route	
	Group telegrams (main groups 16 to 31)	block 💌	
	Individual addressed telegrams	filter 💌	
	Broadcast telegrams	route	
	Repetition of group telegrams	enable 💌	
	Repetition of individual addressed telegrams	enable 💌	
	Repetition of broadcast telegrams	enable 💌	
	OK Cancel	Default Info Help	

Group telegrams (main groups 0 to 13)block • route • filterBlock: No group telegrams of these main groups are routed to KNX.Route: All group telegrams of this main group are routed to KNX independent of thefilter table. This setting is used for testing purposes only.Filter: The filter table is used to check whether the received group telegram should berouted to KNX.

Group telegrams (main groups 14 and 15)	block • route	
Block: No group telegrams of main groups 14 and 15 are routed to KNX.		
Route: All group telegrams of the main groups 14 and 15 are routed to KNX.		
Group telegrams (main groups 16 to 31)	block • route	
Block: No group telegrams of these main groups are routed to KNX.		
<i>Route:</i> An additional page appears on which the routing of main groups 16 to 31 can be disabled or enabled in pairs.		
Physically addressed telegrams	block • route • filter	
<i>Block:</i> No physically addressed telegrams are routed to KNX.		
<i>Route:</i> All physically addressed telegrams are routed to KNX.		
Filter: The physical address is used to check whether the received physically addressed		
telegram should be routed to KNX.		
Broadcast telegrams	block • route	
Block: No received broadcast telegrams are routed to KNX.		
Route: All received broadcast telegrams are routed to KNX.		
Resending of group telegrams	block • route	
Disable: The received group telegram is not resent to KNX in case of a fault.		
Enable: The received group telegram is resent up to three times in case of a fault.		
Resending of physically addressed telegrams	block • route	
Disable: The received physically addressed telegram is not resent to KNX in case of a		
fault.		
Enable: The received physically addressed telegram is resent up to three times in case		
of a fault.		
Resending of broadcast telegrams	block • route	
Disable: The received broadcast telegram is not resent to KNX in case of a fault.		
<i>Enable:</i> The received broadcast telegram is resent up to three times in case of a fault.		

ETS Connection Manager

If the IP-configuration of the KNX PS640-IP is valid the device can act as an interface to KNX. The following configuration is necessary:

Select the button "Settings" and the tab "Communication" in the main window of ETS4. All available connections are listed by "Configured connections". Select the desired connection.

The button "Local settings" enables the configuration of the individual address, which is used for bus access.

A dummy device may be created in the ETS-project to reserve this address.

The KNX PS640-IP supports up to 5 connections simultaneously. An additional physical address has to be reserved for every connection. The first additional physical address is allocated (as shown above) to the connection in the ETS. The remaining additional addresses can be assigned directly by the device, in which cast the learn button should be pressed for at least one second. The automatic address allocation is performed as: Connection 2 contains the next higher address from Connection 1,

Connection 3 the next higher from Connection 2 etc.

For example:

Connection 1 uses the additional individual address 15.15.250.

Connection 2 is automatically set to 15.15.251, connection 3 is 15.15.252,

connection 4 is 15.15.253 and connection 5 is 15.15.254.

The assignment of the additional individual addresses is shown by a fast blinking learn led.

Note: It is necessary to check whether the additional individual addresses are unused before they are assigned.

For new devices (i.e. in the factory settings state), only the additional individual address of the first connection is active with the address 15.15.250. To support multiple concurrent connections the additional address assignment is required.