


Gateway for integration of Mitsubishi Electric City Multi air conditioners into KNX control systems.

# Integrate Mitsubishi Electric City Multi Air Conditioning systems into KNX.

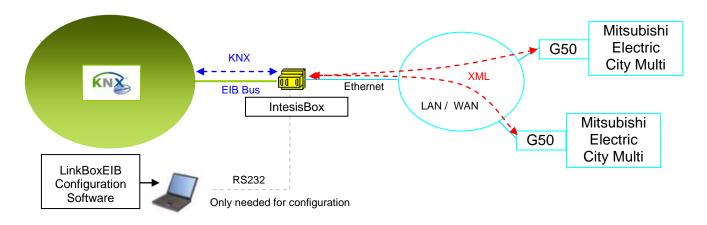

This integration requires the Mitsubishi Electric City Multi AC system be equipped with the Mitsubishi Electric G-50A, GB-50A or AG-150A gateway. This gateway from Mitsubishi Electric offers the signals of the City Multi AC system through XML protocol. Every G50 (G-50A, GB-50A or AG-150A) allows access to the signals of up to 50 A.C. indoor units and 50 groups of indoor units, no matter the number of outdoor units installed. In the G50, the group is the control unit, every group can have from 1 to 16 associated indoor units. This integration monitors and control groups, not indoor units, although if only one indoor unit is associated to each group then you can monitor and control indoor units individually. This G50 gateway is supplied by Mitsubishi Electric. Contact your nearest Mitsubishi Electric distributor for details.

#### The G50 interface of IntesisBox

IntesisBox<sup>®</sup> can *talk* to up to 2 Mitsubishi Electric G50s using XML protocol and offers the signals of all these City Multi groups through its KNX EIB interface, allowing up to 100 groups of air conditioners to be integrated into KNX. The AG-150A can be used with Expansions Cards as explained in the section IntesisBox capacity

#### The KNX interface of IntesisBox

IntesisBox simulates a KNX device and acts as if it was one more device into the KNX system. The IntesisBox's KNX EIB interface connects directly to the EIB bus and is opto-isolated from the rest of the internal electronics.

#### The configuration of IntesisBox

IntesisBox KNX series are configured using *LinkBoxEIB*, a software tool for windows<sup>TM</sup> which is supplied along with the purchase of IntesisBox with no additional cost. With the standard installation of LinkBoxEIB, a Demo project for integration of G50 devices is also installed, using this demo project makes the engineering needed for this integration easy and quick, almost plug&play.



1 / 10

IntesisBox<sup>®</sup> is a registered trademark of Intesis Software SL

## IntesisBox capacity

Element	Capacity	Notes
Num. of G50	2	Number of independent G50 interfaces 2 x G-50A / GB-50A 2 x AG150 (without Expansion Controllers)
Number of City Multi groups: Number of G50 x 50	100	1 x AG150 (with 2 Expansion Controllers) Maximum number of groups of AC indoor units that can be controlled.
Number of KNX Groups	5902	Maximum number of KNX Groups that can be used in IntesisBox.
Number of listening addresses	2000	Maximum number of KNX groups that can be used as listening addresses.
Number of listening addresses per KNX Group.	255	Maximum number of listening addresses that can be associated to a KNX group address.

There are two versions of IntesisBox with different capacity every one of them:

- Basic version with capacity of one G50 and 15 City Multi groups. Ref.: ME-AC-KNX-15 •
- Extended version with capacity of two G50s and 100 City Multi groups. Ref.: ME-AC-KNX-100 •



NOTE: Please, remember that Mitsubishi Electric AG-150A requires a software license, PC-Monitoring license (SW-Mon), that has to be purchased together with the AG-150A gateway.

TRADEMARKS: All trademarks and tradenames used in this document are acknowledged to be the copyright of their respective holders. © Intesis Software S.L. - All rights reserved The information in this document may change without previous notice.




URL

email tel

## Sample applications


Integration of any Mitsubishi Electric City Multi Air Conditioning system equipped with G50 interface into KNX control systems.

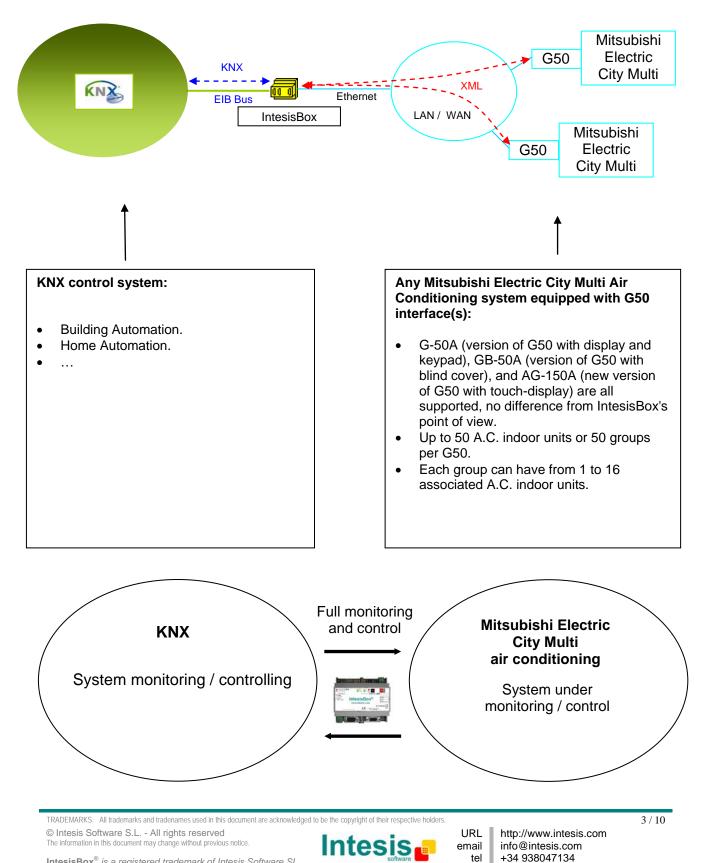

IntesisBox<sup>®</sup> is a registered trademark of Intesis Software SL

# **Typical application**

Full monitoring and control of a Mitsubishi Electric City Multi Air Conditioning system from KNX.

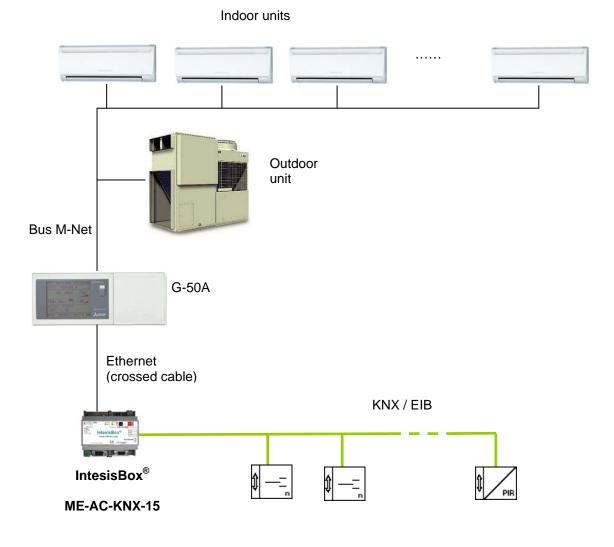

TRADEMARKS: All trademarks and tradenames used in this document are acknowledged to be the copyright of their respective holders. © Intesis Software S.L. - All rights reserved The information in this document may change without previous notice.



http://www.intesis.com info@intesis.com +34 938047134

URL

email

tel

# **KNX/EIB** interface of IntesisBox

General	
Max. Number of Mitsubishi Elec.G50s	Up to 2 G50s (up to 100 groups) are supported.
Virtual signals	<ul> <li>One communication error virtual signal per every G50 device defined.</li> <li>One communication error virtual signal per every group into the G50 device.</li> <li>All these virtual signals also available from KNX.</li> </ul>
KNX/EIB interface	
Bus coupler	Internal KNX TP1 (EIB) opto-isolated bus coupler unit for direct connection to EIB bus. Connector: 2 poles plug-in screw terminal bloc.
Configuration parameters	Physical address.
Interactivity with KNX/EIB system	<ul> <li>All the signals per group and functionality offered by the G50 are directly available from KNX.</li> <li>When IntesisBox starts up, or after a KNX bus reset detection, all the current values read from the G50 will be sent to KNX. <i>Configurable individually per point</i>.</li> <li>Any change detected in Mitsubishi Electric system (i.e. Ambient Temperature of a group) is immediately transmitted to KNX. <i>Configurable individually per point</i>.</li> <li>Any point's value can be updated with a read request sent to KNX when IntesisBox starts up or after a KNX bus reset detection (i.e. Temperature Set Point). <i>Configurable individually per point</i>.</li> <li>Multiple KNX group addresses can actuate on the same IntesisBox's point.</li> <li>Mode, Air Direction, Fan Speed, and Ventilation of each G50 group allow extended functionality for monitoring/control (<i>Multibit</i> feature), they can be monitored/controlled from KNX using objects of type EIS6 (Value 8bits) (i.e. writing the value corresponding to the Mode desired: 0, 1, 2, 3) or also using simpler objects of type EIS1 (switching) (i.e. one different object per each possible Mode: Cool, Heat). This allows for example to fix a given Mode or</li> </ul>
Pointo	Fan Speed using a simple switching object.
Points	CEO related fields
Parameters configurable per point	<ul> <li>G50 related fields.</li> <li>Active (Yes/No). Useful to deactivate G50 points not wanted to be accessible from KNX.</li> <li>KNX/EIB related fields.</li> <li>Group address (in format P/I/S or P/S). <i>Is the sending group address</i>.</li> <li>Listening addresses (in format P/I/S or P/S separated by comma). IntesisBox will listen for KNX write requests of these listening addresses, when received then it will act as if they where for the sending group address defined. This is very useful to translate actions to the Mitsubishi Electric system coming from different KNX commands, for example from an individual start/stop button and also from a general start/stop button</li> <li>R. Specifies if the point accepts read requests from KNX.</li> <li>W. Specifies if the point accepts write requests from KNX.</li> <li>J. Specifies if a write request will be sent to KNX when the point's value changes.</li> <li>U. Specifies if a read request will be sent to KNX to get the current value when the IntesisBox starts up or after a KNX bus reset detection.</li> </ul>
KNX EIS (Datapoints)	Each point has a predefined and fixed KNX EIS associated according to the type of signal in the air conditioner.

TRADEMARKS: All trademarks and tradenames used in this document are acknowledged to be the copyright of their respective holders. © Intesis Software S.L. - All rights reserved The information in this document may change without previous notice.

#### G50 interface of IntesisBox

G50 interface			
Device type	Client.		
Configuration	Polling interval (1600 seconds).		
Parameters	Per each G50 defined:		
	Descriptive name.		
	IP address.		
	TCP port.		

Signals available from KNX per each Mitsubishi Electric City Multi A.C. indoor unit or group of indoor units.

Property	Description / Status
Drive	Start/Stop
	Read/Write: ON, OFF
Mode <sup>1</sup>	AC Mode
	Read/Write: COOL, DRY, FUN, HEAT, AUTO, HEAT RECOVERY,
	LC_AUTO, BYPASS
	Read: AUTO HEAT, AUTO COOL
SetTemp <sup>1</sup>	Temperature Set Point (only integer numbers allowed)
	Read/Write: If the option of virtual SetPoint Temperature is deactivated (see in
	section 3.3 of this document).
	Write: If the option of virtual SetPoint Temperature is activated, to be
	configured from extern KNX sensor (see in section 3.3 of this document).
	For COOL or DRY mode:1930 °C, for HEAT mode: 1728 °C, for
	AUTO mode:1928 °C)
AirDirection	Air output direction
	Read/Write: HORIZONTAL, MID1, MID2, VERTICAL, SWING
FanSpeed	AC fan speed or LOSSNAY
	Read/Write: HIGH, MIDH, MIDL, LOW
RemoCon	Prohibition for General control from the local panel
	Read/Write: PROHIBIT, PERMIT
Driveltem	Prohibition for ON/OFF control from the local panel
	Read/Write: CHK_ON, CHK_OFF
Modeltem	Prohibition for Mode control from the local panel
0 (Ŧ	Read/Write: CHK_ON, CHK_OFF
SetTempItem	Prohibition for Set Point control from the local panel
	Read/Write: CHK_ON, CHK_OFF
FilterItem	Prohibition for Filter Reset control from the local panel
	Read/Write: CHK_ON, CHK_OFF
Ventilation	Operational status for LOSSNAY or OA
514 0	Read/Write: HIGH, LOW, OFF
FilterSign	Status for Filter Dirty
	Read: ON, OFF
Enne "Olara	Write: RESET
ErrorSign	Error status
	Read: ON, OFF
	Write: RESET

TRADEMARKS: All trademarks and tradenames used in this document are acknowledged to be the copyright of their respective holders. © Intesis Software S.L. - All rights reserved The information in this document may change without previous notice.



IntesisBox<sup>®</sup> is a registered trademark of Intesis Software SL

<sup>&</sup>lt;sup>1</sup> PWFY units have a different mode and setTemp map explained in the signals column in LinkBoxEIB (section 3.4 in the User Manual)

InletTemp	Ambient Temperature
	Read/Write: If the option of virtual SetPoint Temperature is deactivated (see in
	section 3.3 of this document).
	<i>Write:</i> If the option of virtual SetPoint Temperature is activated, to be measured
	from extern KNX sensor (see in section 3.3 of this document).
	Range: 0.0 to 99.9
G50 Communication	Communication error with G50
Error	Virtual signal generated by IntesisBox to indicate the status of the
	communication with the G50.
Group	Group communication error
Communication Error	Virtual signal generated by IntesisBox to indicate that the group is not
	configured into the G50.

TRADEMARKS: All trademarks and tradenames used in this document are acknowledged to be the copyright of their respective holders. © Intesis Software S.L. - All rights reserved The information in this document may change without previous notice.



http://www.intesis.com info@intesis.com +34 938047134 URL tel

email

# **Configuration tool**

<ul> <li>Visual engineering tool, easy of use, for IntesisBox's configuration and monitoring compatible with Microsoft Windows operating systems, supplied with the purchase of IntesisBox.</li> <li>Multi-window tool allowing to monitor simultaneously the communication activity with both protocols (systems), real time values for all the points allowing to modify any value (very useful for test purposes), console window showing debug and operation status messages, and configuration windows to configure all IntesisBox's parameters and points.</li> <li>Point's configuration in plain text files (tab separated) for easy and quick configuration using Microsoft Excel (very useful in projects with a lot of points).</li> <li>Allows configuring the IntesisBox's parameters and points while in off-line (not connected to the IntesisBox).</li> <li>Connection to the IntesisBox for download the configuration and monitoring by using serial COM port of the PC (serial cable also supplied).</li> <li>Allows configuring all the external protocols available for IntesisBox<sup>®</sup> KNX series.</li> <li>Upgrades for this software tool available free of charge whenever a new protocol is added to the IntesisBox<sup>®</sup> KNX series.</li> <li>Multi-project tool allowing having in the engineer's PC the configuration for all the sites with different IntesisBox<sup>®</sup> KNX series gateways.</li> <li>Multi-language tool, all the language-dependent strings are in a plain text file (tab separated) for easy modification or addition of new languages.</li> <li>A list of system commands is available to send to the IntesisBox for debugging and adjust purposes (Reset, Date/time consultation/adjust, Eignerof.</li> </ul>
Firmware version request).

G	50	Group	Códiao	Signal	EIS	Group	Listening addresses	B	W	T	U Active
1	1	- 10	1 100-Communication Er	Communication error G50	1 - Switching (1 bit)	1/0/100		R	-	T	1-Ye
2	1	6	1 101-Communication Er	Communication error Group	1 - Switching (1 bit)	1/0/16		B		Т	1-Ye
3	1	5	1 0 - Drive	Start/Stop	1 - Switching (1 bit)	1/0/0	1/0/200,1/0/201	B	W	Т	1-Ye
4	1	157	1 1 - Mode	Mode	14 - Counter (8 bit)	1/0/1		B	W	T	1-Ye
5	1	35	1 16 - COOL (0)	COOL	1 - Switching (1 bit)	01/01/00		B	W	T	0-N
6	1	100	1 17 - DRY (1)	DRY	1 - Switching (1 bit)	01/01/01		B	W	T	0-N
7	1		1 18 - FAN (2)	FUN	1 - Switching (1 bit)	01/01/02		B	W	T	0-N
8	1		1 19 - HEAT (3)	HEAT	1 - Switching (1 bit)	01/01/03		B	W	T	0-N
9	1	157	1 20 · AUTO (4)	AUTO	1 - Switching (1 bit)	01/01/04		B	W	T	0-N
10	1	10	1 21 - AUTO HEAT (5)	AUTOHEAT	1 - Switching (1 bit)	01/01/05		B	W	T	0-N
11	1	101	1 22 - AUTO COOL (6)	AUTOCOOL	1 - Switching (1 bit)	01/01/06		B	W	T	0-N
12	1	101	1 23 - HEAT RECOVERY	HEATRECOVERY	1 - Switching (1 bit)	01/01/07		B	W	T	0-N
13	1	101	1 24 - LC_AUTO (8)	LC_AUTO	1 - Switching (1 bit)	01/01/08		B	W	T	0-N
14	1	101	1 25 - BYPASS (9)	BYPASS	1 - Switching (1 bit)	01/01/09		B	W	Τ	0-N
15	1	53	1 2 - SetTemp	Temp.Set Point (in COOL or DRY:1930 ºC; in HEAT	5 - Float (16 bit)	1/0/2		B	W	Т	1-Ye
16	1	33	1 3 - AirDir	Air output direction	14 - Counter (8 bit)	1/0/3		B	W	Т	1-Ye
17	1	33	1 26 - HORIZONTAL (0)	HORIZONTAL	1 - Switching (1 bit)	01/02/00		B	W	T	0-N
18	1	33	1 27 - MID1 (1)	MID1	1 - Switching (1 bit)	01/02/01		B	W	T	0-N
19	1	101	1 28 - MID2 (2)	MID2	1 - Switching (1 bit)	01/02/02		B	W	Τ	0-N
20	1	33	1 29 - VERTICAL (3)	VERTICAL	1 - Switching (1 bit)	01/02/03		B	W	Т	0-N
21	1	33	1 30 - SWING (4)	SWING	1 - Switching (1 bit)	01/02/04		B	W	Т	0-N
22	1	33	1 4 - FanSpeed	Fan Speed of the AC or LOSSNAY	14 - Counter (8 bit)	1/0/4		B	W	T	1-Ye
23	1		1 31 - LOW (0)	LOW	1 - Switching (1 bit)	01/03/00		R	W		0-N
24	1		1 32 - MIDL (1)	MIDL	1 - Switching (1 bit)	01/03/01		B	W	T	0-N
25	1	100	1 33 - MIDH (2)	MIDH	1 - Switching (1 bit)	01/03/02		B	W	T	0-N

TRADEMARKS: All trademarks and tradenames used in this document are acknowledged to be the copyright of their respective holders. © Intesis Software S.L. - All rights reserved The information in this document may change without previous notice.



email

## **Technical characteristics**



Envelope	Plastic type PC (UL 94 V-0). Size: 107mm x 105mm x 58mm.
Color	Grey. RAL 7035.
Power	9 to 30VDC +/-10% 1.4W.
	24VAC +/-10% 1.4VA.
	Power connector is a 2 pole plug-in screw terminal bloc.
Mounting options	Wall
	DIN rail EN60715 TH35.
KNX (EIB) port	1 x KNX TP1 (EIB) opto-isolated (Plug-in screw terminal block 2 poles).
G50 port	1 x Ethernet 10BT RJ45 connector.
LED indicators	1 x Power.
	2 x KNX port activity (Tx, Rx).
	2 x Ethernet port (LNK, ACT).
	1 x KNX programming/bus. <sup>1</sup>
Push buttons	1 x KNX programming. <sup>1</sup>
Console port	RS232. DB9 female connector (DCE).
Configuration	Via console port. <sup>2</sup>
Firmware	Allows upgrades via console port.
Operational	0°C to +70°C
temperature range	
Operational humidity	5% to 95%, non condensing
range	
Protection	IP20 (IEC60529).
RoHS conformity	Compliant with RoHS directive (2002/95/CE).
Certifications	CE

Not operational for the moment. Reserved for future use. 2

Along with the device it is also supplied a standard DB9 male - DB9 female 1.8 m. cable for configuring and monitoring the device using a PC via serial COM port. The configuration software, compatible with MS Windows<sup>®</sup> operating systems, is also supplied.

TRADEMARKS: All trademarks and tradenames used in this document are acknowledged to be the copyright of their respective holders. © Intesis Software S.L. - All rights reserved The information in this document may change without previous notice.




URL


email

tel

9/10

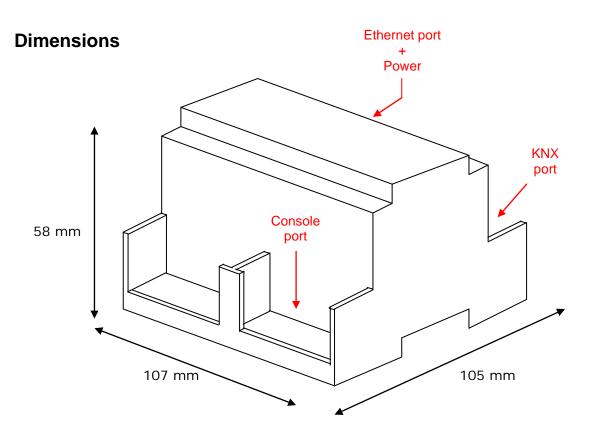

Recommended available space for its installation into a cabinet (wall or DIN rail mounting), with space enough for external connections:

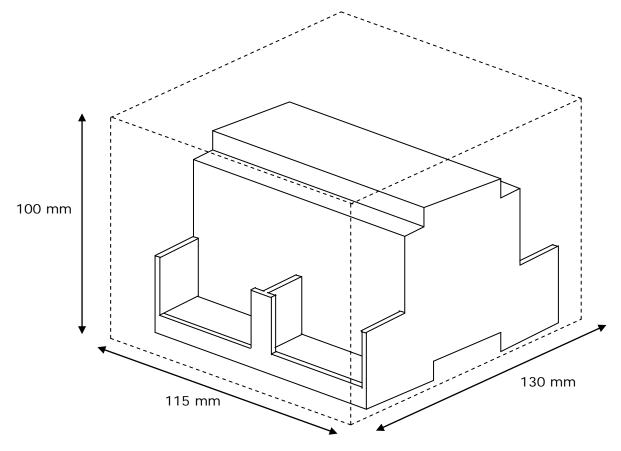

TRADEMARKS: All trademarks and tradenames used in this document are acknowledged to be the copyright of their respective holders. © Intesis Software S.L. - All rights reserved URL The information in this document may change without previous notice. email



http://www.intesis.com info@intesis.com +34 938047134

tel