



Application Wiring Diagrams for IN701KNX



Choose your application

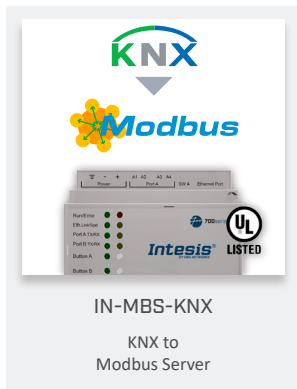

IN-MBS-KNX
KNX to Modbus Server

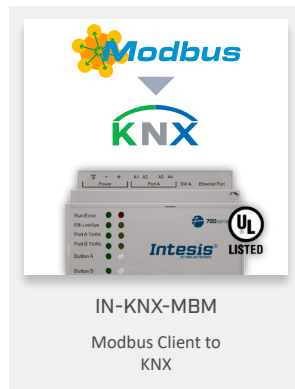

IN-KNX-MBM
Modbus Client to KNX



IN-BAC-KNX
KNX to BACnet Server





IN-KNX-BAC
BACnet Client to KNX




IN-ASCII-KNX
KNX to ASCII Server

IN-MBS-KNX

KNX to Modbus Server

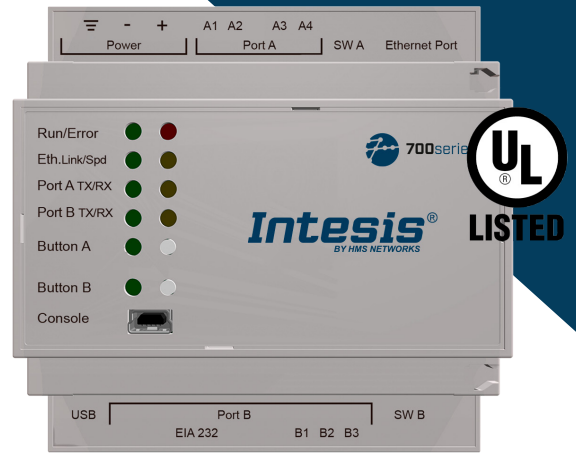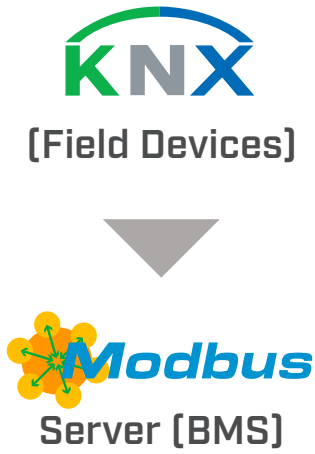

Wiring Diagram

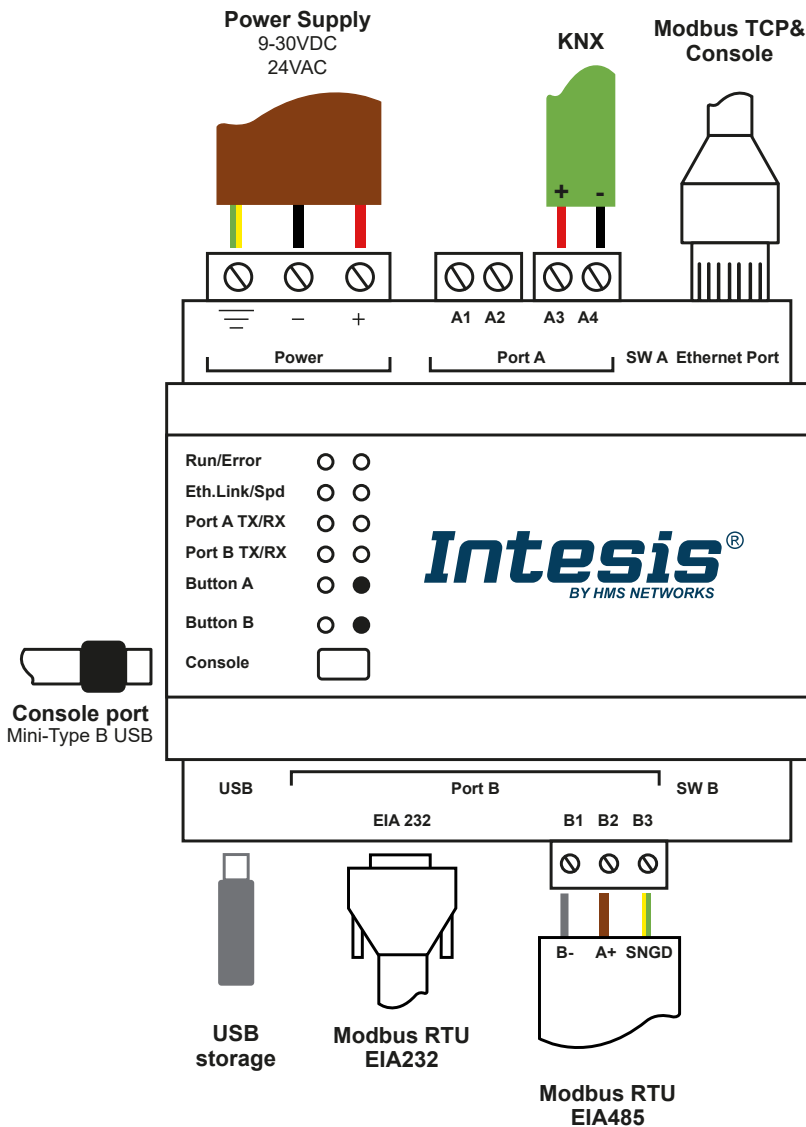

[Application web page](#)

[User manual](#)


[Back](#)

IN-KNX-MBM


Modbus Client to KNX



Client (Field Devices)

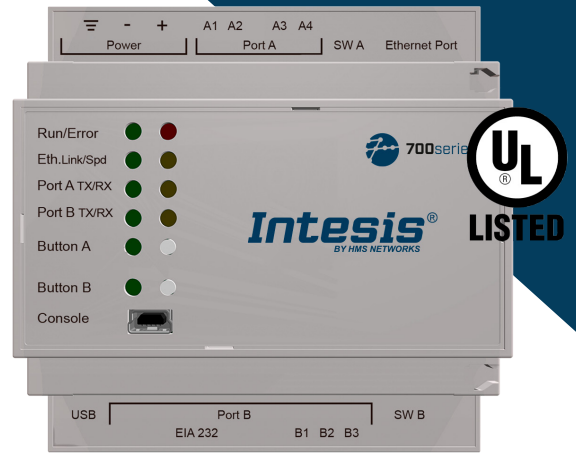

Wiring Diagram

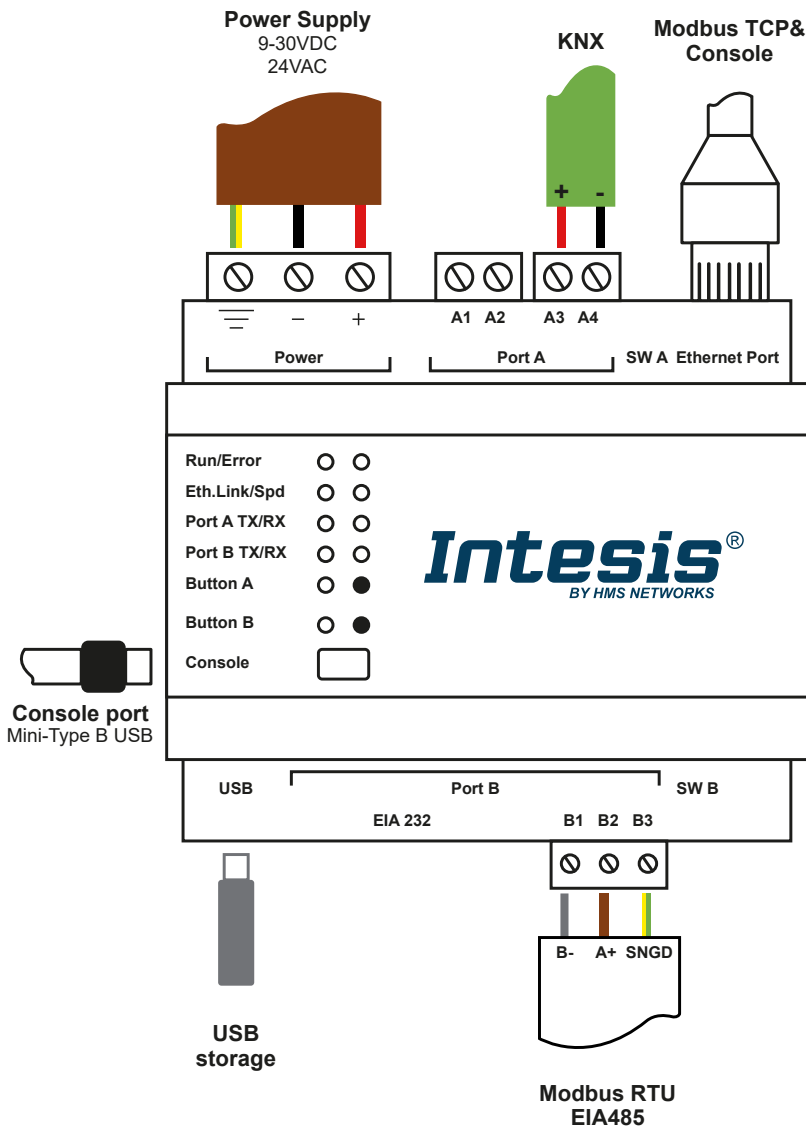



[Application web page](#)

[User manual](#)


[Back](#)

IN-BAC-KNX

KNX to BACnet Server

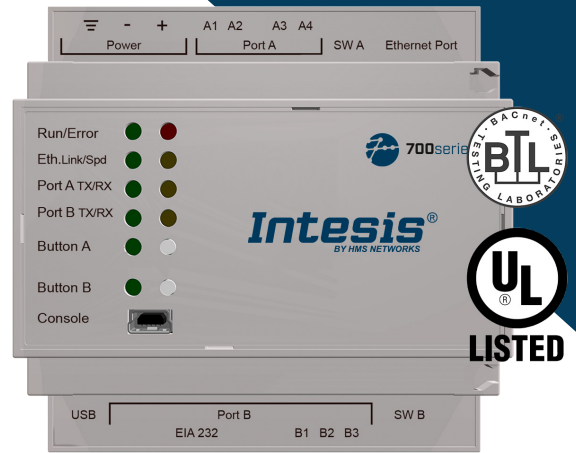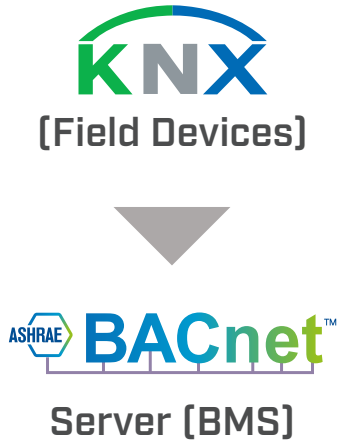

Wiring Diagram

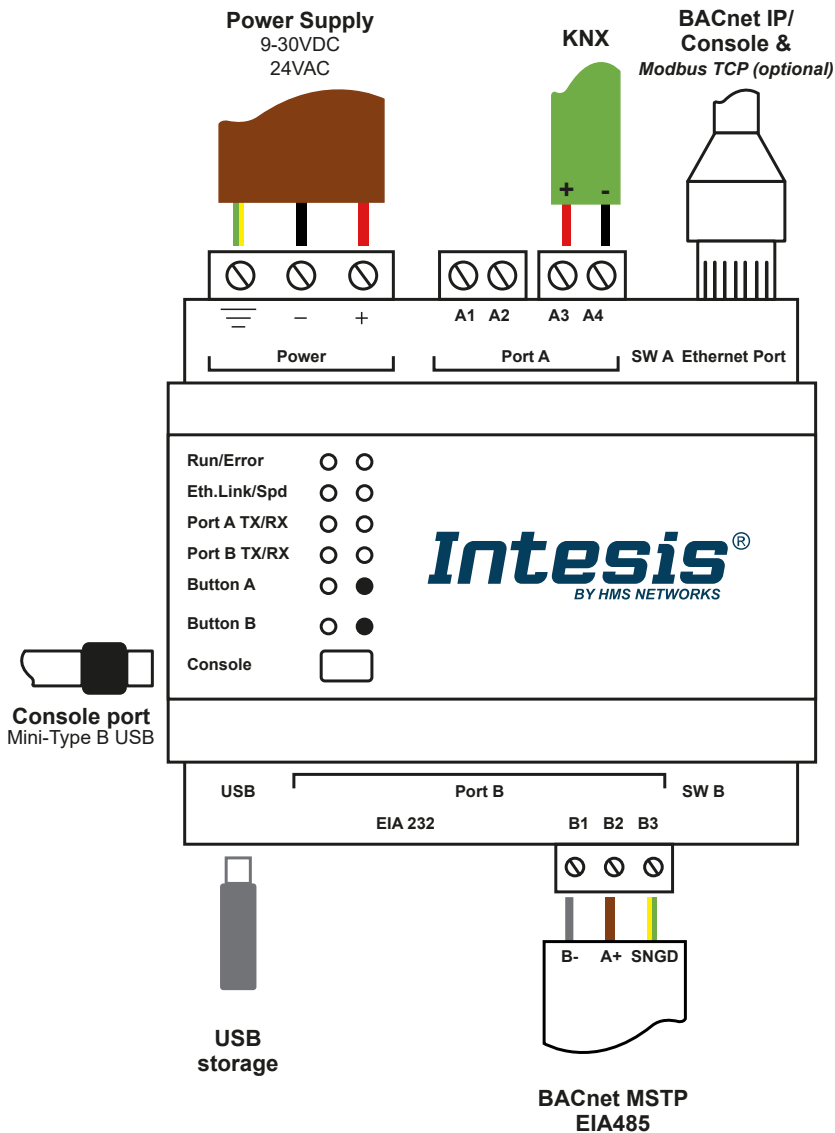

[Application web page](#)

[User manual](#)


[Back](#)

IN-KNX-BAC


BACnet Client to KNX



Client (Field Devices)

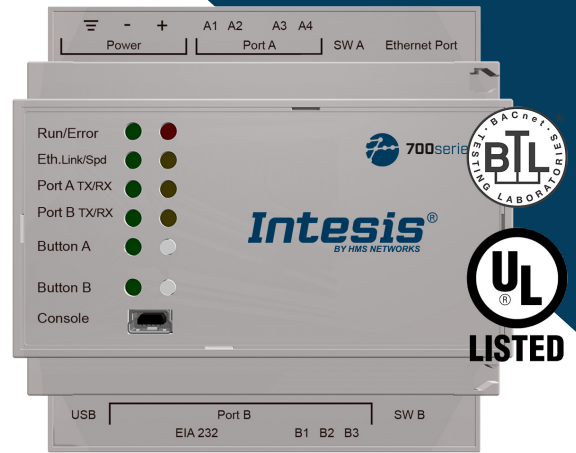

Wiring Diagram

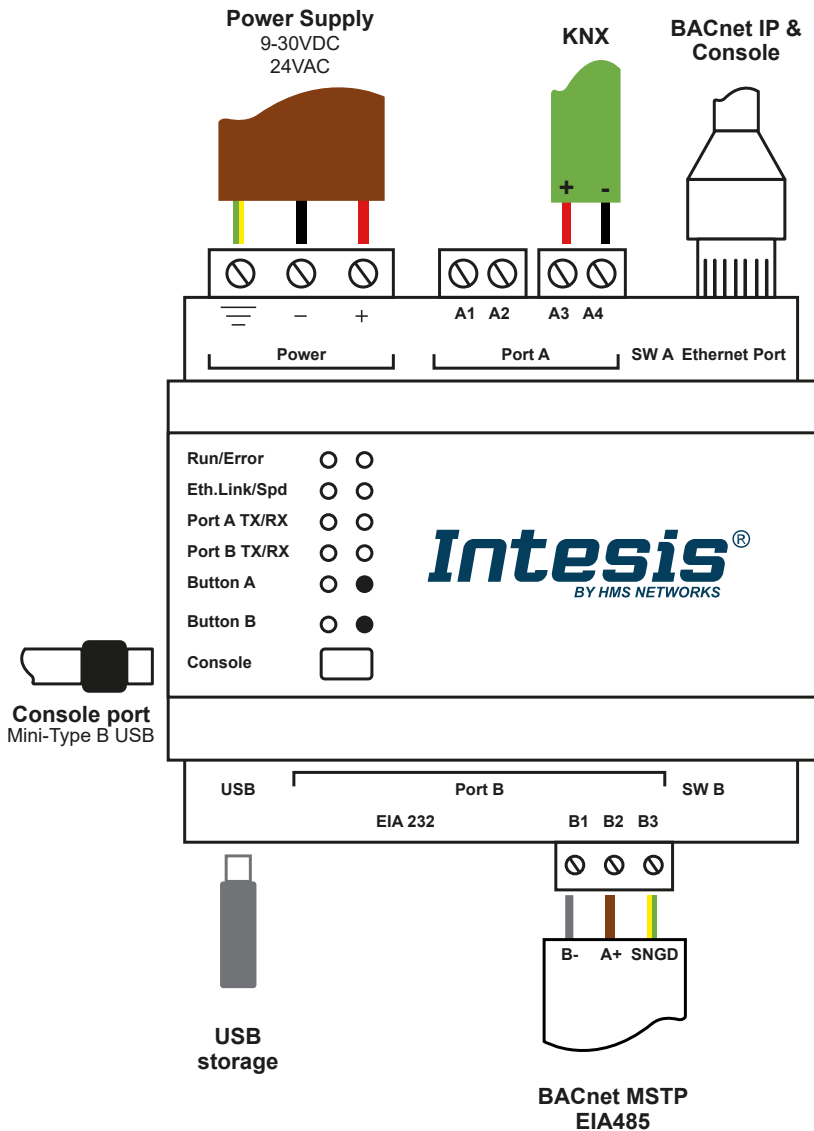


[Application web page](#)

[User manual](#)


[Back](#)

IN-ASCII-KNX

KNX to ASCII Server

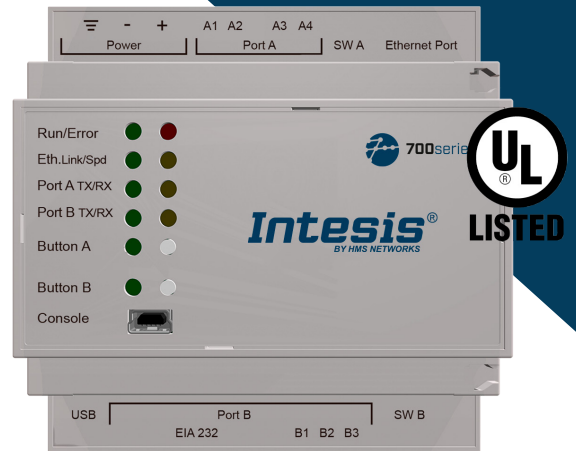

Wiring Diagram

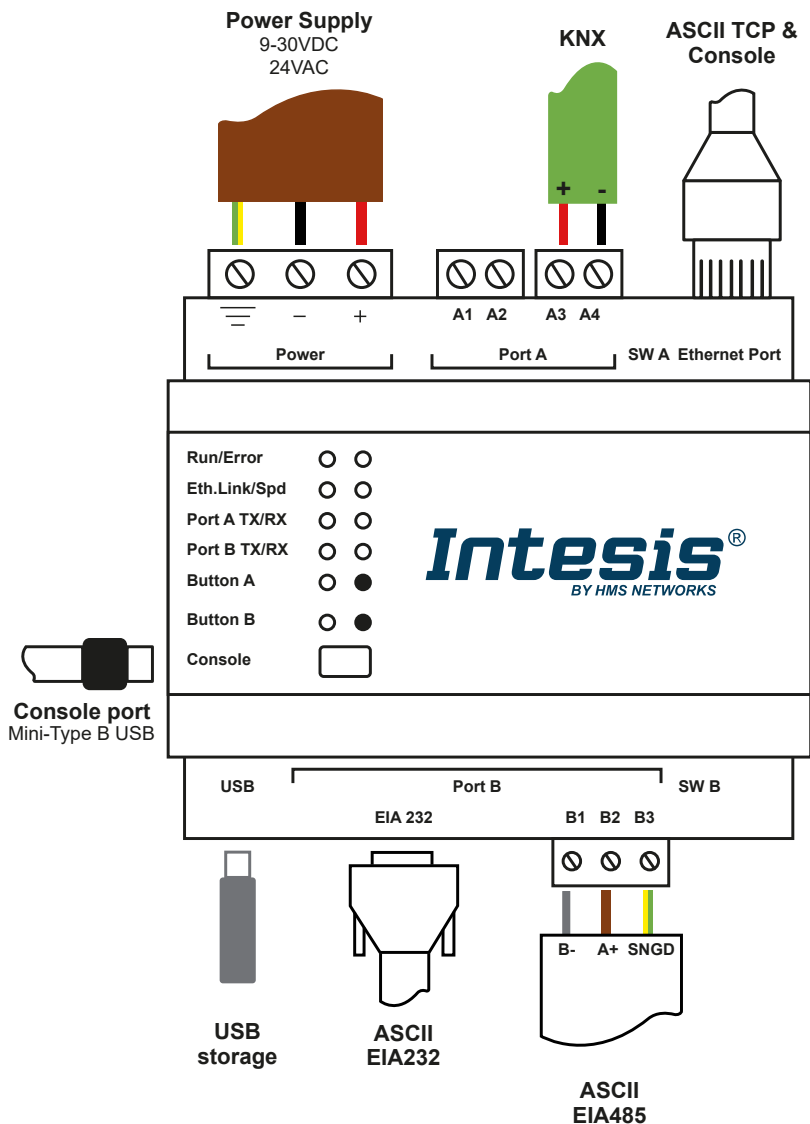

[Application web page](#)

[User manual](#)

[Back](#)