



Micro Server

Installation Sheet

Thinknx Micro server installation guide – V. 1.0
www.thinknx.com

Package Checklist

- ThinKnx Micro server
- Power Adapter
- BUS terminal connector
- Installation Sheet

Technical Data


- Power Input : 12-24 VDC – 1A Max
- Power Consumption : 4 Watt
- Operating Temperature : 0°C / + 50°C
- Protection Type : IP20
- Made in Italy

Installation

ThinKnx Micro server must be installed in compliance with electrical installation rules for your country.

Server must be installed in not dusty place, not subject to water infiltration; should not be placed near a source of heat or in direct contact with the Sun.


Connections

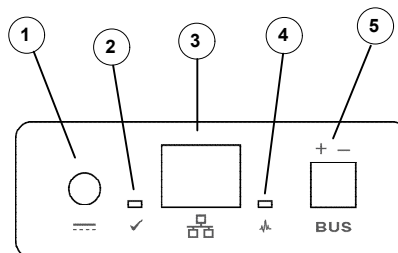

- 1 - Power supply connector
- 2 - Server ready LED Indicator (litted when server is fully operational)
- 3 - Ethernet port
- 4 - KNX activity LED indicator (flashes when KNX telegram is received)
- 5 - EIB/KNX connector (respect polarity)

- Use only supplied connector to connect with the KNX bus.
- Remove power form server during electrical connections.

Dimensions (mm)

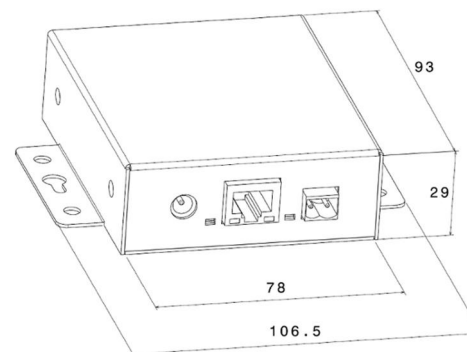

First configuration

Main configuration of the server is via web console. To reach web console an internet browser must be used (Firefox or Chrome is recommended). Please write the following address into browser address bar :

http://<ip-address>:5051

where ip-address is the one taken by the server.

To login for the first time use following credentials:

User : **service**

Password : **password**

To find the IP address of the server a search utility is available and can be downloaded from **www.thinknx.com**

Server is configured to use DHCP. If DHCP fails server will acquire address:

192.168.0.200

Please check ThinKnx website for additional information.



Go Paperless!
Manuals are online

Recycle with us!

