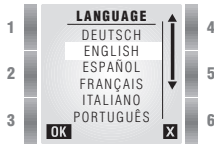 


40291 • 40291.10 CONTROL UNIT

**First connection**

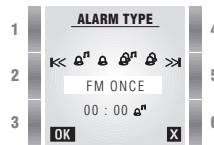
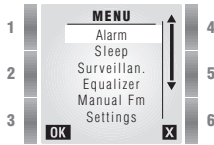
Press any key.
The language selection menu will be displayed.
Use keys **4** or **5** to select your language and then press key **3 (OK)**.

Main screen**Turn the device on/off**

Keep key **1** pressed for a few seconds to switch off all the active control units of the installation.
With the audio off, keys **4** and **5** are in screen backlight adjustment mode. This will enable you to adjust the light intensity of the display when the control is on standby.

Intercommunication

This key turns on the intercommunication with the complete installation or with a particular room.
Press shortly to choose from the available areas.
Use keys **4** and **5** to select the area and press key **2** to communicate with the selected area.
Press **1** to avoid intercommunication, door phone or bell in the area.
Keep key **2** pressed for general message (zone **00** appears on the screen).
Please refer to **DOMOS2** user's manual for door phone (ref. **EGi 40410 / 40420**) configuration.

MENU adjustments**ALARM**

To set the alarm, use keys **4** and **5** to go to the desired option, and then press **3 (OK)**.
Use keys **4** and **5** to increase the time value (**Hour** will be displayed as selected).
When finished, press key **2** to set minutes the same way.
Press key **6** (PLUS) to select the type of alarm.

Using keys **2** and **5** choose between an alarm using FM one day (you will wake up with the audio source or FM station selected while setting up the alarm clock), an alarm with a buzzer one day (repetitive beeping sound), alarm using an FM connection every day or an alarm with a buzzer every day.

When everything is correct, press **3 (OK)**.

The home screen will display the hour of activation and the type of alarm.

SLEEP (TIMER)

Use **1** or **2** to select if you wish to activate the timer just once (**Now**) or every time you turn on the device (**Always**).
Press **4** or **5** to adjust the disconnection time. Press **3 (OK)** when finished. To deactivate **SLEEP** select **0** minutes.

SURVEILLANCE

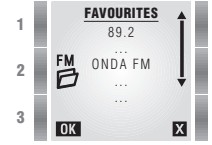
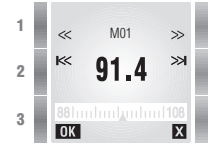
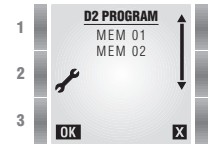
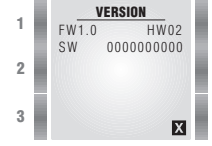
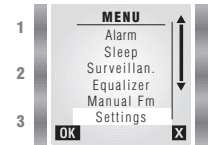
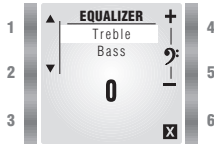
Press key **2** to listen the activity in other area.
If more than one area is being listened, all rooms will be listened for 10 seconds each.
Press key **5** to activate the built in microphone so that activity in the area could be monitored from other area.
NOTE: The same area can not listen and be listened at the same time.

EQUALIZER

This adjustment can modify the level of bass and treble. Use **1** or **2** to switch between base and treble.
Once selected, press **4** or **5** to increase or decrease the level of bass or treble frequencies.
Once modified, press key **6** (QUIT).

MANUAL FM

Pressing **1** or **4**, you will move up or down the FM band in 100 kHz steps.
If you want to carry out an automatic search, pressing **2** or **5** will scan up or down the FM bands automatically until FM radio station is found.
When you find the station (either in manual or automatic mode), press key **3 (OK)**. This radio station will be added to the FM list if there is space in the memory.
You can store up to 36 radio stations (30 in autoscanner + 6 manual).
If you wait for a few seconds, once the station is tuned the RDS* information will be displayed. If this information comes in several parts, press key **3 (OK)** when you are viewing the text you wish to identify the station with.
(*) Not all radio stations transmit RDS information.

**SETTINGS****Time**

To set the clock, use keys **4** and **5** to go to the option, and then press **3 (OK)**.
Use keys **4** and **5** to increase the hour value (**Hour** will appear selected).
When you finish, press key **2** to adjust the minutes in the same manner.

When everything is OK, press key **3 (OK)**.

When the clock has been configured, if you return to the **TIME** menu, the **OK** key will be replaced by **STOP**. If you press this, the time will disappear from the display in standby mode.

Autoscan

On pressing **Autoscan**, the list of FM stations is created again. You can choose between keeping the list of favourite stations or delete it. The autoscan process can take several minutes.

Language

Use keys **4** and **5** to select the menu language. When selected, press **3 (OK)**.

Version

On pressing this, the version of the software installed, the serial number and other data for technical support will be displayed.

Antenna

The control unit can use the internal antenna for FM reception or use an external one.
Use key **1** for external antenna or **X** to use the internal one.

Stereo

Press key **1** to select **Stereo** (✓) or **Mono** (X) in case of bad FM reception.

Reset

Returns the control unit to its original configuration. All configurations, FM lists and favourite list will be lost.

DOMOS2

This menu allows the customization of **DOMOS2** services.

Press key **1** to activate "✓" or deactivate "X" the features highlighted with keys **4** and **5**.
Refer to **DOMOS 2** manual for **SETUP**.

The name of the area can be change to suit your needs:

- Select **NAME**.
- Press key **4** to change the name. Once chosen, press key **5** to modify the number (Eg: **BEDROOM-02**).
- Press **OK** when finished.

Volume adjustment

Keys **4** and **5** are used to raise or lower the volume.

A short press modifies the volume step by step and a long press speeds up the change.

Backlight control

Use keys **4** and **5** to increase or decrease the power of the display backlighting, with the control in standby.

Program selection

In this menu, any of the Central unit programs, local radio or favourite list can be chosen.

To modify the radio station stored in a memory of the central unit, select the program using keys **4** and **5** and press key **2**.

The stored stations will appear on the screen. Press key **2**.

Use the keys **1** or **4** to select the memory position. Once selected, use key **2** or **5** to select the frequency or the new radio station and press **OK** for a few seconds to store it.

FM list

Press key **2** to see all the stations tuned.

Use keys **4** and **5** to select the station. You will see the name displayed. If the station does not transmit RDS information, its frequency will be displayed. When the station you wish to listen to is selected, press key **3 (OK)**.

You can quit the menu at any time by pressing key **6** (QUIT).

Press **1** to add the selected station to **FAVOURITES**.

If you wish to delete a station from the **FM LIST**, select it and press **2** (DELETE).

If the radio station you wish to delete belongs to **FAVOURITES**:

- The first time you press key **2** (DELETE) will remove it from **FAVOURITES** and
- the second time it is pressed will remove it from the **FM LIST**.

If you delete a radio station from the **FM LIST**, it will disappear permanently. It will not appear in **FAVOURITES** if it was selected.

If you wish to retrieve it later, you will have to return it using **MANUAL FM**.

When there is only one station remaining, the icon DELETE (key **2**) will disappear.

Favourites list

You can select up to 12 favourite radio stations.

You can also add a station from **FAVOURITES**, using keys **4-5** to select an empty position and then press key **2** FM. In this manner, the list of stations available will appear and you can select the one you wish to add to **FAVOURITES**.

You can delete a favourite station by selecting it with keys **4-5** and then pressing key **2** (DELETE).

