



KES 3xSingle-Phase (KNX Energy Saver)

Single-phase system
energy saver

ZN110-KES

Application Program Version: [2.0]
User Manual Version: [2.0]_a

www.zennio.com

Contents

| | |
|--|----|
| Document updates..... | 3 |
| 1 Introduction | 4 |
| 1.1 The KES energy saver..... | 4 |
| 1.2 Instalation..... | 5 |
| 1.2.1 Measuring probe | 7 |
| 2 Configuration | 8 |
| 2.1 Active power..... | 8 |
| 2.2 Active energy..... | 9 |
| 2.3 Power limits..... | 9 |
| 3 ETS parametrization | 11 |
| 3.1 Default configuration | 11 |
| 3.2 General window | 13 |
| 3.3 Channels | 17 |
| 3.3.1 Active energy | 19 |
| 3.3.2 Active power..... | 23 |
| 3.3.3 Power limit monitoring..... | 25 |
| 3.4 Logical functions..... | 28 |
| ANNEX I: Time management..... | 29 |
| ANNEX II: Further examples | 33 |
| ANNEX III: Communication objects | 47 |

DOCUMENT UPDATES

| Version | Changes | Pages(s) |
|---------|---|----------|
| [2.0]_a | Changes in the application program: <ul style="list-style-type: none"> • New algorithm for calculating energy consumptions. • Minor changes in texts. | - |
| | Wider variety of devices and environments which KES can work with. | 5 |
| | Revision of texts and styles. | - |
| [1.0]_b | Added references to the 1xThree-Phase application program, intended for three-phase installations. | 4 |
| | Extended information about the range and resolution of the measurements. | 8 |
| | Revision of the explanation about parameter "AC Power Supply voltage". | 11 |
| | Revision of the explanation about parameter "[Cx] Disable". | 12 |
| | Revision of texts and styles. | - |

1 INTRODUCTION

1.1 THE KES ENERGY SAVER

The KNX Energy Saver from Zennio, **KES**, combines in only one device the following features:

- Support for **single-phase** and **three-phase** environments (two independent application programs):
 - **KES 1xThree-Phase**, destined to three-phase electric systems, where each of the measuring probes will monitor one of the phase lines.
 - **KES 3xSingle-Phase**, destined to single-phase electric systems, where each measuring probe can be used to monitor three independent electric conductions (channels).
- **3 independent input channels**, each of which can be used to connect one measuring probe (model **ZN1AC-CST60**) to perform these actions (over three independent single-phase electric lines or over one three-phase electric line):
 - Measuring and reporting **instant active power consumptions** (kW).
 - Measuring and reporting **active energy consumptions** (kWh).
 - Calculating and reporting the cost of the energy consumption (with the possibility of setting up **1 to 4 different tariffs**) as well as the volume of the CO₂ emissions required to generate such energy.
 - Monitoring power limits.
- **Hourly, daily, weekly and monthly** report of total energy consumption, as well as upon request (through a global request object).
- Sending of the **actual and average values** of the consumed energy, its cost and the corresponding CO₂ emissions (every day, every week, every month or upon request).

- Synchronisation through an **external KNX clock**.
- Module with up to 5 multi-operation **logical functions**.

The measurement algorithm implemented in versions 2.0 and later of KES can correctly compute power consumptions in a variety of alternating currents, including non sine signals and signals generated by dimmers. This makes KES able to work with signals of any shape and to measure power consumptions with all kinds of appliances and devices in the home and industrial environments.



Figure 1 The KES energy saver.

1.2 INSTALATION

KES connects to the KNX bus via the bus connecting terminals.

The input channels are connected to KES through the screw terminal included in the device packaging.

Once KES is provided with power from the KNX bus, both the individual address and the associated application program can be downloaded.

Figure 2 shows the element scheme of KES.

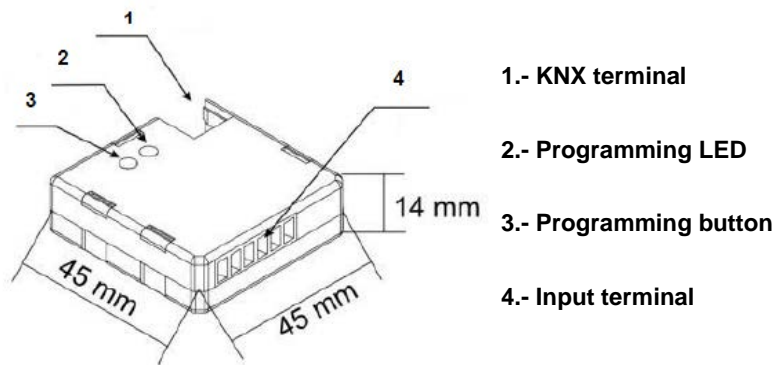


Figure 2 Element scheme.

The functionality of the main elements is described below:

- **Programming button (3):** a short press on this button sets the device into programming mode, making the associated LED (2) light in red. If this button is held while plugging the device into the KNX bus, KES is set into secure mode. The LED blinks in red.
- **Input terminal (4):** the screw input terminal (see figure below) must be connected here. to allow the connection of the different measuring probes provided with the device. A different probe will be required per electrical line being monitored. Consequently, the two terminals of each measuring probe will be inserted into the two connection points of the particular input to be used. For instance, if three electrical lines are going to be monitored, one probe will need to be connected to slots 1 and 2 (referred to as “Channel A” in the Single-Phase application program), another one to slots 3 and 4 (“Channel B”), and a third one to slots 5 and 6 (“Channel C”). In the case of the Three-Phase version, each probe will be destined to monitor one of the three phase lines in the installation.

Note: *the insertion order of the two terminal wires from the measuring probe to the connection slots of the input does not affect the functionality. I.e., for the first input it is possible to connect either one of the wires from the probe into point 1 and the other cable into point 2, or either the inverse.*




Figure 3 screw input terminal.

1.2.1 MEASURING PROBE

The set-up process of the **ZN1AC-CST60** measuring probe (Figure 4) is described next.

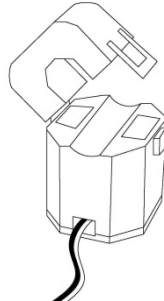


Figure 4 Zennio ZN1AC-CST60 measuring probe.

The required steps are:

- **Open** the top clamp of the probe.
- Pass the **phase wire** from which the energy measures will be taken through the gap that has just been uncovered in the probe.
- **Close** back the top clamp of the probe.
- Connect the **two wires** of the measuring probe into the terminal block from KES, in the two connection slots corresponding to the channel being used.

Please remember that KES only performs measurements of the power consumed by **alternating current (AC)** lines.

Note: *it is **very important** to keep in mind that neither ordinary power supplies (230 V) nor other external supplies should be connected to the KNX bus, nor directly to the input terminal of KES.*

For detailed information about the technical features of KES, as well as on security and installation procedures, please refer to the device **Datasheet**, included within the device packaging and also available at <http://www.zennio.com>.

Hereafter, this user manual will only refer to the **KES 3xSingle-Phase** application program, intended for single-phase systems. The specific user manual for the **KES 1xThree-Phase** application program, intended for three-phase systems, may be downloaded from the <http://www.zennio.com> website.

2 CONFIGURATION

2.1 ACTIVE POWER

KES 3xSingle-Phase calculates the value of the active power consumed by the device whose phase line passes through the ZN1AC-CST60 probe, connected to one of the KES channels. This active power is obtained from the **effective intensity** measured by the probe according to the following relation:

$$P_{act} = V_{ef} \cdot I_{ef} \cdot PF$$

where V_{ef} is the effective voltage of the line and PF is the power factor (which, as a general rule, is ideally assumed to be the equal for the whole installation). Both values must be defined by parameter. The value of the effective intensity, I_{ef} , is obtained, as stated above, by placing the measuring probes around the electric line, and by connecting the outputs of the probe into one of KES input slots.

Each measuring probe, and consequently KES, is capable of measuring effective intensities in the range [300 mA - 60 A], which in a 230v single-phase environment with a power factor of 100%, would correspond to [69 W – 13,8 kW].

Once beyond the aforementioned 300 mA, the **resolution in the measurement of the instant power** is determined by the DPT of the 2-byte floating-point object used to transmit the value to the bus (0.01 kW).

In addition to measuring instant active power, KES can also monitor the highest detected power, so that **power peaks** can be calculated per hour, day, week and month, which may be interesting for monitoring historic values.

2.2 ACTIVE ENERGY

Based on successive values of the instant power, KES can perform the count of the **total energy consumed** per hour, day, week or month, as well as calculating daily, weekly and monthly average consumptions.

KES can also make **estimations of the energy** that would be consumed during a whole day if the current value of the instant power were kept constant for 24 hours. This estimation can be expressed in terms of consumption (kWh) and in terms of cost (local currency).

Daily, weekly and monthly values of the actual energy consumed can be expressed in terms of consumption (kWh), of cost (local currency), or even in terms of the CO₂ (kgCO₂) sent to the atmosphere for the production of such quantity of energy.

If both, estimations and energy consumptions, are set to be expressed in terms of cost, KES allows specifying up to four different tariff values (in cents of the local currency per kWh).

2.3 POWER LIMITS

KES can also monitor the level of the consumed power in relation to certain limits, initially defined by parameter: an **upper limit** and a **lower limit** (linked to an overconsumption alarm and to a low-consumption indicator, respectively), and a certain margin (**hysteresis** or **deadband**) regarding each of the two limits.

Figure 5 shows an example of the process. When the instant power is higher than the upper limit, KES sends an overconsumption alarm (if configured) and this will not be deactivated until the instant power is back again under the upper limit minus the margin band. If the value of the instant power keeps decreasing, KES will send (if configured) a low-consumption indicator as soon as the power is lower than the lower limit. This indicator will remain active until the power is back again higher than the lower limit plus the margin band.

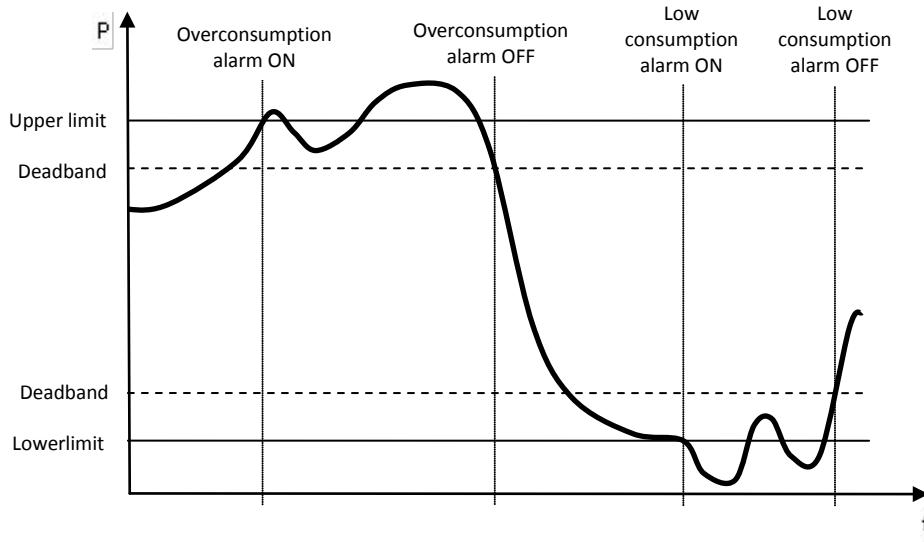


Figure 5 Power limit monitoring.

These concepts will be explained in detail in section 3.3.3 of this user manual.

3 ETS PARAMETRIZATION


For beginning with the parameterization of KES it is necessary, once the ETS program has been opened, to import the product database (**KES 3xSingle-Phase** application program).

Next, the device must be added to the project where desired. Right-clicking on the name of the device will display the “Edit parameters” option, which allows the parameterization itself.

The following sections describe in detail the different options available in ETS.

3.1 DEFAULT CONFIGURATION

When no particular parameterization has been defined yet, the device and its objects will show as in Figure 6.

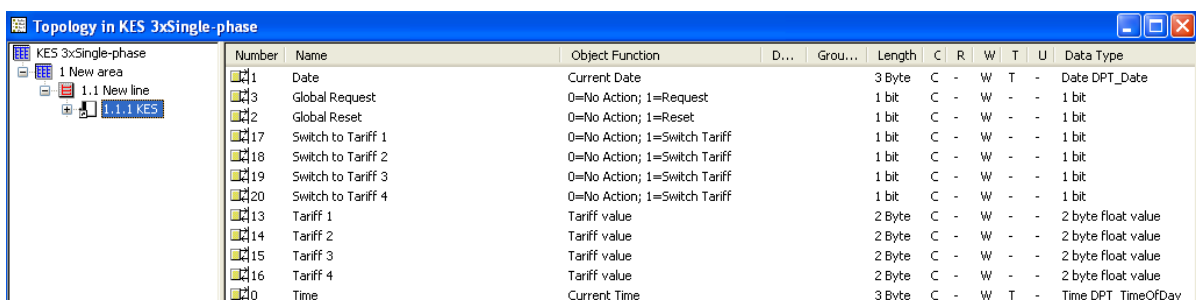

| Number | Name | Object Function | D... | Grou... | Length | C | R | W | T | U | Data Type |
|--------|--------------------|------------------------------|------|---------|--------|---|---|---|---|---|--------------------|
| 1 | Date | Current Date | | | 3 Byte | C | - | W | T | - | Date DPT_Date |
| 3 | Global Request | 0=No Action; 1=Request | | | 1 bit | C | - | W | - | - | 1 bit |
| 2 | Global Reset | 0=No Action; 1=Reset | | | 1 bit | C | - | W | - | - | 1 bit |
| 17 | Switch to Tariff 1 | 0=No Action; 1=Switch Tariff | | | 1 bit | C | - | W | - | - | 1 bit |
| 18 | Switch to Tariff 2 | 0=No Action; 1=Switch Tariff | | | 1 bit | C | - | W | - | - | 1 bit |
| 19 | Switch to Tariff 3 | 0=No Action; 1=Switch Tariff | | | 1 bit | C | - | W | - | - | 1 bit |
| 20 | Switch to Tariff 4 | 0=No Action; 1=Switch Tariff | | | 1 bit | C | - | W | - | - | 1 bit |
| 13 | Tariff 1 | Tariff value | | | 2 Byte | C | - | W | - | - | 2 byte float value |
| 14 | Tariff 2 | Tariff value | | | 2 Byte | C | - | W | - | - | 2 byte float value |
| 15 | Tariff 3 | Tariff value | | | 2 Byte | C | - | W | - | - | 2 byte float value |
| 16 | Tariff 4 | Tariff value | | | 2 Byte | C | - | W | - | - | 2 byte float value |
| 0 | Time | Current Time | | | 3 Byte | C | - | W | T | - | Time DPT_TimeOfDay |

Figure 7 Default topology.

Objects “**Time**” and “**Date**” are shown first in the list. They are intended to set the time and date of the KES device by means of an external KNX clock. Their functionality and everything related to time management will be detailed in *ANNEX I: Time management*.

“**Global Reset**” and “**Global Request**” can be found next. When it receives the value “1”, the earlier will reset every counter and every calculation to the default values, so every object related to instant values, estimations, total values and average values that had been parameterized will become zero, as well as every variable needed for calculations. In addition, communication objects related to tariffs and the upper and lower limits will return to their original value, that is, the one parameterized through the

corresponding ETS fields. After that the measuring and calculating process will start again. The value “0” written to this object will have no effect.

Regarding “**Global Request**”, the value “1” through this object will cause an extra sending of all the communication objects related to the power consumption –of every input channel that has been enabled– which, because of having been parameterized in such way, are already being sent to the bus at certain times: instant values, accumulate values, average values, peak values, etc. In other words, the global request forces the re-sending of everything that KES, with no need of a specific external request, already sends periodically to the bus. Objects not related to a periodical sending will consequently not be sent, such as “Total Energy”, “Total Cost”, etc. In addition, when the global request takes place, objects for which a periodical sending is available but has not been parameterized in ETS will not be sent either.

The behaviour of the communication objects “**Tariff x**” and “**Switch to tariff x**”, shown by default, will be detailed later.

3.2 GENERAL WINDOW

The General screen, shown in Figure 8, permits the definition of generic parameters for the operation of the energy saver, as well as specifying which channels (A, B, C) have a ZN1AC-CST60 probe connected for measuring energy consumptions.

Figure 8 Default configuration screen.

- **AC Power Supply Voltage [V]:** this field is to configure the effective voltage, in volts, of the electric network (0-450v). The default value is 230v.
- **Power factor [%]:** this parameter defines, as a certain percentage, how the active power (the one actually consumed by the load) and the total supplied power are related (see section 2.1). The default value is 100%.
- **Carbon Dioxide Ratio:** amount of CO₂ (in cents of a Kg) sent to the atmosphere to produce one unit of energy (kWh).

Note: the value shown by default (0.5 kg CO₂/kWh) is approximately similar to the regular ratios in Europe. It is always possible to change it by entering accurate values for the system to be monitored or by directly setting the exact value that can usually be found on the electric bill provided by the electric supplier

- **Tariffs. Tariff “x”. Initial value:** Initial value for tariff “x” (out of up to four different tariffs) for calculating the costs (estimated, actual or average) of energy consumptions. This cost should be expressed in cents of the local currency.

KES permits defining up to four tariffs with a different electric fee each, and to switch from one to another in runtime (the active tariff by default is tariff 1). To make this possible, there are four 1-bit objects (“**Switch to tariff x**”) that allow, by sending the value “1”, changing from one tariff to another for cost calculation. These objects may be linked to an external timer so that, for example, depending on the time band in which KES takes consumption samples, one tariff or another will be used, making cost estimations more precise.

It is also possible to change in runtime the value itself of each tariff. Four 2-byte objects (“**Tariff x**”) can be found for this purpose, making it possible to update the value originally defined by parameter.

Should any of the tariffs be unnecessary, the object “Switch to tariff x” can be left unlinked.

- **Date and time request on bus voltage recovery:** defines how much time (1 to 255 seconds) KES should wait, on voltage recovery, before sending the time and date requests through the KNX bus. See *ANNEX I: Time management*.
- **Cyclical sendings:** these parameters are destined to enable/disable periodic sendings (for every active channel). These periodic sendings include both, **security sendings** (in other words, the re-sending of values that had already been calculated and reported to the bus but that can be sent again periodically) and **continuous sendings** of certain updated values. In order to permit a better understanding of how KES counts these periods and the exact

instant when sendings take place, it is recommended to read *ANNEX I: Time management*.

- **Security sending of last daily values:** allows enabling the periodic re-sending of values related to the previous day, being possible to select cycle times of 1, 2, 3, 4, 6 or 12 hours (choosing “0” disables this sending). This way, all the daily values enabled under “Active energy” (see section 3.3.1) will not only be sent at the end of the day, but also during the following day, every time the selected period expires.

Note: *regardless of the selected period (0, 1, 2, 4, 6 or 12 hours), the re-sending of the last daily values will not work unless at least one channel (A, B, C) is active and unless at least one daily value has been enabled under the “Active Energy” screen.*

- **Security sending of last weekly values:** permits enabling the periodic re-sending of values related to the previous week, being possible to select cycle times of 1 to 7 days. (choosing “0” disables this sending). This way, all the weekly values enabled under “Active energy” (see section 3.3.1) will not only be sent at the end of the week, but also during the following week, every time the selected period expires.

Note: *regardless of the selected period (0-7 days), the re-sending of the last weekly values will not work unless at least one channel (A, B, C) is active and unless at least one weekly value has been enabled under the “Active energy” screen.*

- **Security sending of last monthly values:** permits enabling the periodic re-sending of values related to the previous month, being possible to select cycle times of 1 to 30 days (choosing “0” disables this sending). This way, all the monthly values enabled under “Active energy” (see section 3.3.1) will not only be sent at the end of the month, but also during the following month, every time the selected period expires.

Note: *regardless of the selected period (0-30 days), the re-sending of the last monthly values will not work unless at least one channel (A, B, C) is active or at least one monthly value has been enabled under the “Active energy” screen.*

- **Sending of daily, weekly and monthly peak power values:** allows enabling the periodic sending of the instant (updated) values of the daily, weekly and monthly peak power, being possible to select a cycle time of 1, 2, 3, 4, 6 or 12 hours (choosing “0” disables this sending). This way, the peak power values enabled under the “Active power” screen (see section 3.3.1) will not only be sent when corresponding to each (at the end of the day, at the end of week, or at the end of the month), but also every time the selected period expires, letting the bus know how the peak values change during the current day, week and month.

Note: *regardless of the selected period (0, 1, 2, 4, 6 or 12 hours), the sending of the peak power values will not work unless one channel (A, B, C) is active and unless at least one of these peak values has been enabled under the “Active Power” screen.*

- **Reset after request?:** when this parameter is enabled (“Yes”), the value of the communication objects and variables related to the total consumption of a particular channel (A, B, C) will be reset to zero every time KES responds to a request of the local consumption values of that channel since the last reset. This local request is performed by sending the value “1” through the object “[Cx] Request” (see section 3.3).
- **Channels A, B and C:** permits selecting what channels will be used for measuring. Once enabled (“yes”), the menu on the left will include a tab for the configuration of each active channel (see section 3.3).
- **Logical functions:** after enabling this parameter, the menu on the left will include a new tab for the configuration of the logical functions. See section 3.4 for further information.

3.3 CHANNELS

Channel screens will show for the first time as follows:

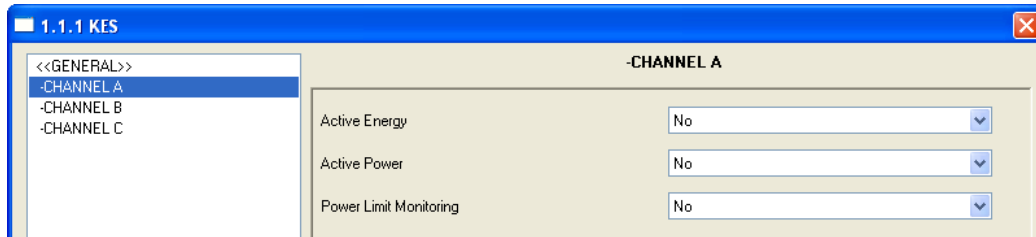


Figure 9 Channel.

It is possible to independently enable the parameters **Active Energy**, **Active Power** and **Power Limit Monitoring** for each active channel.

Moreover, after enabling a certain channel, three new 1-bit communication objects will come up per channel: “[Cx] Reset”, “[Cx] Request” and “[Cx] Disable”. Note the distinction between the objects “Global Request” / “Global Reset” (which affect all channels) and the objects “[Cx] Request” and “[Cx] Reset” (which affect only a certain channel).

- When the energy saver receives the value “1” through the “[Cx] Reset” object, every communication object and variables related to estimations and average / total values of channel “x” will be reset to zero. Receiving the value “0” will have no effect.
- When the energy saver receives the value “1” through the “[Cx] Request” object, it will report the accumulate value –since the last reset– of the energy consumption in channel “x”, its cost and its carbon dioxide emissions. These values are reported through the communication objects “[Cx] Total Energy”, “[Cx] Total Cost” and “[Cx] Total CO2 Emissions”, respectively, which will be automatically shown when the corresponding option is enabled in ETS. In addition, if the option “Reset after request” has been enabled under the General screen, whenever a “1” is received through the object “[Cx] Request”, a reset process similar to that described above will also take place.

Note: *the three total objects are not intended to be read in an independent manner; their values will only be sent to the bus all together, as a response to the “[Cx] Request” object.*

- For its part, “[Cx] Disable” allows enabling or disabling power measures (according to the KNX standard, “0” corresponds to disabling the measurement and “1” corresponds to enabling it) from channel “x”. When this measuring has been disabled, cyclic sending of the instant power is interrupted (in case this had been previously parameterized), and the measured consumption will be considered zero from that moment. Note that deactivating this measurement is not equivalent to simply not powering the device (which would make it not aware of time passing), but to measuring a null power consumption while time is still passing. However, in order to clarify this point, reading *ANNEX II: Further examples* is highly encouraged (particularly Example II).

On the other hand, when the power measuring process is disabled, some more sendings are interrupted, according to the table shown below.

| | “Disable” = 0 | “Disable” = 1 |
|---|---------------|---------------|
| Cyclic sending of instant power | | |
| Sending of peak power | | |
| Cyclic re-sending of peak power | | |
| Sending of effective consumptions | | |
| Cyclic re-sending of effective consumptions | | |
| Cyclic sending of estimated consumptions | | |
| Sending of average consumptions | | |
| Time passed counts for average values? | (1) | |
| Real consumption counts for calculations? | | |

Table 1 Sendings vs. activation/deactivation of power measuring

All the parameters from the Active Energy, Active Power and Power Limit Monitoring screens as well as their configurable values for each channel will be detailed in the next pages.

¹ See Example II of ANNEX II: Further examples.

Note: the screen captures shown will refer to the configuration of Channel B. Similar parameterization and behaviours can be assumed for channels A and C.

3.3.1 ACTIVE ENERGY

This screen allows the configuration of several parameters related to the consumption of active energy (section 2.2). These are shown grouped into sections, as explained below.

- Estimated values.** Permits the configuration of parameters regarding the estimation of the active energy consumption, expressed in kWh, as well as the estimated cost, in terms of the local currency. This estimation of the active energy consumed is made assuming that the instant power consumption at the moment of the estimation remains constant during the 24 hours of the current day.

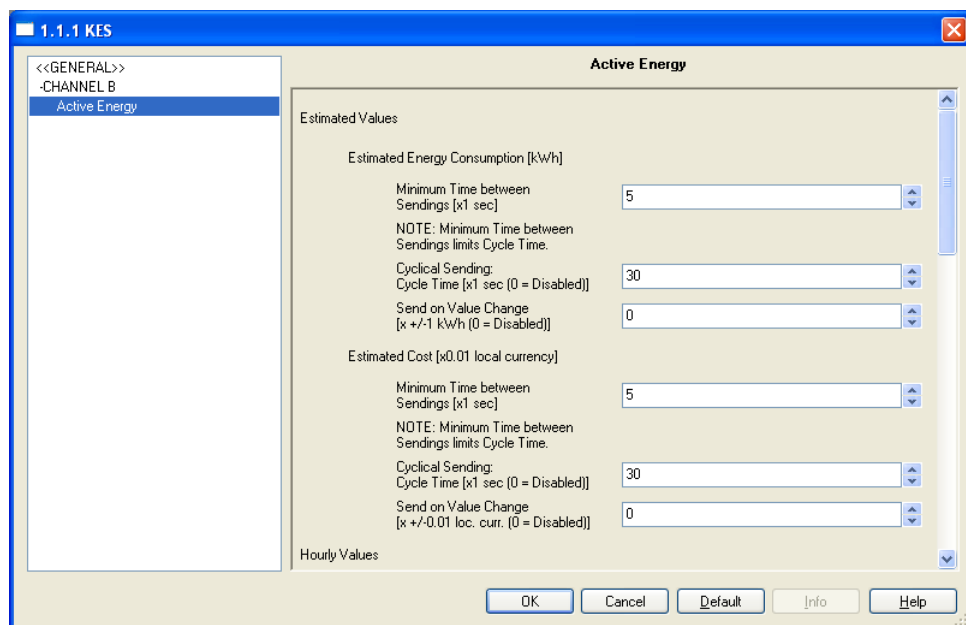


Figure 10 Active energy. Estimations.

Related to estimations, two communication objects are shown: “[Cx] Estimated energy consumption” and “[Cx] Estimated cost”, being possible to configure the following:

- Minimum time between sendings:** allows setting the minimum time, in seconds, that should pass between two consecutive sendings of the corresponding object (“Estimated energy consumption” and/or “Estimated cost”), no matter if they are cyclic sendings or sendings due

to a change of the value. Valid times are [5-255] seconds. This minimum time between sendings will only take effect if a value other than 0 is parameterized for the fields “Cycle time” or “Send on Value Change”.

- **Cycle time:** allows setting the period for sending the objects “Estimated energy consumption” and/or “Estimated cost”, in seconds. In other words, every how much time these values will be sent to the KNX bus.

Note: *if the value specified here (x) is lower than the minimum time between sendings (y), the latter will prevail, resulting in sendings taking place only every “y” seconds. If “0” is parameterized for “Cycle time”, no periodic sending of the associated communication object will take place.*

- **Send on value change:** allows setting a certain value so that whenever a change in the estimated consumption (either in kWh or in units of the local currency) greater than this value is detected, a new sending of the corresponding communication object (“Estimated energy consumption” or “Estimated cost”) will happen. If there is no need of this feature, this field can be left with value “0”.

Note: *if a value other than 0 is set for the fields “Cycle time” and “Send on value change”, the associated objects (“Estimated energy consumption” and “Estimated cost”) will also be sent to the KNX bus whenever the value “1” is received through the communication object “Global Request”.*

- **Hourly Values.** From this section it is possible to enable the sending of communication objects related to the energy consumption during the last hour, either in kWh (object “[Cx] Last hour energy consumption”) or as the associated cost (object “[Cx] Last hour cost”). These objects will be shown once their own parameters have been enabled.

| Hourly Values | |
|---|-----|
| Send Last Hour Energy Consumption? [kWh] | Yes |
| Send Last Hour Cost? [local currency] | Yes |

- **Daily Values.** From this section it is possible to enable the sending of communication objects related to the energy consumption (kWh) during the last day, the related cost (local currency) and the related CO₂ emissions

(kgCO₂). These objects are: “[Cx] Daily Energy Consumption”, “[Cx] Daily Cost” and “[Cx] Daily CO₂ Emissions”. It is also possible to enable the sending of objects representing daily average values: “[Cx] Average Daily Energy Consumption”, “[Cx] Average Daily Cost” and “[Cx] Average Daily CO₂ Emissions”.

| Daily Values | |
|--|-----|
| Send Daily Energy Consumption? [kWh] | Yes |
| Send Daily Cost? [local currency] | Yes |
| Send Daily CO ₂ Emissions? [kgCO ₂] | Yes |
| Send Average Daily Energy Consumption? [kWh] | Yes |
| Send Average Daily Cost? [local currency] | Yes |
| Daily Average CO ₂ Emissions [kgCO ₂] | Yes |

Note: objects referring to average daily values (energy consumption, cost or CO₂ emissions) represent the total consumption (in kWh, local currency or kgCO₂) of the day divided by the number of hours of the day. In other words, they represent the average consumption per hour during the last day.

- Weekly Values.** The sending of the communication objects related to the energy consumption during the last week, its cost and its required CO₂ emissions can be enabled from here, as well as of the objects representing weekly average values. These are “[Cx] Weekly Energy Consumption”, “[Cx] Weekly Cost”, “[Cx] Weekly CO₂ Emissions”, “[Cx] Average Weekly Energy Consumption”, “[Cx] Average Weekly Cost” and “[Cx] Average Weekly CO₂ Emissions”.

| Weekly Values | |
|---|-----|
| Send Weekly Energy Consumption? [kWh] | Yes |
| Send Weekly Cost? [local currency] | Yes |
| Send Weekly CO ₂ Emissions? [kgCO ₂] | Yes |
| Send Average Weekly Energy Consumption? [kWh] | Yes |
| Send Average Weekly Cost? [local currency] | Yes |
| Send Average Weekly CO ₂ Emissions? [kgCO ₂] | Yes |

Note: objects referring to Average Weekly values (energy consumption, cost or CO₂ emissions) represent the total consumption (in kWh, local currency or kgCO₂) of the week divided by the number of days of the week. In other words, they represent the average consumption per day during the last week.

- **Monthly Values.** The sending of the communication objects related to the energy consumption during the last month, its cost and its required CO₂ emissions can be enabled from here, as well as of the objects representing monthly average values. These are “[Cx] Monthly Energy Consumption”, “[Cx] Monthly Cost”, “[Cx] Monthly CO₂Emissions”, “[Cx] Average Monthly Energy Consumption”, “[Cx] Average Monthly Cost” and “[Cx] Average Monthly CO₂ Emissions”.

| Monthly Values | |
|--|-----|
| Send Monthly Energy Consumption? [kWh] | Yes |
| Send Monthly Cost? [local currency] | Yes |
| Send Monthly CO ₂ Emissions? [kgCO ₂] | Yes |
| Send Average Monthly Energy Consumption? [kWh] | Yes |
| Send Average Monthly Cost? [local currency] | Yes |
| Send Monthly Average CO ₂ Emissions? [kgCO ₂] | Yes |

Note: objects referring to average monthly values (energy consumption, cost or CO₂ emissions) represent the total consumption (in kWh, local currency or kgCO₂) of the month divided by the number of days of the month. In other words, they represent the average consumption per day during the last month.

3.3.2 ACTIVE POWER


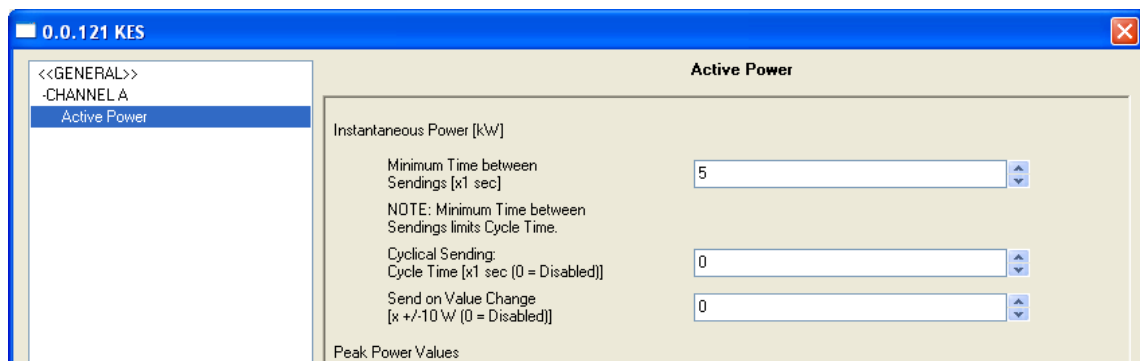


Figure 11 Active power.

From this screen it is possible to configure several parameters related to the consumption of active power (section 2.1). These are shown grouped into different sections, as explained below:

- **Instantaneous power.** This section is for configuring the parameters that affect the sending of the communication object “[Cx] Instantaneous Power”, whose value is expressed in kW with two decimal figures.

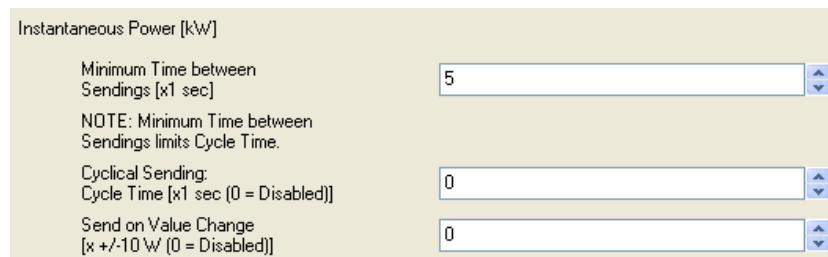

These parameters are:

- **Minimum time between sendings:** permits setting the minimum time, in seconds, which should pass between two consecutive sendings of the object “Instant Power”, no matter if they are cyclic sendings or sendings due to a change of the value. Valid times are [5-255] seconds. This minimum time between sendings will only take effect if a value other than 0 is parameterized for fields “Cycle time” or “Send on Value Change”.
- **Cycle time:** allows setting the period for sending the object “Instantaneous Power”, in seconds (0 – 255). In other words, every how much time these values will be sent to the KNX bus.

Note: if the value specified here (x) is lower than the minimum time between sendings (y), the latter will prevail, resulting in sendings taking place only every “y” seconds. If “0” is parameterized for “Cycle time”, no periodic sending of the associated communication object will take place.

- **Send on value change:** allows setting a certain value so that whenever the difference between two consecutive measurements of the instantaneous power is found to be greater than that value, a new sending of the corresponding communication object (“Instant Power”) will happen. If there is no need of this feature, this field can be set to 0.

Note: if a value other than 0 is set for the fields “Cycle time” and “Send on value change”, the object “Instant Power” will also be sent to the KNX bus whenever the value “1” is received through the communication object “Global Request”.

- **Peak Power Values.** This section allows the configuration of the sending of power peaks, that is, the highest instant power values detected during the last hour, day, week or month. Please note that –if enabled– hourly peak values can be sent not only at the end of the last hour but also *before* the end, by means of the parameters **Minimum Time between sendings**, **Cyclical sending** and **Send on value change**, which behave the same way as described above for “Instant power”, making it possible to inform the bus about how the hourly peak value changes throughout the hour. Regarding daily, weekly and monthly peak values, they can be sent not only at the end of the day / week / month, but also periodically (with their updated instant values, that is, the peak value until the current portion of the current day, week or month), however in this case this must be configured under the General screen, with a unique parameterizable period for the three of them.

The associated objects in this case are “[Cx] Hourly Peak Power”, “[Cx] Daily Peak Power”, “[Cx] Weekly Peak Power” and “[Cx] Monthly Peak Power”

Peak Power Values

Hourly Peak Power [kW]

Minimum Time between Sendings [x1 sec]

NOTE: Minimum Time between Sendings limits Cycle Time.

Cyclical Sending: Cycle Time [x1 sec (0 = Disabled)]

Send on Value Change [x +10 W (0 = Disabled)]

Send Daily Peak Power? [kW]

Send Weekly Peak Power? [kW]

Send Monthly Peak Power? [kW]

3.3.3 POWER LIMIT MONITORING

From this screen it is possible to configure several parameters related to the monitoring of power consumption in relation to upper and lower limits (section 2.3). Two different sections can be found, one for configuring the parameters of the upper limit and one for configuring the parameters of the lower one.

Figure 12 Power limit monitoring.

For the upper limit:

Upper Limit

Initial Value [x10 W]

When over Limit, send...

Send Object when under Limit?

Hysteresis under Limit [x -10 W (0 = No Hysteresis)]

- **Initial value:** allows setting (in tens of a watt) the value that, at least in the beginning, the energy saver will assume as the upper limit while measuring power. If this is set to value “0”, KES will not monitor whether the power consumption exceeds or not a particular upper limit. The value of the upper limit, however, can be modified in runtime through the communication object “[Cx] Upper limit”. In the case of parameterizing a value other than 0 for this field, it will be as well necessary to configure the parameters described below, which define how the upper limit monitoring behaves.
- **When over limit, send:** allows setting the value (“0” or “1”) that will be written to the object “[Cx] Over-consumption Alarm” when the instant power becomes greater than the value defined as the upper limit, making the user aware of this over-consumption situation in the system.
- **Send Object when under Limit?:** allows specifying whether the object “[Cx] Over-consumption Alarm” should or should not send the inverted value (i.e., “0” if the above parameter is set to “1”) once the instant power is back again under the upper limit (or under the upper limit minus the *deadband* or margin configured through the parameter explained below), making the user aware of the end of the over-consumption situation.
- **Hysteresis under limit:** this parameter can be used to avoid consecutive over-consumption alarms every time the instant power –after having exceeded the upper limit and having activated the alarm– is no longer higher than the limit but then exceeds it again. By configuring a certain margin with a value other than 0 (in tens of a watt), every time the over-consumption alarm is triggered, it will be necessary that the measured power decreases to *upper limit minus margin* before further over-consumptions trigger the alarm again. See Figure 5 (section 2.3).

For the lower limit:

| Lower Limit | |
|--|---------------------------------|
| Initial Value [x10 W] | <input type="text" value="0"/> |
| When under Limit, send... | <input type="text" value="1"/> |
| Send Object when over Limit? | <input type="text" value="No"/> |
| Hysteresis over Limit [x +10 W (0 = No Hysteresis)] | <input type="text" value="0"/> |

- **Initial value:** allows setting (in tens of a watt) the value that, at least in the beginning, the energy saver will assume as the lower limit while measuring power. If this is set to value “0”, KES will not monitor whether the power consumption becomes or not lower than a particular lower limit. The value of the lower limit, however, can be modified in runtime through the communication object “[Cx] Lower limit”. In the case of parameterizing a value other than 0 for this field, it will be as well necessary to configure the parameters described below, which define how the lower limit monitoring behaves.
- **When under limit, send:** allows setting the value (“0” or “1”) that will be written to the object “[Cx] Low consumption Indicator” when the instant power becomes lower than the value defined as the lower limit, making the user aware of this low-consumption situation in the system.
- **Send Object when Over Limit?:** this parameter allows specifying whether the object “[Cx] Low Consumption Indicator” should send or not the inverted value (i.e., “0” if the above parameter is set to “1”) once the instant power is back again over the lower limit (or over the lower limit plus the *deadband* or margin configured through the parameter explained below), making the user aware of the end of the low-consumption situation..
- **Hysteresis over limit:** this parameter can be used to avoid consecutive low-consumption indicators every time the instant power –after having become lower than the lower limit and therefore having activated the indicator– is no longer lower than the limit but then becomes lower again. By configuring a certain margin with a value other than 0 (in tens of a watt), every time the low-consumption indicator is triggered, it will be necessary that the measured power reaches *lower limit plus margin* before further low consumptions trigger the indicator again. See Figure 5.

3.4 LOGICAL FUNCTIONS

This functionality in KES is provided to make it possible to perform arithmetical operations or in binary logic with incoming data from the KNX bus, so that the result is then sent through other communication objects specifically enabled in the device for this operation.

Up to 5 different (and independent of each other) **logical functions** can be enabled, carrying out **up to 4 operations** each. To use any of them, it is necessary to enable them in the following ETS window, which appears after selecting “Yes” in the Logical Functions box of the General window.

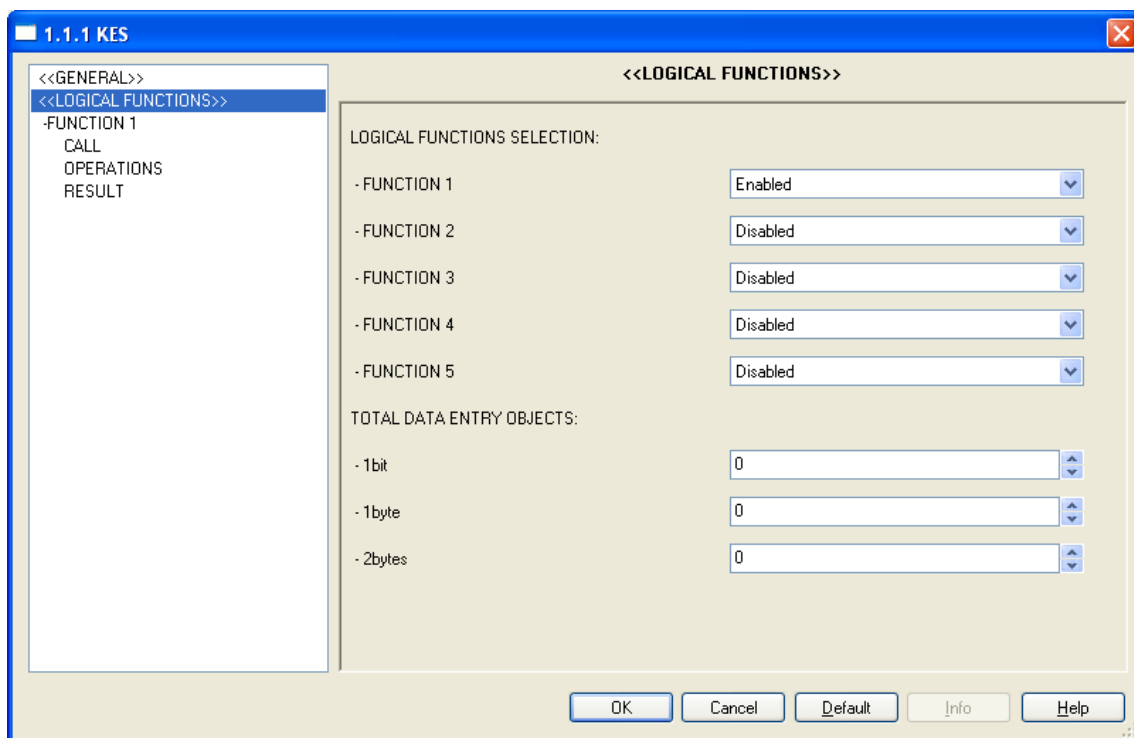


Figure 13 Logical functions.

To obtain detailed information about using and parameterizing the logical functions, please consult the specific documentation "**Logical Functions X5**", available from Zennio at <http://www.zennio.com>.

ANNEX I: TIME MANAGEMENT

As shown in section 3.1, the objects “Date” and “Time” are displayed by default in ETS when the device is configured. These two objects are aimed to set KES to the date and time of an external KNX clock. However, KES features its own built-in clock, so this two objects are typically only necessary for eventually synchronising the internal clock to the external clock, for example after a parameter download or upon voltage recovery after bus failures (the internal clock only works under bus voltage). Therefore, in normal circumstances it is not necessary that the KNX clock sends these objects whenever the time and the date change.

Consequently, every time KES is programmed or recovers voltage after a bus failure, two read requests are sent to the bus through these objects, with the intention of updating the internal clock to the time and date that are received as a response from the KNX external clock. If this request receives no response after five seconds, KES will retry by sending both objects up to three more times (with a five-second delay from one to another). If no response is obtained after these four attempts, KES will assume that the current time and date are those that the internal clock had the last time it was working, or –in case KES has just been programmed– that the current date is January 1st 2000 and the current time is 0:00 am.

Regarding cyclic sendings –both the ones enabled from the General screen and the ones enabled from that of the channel itself–, it is important to remark that all of them will always take place coinciding exactly with hour, day or week changes; never in the middle of two hours, of two days, or of two weeks.

Example I:

If one security sending has been defined for every three hours and a parameter download (as well as the consequent time set) takes place at 10:25h am, the first sending will be received at 1:00h pm (that is, three hour changes after the parameter download), not at 1:25h pm.

Example II:

If one security sending has been defined for every two days and a parameter download (as well as the consequent time set) takes place on Monday at 10:25h am, the first sending will be received on Wednesday at 0:00h am (that is, two day changes after the parameter download), not at 10:25h am on Wednesday.

In addition, it is important to keep in mind that the timer for periodic sendings is reset at the end of the time unit immediately greater than the one used for defining the sending periods.

Example III:

Exactly at midnight, the daily values corresponding to the previous day will always be calculated and sent (in particular, those daily values that had been enabled under ETS). If a security sending of the last daily values has been parameterized for every four hours, the hour counter will be reset every midnight. That's why the first security sending of those values will happen at 4:00h am, no matter if a parameter download (and the consequent time set) had taken place at 10:50h pm.

Example IV:

Exactly every Sunday at midnight (i.e., in the exact moment the day changes into Monday) the weekly values corresponding to the previous week will always be calculated and sent (in particular, those weekly values that had been enabled under ETS). If a security sending of the last weekly values has been parameterized for every four days, the day counter will be reset during this week change. This way, the next security re-sending will happen at the end of next Thursday, that is, four day changes after the values were calculated. Considering that the number of days in a week (7) is not a multiple of 4, this behaviour allows that the security sendings take place on the same days every week (in our case, when switching from Thursday to Friday, apart from the ordinary sending at the end of Sunday), instead of spreading a certain delay from week to week.

On the other hand, it must be also remarked that bus failures will reset the timing for the periodical sendings, which is anyway conditioned to the behaviour described in the two previous examples.

Example V:

A security sending is parameterized for every six hours. A parameter download takes place at 9:25h am, after which the internal clock is set to the current time. When it is 3:00h pm, the first periodical sending happens. After that, at 5:15h pm, a bus failure takes place (or, alternatively, the device is turned off for a few minutes). At 5:25h pm the voltage is recovered and the internal clock is set again to the current time (otherwise, it would assume that it is still 5:15h pm). Since the voltage failure has caused a timing reset of the periodical sendings, the next security sending will happen at 11:00h pm, even if the previous one had taken place at 3:00h pm.

Finally, and aiming at a better comprehension of the behaviour of KES under hour changes (such as summer to winter & winter to summer hour corrections) or under consecutive time sets during testing, it is important to note that the timers in KES do not really count *the number of hours going by*, but *the number of forward hour changes*. Of course, all considerations that have already made will also apply here, as shown with the following examples:

Example VI:

A periodic sending has been parameterized for every three hours and a parameter download takes place at 9:25h am, after which the internal clock of KES is set to the current time. Five minutes later, the clock is again set, in this case to 10:15h am. A few seconds later, it is set to 1:38h pm. And a little later, it is set to 5:06h pm. Immediately after this time change, the device will execute the first periodic sending. The reason is that, according to KES, three forward hour changes have taken place since it began working: the first one, from 9h to 10h; the second one, from 10h to 1h; and the third one, from 1h to 5h. Note that if no more fictitious time changes are forced after setting the clock to 5:06h, the device will execute the second security sending when its internal clock reaches 8:00h pm. Moreover, as stated before, after midnight the periodic timer will be set to zero, so the first sending of the next day will take place at 3:00h am.

Example VII:

A periodic sending has been parameterized for every three hours. The device has been turned on and the internal clock has been correctly set. As soon as it is 3:00h am the periodic sending takes place. However, assuming it is the day when the clock jumps backward an hour for daylight saving, after such sending the external KNX clock will send an order to the internal clock to jump back to 2:00h am. This backtracking does not affect the timer of the periodic sendings, however. Once it is 3:00h am again, the device does consider that a new forward hour change has taken place (as it has actually happened). Because of this, the next periodic sending will take place at 5:00h am (which would be 6:00h am if no backtracking had happened). Finally, after the next midnight, the timers will be reset again, so during the next days there won't be sendings at 5:00h am, but at 6:00h am.

ANNEX II: FURTHER EXAMPLES

With the aim of making clearer how KES works and of presenting the multiple parameterizable communication objects in their context, a few more examples will be offered next. They are intended to cover exhaustively enough most of the doubts that may rise during the initial contact with the device. Of course, these examples are complemented with those already included in *ANNEX I: Time management*.

Note: *a few seconds of sampling are always needed by KES before most of the objects and variables are updated. If for testing / simulation purposes several hour changes are forced with less than 5 seconds between them, KES may report incorrect or null values through the objects sent to the bus (such as “Last hour Energy Consumption”).*

Example I: *total consumption.*

The simplest usage of KES consists in using it to calculate total consumptions, so that they can be put in contrast with those from the electric bill. In that case, it would be enough to parameterize something like the following:

- **General screen:** *only one tariff, with a cost of 15 cents per kWh, and a CO₂ ratio of 50. Voltage, as corresponding to the system. Power factor, 100. Enable the corresponding channel. All cyclic sendings, left disabled.*
- **Active Energy screen:** *values 5, 0 and 0 for section “Estimated energy consumption”. Values 5, 0 and 0 for section “Estimated cost”. Parameters “Daily energy consumption”, “Daily cost”, “Monthly energy consumption” and “Monthly cost”, enabled. All other parameters, disabled.*
- **Active Power screen:** *values 5, 0 and 0 for section “Instantaneous Power” and 10, 0 and 0 for “Hourly Peak Power”. All other parameters, disabled.*

In such circumstances, the only functions KES will perform are:

- 1) *Sending, every midnight, the objects “Daily energy consumption” and “Daily cost”, expressed in kWh and monetary units, respectively.*
- 2) *Sending, on the 1st day of every month at 0:00h am, the objects “Monthly energy consumption” and “Monthly cost”, expressed in kWh and monetary units respectively.*

For simplicity, the probe can be supposed to be measuring the consumption of a 100-watt bulb, as well as a certain month with 22 workable days –during which the bulb is on between 8h in the morning and 6h in the afternoon– and 8 non-workable days – during which the bulb remains off–. In such case:

- 1) Every midnight, the object “Daily energy consumption” sent to the bus will be 0 when the previous day has been non-workable, or $(8h * 0.100 kW) = 0.8 kWh$ if workable, while the object “Daily cost” will have a value of 0 after a non-workable day and of $(0.8 kWh * 0.15 m.u.) = 0.12$ monetary units after any other day.
- 2) After every last day of a month, at midnight, the object “Monthly energy consumption” sent to the bus will have a value of $(0 kWh * 8 days) + (0.8 kWh * 22 days) = 17.6 kWh$, while the object “Monthly cost” will be $(17.6 kWh * 0.15) = 2.64$ monetary units.

This way, after every month KES will automatically report in what grade the bulb contributed to the consumption and to the cost of the electric bill.

Alternatively, if desired, periodic security sendings can be enabled from the General screen, which allows re-sending the last daily and/or monthly values, so that not only are they sent everyday at midnight or on every 1st day of a month (respectively), but also successively during later periods.

Last, there is always the possibility of making global or local requests (through the objects “Global request” and “[Cx] Request”) at the end of the month so that KES reports the value of “Total cost” and “Total energy”. This procedure will be quite similar to reading the ordinary counter installed by the power supplier: it would be enough to calculate the difference between the current value of “Total energy” and that from the last month in order to obtain the monthly consumption (in the case of this example, the consumption made by the bulb).

Note: objects related to energy consumption always report their values (although objects related to cost or CO₂ emissions do not) rounded to the nearest integer. That’s why the 0.8 kWh mentioned in the above example may show as 1 kWh, although the 0.8 kWh are actually considered as such for calculation.

Example II: *disabled channel.*

Four different cases are now presented in relation to how KES works when the channel where measures are being made is disabled:

● CASE 1

Let a power consumption of 3 kW happen during 24h. If the channel is permanently enabled, at the end of the day:

[Cx] Daily energy consumption = 72 kWh

[Cx] Average daily energy consumption = $72 / 24 = 3$ kWh

If during the rest of the week the channel is left enabled and the power consumption keeps being 3 kW:

[Cx] Weekly energy consumption = 504 kWh

[Cx] Average weekly energy consumption = $504 / 7 = 72$ kWh

● CASE 2

Similar situation, but one of the days the channel is left disabled during 12 hours (no matter which ones). In such case, that day:

[Cx] Daily energy consumption = 36 kWh

[Cx] Average daily energy consumption = $36 / 12 = 3$ kWh

If the channel is left enabled for the rest of the week and the power consumption remains in 3 kW, when the week ends:

[Cx] Weekly energy consumption = 468 kWh

[Cx] Average weekly energy consumption = $468 / 7 = 66.85$ kWh ≈ 67 kWh

● CASE 3

Similar situation, but one of the days the channel is left disabled during the whole day. In such case, that day:

[Cx] Daily energy consumption = 0 kWh

[Cx] Average daily energy consumption = 0 kWh

If the channel is enabled again for the rest of the week and the power consumption remains in 3 kW, that particular day will not be taken into account when the week ends:

[Cx] Weekly energy consumption = 432 kWh

[Cx] Average weekly energy consumption = $432 / 6 = 72$ kWh ≈ 67 kWh

• CASE 4



In the case of having no consumption during a whole day (note that a null consumption is a very remote situation) although the channel stayed enabled, KES will do take into account that day for the weekly calculation. For example, assume that there was a daily consumption of 72 kWh during the rest of the week:

[Cx] Daily energy consumption = 0 kWh

[Cx] Average daily energy consumption = $0 / 24 = 0$ kWh

[Cx] Weekly energy consumption = 432 kWh

[Cx] Average weekly energy consumption = $432 / 7 \approx 62$ kWh

• CASE 5



A particular case is that of having, during one day, a total consumption of zero (note that such situation is improbable) but the channel enabled for only a few hours. In that case, for weekly calculation, that day will only be taken into account if during the day change the channel is found to be active.

If the channel stays disabled that day only from 7h am to 1h pm:

[Cx] Daily energy consumption = 0 kWh

[Cx] Average daily energy consumption = $0 / 18 = 0$ kWh

[Cx] Weekly energy consumption = 432 kWh

[Cx] Average weekly energy consumption = $432 / 7 \approx 62$ kWh

If the channel stays disabled that day only between 7h pm and 12h pm:

[Cx] Daily energy consumption = 0 kWh

[Cx] Average daily energy consumption = $0 / 19 = 0$ kWh

[Cx] Weekly energy consumption = 432 kWh

[Cx] Average weekly energy consumption = $432 / 6 = 72$ kWh

(Assume, for the remaining six days in the week, channel enabled and daily consumption of 72 kWh).

Example III: disabled channel.

While measuring the electric consumption of a certain device that remains always turned on and that consumes 200 W constantly, the corresponding channel of KES is left enabled between 0:00h am and 11:00h am on Monday. Exactly at 11:00h am, the channel is deactivated through the object "[Cx] Disable". When it becomes midnight, KES will consider that the total consumption during the day has been 2.2 kWh (that is,

200 watts constantly during 11 hours, since there was no measuring between 11:00h am and midnight) and that the average daily consumption has been 200 watts per hour (2.2 kWh / 11 hours).

Exactly after midnight, the channel is enabled again and remains this way indefinitely, measuring a 200 Wh consumption every hour. When the week is over (after midnight from Sunday to Monday) the earlier Monday will be considered as a regular day in order to calculate the average weekly consumption per day. In other words:

- **Weekly consumption** = 2.2 kWh + (6 days x (0.2 kW x 24 hour)) = 31 kWh.
- **Average weekly consumption** = 31 kWh / 7 days = 4.43 kWh per day.

Suppose the device whose consumption is being measured now stays turned on only on Tuesday, Thursday and Saturday and that the channel is always enabled. In that case, there will be a consumption of 0 kWh on Monday, Wednesday, Friday and Sunday. The total consumption for Tuesday, Thursday and Saturday will be (3 days x (0.2 kW x 24 hours)) = 14.4 kWh. However, once the week is over, the average weekly consumption will be 14.4 kWh / 7 days = 2.06 kWh. The division is by 7 because the channel stayed enabled during seven day forward changes, including those in which there was a consumption of exactly zero.

Example IV: disabled channel.

Suppose the energy consumption of an office is going to be measured. Most of everyday consumption takes place during the 8 working hours, and although there is not a consumption of exactly 0 kWh during the rest of the day, it is not going to be measured. To achieve this, a case similar to #2 in Example 2 must be considered. Enabling the channel only during for 8 hours a day will cause that any consumption made during the other 16 hours is discarded, and that the average daily consumption is obtained dividing by 8 (not 24). Regarding weekly and monthly values, only those days in which not only there was a null total consumption but also the channel was detected disabled at the end of the day (midnight) will be discarded.

Example V: tariffs.

The following tariff parameterization has been downloaded to KES:

- Initial value for Tariff 1: 15 (cents)
- Initial value for Tariff 2: 16 (cents)
- Initial value for Tariff 3: 0 (cents)
- Initial value for Tariff 4: 0 (cents)

Assume an instant power consumption of 2 kW and that KES gets switched on at midnight.

- 1) The estimated cost will be: $2 \text{ kW} * 24\text{h} * 0.15 \text{ m.u.} = 7.2 \text{ monetary units}$.
- 2) When it's 1:00h, the last hour cost will be $2 \text{ kW} * 1\text{h} * 0.15 \text{ m.u.} = 0.30 \text{ m.u.}$
- 3) At 1:22h, if a 1 is sent through "Switch to tariff 2", the estimated cost will become $2 \text{ kW} * 24\text{h} * 0.16 \text{ m.u.} = 7.68 \text{ monetary units}$.
- 4) At 2:00h, the last hour cost results to be $2 \text{ kW} * 1\text{h} * 0.16 \text{ m.u.} = 0.32 \text{ m.u.}$ As shown, the hourly cost has been rounded by applying the new tariff).
- 5) At 2:33h, a 1 is sent through object "Switch to tariff 3".
- 6) When it's 3:00h, the last hour cost is $2 \text{ kW} * 1\text{h} * 0 \text{ m.u.} = 0 \text{ m.u.}$ As shown, setting the initial value of a tariff as zero doesn't disable it; for effectively disabling it, it is necessary to leave the object "Switch to tariff x" unlinked.
- 7) At 3:14h, the value 0.20 (m.u.) is sent through object "Tariff 3".
- 8) When it's 4:00h, the last hour cost will be $2 \text{ kW} * 1\text{h} * 0.20 \text{ m.u.} = 0.4 \text{ m.u.}$

Example VI: power factor.

Assume a system where the power factor is 90%, i.e., where 10% of the effective energy (that supplied by the electric company) is not actually converted into active (or useful) energy, that is, consumed by the devices.

- If a power factor of 90% is parameterized, the values sent by KES to the bus in relation to power and energy will correspond to those actually consumed by the system, although the amount of effective energy that is really transmitted by the monitored line is a bit higher.
- If a power factor of 100% is parameterized, KES will consider the total energy detected in the line, without applying the pertinent corrections to discard the portion of energy that is not actually consumed.
- A parameterization with a power factor of 80% will cause an excessive correction made by KES, which will send the bus smaller values than the effective ones and also than the active ones.

Example VII: *power limits.*

Assume a Power Limit parameterization as follows:

- *Upper limit:*

Initial value = 200 (tens of a watt)

When over limit, send = 1

Send object when under limit = Yes

Hysteresis under limit = 20 (tens of a watt)

- *Lowerlimit:*

Initial value = 100 (tens of a watt)

When under limit, send = 1

Send object when over limit? = Yes

Hysteresis over limit = 20 (tens of a watt)

Under this parameterization, the following can be tested:

- 1) *As soon as the instant power is over 2 kW, a "1" will be sent through object "[Cx] Over-consumption alarm".*
- 2) *If the value goes down to 1.92 kW, nothing will happen. Nothing will happen either if it goes over 2 kW again.*

- 3) If the value decreases to 1.78 kW, the inverted value ("0") will be sent through object "[Cx] Over-consumption alarm". If after that it increases again to over 2 kW, one "1" will be sent through the same object.
- 4) If the value now goes to 0.95 kW, one "0" will be first sent through "[Cx] Over-consumption alarm" and, afterwards, one "1" through "[Cx] Low consumption indicator".
- 5) A new value of 1.05 kW will not have an effect, as well as a later decrease to 0.95 kW.
- 6) If the instant power goes to 1.25 kW, the inverted value (a "0") will be sent through "[Cx] Low consumption indicator". If it goes then under 1 kW, one "1" will be sent through the same object.
- 7) Finally, if the values "3.0" and "4.0" are sent through objects "[Cx] Lower limit" and "[Cx] Upper limit" respectively, it will become necessary that the power goes over 3.20 kW before a "0" is sent through "[Cx] Low consumption indicator", and that it goes over 4 kW before a "1" is sent through "[Cx] Over-consumption alarm".

Note: Special care must be taken when writing to objects "[Cx] Upper limit" and "[Cx] Lower limit". Values which are too close (enough to have a difference smaller than the defined margin bands) or that do not satisfy the condition $L_{upper} > L_{lower}$ will cause behaviours with no logical sense.

Example VIII: global test.

This practical example aims to simulate in only a few minutes how KES would work in a longer time lapse (several hours, several days and several weeks). At the end of the example a small graph has been included to show the hour, day and week changes that are being simulated.

To begin with, the following ETS parameterization is assumed:

- **General screen:** all cyclic and security sendings, enabled and with the shortest cycle time (i.e., the most frequent) selected: every hour or every day, depending on the case. Only one tariff, with a cost of 5000 (cents of the local currency) per kWh

and a CO₂ ratio of 50. Regarding the voltage, the one corresponding to the system. And a power factor of 100.

- **Active Energy screen:** values 5, 30 and 0 for section “Estimated energy consumption”. Values 5, 30 and 0 for section “Estimated cost”. Any other parameters, enabled.
- **Active Power screen:** values 5, 30 and 0 for section “Instant power”. Values 10, 30 and 0 for section Hourly peak power. Any other parameters, enabled.

After downloading the parameters, the internal time should be set to 9:00h am, and the internal date to the first Monday of the current month.

1) Connect, for example, a 2000 W load to the corresponding channel:

30 seconds after the time set, the Instantaneous power object will be sent to the bus, with a value of 2 kW.

Estimated energy consumption ≈ 48 kWh.

This is calculated by multiplying 2 KW by 24 hours, which indicates the estimated daily consumption assuming the current instant power as constant.

Estimated cost ≈ 2400 monetary units.

This is obtained by multiplying 48 kWh by the parameterized 50 monetary units.

Hourly Peak Power ≈ 2 kW

This is the highest value of the instant power detected till now since the time set.

2) After 5 minutes since 1), replace the 2000 W load with a 3000 W load and after a few seconds disconnect it, letting the consumption be null.

The next Hourly Peak Power (which is sent every 30 seconds) will be 3 kW.

3) After 5 minutes since 2), connect back the 2000 W load and set the internal clock to 10:00h am.

After the time change, the object Last hour energy consumption will be sent, containing a value of 1 kWh.

According to the device, the last hour only lasted for ten minutes, during five of which there was a consumption of 2 kW while during the remaining five minutes there was a

consumption of 0 kW. Therefore, KES estimates that between 9:00h and 10:00h there should have been, proportionally, a consumption of 1 kWh.

Last hour cost \approx 50 monetary units.

50 is the cost corresponding to the kilowatt-hour that was estimated by the device for the period 9:00h to 10:00h.

4) After some minutes since 3), set the internal clock to next Tuesday (any time would be OK), maintaining the 2000 W load.

Daily energy consumption = 3.

According to the device, last Monday only lasted for two hours (each of which lasted itself for only a few minutes, although not the same amount in both cases), the first one with a consumption of 1 kWh and the second one with a consumption of 2 kWh. This is why the total consumption for Monday is estimated to be 1 kWh + 2 kWh = 3 kWh.

Daily cost \approx 150 monetary units.

$3 \text{ kWh} * 50 \text{ m.u.} = 150 \text{ m.u.}$

Daily CO₂ emissions \approx 1.5 kg

Obtained as $(50 \text{ kg} * 0.01) * 3 \text{ kWh}$.

Daily Peak Power \approx 3 kW.

This is the highest instant power value detected during the previous day.

Average daily energy consumption = 2 kWh.

This value represents the energy amount that, as an average, was consumed per hour during the previous day. Considering that objects related to energetic consumption are always rounded to the closest integer, this "2" is consistent with the result of dividing the 3 kWh consumed on Monday by the number of hours of that day (two).

Average daily CO₂ emissions \approx 0.75.

This value is the result of $(50 \text{ kg} * 0.01) * 3 \text{ kWh} / 2 \text{ hours}$.

Average daily cost \approx 75 monetary units.

This object indicates the cost that, as an average, will be paid per hour for the energy consumption of Monday. The value sent through this object is obtained with the following equation: $3 \text{ kWh} * 50 \text{ monetary units} / 2 \text{ hour}$.

5) After some minutes since 4), set the internal clock to next Monday (any time would be OK), maintaining the 2000 W load.

Weekly energy consumption = 5.

According to the device, the last week was only 2 day long (with a different amount of hours each and with a different length each of these hours). That is why KES estimates that the total consumption for the week was 3 kWh from Monday and 2 kWh from Tuesday.

Weekly cost \approx 250 monetary units.

$5 \text{ kWh} * 50 \text{ m.u.} = 250 \text{ m.u.}$

Weekly CO₂ emissions \approx 2.5 kg.

Obtained as $(50 \text{ kg} * 0.01) * 5 \text{ kWh}$.

Average daily energy consumption = 2 kWh.

According to the device, the previous day lasted only for one hour (with a consumption of 2 kWh). Therefore, the average daily consumption was $2 \text{ kWh} / 1 \text{ hour} = 2 \text{ kWh per hour}$.

Average daily CO₂ emissions \approx 0.5 kg.

This value is the result of calculating $(50 \text{ kg} * 0.01) * 2 \text{ kWh} / 1 \text{ hour}$.

Average daily cost \approx 100 monetary units.

Obtained by multiplying 2 kWh by 50 monetary units, and dividing this by the only hour of the previous day.

WeeklyPeakPower \approx 3 kW.

Average weekly energy consumption = 3 kWh

Obtained by rounding to the nearest integer value the result of dividing the 5 kWh consumed during the previous week by the number of days of the week.

Average weekly CO₂ emissions \approx 1.25.

This value comes from operating $(50 \text{ kg} * 0.01) * 5 \text{ kWh} / 2 \text{ days}$.

Average weekly cost \approx 125 monetary units.

5 kWh were consumed at 50 monetary units per kWh, which is then divided by the two days of the previous week.

6) After some minutes since 5), set the internal clock to next Monday (any time would be OK), maintaining the 2000 W load.

Since the previous week contained only one day, the objects Daily energy consumption and Weekly energy consumption must have the same value, 2 kWh in this case.

Average weekly energy consumption = 2 kWh per day.

2 kWh in total / 1 day = 2 kWh per day.

Average weekly CO₂ emissions ≈ 1 kg per day.

$(50 \text{ kg} * 0.01) * 2 \text{ kWh} / 1 \text{ day} = 1.$

Average weekly cost ≈ 100 monetary units per day.

2 kWh * 50 monetary units / 1 day = 100 m.u.

Weekly Peak Power ≈ 2 kW.

7) After some minutes since 6), set the internal clock to the first day of the next month, maintaining the 2000 W load.

Monthly energy consumption = 9 kWh.

Obtained by summing up (and rounding to the nearest integer value) 5 kWh from the first week of the previous month, plus 2 kWh from the second week, plus 2 kWh from the third one.

Monthly cost ≈ 450 monetary units.

Obtained by multiplying 9 kWh by 50 monetary units.

Monthly CO₂ emissions ≈ 450 monetary units.

In other words, $(50 \text{ kg} * 0.01) * 9 \text{ kWh}.$

Monthly Peak Power ≈ 3 kWh.

This value is due to the temporary connection of the 3000 W load.

Average monthly energy consumption = 2 kWh per day.

2 is the nearest integer to the result of dividing 9 kWh by the number of days (4) of the previous month.

Average monthly cost ≈ 112.5 monetary units per day.

$50 \text{ u.m} * 9 \text{ kWh} / 4 \text{ days} = 112.5 \text{ m.u.}$

Average monthly CO₂ emissions ≈ 1.125 kg per day.

Obtained as $(50 \text{ kg} * 0.01) * 9 \text{ kWh} / 4 \text{ days}$.

8) After some minutes since 7), set the internal clock to the first day of the following month (that is, two months from now on), maintaining the same load.

Monthly Peak Power ≈ 2 kW.

Average monthly energy consumption = 2 kWh per day.

The previous month consisted of only one hour, with a consumption of 2 kWh. This total consumption is then divided by only one day.

Average monthly cost ≈ 100 m.u. per day.

Those 2 kWh consumed throughout the month have an associated cost of 50 u.m each. Then, this is divided by only one day.


Average monthly CO₂ emissions ≈ 1 kg. per day.

$(50 * 0.01) * 2 \text{ kWh} / 1 \text{ day} = 1.$


Simulation scheme (Example VIII)

Month 1

WEEK 1



Daily consumption = 1 kWh + 2 kWh = 3 kWh



Daily consumption = 2 kWh

WEEK 2



Daily consumption = 2 kWh

WEEK 3



Daily consumption = 2 kWh

Monthly energy consumption = 9 kWh.

Average monthly energy consumption = 9 kWh / 4 days = 2.25 kWh per day.

Month 2

WEEK 1



Daily consumption = 2 kWh

Monthly energy consumption = 2 kWh.

Average monthly energy consumption = 2 kWh / 1 day = 2 kWh per day.

ANNEX III: COMMUNICATION OBJECTS

| NUMBER | SIZE | I/O | FLAGS | DATA TYPE (DPT) | VALUES | | | NAME | FUNCTION |
|--------|---------|-----|-------|-------------------------------|--------------------------|--------------|-------|-----------------------------------|------------------------------|
| | | | | | RANGE | 1ST TIME | RESET | | |
| 0 | 3 Bytes | I | CT-WU | [10.001] DPT_TimeOfDay | 00:00:0 – 23:59:59 | 0:00:00 | Last | Time | Current Time |
| 1 | 3 Bytes | I | CT-WU | [11.001] DPT_Date | 01/01/1990 – 31/12/2089 | 01/01/2000 | Last | Date | Current Date |
| 2 | 1 Bit | I | C--W- | [1.15] DPT_Reset | 0/1 | 0 | 0 | Global Reset | 0=No Action; 1=Reset |
| 3 | 1 Bit | I | C--W- | [1.17] DPT_Trigger | 0/1 | 0 | 0 | Global Request | 0=No Action; 1=Request |
| 4 | 1 Bit | I | C--W- | [1.15] DPT_Reset | 0/1 | 0 | 0 | [CA] Reset | 0=No Action; 1=Reset |
| 5 | 1 Bit | I | C--W- | [1.15] DPT_Reset | 0/1 | 0 | 0 | [CB] Reset | 0=No Action; 1=Reset |
| 6 | 1 Bit | I | C--W- | [1.15] DPT_Reset | 0/1 | 0 | 0 | [CC] Reset | 0=No Action; 1=Reset |
| 7 | 1 Bit | I | C--W- | [1.17] DPT_Trigger | 0/1 | 0 | 0 | [CA] Request | 0=No Action; 1=Request |
| 8 | 1 Bit | I | C--W- | [1.17] DPT_Trigger | 0/1 | 0 | 0 | [CB] Request | 0=No Action; 1=Request |
| 9 | 1 Bit | I | C--W- | [1.17] DPT_Trigger | 0/1 | 0 | 0 | [CC] Request | 0=No Action; 1=Request |
| 10 | 1 Bit | I | C--W- | [1.003] DPT_Enable | 0/1 | 0 | Last | [CA] Disable | 0=Disable; 1=Enable |
| 11 | 1 Bit | I | C--W- | [1.003] DPT_Enable | 0/1 | 0 | Last | [CB] Disable | 0=Disable; 1=Enable |
| 12 | 1 Bit | I | C--W- | [1.003] DPT_Enable | 0/1 | 0 | Last | [CC] Disable | 0=Disable; 1=Enable |
| 13 | 2 Bytes | I | C--W- | [9.001] DPT_Value_Temp | 0 – 65535 | Parameteriz. | Last | Tariff 1 | Tariff value |
| 14 | 2 Bytes | I | C--W- | [9.001] DPT_Value_Temp | 0 – 65535 | Parameteriz. | Last | Tariff 2 | Tariff value |
| 15 | 2 Bytes | I | C--W- | [9.001] DPT_Value_Temp | 0 – 65535 | Parameteriz. | Last | Tariff 3 | Tariff value |
| 16 | 2 Bytes | I | C--W- | [9.001] DPT_Value_Temp | 0 – 65535 | Parameteriz. | Last | Tariff 4 | Tariff value |
| 17 | 1 Bit | I | C--W- | [1.17] DPT_Trigger | 0/1 | 0 | 0 | Switch to Tariff 1 | 0=No Action; 1=Switch Tariff |
| 18 | 1 Bit | I | C--W- | [1.17] DPT_Trigger | 0/1 | 0 | 0 | Switch to Tariff 2 | 0=No Action; 1=Switch Tariff |
| 19 | 1 Bit | I | C--W- | [1.17] DPT_Trigger | 0/1 | 0 | 0 | Switch to Tariff 3 | 0=No Action; 1=Switch Tariff |
| 20 | 1 Bit | I | C--W- | [1.17] DPT_Trigger | 0/1 | 0 | 0 | Switch to Tariff 4 | 0=No Action; 1=Switch Tariff |
| 21 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CA] Estimated Energy Consumption | Estimated Energy Consumption |
| 22 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CB] Estimated Energy Consumption | Estimated Energy Consumption |
| 23 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CC] Estimated Energy Consumption | Estimated Energy Consumption |
| 24 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Estimated Cost | Estimated Cost |
| 25 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Estimated Cost | Estimated Cost |
| 26 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Estimated Cost | Estimated Cost |
| 27 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CA] Last Hour Energy Consumption | Last Hour Energy Consumption |
| 28 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CB] Last Hour Energy Consumption | Last Hour Energy Consumption |
| 29 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CC] Last Hour Energy Consumption | Last Hour Energy Consumption |
| 30 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Last Hour Cost | Last Hour Cost |
| 31 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Last Hour Cost | Last Hour Cost |
| 32 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Last Hour Cost | Last Hour Cost |

| NUMBER | SIZE | I/O | FLAGS | DATA TYPE (DPT) | VALUES | | | NAME | FUNCTION |
|--------|---------|-----|-------|-------------------------------|--------------------------|----------|-------|--|-------------------------------|
| | | | | | RANGE | 1ST TIME | RESET | | |
| 33 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CA] Daily Energy Consumption | Daily Energy Consumption |
| 34 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CB] Daily Energy Consumption | Daily Energy Consumption |
| 35 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CC] Daily Energy Consumption | Daily Energy Consumption |
| 36 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Daily Cost | Daily Cost |
| 37 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Daily Cost | Daily Cost |
| 38 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Daily Cost | Daily Cost |
| 39 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Daily CO2 Emissions | Daily CO2 Emissions |
| 40 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Daily CO2 Emissions | Daily CO2 Emissions |
| 41 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Daily CO2 Emissions | Daily CO2 Emissions |
| 42 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CA] Average Daily Energy Consumption | Avg. Daily Energy Consumption |
| 43 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CB] Average Daily Energy Consumption | Avg. Daily Energy Consumption |
| 44 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CC] Average Daily Energy Consumption | Avg. Daily Energy Consumption |
| 45 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Average Daily Cost | Average Daily Cost |
| 46 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Average Daily Cost | Average Daily Cost |
| 47 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Average Daily Cost | Average Daily Cost |
| 48 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Average Daily CO2 Emissions | Average Daily CO2 Emissions |
| 49 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Average Daily CO2 Emissions | Average Daily CO2 Emissions |
| 50 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Average Daily CO2 Emissions | Average Daily CO2 Emissions |
| 51 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CA] Weekly Energy Consumption | Weekly Energy Consumption |
| 52 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CB] Weekly Energy Consumption | Weekly Energy Consumption |
| 53 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CC] Weekly Energy Consumption | Weekly Energy Consumption |
| 54 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Weekly Cost | Weekly Cost |
| 55 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Weekly Cost | Weekly Cost |
| 56 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Weekly Cost | Weekly Cost |
| 57 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Weekly CO2 Emissions | Weekly CO2 Emissions |
| 58 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Weekly CO2 Emissions | Weekly CO2 Emissions |
| 59 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Weekly CO2 Emissions | Weekly CO2 Emissions |
| 60 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CA] Average Weekly Energy Consumption | Average Weekly Energy Cons. |
| 61 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CB] Average Weekly Energy Consumption | Average Weekly Energy Cons. |
| 62 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CC] Average Weekly Energy Consumption | Average Weekly Energy Cons. |
| 63 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Average Weekly Cost | Average Weekly Cost |
| 64 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Average Weekly Cost | Average Weekly Cost |
| 65 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Average Weekly Cost | Average Weekly Cost |
| 66 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Average Weekly CO2 Emissions | Average Weekly CO2 Emissions |
| 67 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Average Weekly CO2 Emissions | Average Weekly CO2 Emissions |
| 68 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Average Weekly CO2 Emissions | Average Weekly CO2 Emissions |
| 69 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CA] Monthly Energy Consumption | Monthly Energy Consumption |
| 70 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CB] Monthly Energy Consumption | Monthly Energy Consumption |

| NUMBER | SIZE | I/O | FLAGS | DATA TYPE (DPT) | VALUES | | | NAME | FUNCTION |
|--------|---------|-----|-------|-------------------------------|--------------------------|----------|-------|---|-------------------------------|
| | | | | | RANGE | 1ST TIME | RESET | | |
| 71 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CC] Monthly Energy Consumption | Monthly Energy Consumption |
| 72 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Monthly Cost | Monthly Cost |
| 73 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Monthly Cost | Monthly Cost |
| 74 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Monthly Cost | Monthly Cost |
| 75 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Monthly CO2 Emissions | Monthly CO2 Emissions |
| 76 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Monthly CO2 Emissions | Monthly CO2 Emissions |
| 77 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Monthly CO2 Emissions | Monthly CO2 Emissions |
| 78 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CA] Average Monthly Energy Consumption | Average Monthly Energy Cons. |
| 79 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CB] Average Monthly Energy Consumption | Average Monthly Energy Cons. |
| 80 | 4 Bytes | O | CTR-- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CC] Average Monthly Energy Consumption | Average Monthly Energy Cons. |
| 81 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Average Monthly Cost | Average Monthly Cost |
| 82 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Average Monthly Cost | Average Monthly Cost |
| 83 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Average Monthly Cost | Average Monthly Cost |
| 84 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Average Monthly CO2 Emissions | Average Monthly CO2 Emissions |
| 85 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Average Monthly CO2 Emissions | Average Monthly CO2 Emissions |
| 86 | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Average Monthly CO2 Emissions | Average Monthly CO2 Emissions |
| 87 | 4 Bytes | | CT--- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CA] Total Energy | Total Energy Consumption |
| 88 | 4 Bytes | | CT--- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CB] Total Energy | Total Energy Consumption |
| 89 | 4 Bytes | | CT--- | [13.013] DPT_ActiveEnergy_kWh | -2147483648 – 2147483647 | 0 | Last | [CC] Total Energy | Total Energy Consumption |
| 90 | 2 Bytes | | CT--- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Total Cost | Total Cost |
| 91 | 2 Bytes | | CT--- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Total Cost | Total Cost |
| 92 | 2 Bytes | | CT--- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Total Cost | Total Cost |
| 93 | 2 Bytes | | CT--- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CA] Total CO2 Emissions | Total CO2 Emissions |
| 94 | 2 Bytes | | CT--- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CB] Total CO2 Emissions | Total CO2 Emissions |
| 95 | 2 Bytes | | CT--- | [9.001] DPT_Value_Temp | -671088.64 – 670760.96 | 0.00 | Last | [CC] Total CO2 Emissions | Total CO2 Emissions |
| 96 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CA] Instantaneous Power | Instantaneous Power |
| 97 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CB] Instantaneous Power | Instantaneous Power |
| 98 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CC] Instantaneous Power | Instantaneous Power |
| 99 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CA] Hourly Peak Power | Hourly Peak Power |
| 100 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CB] Hourly Peak Power | Hourly Peak Power |
| 101 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CC] Hourly Peak Power | Hourly Peak Power |
| 102 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CA] Daily Peak Power | Daily Peak Power |
| 103 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CB] Daily Peak Power | Daily Peak Power |
| 104 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CC] Daily Peak Power | Daily Peak Power |
| 105 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CA] Weekly Peak Power | Weekly Peak Power |
| 106 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CB] Weekly Peak Power | Weekly Peak Power |
| 107 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CC] Weekly Peak Power | Weekly Peak Power |
| 108 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CA] Monthly Peak Power | Monthly Peak Power |

| NUMBER | SIZE | I/O | FLAGS | DATA TYPE (DPT) | VALUES | | | NAME | FUNCTION |
|--------|---------|-----|-------|----------------------------|------------------------|-----------------------|-------|--------------------------------|--------------------------------|
| | | | | | RANGE | 1ST TIME | RESET | | |
| 109 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CB] Monthly Peak Power | Monthly Peak Power |
| 110 | 2 Bytes | O | CTR-- | [9.24] DPT_Power | -671088.64 – 670760.96 | 0.00 | Last | [CC] Monthly Peak Power | Monthly Peak Power |
| 111 | 2 Bytes | I | C--W- | [9.24] DPT_Power | -671088.64 – 670760.96 | Parameteriz. | Last | [CA] Upper Limit | Upper Limit value |
| 112 | 2 Bytes | I | C--W- | [9.24] DPT_Power | -671088.64 – 670760.96 | Parameteriz. | Last | [CB] Upper Limit | Upper Limit value |
| 113 | 2 Bytes | I | C--W- | [9.24] DPT_Power | -671088.64 – 670760.96 | Parameteriz. | Last | [CC] Upper Limit | Upper Limit value |
| 114 | 1 Bit | O | CTR-- | [1.17] DPT_Trigger | 0/1 | Disabled ("0" or "1") | Last | [CA] Over-consumption Alarm | Alarm -> Sending of "0" or "1" |
| 115 | 1 Bit | O | CTR-- | [1.17] DPT_Trigger | 0/1 | Disabled ("0" or "1") | Last | [CB] Over-consumption Alarm | Alarm -> Sending of "0" or "1" |
| 116 | 1 Bit | O | CTR-- | [1.17] DPT_Trigger | 0/1 | Disabled ("0" or "1") | Last | [CC] Over-consumption Alarm | Alarm -> Sending of "0" or "1" |
| 117 | 2 Bytes | I | C--W- | [9.24] DPT_Power | -671088.64 – 670760.96 | Parameteriz. | Last | [CA] Lower Limit | Lower Limit value |
| 118 | 2 Bytes | I | C--W- | [9.24] DPT_Power | -671088.64 – 670760.96 | Parameteriz. | Last | [CB] Lower Limit | Lower Limit value |
| 119 | 2 Bytes | I | C--W- | [9.24] DPT_Power | -671088.64 – 670760.96 | Parameteriz. | Last | [CC] Lower Limit | Lower Limit value |
| 120 | 1 Bit | O | CTR-- | [1.17] DPT_Trigger | 0/1 | Disabled ("0" or "1") | Last | [CA] Low Consumption Indicator | Ind. -> Sending of "0" or "1" |
| 121 | 1 Bit | O | CTR-- | [1.17] DPT_Trigger | 0/1 | Disabled ("0" or "1") | Last | [CB] Low Consumption Indicator | Ind. -> Sending of "0" or "1" |
| 122 | 1 Bit | O | CTR-- | [1.17] DPT_Trigger | 0/1 | Disabled ("0" or "1") | Last | [CC] Low Consumption Indicator | Ind. -> Sending of "0" or "1" |
| 123 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 1 | Binary Data Entry (0/1) |
| 124 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 2 | Binary Data Entry (0/1) |
| 125 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 3 | Binary Data Entry (0/1) |
| 126 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 4 | Binary Data Entry (0/1) |
| 127 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 5 | Binary Data Entry (0/1) |
| 128 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 6 | Binary Data Entry (0/1) |
| 129 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 7 | Binary Data Entry (0/1) |
| 130 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 8 | Binary Data Entry (0/1) |
| 131 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 9 | Binary Data Entry (0/1) |
| 132 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 10 | Binary Data Entry (0/1) |
| 133 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 11 | Binary Data Entry (0/1) |
| 134 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 12 | Binary Data Entry (0/1) |
| 135 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 13 | Binary Data Entry (0/1) |
| 136 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 14 | Binary Data Entry (0/1) |
| 137 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 15 | Binary Data Entry (0/1) |
| 138 | 1 Bit | I | C--W- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] (1 bit) Data Entry 16 | Binary Data Entry (0/1) |
| 139 | 1 Byte | I | C--W- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] (1 byte) Data Entry 1 | 1 byte Data Entry (0-255) |
| 140 | 1 Byte | I | C--W- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] (1 byte) Data Entry 2 | 1 byte Data Entry (0-255) |
| 141 | 1 Byte | I | C--W- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] (1 byte) Data Entry 3 | 1 byte Data Entry (0-255) |
| 142 | 1 Byte | I | C--W- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] (1 byte) Data Entry 4 | 1 byte Data Entry (0-255) |
| 143 | 1 Byte | I | C--W- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] (1 byte) Data Entry 5 | 1 byte Data Entry (0-255) |
| 144 | 1 Byte | I | C--W- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] (1 byte) Data Entry 6 | 1 byte Data Entry (0-255) |
| 145 | 1 Byte | I | C--W- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] (1 byte) Data Entry 7 | 1 byte Data Entry (0-255) |
| 146 | 1 Byte | I | C--W- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] (1 byte) Data Entry 8 | 1 byte Data Entry (0-255) |

| NUMBER | SIZE | I/O | FLAGS | DATA TYPE (DPT) | VALUES | | | NAME | FUNCTION |
|--------|---------|-----|-------|----------------------------|---------------|----------|-------|----------------------------------|--------------------|
| | | | | | RANGE | 1ST TIME | RESET | | |
| 147 | 2 Bytes | I | C--W- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] (2 bytes) Data Entry 1 | 2 bytes Data Entry |
| | 2 Bytes | I | C--W- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |
| 148 | 2 Bytes | I | C--W- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] (2 bytes) Data Entry 2 | 2 bytes Data Entry |
| | 2 Bytes | I | C--W- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |
| 149 | 2 Bytes | I | C--W- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] (2 bytes) Data Entry 3 | 2 bytes Data Entry |
| | 2 Bytes | I | C--W- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |
| 150 | 2 Bytes | I | C--W- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] (2 bytes) Data Entry 4 | 2 bytes Data Entry |
| | 2 Bytes | I | C--W- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |
| 151 | 2 Bytes | I | C--W- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] (2 bytes) Data Entry 5 | 2 bytes Data Entry |
| | 2 Bytes | I | C--W- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |
| 152 | 2 Bytes | I | C--W- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] (2 bytes) Data Entry 6 | 2 bytes Data Entry |
| | 2 Bytes | I | C--W- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |
| 153 | 2 Bytes | I | C--W- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] (2 bytes) Data Entry 7 | 2 bytes Data Entry |
| | 2 Bytes | I | C--W- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |
| 154 | 2 Bytes | I | C--W- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] (2 bytes) Data Entry 8 | 2 bytes Data Entry |
| | 2 Bytes | I | C--W- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |
| 155 | 1 Bit | O | CTR-- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] Function 1 RESULT (1 bit) | FUNCTION 1 Result |
| 156 | 1 Bit | O | CTR-- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] Function 2 RESULT (1 bit) | FUNCTION 2 Result |
| 157 | 1 Bit | O | CTR-- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] Function 3 RESULT (1 bit) | FUNCTION 3 Result |
| 158 | 1 Bit | O | CTR-- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] Function 4 RESULT (1 bit) | FUNCTION 4 Result |
| 159 | 1 Bit | O | CTR-- | [1.001] DPT_Switch | 0/1 | 0 | Last | [LF] Function 5 RESULT (1 bit) | FUNCTION 5 Result |
| 160 | 1 Byte | O | CTR-- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] Function 1 RESULT (1 byte) | FUNCTION 1 Result |
| 161 | 1 Byte | O | CTR-- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] Function 2 RESULT (1 byte) | FUNCTION 2 Result |
| 162 | 1 Byte | O | CTR-- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] Function 3 RESULT (1 byte) | FUNCTION 3 Result |
| 163 | 1 Byte | O | CTR-- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] Function 4 RESULT (1 byte) | FUNCTION 4 Result |
| 164 | 1 Byte | O | CTR-- | [5.010] DPT_Value_1_Ucount | 0 – 255 | 0 | Last | [LF] Function 5 RESULT (1 byte) | FUNCTION 5 Result |
| 165 | 2 Bytes | O | CTR-- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] Function 1 RESULT (2 bytes) | FUNCTION 1 Result |
| | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |
| 166 | 2 Bytes | O | CTR-- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] Function 2 RESULT (2 bytes) | FUNCTION 2 Result |
| | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |
| 167 | 2 Bytes | O | CTR-- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] Function 3 RESULT (2 bytes) | FUNCTION 3 Result |
| | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |
| 168 | 2 Bytes | O | CTR-- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] Function 4 RESULT (2 bytes) | FUNCTION 4 Result |
| | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |
| 169 | 2 Bytes | O | CTR-- | [7.001] DPT_Value_2_Ucount | 0 – 65535 | 0 | Last | [LF] Function 5 RESULT (2 bytes) | FUNCTION 5 Result |
| | 2 Bytes | O | CTR-- | [9.001] DPT_Value_Temp | 0.00 – 120.00 | 0.00 | Last | | |

Join and send us your inquiries
about Zennio devices:

<http://zennioenglish.zendesk.com>

Zennio Avance y Tecnología S.L.
C/ Río Jarama, 132. Nave P-8.11
45007 Toledo (Spain).

Tel. +34 925 232 002.
Fax. +34 925 337 310.
www.zennio.com
info@zennio.com



RoHS