

**Standard push-button module with BCU, 1-gang**

4071 TSM

**Standard push-button module with BCU, 2-gang**

4072 TSM

**Standard push-button module with BCU, 3-gang**

4073 TSM

**Standard push-button module with BCU, 4-gang**

4074 TSM

## Operationsmanual

# 1 Safety instructions

**Electrical equipment must be installed and fitted by qualified electricians.**

**Failure to observe the instructions may cause damage to the device and result in fire and other hazards.**

**Electrostatic discharges can cause defects in the device. Use only the supplied plastic screws.**

**These instructions are an integral part of the product, and must remain with the end customer.**

# 2 Function

## System information

This device is a product of the KNX/EIB system and complies with the KNX directives. Detailed technical knowledge obtained in KNX training courses is a prerequisite to proper understanding.

The function of this device depends upon the software. Detailed information on loadable software and attainable functionality as well as the software itself can be obtained from the manufacturer's product database.

Planning, installation and commissioning of the device are carried out with the aid of KNX-certified software. Full functionality with KNX commissioning software version ETS3.0d onwards.

An updated version of the product database, technical descriptions and conversion programs and other auxiliary programs are available on our Internet website.

## Intended purpose

- Operation of loads, e.g. light on/off, dimming, blinds up/down, brightness values, temperatures, calling up and saving light moods, etc.
- Installation in appliance box to DIN 49073

## Product characteristics

- The push-button functions switching, dimming, controlling blinds, valuator, calling up moods, etc., depending on the application selected
- Completion with keyset
- A red status LED for each control surface
- A blue operation LED as an orientation light and to indicate the programming status
- Integrated bus coupling unit

# 3 Operation

## Operating a function or load

Each operating button is divided into two halves, with a function assigned to each of them. Operation depends on the specific function.

- Switching: Short press on the corresponding control surface.
- Dimming: Long press on the corresponding control surface. The dimming process ends when the control surface is released.
- Move blinds: Long press on the corresponding control surface.
- Stop or adjust blinds: Short press on the corresponding control surface.

- Call up light mood: Short press on the corresponding control surface.
- Save light mood: Long press on the corresponding control surface.
- Set value, e.g. brightness or temperature setpoint: Short press on the corresponding control surface.

## 4 Information for qualified electricians

### 4.1 Fitting and electrical connection



**DANGER!**

**Electrical shock on contact with live parts in the fitting environment.**


**Electrical shocks can be fatal.**

**Before working on the device, disconnect the supply voltage and cover up live parts in the working environment.**

#### Snapping on the adapter frame

- With the adapter frame (3) in the right orientation, snap it from the front onto the push-button module (4) (see picture 1). Note marking **TOP**.

#### Mounting and connecting the device

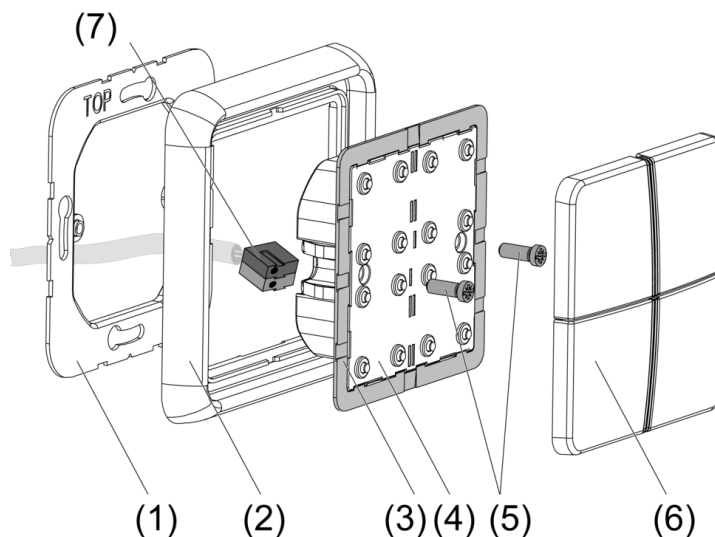

picture 1: Mounting the push-button module

- (1) Supporting ring
- (2) Design frame
- (3) Adapter frame
- (4) Push-button module
- (5) Fixing screws
- (6) Design control surfaces
- (7) KNX connecting terminal

Supporting ring side **A** for switch design range FD-Design, frame height 6 mm. Supporting ring side **B** for A design range and CD design range, frame height 11 mm.


**DANGER!**
**Danger of electrical shock!**
**When mounting with 230 V socket outlets under a common cover there is a danger of electrical shocks in the event of a fault!**
**Use only the supplied plastic screws for fixing to the supporting ring.**

- Mount supporting ring (1) in the right orientation on an appliance box. Note marking **TOP**; marking **A** or **B** in front. Use the supplied box screws.
- Push frame (2) onto supporting ring.
- Connect push-button module (4) to the KNX using KNX connecting terminal (7) and push onto the supporting ring.
- Fix push-button module to supporting ring using the supplied plastic screws (5). Tighten the plastic screws only lightly.
- Before mounting the control surfaces (6), load the physical address into the device (commissioning).

## 4.2 Commissioning


### Loading the physical address and application software

Configuration and commissioning with ETS3.0d Patch A.

The device is connected and ready for operation.

The control surfaces are not mounted yet.

- i** If the device does not receive any application software, or the wrong application software, then the blue operation LED flashes slowly.

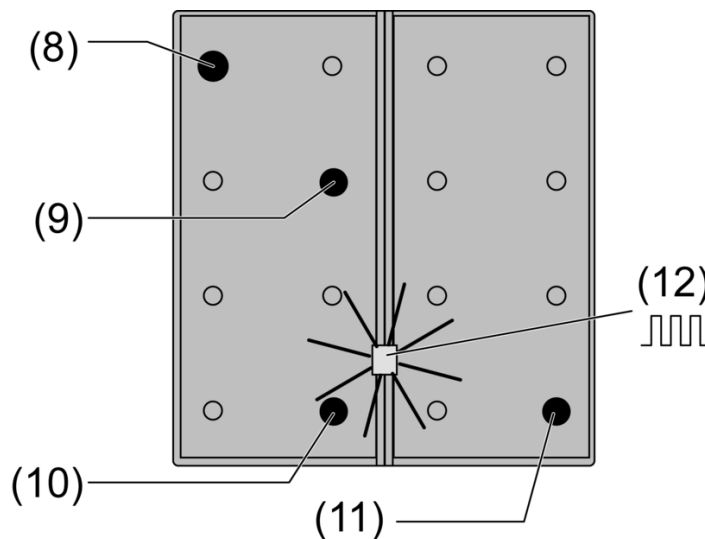

picture 2: Activating programming mode

- Activate programming mode: Press and hold push-button at the upper left (8). Then press push-button at the lower right (9, 10 or 11):

Push-button module	Prog. push-button
– 4gang, 3gang	(8) + (9)
– 2gang	(8) + (10)
– 1gang	(8) + (11)

The operation LED (12) flashes quickly.

- Load physical address into the device.

The operation LED (12) returns to its previous state – off, on, or flashing slowly.

- Write the physical address on the device label.
- Load application software into the device.


### Fitting the control surfaces

The control surfaces are available as a complete set of buttons. Individual buttons or the complete set of buttons can be replaced using buttons with symbols.

**i** The mounting spider is not required to mount the buttons.

The physical address is loaded into the device.

- Place control surfaces on the device in the right orientation and snap in with a short push. Note marking **TOP**.

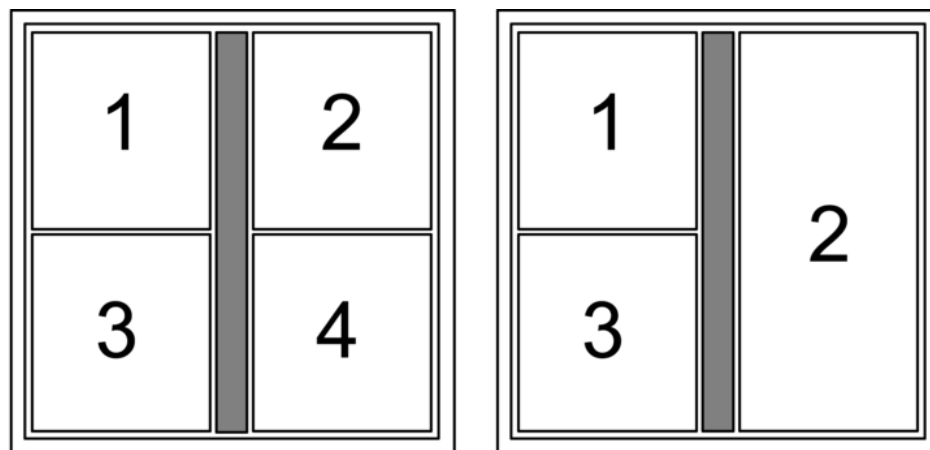

picture 3: Button assignment

## 5 Appendix

### 5.1 Technical data

KNX medium	TP1
Commissioning mode	S mode
Rated voltage KNX	DC 21 V ... 32 V SELV
Power consumption KNX	typ. 150 mW
Connection mode KNX	Terminal
Protection class	IP 20
Safety class	III
Ambient temperature	-5 ... +45 °C
Storage/transport temperature	-25 ... +70 °C

### 5.2 Accessories

Cover kit, 1-gang	Art.-No.: ..401 TSA..
Cover kit, 2-gang	Art.-No.: ..402 TSA..
Cover kit, 3-gang	Art.-No.: ..403 TSA..
Cover kit, 4-gang	Art.-No.: ..404 TSA..
Cover with symbol, 1-gang	Art.-No.: ..401 TSAP..
Cover with symbol, 2-gang	Art.-No.: ..402 TSAP..
Cover with symbol, 4-gang for button 1 or 4	Art.-No.: ..404 TSAP..14
Cover with symbol, 4-gang for button 2 or 3	Art.-No.: ..404 TSAP..23
Adaptor frame for CD ranges	Art.-No.: CD 4 AR



### 5.3 Warranty

We reserve the right to make technical and formal changes to the product in the interest of technical progress.

We provide a warranty as provided for by law.

Please send the unit postage-free with a description of the defect to our central customer service office:

#### **ALBRECHT JUNG GMBH & CO. KG**

Service Center  
Kupferstr. 17-19  
D-44532 Lünen  
Service-Line: +49 (0) 23 55 . 80 65 51  
Telefax: +49 (0) 23 55 . 80 61 89  
mail.vka@jung.de

#### **General equipment**

Service-Line: +49 (0) 23 55 . 80 65 55  
Telefax: +49 (0) 23 55 . 80 62 55  
mail.vkm@jung.de

#### **KNX equipment**

Service-Line: +49 (0) 23 55 . 80 65 56  
Telefax: +49 (0) 23 55 . 80 62 55  
mail.vkm@jung.de

#### **ALBRECHT JUNG GMBH & CO. KG**

Volmestraße 1  
D-58579 Schalksmühle  
Telefon: +49.23 55.8 06-0  
Telefax: +49.23 55.8 06-1 89  
E-mail: mail.info@jung.de  
Internet: www.jung.de