



---

# Contents

---

	Page
<b>1 EIB Power Supply Units</b>	
1.1 Introduction .....	4
1.2 The ABB product range .....	4
<b>2 SV/S 30.320.5 EIB Power Supply, 320 mA, MDRC</b>	
2.1 General .....	6
2.1.1 Product and functional description .....	6
2.2 Device technology .....	6
2.2.1 Technical data .....	6
2.2.2 Device connection .....	7
2.2.3 Dimension drawing .....	7
2.2.4 Installation and commissioning .....	7
2.3 Planning and application .....	8
2.3.1 Device application .....	8
2.4 Function and operation .....	8
2.4.1 Reset .....	8
2.4.2 Fault .....	8
<b>3 SV/S 30.640.5 EIB Power Supply, 640 mA, MDRC</b>	
3.1 General .....	10
3.1.1 Product and functional description .....	10
3.2 Device technology .....	10
3.2.1 Technical data .....	10
3.2.2 Device connection .....	11
3.2.3 Dimension drawing .....	11
3.2.4 Installation and commissioning .....	11
3.3 Planning and application .....	12
3.3.1 Device application .....	12
3.3.2 Application example .....	12
3.4 Function and operation .....	13
3.4.1 Reset .....	13
3.4.2 Fault .....	13
<b>4 SU/S 30.640.1 Uninterruptible EIB Power Supply, 640 mA, MDRC</b>	
4.1 General .....	14
4.1.1 Product and functional description .....	14
4.2 Device technology .....	14
4.2.1 Technical data .....	14
4.2.2 Device connection .....	15
4.2.3 Dimension drawing .....	16
4.2.4 Installation and commissioning .....	16

---

# Contents

---

	Page
<b>4.3 Planning and application</b>	17
4.3.1 Device application	17
4.3.2 Backup supply	17
4.3.3 Installation and connection of the Battery Module AM/S 12.1	18
4.3.4 Installation and connection of the sealed lead acid batteries SAK7, SAK12, SAK17	18
4.3.5 Connection of the potential-free changeover contact	19
<b>4.4 Function and operation</b>	20
4.4.1 Reset	20
4.4.2 Battery Life	20
4.4.3 Fault	20
4.4.4 Diagnostics table	22
<b>5 AM/S 12.1 Battery Module, 12 V DC, MDRC</b>	
<b>5.1 General</b>	24
5.1.1 Product and functional description	24
<b>5.2 Device technology</b>	24
5.2.1 Technical data	24
5.2.2 Device connection	25
5.2.3 Dimension drawing	25
<b>5.3 Planning and application</b>	26
5.3.1 Device application	26
<b>6 Sealed Lead Acid Batteries SAK7, SAK12, SAK17</b>	
<b>6.1 General</b>	28
6.1.1 Product and functional description	28
<b>6.2 Device technology</b>	28
6.2.1 Technical data for SAK7	28
6.2.2 Technical data for SAK12	28
6.2.3 Technical data for SAK17	28
<b>7 KS/K 4.1 and KS/K 2.1 Cable Sets</b>	
<b>7.1 General</b>	29
7.1.1 Product and functional description	29
<b>7.2 Device technology</b>	29
7.2.1 Technical data for Cable Set Basic KS/K 4.1	29
7.2.2 Technical data for Cable Set Extension KS/K 2.1	29
<b>8 Appendix</b>	
<b>8.1 Ordering information</b>	30
8.1.1 EIB power supply units	30
8.1.2 Batteries and accessories	30

---

## 1 EIB Power Supply Units

### 1.1 Introduction

EIB power supply units produce the EIB system voltage to supply the connected EIB components with power and over which EIB telegrams are transmitted.

To isolate the telegram traffic from the supply voltage, the EIB power supply units are decoupled from the bus line by an integrated choke. The bus line is disconnected from the supply with a reset during which all the devices connected to the bus line are returned to their initial state.

Fluctuations and failure of the bus voltage can lead to the loss of telegrams and faults in the installation. The EIB bus voltage should therefore always have a backup supply in critical applications, e.g., security functions.

### 1.2 The ABB product range

ABB offers a co-ordinated range of EIB power supply units and batteries to provide a professional back-up supply, whether for small systems in detached houses, for larger installations in trade and commercial applications or for sophisticated requirements in office buildings, industrial premises, hotels and hospitals.

All the EIB power supply units from ABB contain an integrated choke. The connection to the ABB i-bus® EIB is established via a bus connection terminal.

ABB offers three different EIB power supply units as DIN rail mounted devices for various applications:

1. **SV/S 30.320.5**  
EIB Power Supply, 320 mA, MDRC
2. **SV/S 30.640.5**  
EIB Power Supply, 640 mA, MDRC
3. **SU/S 30.640.1**  
Uninterruptible EIB Power Supply, 640 mA, MDRC

These three EIB power supply units are compared in the following table.



	SV/S 30.320.5	SV/S 30.640.5	SU/S 30.640.1
<b>General</b>			
Width	4 modules	6 modules	8 modules
<b>Bus output</b>			
Bus output with choke	320 mA	640 mA	640 mA
Bus connection	Bus connection terminal	Bus connection terminal	Bus connection terminal
Reset	Removal of bus connection terminal	Reset button	Reset button
30 V DC output (without choke)	–	Connection terminal	–
<b>Back-up supply</b>			
Mains failure back-up time	200 ms	200 ms	Without battery: 200 ms In combination with a sealed lead acid battery, e.g.: AM/S 12.1: 10 min.* SAK7: up to 2.5 h* (2 SAK7 in parallel: up to 5 h*) SAK12: up to 5.5 h* (2 SAK12 in parallel: up to 11 h*) SAK17: up to 8 h* (2 SAK17 in parallel: up to 16 h*) * Times are based on a newly-charged battery at nominal load
<b>Inputs/Outputs</b>			
Potential-free contact for fault indication	–	–	Changeover contact
<b>Functions</b>			
Typical areas of application	<ul style="list-style-type: none"> <li>● Supply of installations with only one line and a small number of bus devices (e.g., detached house, flat, shop, workshop)</li> <li>● Supply of main and area lines</li> <li>● Compensation of voltage drops in installations with large distances between the bus devices in a line or line segment</li> <li>● For use in equipment in mobile installations such as training benches and demonstration boards</li> </ul>	<ul style="list-style-type: none"> <li>● Supply of one line with up to 64 bus devices (e.g., detached house, office and commercial buildings)</li> <li>● Supply of 2 lines each with a small number of bus devices or the simultaneous supply of main and area lines via the separate 30 V DC auxiliary voltage output with additional choke</li> </ul>	<ul style="list-style-type: none"> <li>● Supply of installations with sophisticated requirements as regards the fault tolerance of the EIB installation (e.g. for security applications or fault alarm processing)</li> <li>● Back-up supply for the EIB voltage</li> <li>● Fault indication and storage of fault signals in the event of mains failure, battery fault, overload, overvoltage, voltage drop and short circuit</li> </ul>

## 2 SV/S 30.320.5 EIB Power Supply, 320 mA, MDRC

### 2.1 General

#### 2.1.1 Product and functional description

The EIB Power Supply produces and monitors the EIB system voltage. The bus line is decoupled from the power supply with the integrated choke.




The power supply is connected to the bus line with a bus connection terminal. A reset is triggered by removing the bus connection terminal for approx. 20 seconds. The bus line is disconnected from the power supply and the bus devices connected to this bus line are returned to their initial state.

### 2.2 Device technology


#### 2.2.1 Technical data

<b>Power supply</b>	– Power supply	230 V AC +10/-15%, 45 ... 65 Hz
	– Power consumption	< 30 VA
	– Power loss	< 4 W
<b>Outputs</b>	– EIB output	1 line with integrated choke
	– EIB output voltage	30 V DC +1/-2 V, SELV
	– Nominal current	320 mA, short-circuit-proof
	– Sustained short-circuit current	< 1 A
	– Mains failure back-up time	200 ms
<b>Operating and display elements</b>	– Green LED	“ON”: output voltage is OK
<b>Connections</b>	– Power supply	3 screw terminals Cable cross-section: multi-core 0.2 – 2.5 mm <sup>2</sup> single-core 0.2 – 4.0 mm <sup>2</sup>
	– EIB output	Bus connection terminal (black/red)
<b>Type of protection</b>	– IP 20, EN 60 529	
<b>Ambient temperature range</b>	– Operation	– 5 °C ... + 45 °C
	– Storage	– 25 °C ... + 55 °C
	– Transport	– 25 °C ... + 70 °C
<b>Design</b>	– Modular installation device, proM	
<b>Housing, colour</b>	– Plastic housing, grey	
<b>Mounting</b>	– On 35 mm mounting rail, DIN EN 50 022	
<b>Dimensions</b>	– 90 x 72 x 64 mm (H x W x D)	
<b>Mounting depth/width</b>	– 68 mm/4 modules at 18 mm	
<b>Weight</b>	– 0.21 kg	
<b>Certification</b>	– EIB-certified	
<b>CE norm</b>	– In accordance with the EMC guideline and the low voltage guideline	

## 2.2.2 Device connection

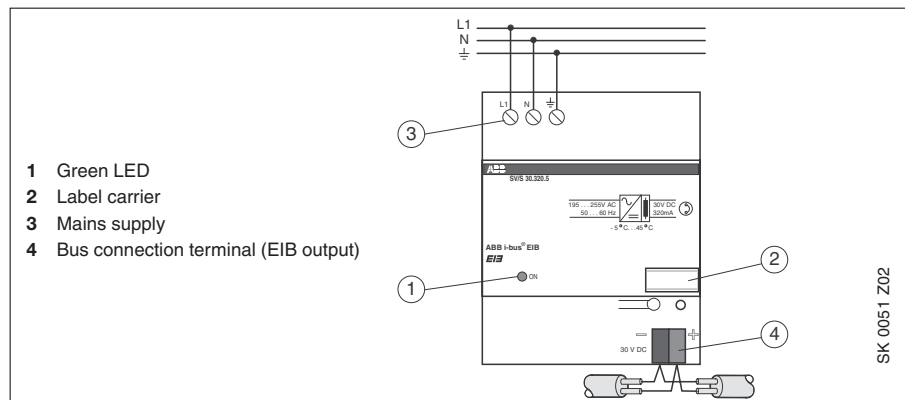

## 2.2.3 Dimension drawing

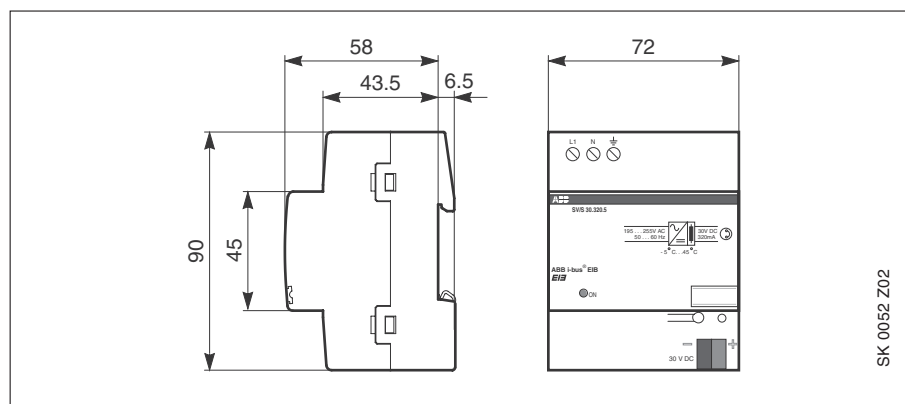

## 2.2.4 Installation and commissioning

Switch on the mains voltage after the device has been correctly installed. The green "ON" LED lights up and indicates that the device is functioning correctly.

## **2.3 Planning and application**

### **2.3.1 Device application**

The EIB Power Supply SV/S 30.320.5 is particularly suitable for the supply of:

- lines with a small number of devices
- small EIB installations with only one line, e.g., detached houses, flats, shops, workshops
- main lines and area lines
- installations with large distances between the bus devices of a line or line segment to compensate for the voltage drop
- mobile installations, e.g., training benches, demonstration boards

## **2.4 Function and operation**

### **2.4.1 Reset**

To carry out a reset, remove the bus connection terminal for approx. 20 seconds from the EIB power supply.

### **2.4.2 Fault**

During normal operation, the green “ON” LED lights up. If it does not light up, a fault is present. Check whether the connected EIB line has experienced a short circuit and whether the mains voltage is OK. If the green “ON” LED still does not light up, the number of bus devices connected to the EIB line should be reduced until an overload is no longer present and the green “ON” LED lights up.

Once the fault has been rectified, carry out a reset by removing the bus connection terminal for approx. 20 seconds.



---

ABB i-bus® EIB


**EIB Power Supply, 320 mA, MDRC**  
**SV/S 30.320.5, GH Q631 0038 R0111**

---

### 3 SV/S 30.640.5 EIB Power Supply, 640 mA, MDRC

#### 3.1 General

##### 3.1.1 Product and functional description

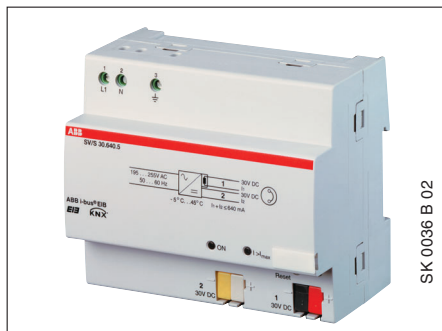

The EIB Power Supply produces and monitors the EIB system voltage. The bus line is decoupled from the power supply with the integrated choke.

The power supply is connected to the bus line with a bus connection terminal. A reset is triggered by pressing the reset push button and lasts for 20 seconds (regardless of the duration of the push button action). The bus line is disconnected from the power supply and the bus devices connected to this bus line are returned to their initial state. If the line should be disconnected for a longer period, the bus connection terminal must be removed from the power supply.

A 30 V DC auxiliary voltage is made available via an additional connection terminal. This voltage can be used to supply a further bus line (in connection with a separate choke). The 30 V DC auxiliary voltage may not be used for other purposes.


#### 3.2 Device technology

##### 3.2.1 Technical data

<b>Power supply</b>	– Power supply	230 V AC +10/-15%, 45 ... 65 Hz
	– Power consumption	< 45 VA
	– Power loss	< 6 W
<b>Outputs</b>	– EIB output	1 line with integrated choke
	– EIB nominal voltage	30 V DC +1/-2 V, SELV
	– Auxiliary voltage output	1 (without choke)
	– Auxiliary voltage	30 V DC +/- 1 V, SELV
	– Nominal current (total of EIB and auxiliary voltage output)	640 mA, short-circuit-proof
<b>Operating and display elements</b>	– Sustained short-circuit current	< 1.5 A
	– Mains failure back-up time	200 ms
	– Green LED	“ON”: output voltage is OK
	– Red LED	„I>I <sub>max</sub> ”: overload or short circuit
	– Reset push button	Reset at the EIB output (starts when the push button is pressed and lasts 20 s)
<b>Connections</b>	– Red LED	Reset at the EIB output
	– Power supply	3 screw terminals Cable cross-section: multi-core 0.2 – 2.5 mm <sup>2</sup> single-core 0.2 – 4.0 mm <sup>2</sup>
	– EIB output	Bus connection terminal (black/red)
	– Auxiliary voltage output	Connection terminal (yellow/grey)
	– Type of protection	– IP 20, EN 60 529


<b>Ambient temperature range</b>	– Operation	– 5 °C ... + 45 °C
	– Storage	– 25 °C ... + 55 °C
	– Transport	– 25 °C ... + 70 °C
<b>Design</b>	– Modular installation device, proM	
<b>Housing, colour</b>	– Plastic housing, grey	
<b>Mounting</b>	– On 35 mm mounting rail,	
	DIN EN 50 022	
<b>Dimensions</b>	– 90 x 108 x 64 mm (H x W x D)	
<b>Mounting depth/width</b>	– 68 mm/ 6 modules at 18 mm	
<b>Weight</b>	– 0.35 kg	
<b>Certification</b>	– EIB-certified	
<b>CE norm</b>	– In accordance with the EMC guideline and the low voltage guideline	

### 3.2.2 Device connection

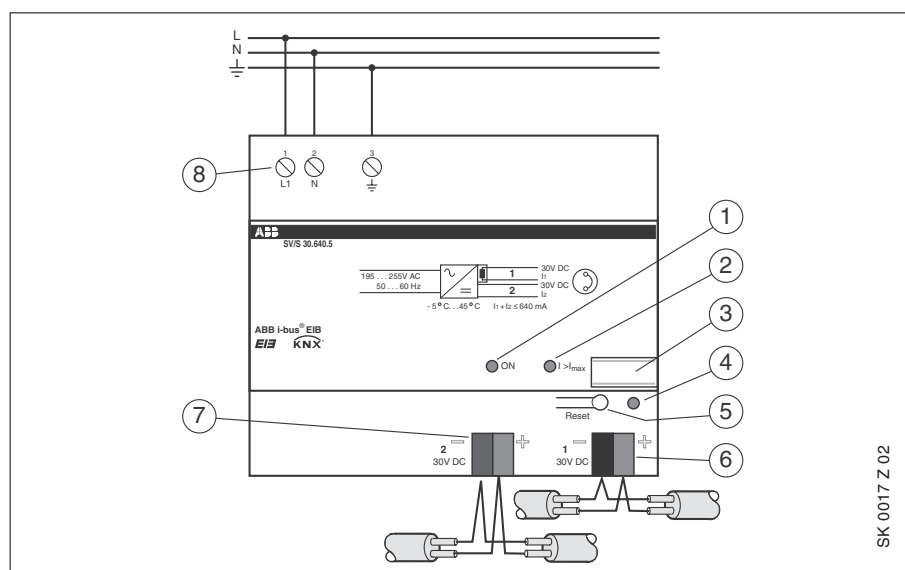

- |                                    |  |
|------------------------------------|--|
| 1 Green LED (output voltage OK)    | 6 Bus connection terminal (EIB output)           |
| 2 Red LED (overload/short circuit) | 7 Connection terminal (auxiliary voltage output) |
| 3 Label carrier                    | 8 Mains supply                                   |
| 4 Red LED (reset)                  |  |
| 5 Reset push button                |  |

### 3.2.3 Dimension drawing

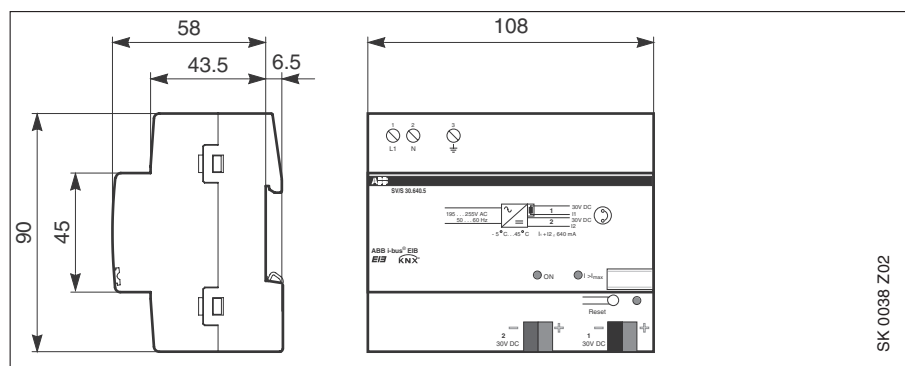

### 3.2.4 Installation and commissioning

Switch on the mains voltage once the device has been correctly installed. The green “ON” LED lights up. All the other LEDs are switched off. The device is functioning correctly.

### 3.3 Planning and application

#### 3.3.1 Device application

The EIB Power Supply SV/S 30.640.5 is particularly suitable for the supply of:


- lines with up to 64 bus devices, e.g., detached houses, office buildings, commercial buildings
- lines with a small number of devices and the simultaneous supply of a main line or area line via the separate 30 V DC auxiliary voltage output in combination with an additional choke

#### Note:

The auxiliary voltage may not be used for other purposes (e.g., to connect sensors to a binary input) as both the power supply and the connected EIB line will fail in the event of a fault at the auxiliary voltage output (e.g. a short circuit)!

#### 3.3.2 Application example

The 30 V DC auxiliary voltage output can be used in connection with an additional choke to supply a main or area line with voltage. To do so, the devices must be installed as in the following wiring diagram.

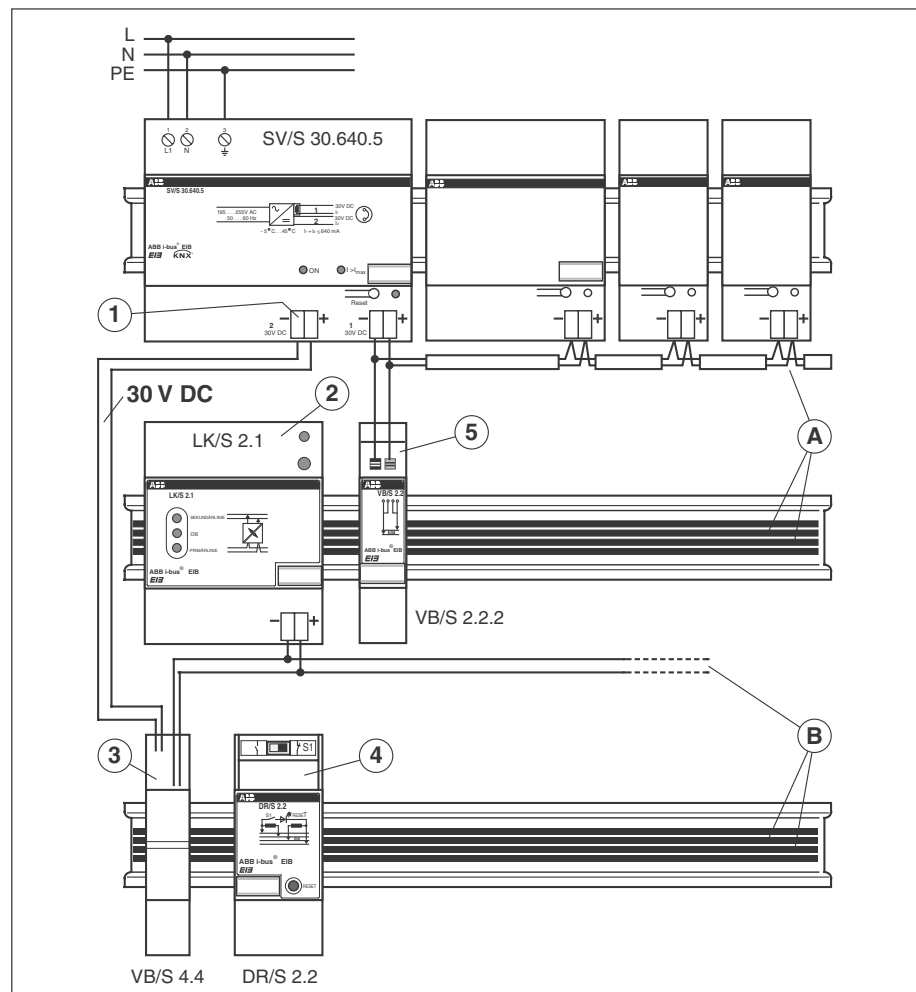

#### A Line 1

- 1 Connection terminal
- 2 Line coupler
- 3 Connector, 4-pole

#### B Main line

- 4 Choke
- 5 Connector, 2-pole

### 3.4 Function and operation

#### 3.4.1 Reset

To carry out a reset, press the reset push button. The red “Reset” LED lights up. The reset lasts approx. 20 seconds, regardless of the duration of the push button action. The bus line is disconnected from the power supply and the bus devices connected to the bus line are returned to their initial state. The “Reset” LED extinguishes when the reset has finished.

If the line should be disconnected for a longer period, remove the bus connection terminal from the EIB power supply.

#### 3.4.2 Fault

During normal operation, the green “ON” LED lights up.

If only the red LED “ $I > I_{\max}$ ” lights up, the EIB output has experienced an overload or short circuit. Rectify the short circuit or reduce the number of bus devices if necessary until an overload is no longer present and only the green “ON” LED lights up.

If the green “ON” LED and the red LED “ $I > I_{\max}$ ” light up simultaneously, the bus line has experienced an overload and the correct function cannot be guaranteed. Reduce the number of bus devices until the overload is no longer present and only the green “ON” LED lights up.

If neither LED lights up, the mains voltage is disconnected. Connect the voltage to the system and carry out a reset.

Once the fault has been rectified, carry out a reset by pressing the reset push button.

## 4 SU/S 30.640.1 Uninterruptible EIB Power Supply, 640 mA, MDRC

### 4.1 General

#### 4.1.1 Product and functional description



The Uninterruptible EIB Power Supply produces and monitors the EIB system voltage. The bus line is decoupled from the power supply with the integrated choke.

The power supply is connected to the bus line with a bus connection terminal. A reset is triggered by pressing the reset push button and lasts for 20 seconds (regardless of the duration of the push button action). The bus line is disconnected from the power supply and the bus devices connected to this bus line are returned to their initial state. If the line should be disconnected for a longer period, the bus connection terminal must be removed from the power supply.

Up to two 12 V sealed lead acid batteries can be connected as a back-up energy supply for the EIB system voltage in the event of mains failures. The batteries are charged via the SU/S 30.640.1 during normal operation. The charging voltage is temperature-controlled using a temperature sensor. If a mains failure occurs, the SU/S 30.640.1 is then supplied by the batteries.

**The temperature sensor must always be connected to ensure that the battery is charged correctly!**

A fault in the Uninterruptible EIB Power Supply is reported and stored via a potential-free changeover contact. The following faults cause a switching operation at the changeover contact: mains failure, battery fault, overvoltage and overload or short circuit.

### 4.2 Device technology

#### 4.2.1 Technical data


<b>Power supply</b>	– Power supply	230 V AC +10/–15%, 45 ... 65 Hz
	– Power consumption	< 60 VA
	– Power loss	< 10 W
<b>EIB output</b>	– Number	1 line with integrated choke
	– Output voltage	30 V DC +1/-2 V, SELV
	– Nominal current	640 mA, short circuit proof
	– Sustained short-circuit current	< 1.5 A
	– Mains failure back-up time (without connected battery)	200 ms
<b>Battery back-up</b>	– Battery type	Sealed lead acid battery
	– Number	Max. 2 in parallel
	– Nominal voltage	12 V DC
	– Battery capacity	Preferably 1 Ah, 7 Ah, 12 Ah, 17 Ah
	– Mains failure back-up time	Dependent on battery capacity
	– Nominal charging current of battery	650 mA (terminals 9 + 10), for battery capacities > 5 Ah 150 mA (terminals 8 + 10) for battery capacities < 5 Ah
	– Temperature control	Temperature-controlled adjustment of charging voltage via temperature sensor



# Uninterruptible EIB Power Supply, 640 mA, MDRC SU/S 30.640.1, GH Q631 0049 R0111

<b>Potential-free changeover contact</b>	– Nominal voltage	230 V AC or 12/24 V AC/DC
	– Max. switching current	6 A AC or 4 A DC
	– Min. switching current	100 mA (at $U < 30$ V AC/DC)
<b>Operating and display elements</b>	– Green LED	“ON”: output voltage is OK
	– Red LED	„I>I <sub>max</sub> ”: overload or short circuit
	– Reset push button	Reset starts when the push button is pressed and lasts 20 s
	– Red LED	Reset at the EIB output
	– Green LED	Main voltage is OK
<b>Connections</b>	– Green LED	Battery is OK
	– Power supply	3 screw terminals
	– Battery connection	2 screw terminals
	– Temperature sensor	2 screw terminals
	– Changeover contact	3 screw terminals
<b>Type of protection</b>	– Cable cross-section for all screw terminals	multi-core 0.2 – 2.5 mm <sup>2</sup> single-core 0.2 – 4.0 mm <sup>2</sup>
	– EIB output	Bus connection terminal (black/red)
	– IP 20, EN 60 529	
<b>Ambient temperature range</b>	– Operation	– 5 °C ... + 45 °C
	– Storage	– 25 °C ... + 55 °C
	– Transport	– 25 °C ... + 70 °C
<b>Design</b>	– Modular installation device, proM	
<b>Housing, colour</b>	– Plastic housing, grey	
<b>Mounting</b>	– On 35 mm mounting rail, DIN EN 50 022	
<b>Dimensions</b>	– 90 x 144 x 64 mm (H x W x D)	
<b>Mounting depth/width</b>	– 68 mm/ 8 modules at 18 mm	
<b>Weight</b>	– 0.5 kg	
<b>Certification</b>	– EIB-certified	
<b>CE norm</b>	– In accordance with the EMC guideline and the low voltage guideline	

## 4.2.2 Device connection

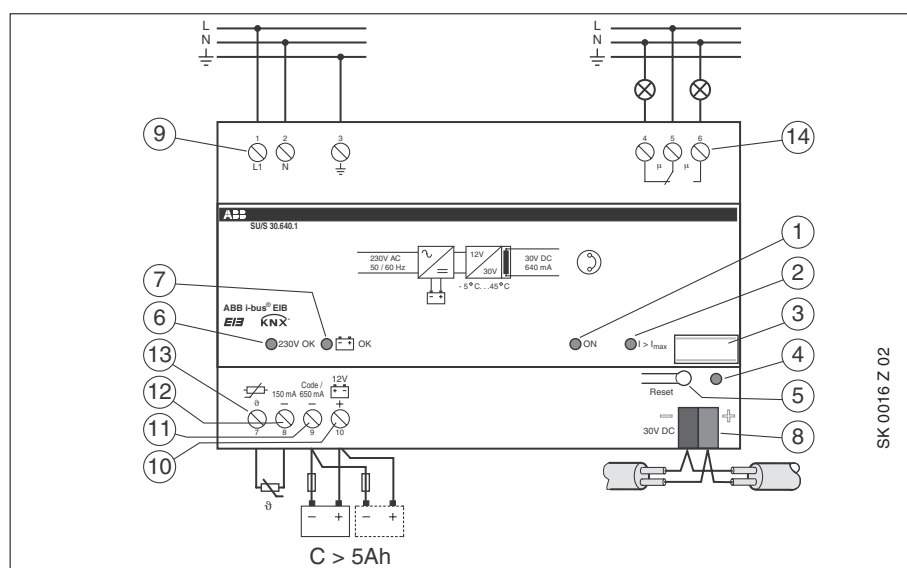

- |                                    |   |
|------------------------------------|---|
| 1 Green LED (output voltage OK)    | 8 Bus connection terminal                           |
| 2 Red LED (overload/short circuit) | 9 Mains supply                                      |
| 3 Label carrier                    | 10 Battery connection “+”                           |
| 4 Red LED (reset)                  | 11 Battery “-” 650 mA/Temp. sensor “-”              |
| 5 Reset push button                | 12 Battery “-” 150 mA/Temp. sensor “-”              |
| 6 Green LED (mains voltage OK)     | 13 Connection for temperature sensor “+”            |
| 7 Green LED (battery OK)           | 14 Connection for potential-free changeover contact |

## Uninterruptible EIB Power Supply, 640 mA, MDRC SU/S 30.640.1, GH Q631 0049 R0111

### Note:


During normal operation, the potential-free changeover contact is closed between terminals 4 and 5. In case of a fault, it is closed between terminals 5 and 6.

If a total battery capacity of less than 5 Ah is connected to the Uninterruptible EIB Power Supply SU/S 30.640.1, the battery is connected to terminals 8 ("150 mA –") and 10 ("12 V +") while the temperature sensor is connected to terminals 7 ("0") and 9 ("Code/650 mA –").

If a total battery capacity of more than 5 Ah is used, the battery is connected to terminals 9 ("Code/650 mA –") and 10 ("12 V +") while the temperature sensor is connected to terminals 7 ("0") and 8 ("150 mA") (see also chapters 4.3.3 and 4.3.4).

If a battery is used, the temperature sensor must always be connected!

### 4.2.3 Dimension drawing

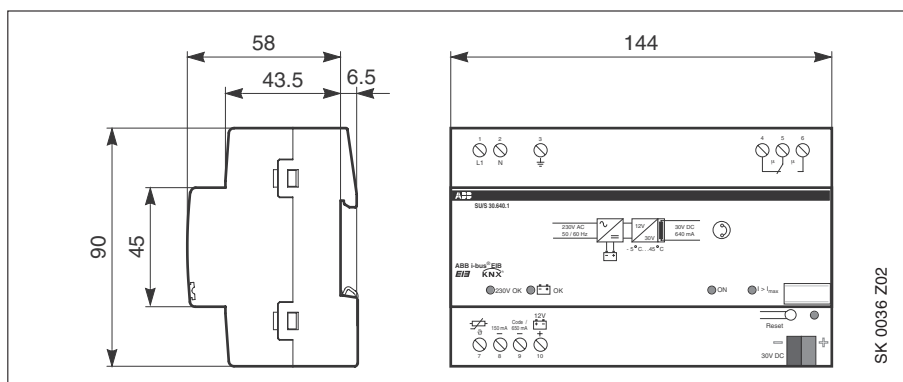

### 4.2.4 Installation and commissioning

Switch on the mains voltage once the device has been correctly installed. The green "ON" LED and the green "230 V OK" LED light up. If a battery is connected, the green "Battery OK" LED also lights up. All the other LEDs are switched off. The device is functioning correctly.

The battery test is carried out automatically at 15 minute intervals. It can take up to 15 minutes after switching on the mains voltage until a possible battery fault is indicated. It can also take 15 minutes for the "Battery OK" LED to relight up once the cause of the fault has been rectified.

A battery test can be triggered manually by pressing the reset push button. In this case, a reset is always carried out simultaneously.

If a faulty battery is connected or the polarity of the battery connection is reversed, the green "ON" LED for the battery flashes.

## 4.3 Planning and application

### 4.3.1 Device application

The Uninterruptible EIB Power Supply SU/S 30.640.1 is particularly suitable for the supply of:

- installations with sophisticated requirements as regards the functional reliability of the EIB installation (e.g., for security applications or fault monitoring)
- installations requiring a back-up supply for the EIB voltage for up to 16 hours
- installations with fault reporting and storage of fault signals in the event of mains failure, battery fault, overload, short circuit, overvoltage and voltage drop

### 4.3.2 Back-up supply

The SU/S 30.640.1 can buffer the connected EIB line for at least 200 ms without a connected battery in the event of a mains failure.

To bridge longer periods of mains failure, the SU/S 30.640.1 can be provided with a back-up supply using a 12 V DC battery. The mains failure back-up time is dependent on the load connected to the EIB line and the battery capacity.

ABB offers four different batteries with various capacity. The battery module AM/S 12.1 is a DIN rail mounted device, while the sealed lead acid batteries SAK7, SAK12 and SAK17 can be installed in a separate, universal distribution board.

When the Uninterruptible EIB Power Supply SU/S 30.640.1 is used at full capacity (64 bus devices), the sealed lead acid batteries buffer the EIB system voltage for the following mains failure back-up times:

#### **Battery Module, 12 V DC, MDRC, AM/S 12.1**

Battery capacity:	1 Ah
Mains failure back-up time:	10 min.*

#### **Sealed Lead Acid Battery, SAK7**

Battery capacity:	7 Ah
Mains failure back-up time:	up to 2.5 h* (1 x SAK7) up to 5 h* (2 x SAK7 in parallel)

#### **Sealed Lead Acid Battery, SAK12**

Battery capacity:	12 Ah
Mains failure back-up time:	up to 5.5 h* (1 x SAK12) up to 11 h* (2 x SAK12 in parallel)



#### **Sealed Lead Acid Battery, SAK17**

Battery capacity:	17 Ah
Mains failure back-up time:	up to 8 h* (1 x SAK17) up to 16 h* (2 x SAK17 in parallel)

\* The periods are based on a newly-charged batteries at full capacity utilisation of the Uninterruptible EIB Power Supply SU/S 30.640.1

The minimum back-up times are displayed in the following diagrams dependent on the number of supplied EIB devices. The first diagram shows back-up times on a large scale (back-up supply for up to 50 hours). The second diagram shows back-up times on a smaller scale (up to 20 hours).

# Uninterruptible EIB Power Supply, 640 mA, MDRC SU/S 30.640.1, GH Q631 0049 R0111

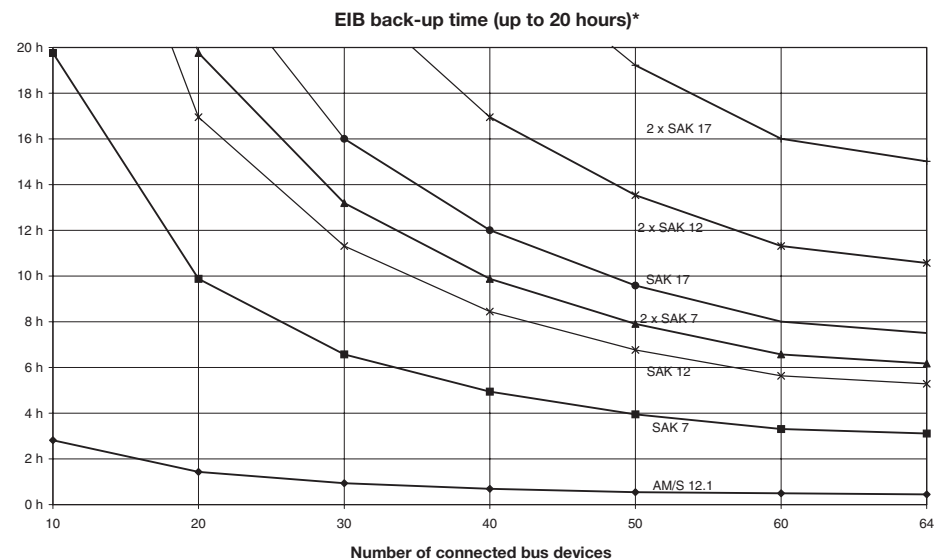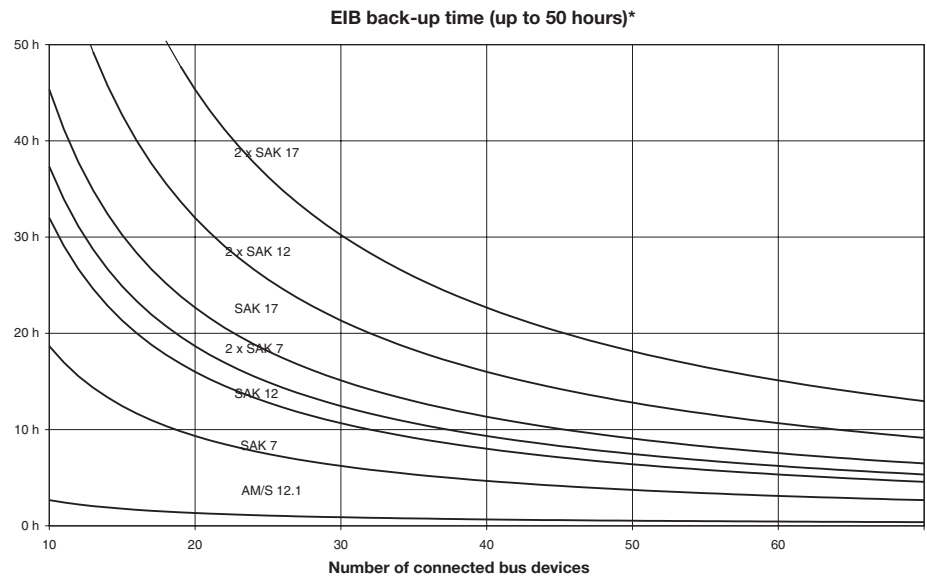

\* The periods are based on a newly-charged battery at an ambient temperature of 25° C

## 4.3.3 Installation and connection of the Battery Module AM/S 12.1


The Battery Module AM/S 12.1 is a DIN rail mounted device and can simply be snapped onto the mounting rail under the Uninterruptible EIB Power Supply SU/S 30.640.1 in the distribution board. The connection of the Battery Module to the SU/S 30.640.1 is shown in the following wiring diagram. The connection of more than one Battery Module to the SU/S 30.640.1 is not permitted.

The Battery Module is connected to the SU/S 30.640.1 using standard cable (single-core or multi-core, recommended cable cross-section: 0.75 – 1.5 mm<sup>2</sup>). A four-core cable is required – two cores for charging/discharging and two cores for the temperature-controlled adjustment of the charging voltage (the temperature sensor is integrated in the AM/S 12.1).

**The temperature sensor must always be connected to ensure that the battery is charged correctly!**

The maximum time required to charge the Battery Module is 10 hours.

# Uninterruptible EIB Power Supply, 640 mA, MDRC SU/S 30.640.1, GH Q631 0049 R0111

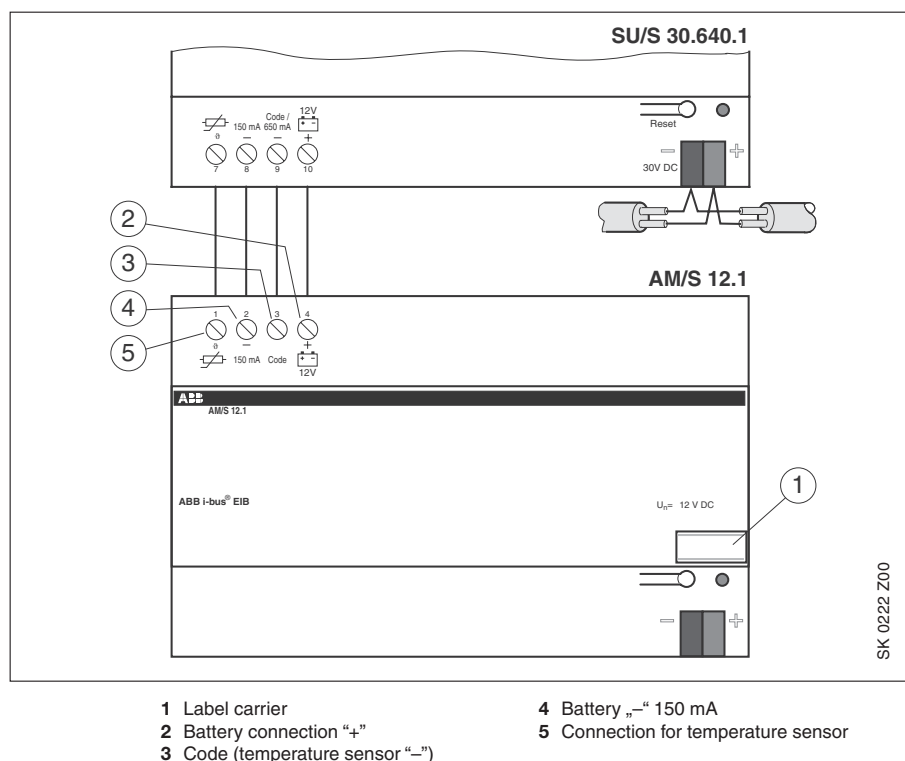

## 4.3.4 Installation and connection of the sealed lead acid batteries SAK7, SAK12, SAK17

Up to 2 batteries of the same capacity can be connected in parallel to the Uninterruptible EIB Power Supply SU/S 30.640.1.

The sealed lead acid batteries must be connected to the SU/S 30.640.1 with the Cable Sets KS/K 4.1 and KS/K 2.1. If only one sealed lead acid battery is connected, the Cable Set Basic KS/K 4.1 must be used. If two sealed lead acid batteries are connected in parallel, the second battery must be connected using the Cable Set Extension KS/K 2.1.

A replaceable fuse and a temperature sensor for the temperature-controlled adjustment of the charging voltage are integrated in Cable Set Basic KS/K 4.1; Cable Set Extension KS/K 2.1 contains a replaceable fuse.

When connecting the batteries SAK7, SAK12 and SAK17 with the Cable Sets KS/K 4.1 and KS/K 2.1, it should be ensured that the coloured cable cores are wired to the terminals as follows (see also the wiring diagram on page 13):

Terminal 7:	white	Terminal 9:	black
Terminal 8:	yellow	Terminal 10:	red

The maximum required charging time of the sealed lead acid batteries is:

SAK7:	16 h (1 x SAK7) or 32 h (2 x SAK7 in parallel)
SAK12:	28 h (1 x SAK12) or 56 h (2 x SAK12 in parallel)
SAK17:	39 h (1 x SAK17) or 78 h (2 x SAK17 in parallel)

The batteries must be recharged immediately after being discharged!

## 4.3.5 Connection of the potential-free changeover contact

Both the normally open (NO) or normally closed (NC) contact of the potential-free changeover contact can be used to route fault signals. It is therefore possible to indicate via an indicator lamp, for example, whether the line is functioning correctly or a fault has occurred. The signal can also be routed automatically to a service technician via a telephone dialling device, for example.

#### 4.4 Function and operation

##### 4.4.1 Reset

Press the reset pushbutton to carry out a reset. The red “Reset” LED lights up. The reset lasts approx. 20 seconds, regardless of the duration of the push button action. The bus line is disconnected from the power supply and the bus devices connected to the bus line are returned to their initial state. The “Reset” LED is extinguished when the reset has finished.

##### 4.4.2 Battery life span

Due to the service life of the batteries, they should be replaced approx. every four years to guarantee the minimum specified mains failure back-up time.

##### 4.4.3 Fault

The Uninterruptible EIB Power Supply permanently monitors the bus line, the mains power supply and the battery voltage. The green “ON” LED is extinguished when a fault occurs. The cause of the fault is indicated by the LEDs directly on the device and routed via the potential-free changeover contact.

In the event of an overload or overvoltage at the EIB output, the fault signal is stored, i.e., the potential-free changeover contact and the corresponding LED remain in the fault state, even if the cause for the fault signal is no longer present and the EIB line is again supplied with voltage. In this case, the installation will continue to function correctly but a service technician must eliminate the problem as otherwise faults may continue to occur in the future.

If the fault is rectified, the stored alarm can be acknowledged and deleted by pressing the reset pushbutton once. The potential-free contact returns to the normal position and the LED lights for normal operation. A bus reset is carried out when the reset push button is pressed a second time.

If the fault is not rectified, pressing the reset push button will indeed carry out a bus reset, however the fault remains stored and the potential-free changeover contact and the LED remain in the fault state.

#### Monitoring the bus line

**Overload/short circuit:** In the event of an overload of the bus line, the red LED “ $I > I_{\max}$ ” lights up. If the overload generates bus currents of more than 1.2 A (e.g. during a short circuit), the output voltage is automatically limited and the green “ON” LED is extinguished. A transient overload generally does not lead to problems in the installation. If the bus line experiences an overload or short circuit for longer than 10 seconds, the potential-free changeover contact also switches to the fault state. The fault signal is stored.

**Overvoltage:** If an overvoltage occurs on the bus line, the red LED “ $I > I_{\max}$ ” starts to flash. The potential-free changeover contact goes into the fault state. The Uninterruptible EIB Power Supply automatically carries out a bus reset. The red “Reset” LED lights up during the reset. The fault signal is stored.

If an overload and overvoltage occur simultaneously, the signal for overvoltage has higher priority, i.e., the LED “ $I > I_{\max}$ ” flashes and a bus reset is carried out automatically. The fault signal is stored.



**Uninterruptible EIB Power Supply,  
640 mA, MDRC  
SU/S 30.640.1, GH Q631 0049 R0111**

---

**Monitoring the power supply**

During a mains failure, the bus line is supplied by the connected battery, i.e., no faults occur in the installation. If the mains voltage fails, the potential-free changeover contact switches to the fault state and the LED “230 V AC OK” extinguishes. If the mains voltage recovers, the potential-free changeover contact reverts to the normal position and the LED lights up green. The fault signal is not stored.

**Monitoring the battery voltage**

A battery test is carried out automatically at 15 minute intervals. It is also possible to manually trigger a battery test by pressing the reset push button. If a battery fault is present, the potential-free changeover contact switches to the fault state and the “Battery OK” LED for the battery is extinguished. If the polarity of the battery connection is reversed, the “Battery OK” LED flashes. Once the cause of the fault is rectified, the potential-free changeover contact reverts to the normal position and the LED lights up green. The fault signal is not stored.

If no batteries are connected, the “OK” LED for the battery does not light.

**Note:**

It can take up to 15 minutes after the connection of the mains supply before a possible battery fault is indicated. Once the fault has been rectified, it can also take 15 minutes for the potential-free changeover contact to revert to the normal position and the LED to extinguish.

# Uninterruptible EIB Power Supply, 640 mA, MDRC SU/S 30.640.1, GH Q631 0049 R0111

## 4.4.4 Diagnostics table

Using the LEDs and the potential-free changeover contact, it is possible to diagnose the status of the SU/S 30.640.1. The following table indicates the state of the SU/S 30.640.1 and the action that must be taken to restore normal operation.

"230 V AC OK" LED	"Battery OK" LED	"ON" LED	"I > I <sub>max</sub> " LED	Changeover kontakt	"Reset" LED	Status of SU/S 30.640.1	Action
green	green	green	OFF	Neutral	OFF	Normal operation	
green	green	green	OFF	Neutral	red	Reset is active	Wait 20 s
green	green	green	flashes red	Fault	red	Overvoltage, automatic reset is active	Wait 20 s, rectify cause of overvoltage, acknowledge fault, carry out reset
green	green	green	flashes red	Fault	OFF	Overvoltage fault signal is stored, error is rectified	Acknowledge fault, carry out reset
OFF	green	green	OFF	Fault	OFF	Mains failure, battery operation	Check mains voltage
green	OFF	green	OFF	Fault	OFF	No battery, battery fault or discharged battery	Check battery connection, replace fuse or battery if necessary
OFF	OFF	OFF	OFF	Fault	OFF	Mains failure without battery, battery fault or discharged battery	Check mains voltage, charge battery (check connection or replace battery if necessary)
green	green	green/ OFF	red	Fault	OFF	Overload or short circuit	In the event of a short circuit, rectify the cause of the short circuit. In the event of overload, reduce the number of bus devices, acknowledge fault, carry out reset
OFF	green	green/ OFF	red	Fault	OFF	Overload or short circuit and mains failure, battery operation	In the event of a short circuit, rectify the cause of the short circuit. In the event of overload, reduce the number of bus devices, check mains voltage, acknowledge fault, carry out reset
green	OFF	green/ OFF	red	Fault	OFF	Overload or short circuit, no battery, battery fault or discharged battery	In the event of a short circuit, rectify the cause of short circuit. In the event of overload, reduce the number of bus devices, acknowledge fault, carry out reset, check battery connection, replace fuse or battery if necessary
green	green	green/ OFF	flashes red	Fault	OFF	Overvoltage	Rectify cause of overvoltage, acknowledge fault, carry out reset
OFF	green	green/ OFF	flashes red	Fault	OFF	Overvoltage and mains failure, battery operation	Rectify cause of overvoltage, check mains voltage, acknowledge fault, carry out reset
green	OFF	green/ OFF	flashes red	Fault	OFF	Overvoltage and no battery, battery fault or discharged battery	Rectify cause of overvoltage, acknowledge fault, carry out reset, check battery connection, replace fuse or battery if necessary
green	green	green	red	Fault	OFF	Overload, output voltage OK	Reduce number of bus devices, acknowledge fault, carry out reset
OFF	green	green	red	Fault	OFF	Overload, output voltage OK, mains failure, battery operation	Reduce number of bus devices, check mains voltage, acknowledge fault, carry out reset
green	OFF	green	red	Fault	OFF	Overload, output voltage OK, mains operation, no battery, battery fault or discharged battery	Reduce number of bus devices, check battery connection, replace fuse or battery if necessary, acknowledge fault, carry out reset
–	flashes green	–	–	Fault	OFF	Battery defective or polarity of battery connection is reversed	Check battery connection, replace battery if necessary, carry out reset

---

ABB i-bus® EIB

**Uninterruptible EIB Power Supply,  
640 mA, MDRC  
SU/S 30.640.1, GH Q631 0049 R0111**

---

## 5 AM/S 12.1 Battery Module, 12 V DC, MDRC

### 5.1 General

#### 5.1.1 Product description



The Battery Module is a sealed lead acid battery which acts as a back-up energy source for the ABB i-bus® EIB system voltage during mains failures. The Battery Module can only be used in combination with the Uninterruptible EIB Power Supply SU/S 30.640.1. The Battery Module is a DIN rail mounted device and can simply be snapped onto the mounting rail under the SU/S 30.640.1 in the distribution board.

The back-up time is dependent on the bus load, however, a minimum of 10 minutes is guaranteed when the EIB line is at capacity (64 bus devices). It is not permitted to connect several Battery Modules in parallel to the SU/S 30.640.1 or to connect the Battery Module in combination with other batteries.

A temperature sensor for a temperature-controlled adjustment of the charging voltage is integrated in the battery module. An integrated fuse protects the Battery Module from short circuits.

**The temperature sensor must always be connected to ensure that the battery is charged correctly!**


### 5.2 Device technology

#### 5.2.1 Technical data

<b>Power supply</b>	– Power supply	May only be connected to the Uninterruptible EIB Power Supply SU/S 30.640.1
	– Nominal voltage	12 V DC
	– Battery capacity	1 Ah
	– Charging current	150 mA
	– Charging time	max. 10 h
	– Mains failure back-up time	min. 10 minutes (dependent on bus load; the back-up time can be reduced due to aging of the battery module)
<b>Safety</b>	– Temperature sensor	Integrated
	– Fuse	Self-healing (integrated)
<b>Operating and display elements</b>	– None	
<b>Connections</b>	– Power supply	2 screw terminals
	– Temperature sensor	2 screw terminals Cable cross-section: multi-core 0.2 – 2.5 mm <sup>2</sup> single-core 0.2 – 4.0 mm <sup>2</sup>
<b>Type of protection</b>	– IP 20, EN 60 529	
<b>Ambient temperature range</b>	– Operation	+ 5 °C ... + 45 °C
	– Storage	– 25 °C ... + 20 °C
	– Transport	– 25 °C ... + 50 °C
<b>Design</b>	– Modular installation device, pro M	


<b>Housing, colour</b>	– Plastic housing, grey
<b>Mounting</b>	– On 35 mm mounting rail, DIN EN 50 022
<b>Dimensions</b>	– 90 x 144 x 64 mm (H x W x D)
<b>Mounting depth/width</b>	– 68 mm/8 modules at 18 mm
<b>Weight</b>	– 0.72 kg
<b>CE norm</b>	– In accordance with the EMC guideline and the low voltage guideline

## 5.2.2 Device connection

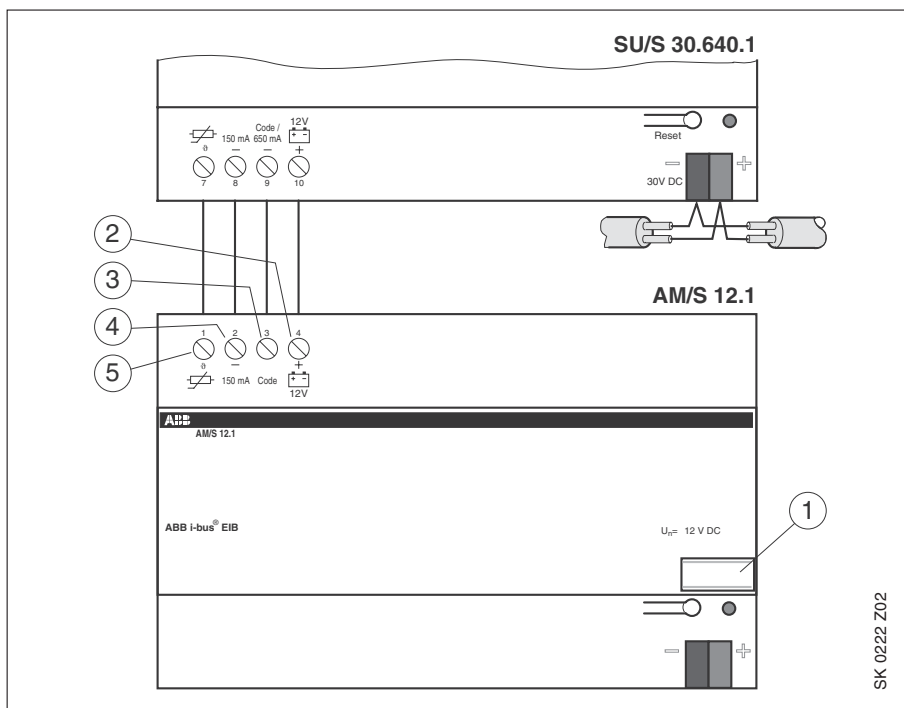

- |                                 |                                     |
|---------------------------------|-------------------------------------|
| 1 Label carrier                 | 4 Battery „-“ 150 mA                |
| 2 Battery connection „+“        | 5 Connection for temperature sensor |
| 3 Code (temperature sensor „-“) |                                     |

## 5.2.3 Dimension drawing

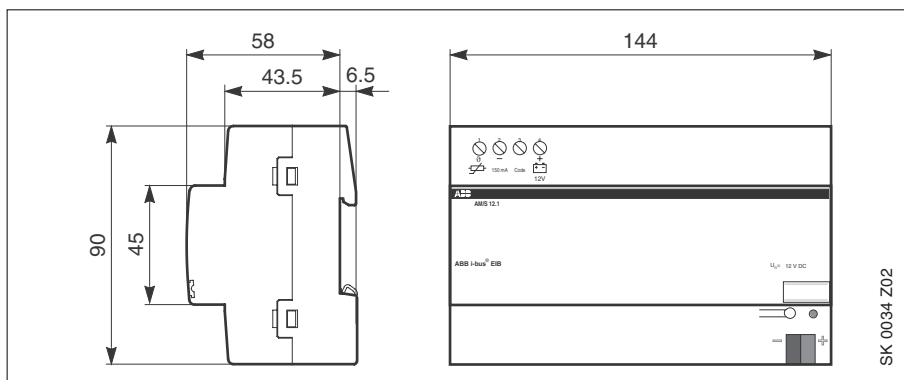

### 5.3 Planning and application

#### 5.3.1 Device implementation

The following guidelines should be noted when using the Battery Module AM/S 12.1:

1. The Battery Module may only be connected to the Uninterruptible EIB Power Supply SU/S 30.640.1
2. The Battery Module may only be installed on a horizontal mounting rail (35 mm, EN 50 022) in a wall-mounted distribution board.
3. The Battery Module may not be connected in series or in parallel to other Battery Modules or other sealed lead acid batteries.
4. In the supplied state, the Battery Module is charged or partially charged. The Battery Module must not be stored in a discharged state. If the Battery Module is stored for longer periods without connection to the SU/S 30.640.1, it must be fully charged at least every 6 months. The Battery Module can be stored for max. 2 years at a storage temperature of 20°C.
5. Once the Battery Module has been discharged during normal operation, it must be recharged as soon as possible.
6. Due to the life span of the sealed lead acid battery, it is advisable to replace the Battery Module with a new device approx. every four years. Used Battery Modules can be returned to your EIB representative for disposal.





## 6 SAK7, SAK12, SAK17 Sealed Lead Acid Batteries

### 6.1 General

#### 6.1.1 Product and functional description



SK 0252 B 02

The sealed lead acid batteries SAK7, SAK12 and SAK17 are used to buffer the EIB system voltage in combination with the Uninterruptible EIB Power Supply SU/S 30.640.1. A maximum of two sealed lead acid batteries can be connected in parallel to the SU/S 30.640.1. In this case, two identical sealed lead acid batteries must be used.

When connecting a sealed lead acid battery to the SU/S 30.640.1, the Cable Set Basic KS/K 4.1 must be used. When connecting two sealed lead acid batteries, the Cable Set Basic KS/K 4.1 must be used for the first battery while the Cable Set Extension KS/K 2.1 must be used for the second battery.

The service life of the sealed lead acid batteries is 5 years.

### 6.2 Device technology

#### 6.2.1 Technical data for SAK7

Nominal voltage	– 12 V DC	
Capacity	– 7 Ah	
Dimensions	– 94 x 151 x 65 (H x W x D)	
Weight	– 2.6 kg	
Service life	– 5 years	
Ambient temperature range	– Operation	– 20 °C ... + 50 °C
	– Storage	– 20 °C ... + 50 °C
	– Transport	– 20 °C ... + 50 °C

#### 6.2.2 Technical data for SAK12

Nominal voltage	– 12 V DC	
Capacity	– 12 Ah	
Dimensions	– 94 x 151 x 98 (H x W x D)	
Weight	– 4.2 kg	
Service life	– 5 years	
Ambient temperature range	– Operation	– 20 °C ... + 50 °C
	– Storage	– 20 °C ... + 50 °C
	– Transport	– 20 °C ... + 50 °C


#### 6.2.3 Technical data for SAK17

Nominal voltage	– 12 V DC	
Capacity	– 17 Ah	
Dimensions	– 167 x 181 x 76 (H x W x D)	
Weight	– 6.8 kg	
Service life	– 5 years	
Ambient temperature range	– Operation	– 20 °C ... + 50 °C
	– Storage	– 20 °C ... + 50 °C
	– Transport	– 20 °C ... + 50 °C

## 7 KS/K 4.1 and KS/K 2.1 Cable Sets

### 7.1 General

#### 7.1.1 Product and functional description

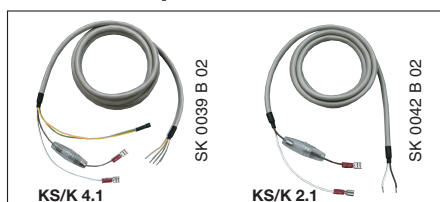

The Cable Set Basic KS/K 4.1 (for one battery) or both Cable Sets Basic KS/K 4.1 and Extension KS/K 2.1 (for two batteries in parallel) must be used for the connection of a sealed lead acid battery to the Uninterruptible EIB Power Supply SU/S 30.640.1. The Battery Module AM/S 12.1 can be wired using a standard cable.

A replaceable fuse and a temperature sensor for the temperature-controlled adjustment of the charging voltage are integrated in the Cable Set Basic KS/K 4.1. Only one replaceable fuse is integrated in the Cable Set Extension KS/K 2.1.

### 7.2 Device technology

#### 7.2.1 Technical data for KS/K 4.1

<b>Cable</b>	– Cables	4-core cable
	– Cross-section	0.75 mm <sup>2</sup>
	– Length	2 m
<b>Colour</b>	– Battery connection	red: “+” (12 V battery) black: “–” (GND battery)
	– Temperature sensor	yellow: “–” (GND temp. sensor) white: “+” (12 V temp. sensor)
	– Battery connection	For connection to the SU/S 30.640.1: Connector sleeves For connection to the battery: FASTON sockets and pole shoes
	– Temperature sensor	Connector sleeves
<b>Fuse</b>	– Type	Replaceable fuse with in-line fuse carrier and bayonet lock
	– Features	5 x 20 mm slow fuse; T 6.3 H 250 V Breaking capacity: 1500 A
	– Weight	0.1 kg

#### 7.2.2 Technical data for KS/K 2.1

<b>Cable</b>	– Cables	2-core cable
	– Cross-section	0.75 mm <sup>2</sup>
	– Length	2 m
<b>Colour</b>	– Battery connection	red: “+” (12 V battery) black: “–” (GND battery)
	– Battery connection	For connection to the SU/S 30.640.1: Connector sleeves. For connection to the battery: FASTON sockets and pole shoes.
<b>Fuse</b>	– Type	Replaceable fuse with in-line fuse carrier and bayonet lock
	– Features	5 x 20 mm slow fuse; T 6.3 H 250 V Breaking capacity: 1500 A
	– Weight	0.1 kg

## 8 Appendix

### 8.1 Ordering information

#### 8.1.1 EIB Power Supply Units

Ordering information	Description		bbn 40 16779 EAN	Price group	Unit price €	Unit weight in kg	Packing unit
Short code		Product no.					
SV/S 30.320.5	EIB Power Supply, 320 mA, MDRC	GH Q631 0038 R0111	49090 0	26		0.2	1
SV/S 30.640.5	EIB Power Supply, 640 mA, MDRC	GH Q631 0048 R0111	51474 3	26		0.35	1
SU/S 30.640.1	Uninterruptible EIB Power Supply, 640 mA, MDRC	GH Q631 0049 R0111	51477 4	26		0.5	1

#### 8.1.2 Batteries and accessories

Ordering information	Description		bbn 40 16779 EAN	Price group	Unit price €	Unit weight in kg	Packing unit
Short code		Product no.					
AM/S 12.1	Battery Module, 12 VDC, MDRC	GH Q631 0062 R0111	51481 1	26		0.7	1
SAK7	Sealed Lead Acid Battery 12 V, 7 Ah	GH V924 0001 V0011	74493 8*	50		2.6	1
SAK12	Sealed Lead Acid Battery 12 V, 12 Ah	GH V924 0001 V0012	74494 5*	50		4.1	1
SAK17	Sealed Lead Acid Battery 12 V, 17 Ah	GH V927 0001 V0013	74495 2*	50		6.8	1
KS/K 4.1	Cable Set Basic	GH Q630 1910 R0001	51725 6	26		0.1	1
KS/K 2.1	Cable Set Extension	GH Q630 1910 R0011	52893 1	26		0.1	1

\* bbn no.: 40 13232



The information in this leaflet is subject to change without further notice.

Pub No. 2CDC 501 005 D0201

Your EIB-Partner