



# KNX TH-UP basic

## Thermal hygrometer

---

Article numbers 70362 (white), 70363 (aluminium), 70364 (anthracite)



|  |           |
|--|-----------|
| <b>1. Description .....</b>  | <b>5</b>  |
| 1.0.1. Deliverables .....  | 6         |
| 1.1. Technical specifications .....                                    | 6         |
| 1.1.1. Measuring accuracy .....  | 7         |
| <b>2. Installation and start-up .....</b>                              | <b>7</b>  |
| 2.1. Installation notes .....  | 7         |
| 2.2. Installation position .....                                       | 8         |
| 2.3. Construction of the sensor .....                                  | 8         |
| 2.3.1. Housing .....   | 8         |
| 2.3.2. Rear view sensor plate with connection .....                    | 9         |
| 2.4. Assembly of the sensor .....                                      | 9         |
| 2.5. Notes on mounting and commissioning .....                         | 9         |
| <b>3. Transfer protocol .....</b>                                      | <b>11</b> |
| 3.1. List of all communications objects .....                          | 11        |
| <b>4. Parameter setting .....</b>                                      | <b>18</b> |
| 4.1. Behaviour on power failure/ restoration of power .....            | 18        |
| 4.2. General settings .....  | 18        |
| 4.3. Measured values: Temperature, humidity .....                      | 18        |
| 4.4. Threshold values: Temperature, humidity .....                     | 19        |
| 4.4.1. Threshold value 1, 2, 3: Temperature, humidity .....            | 19        |
| Threshold value .....  | 19        |
| Switching output .....   | 20        |
| Block .....  | 21        |
| 4.5. Temperature PI control .....                                      | 21        |
| 4.5.1. General set point values .....                                  | 23        |
| Set point Comfort .....  | 24        |
| Set point for standby .....  | 24        |
| Eco set point .....  | 25        |
| Set point values for frost/heat protection (building protection) ..... | 25        |
| General variables .....  | 25        |
| 4.5.2. Heating control level 1/2 .....                                 | 26        |
| 4.5.3. Cooling control level 1/2 .....                                 | 28        |
| 4.6. Humidity PI control .....   | 30        |
| General control .....  | 30        |
| Controller target value .....  | 31        |
| Dehumidification and/or humidification .....                           | 32        |
| 4.7. Dewpoint temperature .....  | 33        |
| 4.7.1. Coolant temperature monitoring .....                            | 33        |
| Minimum coolant temperature threshold value .....                      | 33        |
| Switching output .....   | 34        |
| Block .....  | 34        |
| 4.8. Absolute humidity .....   | 35        |
| 4.9. Comfort field .....   | 35        |
| 4.10. Variable comparator .....  | 36        |

---

|   |    |
|---|----|
| 4.10.1. Control variable comparator 1/2 .....     | 36 |
| 4.11. Logic .....                                 | 37 |
| AND logic .....                                   | 37 |
| OR logic .....                                    | 37 |
| 4.11.1. AND and/or OR logic 1/2/3/4/5/6/7/8 ..... | 37 |
| Block .....                                       | 38 |
| 4.11.2. AND logic connection inputs .....         | 39 |
| 4.11.3. Connection inputs of the OR logic .....   | 40 |



Installation, inspection, commissioning and troubleshooting of the device must only be carried out by a competent electrician.

This manual is amended periodically and will be brought into line with new software releases. The change status (software version and date) can be found in the contents footer. If you have a device with a later software version, please check **www.elsner-elektronik.de** in the menu area "Service" to find out whether a more up-to-date version of the manual is available.

## Clarification of signs used in this manual



Safety advice.



Safety advice for working on electrical connections, components, etc.

### **DANGER!**

... indicates an immediately hazardous situation which will lead to death or severe injuries if it is not avoided.

### **WARNING!**

... indicates a potentially hazardous situation which may lead to death or severe injuries if it is not avoided.

### **CAUTION!**

... indicates a potentially hazardous situation which may lead to trivial or minor injuries if it is not avoided.



**ATTENTION!** ... indicates a situation which may lead to damage to property if it is not avoided.

### ETS

In the ETS tables, the parameter default settings are marked by underlining.



# 1. Description

---

The **Indoor sensor KNX TH-UP basic** measures the temperature and air humidity and calculates the dew point. Via the bus, the sensor receives external measuring values and processes them to an overall temperature and air humidity value (composite results) together with its own data.

The **KNX TH-UP basic** provides six switched outputs whose threshold values can be adjusted. Switched outputs and other communication objects may be linked via AND and OR logic gates. In addition, an integrated control variable comparator compares and outputs variables that were received via communication objects.

Integrated PI-controllers control ventilation (according to humidity) and heating/cooling (according to temperature). The **KNX TH-UP basic** outputs a warning to the bus as soon as the comfort field (as per DIN 1946) is exited.

The housing is supplemented with a frame of the switch series used in buildings, and thus fits seamlessly into the interior fittings.

## **Functions:**

- Measuring the **temperature** and **air humidity** (relative and absolute), calculation of the **dew point**
- **Composite values** from own measured values and external values (proportions are adjusted as a percentage)
- **PI-controller for heating** (one or two-stage) and **cooling** (one or two-stage) according to temperature. Regulation according to separate setpoints or basic setpoint temperature
- **PI controller for humidity** according to humidity: Dehumidifying/humidifying (single level) or dehumidifying (single or double level)
- **6 threshold values** can be adjusted per parameter or via communication objects
- **8 AND and 8 OR logic gates**, each with 4 inputs. All switching events as well as 16 logic inputs (in the form of communications objects) are used as inputs for the logic gates. The output from each gate can be configured optionally as 1-bit or 2 x 8-bit
- **2 control variable comparators** to output minimum, maximum or average values. 5 inputs each for values received via communication objects

Configuration is made using the KNX software ETS. The **product file** can be downloaded from the Elsner Elektronik website on [www.elsner-elektronik.de](http://www.elsner-elektronik.de) in the "Service" menu.

### 1.0.1. Deliverables

- Housing with sensor PCB
- Baseplate

*Additionally* required (not included in the deliverables):

- Junction box Ø 60 mm, 42 mm depth
- Frame (for insert 55 x 55 mm), compatible with the switch scheme used in the building

## 1.1. Technical specifications

|                             |  |
|-----------------------------|--|
| Housing                     | Plastic (partially painted)  |
| Colours                     | <ul style="list-style-type: none"> <li>• White, glossy (similar to RAL 9016 Traffic White)</li> <li>• Aluminium, matt</li> <li>• Anthracite, matt</li> <li>• Special colours on request</li> </ul> |
| Assembly                    | Flush mounting<br>(Wall mounting in junction box Ø 60 mm, 42 mm depth)   |
| Protection category         | IP 20  |
| Dimensions                  | Housing approx. 55 x 55 (W x H, mm),<br>Mounting depth approx. 15 mm<br>Baseplate approx. 71 x 71 (W x H, mm),   |
| Total weight                | approx. 45 g   |
| Ambient temperature         | Operation -25...+80°C, storage -40...+85°C   |
| Ambient humidity            | max. 95% RH, avoid condensation  |
| Operating voltage           | KNX bus voltage  |
| Bus current                 | max. 6 mA,<br>max. 10 mA when programming LED active   |
| Data output                 | KNX +/- bus plug-in terminals  |
| BCU type                    | Integrated microcontroller   |
| PEI type                    | 0  |
| Group addresses             | max. 254   |
| Assignments                 | max. 254   |
| Communication objects       | 190  |
| Temperature measuring range | -25...+80°C  |
| Temperature resolution      | 0.1°C  |
| Temperature accuracy*       | ±0,8°C at -25...-10°C<br>±0,5°C at -10...+65°C<br>±0,6°C at +65...+80°C  |
| Humidity measuring range    | 0... 100% RH   |
| Humidity resolution         | 0.1%   |

|                   |   |
|-------------------|---|
| Humidity accuracy | ±7,5% RH at 0...10% RH<br>±4,5% RH at 10...90% RH<br>±7,5% RH at 90...100% RH |
| Humidity drift    | ± 0.5% RH per year in normal atmosphere                                       |

\* Please note the information on *Measuring accuracy*, Page 7

The product is compliant with the provisions of EU guidelines.

### 1.1.1. Measuring accuracy

Measurement variations from sources of interference (see chapter *Installation position*) must be corrected in the ETS in order to ensure the specified accuracy of the sensor (offset).

When **measuring temperature**, the self-heating of the device is considered by the electronics. The heating is compensated by reducing the measured temperature by the self-heating of 1.8°C. The indicated indoor temperature measured value approaches the actual room temperature during a 2 hours heating period.

## 2. Installation and start-up

### 2.1. Installation notes



Installation, testing, operational start-up and troubleshooting should only be performed by an electrician.



#### **CAUTION!** **Live voltage!**

There are unprotected live components inside the device.

- National legal regulations are to be followed.
- Ensure that all lines to be assembled are free of voltage and take precautions against accidental switching on.
- Do not use the device if it is damaged.
- Take the device or system out of service and secure it against unintentional use, if it can be assumed, that risk-free operation is no longer guaranteed.

The device is only to be used for its intended purpose. Any improper modification or failure to follow the operating instructions voids any and all warranty and guarantee claims.

After unpacking the device, check it immediately for possible mechanical damage. If it has been damaged in transport, inform the supplier immediately.



The device may only be used as a fixed-site installation; that means only when assembled and after conclusion of all installation and operational start-up tasks and only in the surroundings designated for it.

Elsner Elektronik is not liable for any changes in norms and standards which may occur after publication of these operating instructions.

## 2.2. Installation position

The sensor will be installed concealed within a socket ( $\varnothing$  60 mm, 42 mm deep).



**The sensor may be installed and operated in dry interior rooms only. Avoid condensation.**

When selecting an installation location, please ensure that the measurement results are affected as little as possible by external influences. Possible sources of interference include:

- Direct sunlight
- Drafts from windows and doors
- When mounted in-wall: Draft from ducts which lead from other rooms to the junction box in which the sensor is mounted
- Warming or cooling of the building structure on which the sensor is mounted, e.g. due to sunlight, heating or cold water pipes
- Connection lines which lead from warmer or colder areas to the sensor

Temperature variations from such sources of interference must be corrected in the ETS in order to ensure the specified accuracy of the sensor (temperature offset).

## 2.3. Construction of the sensor

### 2.3.1. Housing

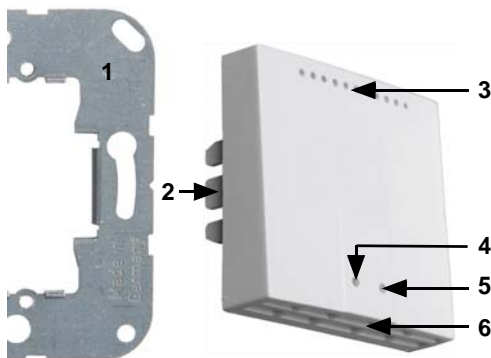


Fig. 1

- 1 Baseplate
- 2 Catches
- 3 Openings for air circulation
- 4 Programming LED (recessed)
- 5 Programming button (recessed) for teaching the device
- 6 Openings for air circulation (LOWER)

### 2.3.2. Rear view sensor plate with connection

---

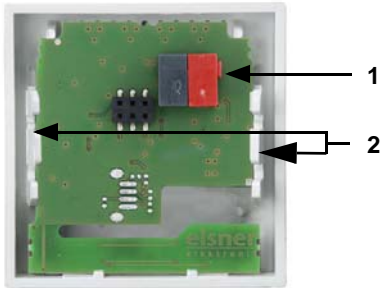


Fig. 2

- 1 KNX terminal BUS +/-
- 2 Catches

### 2.4. Assembly of the sensor

---

First of all fit the socket with connection. Seal inlet pipes to avoid infiltration. Then screw the base plate onto the socket and position the frame of the switching programme. Connect the bus line +/- (black-red plug) to the terminals provided on the sensor board of the sensor. Pin the sensor with the notches on to the metal frame, so that sensor and frame are fixed.

### 2.5. Notes on mounting and commissioning

---

Never expose the device to water (e.g. rain) or dust. This can damage the electronics. You must not exceed a relative humidity of 95%. Avoid condensation.

After the bus voltage has been applied, the device will enter an initialisation phase lasting a few seconds. During this phase no information can be received or sent via the bus.



## 3. Transfer protocol

### Units:

*Temperatures in degrees Celsius*

*Air humidity in %*

*Absolute air humidity in g/kg and/or g/m<sup>3</sup>*

*Variables in %*

### 3.1. List of all communications objects

#### Abbreviation flags:

*C Communication*

*R Read*

*W Write*

*T Transfer*

*U Update*

| No. | Name   | Function     | DPT     | Flags     |
|-----|--|--------------|---------|-----------|
| 0   | Software version                                     | readable     | 217,001 | C R T     |
| 1   | Temperature/humidity malfunction sensor              | Output       | 1,001   | C R T     |
| 3   | Outside temperature reading                          | Input        | 9,001   | C W       |
| 4   | Inside temperature reading                           | Output       | 9,001   | C R T     |
| 5   | Overall temperature reading                          | Output       | 9,001   | C R T     |
| 6   | Min./max. temperature value request                  | Input        | 1,017   | C W       |
| 7   | Minimum temperature reading                          | Output       | 9,001   | C R T     |
| 8   | Maximum temperature reading                          | Output       | 9,001   | C R T     |
| 9   | Reset min./max. temperature value                    | Input        | 1,017   | C W       |
| 10  | Temp. threshold value 1: Absolute value              | Input/Output | 9,001   | C R W T U |
| 11  | Temp. threshold value 1: (1:+   0:-)                 | Input        | 1,002   | C W       |
| 12  | Temp. threshold value 1: Switching delay from 0 to 1 | Input        | 7,005   | C W       |
| 13  | Temp. threshold value 1: Switching delay from 1 to 0 | Input        | 7,005   | C W       |
| 14  | Temp. threshold value 1: Switching output            | Output       | 1,001   | C R T     |
| 15  | Temp. threshold value 1: Switching output block      | Input        | 1,002   | C W       |
| 16  | Temp. threshold value 2: Absolute value              | Input/Output | 9,001   | C R W T U |
| 17  | Temp. threshold value 2: (1:+   0:-)                 | Input        | 1,002   | C W       |

| No. | Name  | Function     | DPT   | Flags        |
|-----|---|--------------|-------|--------------|
| 18  | Temp. threshold value 2:<br>Switching delay from 0 to 1 | Input        | 7,005 | C W          |
| 19  | Temp. threshold value 2:<br>Switching delay from 1 to 0 | Input        | 7,005 | C W          |
| 20  | Temp. threshold value 2: Switching<br>output            | Output       | 1,001 | C R T        |
| 21  | Temp. threshold value 2:<br>Switching output block      | Input        | 1,002 | C W          |
| 22  | Temp. threshold value 3: Absolute<br>value              | Input/Output | 9,001 | C R W T<br>U |
| 23  | Temp. threshold value 3: (1:+   0:-)                    | Input        | 1,002 | C W          |
| 24  | Temp. threshold value 3:<br>Switching delay from 0 to 1 | Input        | 7,005 | C W          |
| 25  | Temp. threshold value 3:<br>Switching delay from 1 to 0 | Input        | 7,005 | C W          |
| 26  | Temp. threshold value 3: Switching<br>output            | Output       | 1,001 | C R T        |
| 27  | Temp. threshold value 3:<br>Switching output block      | Input        | 1,002 | C W          |
| 28  | Reserve   |              |       |              |
| 29  | TR_1_ Eco-Standby HVAC 1                                | Input        | 1,003 | C W          |
| 30  | TR_1_ Comfort Activation HVAC 2                         | Input        | 1,003 | C W          |
| 31  | TR_1_ Frost/Heat activation                             | Input        | 1,003 | C R W T      |
| 32  | TR_1_ Blocking object                                   | Input        | 1,003 | C W          |
| 33  | TR_1_ Target value, current                             | Output       | 9,001 | C R T        |
| 34  | TR_1_ Switching object (0:Heat  <br>1:Cool)             | Input        | 1,002 | C W          |
| 35  | TR_1_ Target value, comfort heating                     | Input/Output | 9,001 | C R W T      |
| 36  | TR_1_ Target value, comfort heating<br>(1:+   0:-)      | Input        | 1,002 | C W          |
| 37  | TR_1_ Target value, comfort cooling                     | Input/Output | 9,001 | C R W T      |
| 38  | TR_1_ Target value, comfort cooling<br>(1:+   0:-)      | Input        | 1,002 | C W          |
| 39  | TR_1_ Target value_Basic offset                         | Input/Output | 9,001 | C R W T      |
| 40  | TR_1_ Target value, Standby heating                     | Input/Output | 9,001 | C R W T      |
| 41  | TR_1_ Target value, Standby heating<br>(1:+   0:-)      | Input        | 1,002 | C W          |
| 42  | TR_1_ Target value, Standby cooling                     | Input/Output | 9,001 | C R W T      |
| 43  | TR_1_ Target value, Standby cooling<br>(1:+   0:-)      | Input        | 1,002 | C W          |
| 44  | TR_1_ Target value, Eco heating                         | Input/Output | 9,001 | C R W T      |

| No. | Name  | Function     | DPT   | Flags     |
|-----|---|--------------|-------|-----------|
| 45  | TR_1_ Target value, Eco heating (1:+   0:-)             | Input        | 1,002 | C W       |
| 46  | TR_1_ Target value, Eco cooling                         | Input/Output | 9,001 | C R W T   |
| 47  | TR_1_ Target value, Eco cooling (1:+   0:-)             | Input        | 1,002 | C W       |
| 48  | TR_1_ Control variable heating (stage 1)                | Output       | 5,001 | C R T     |
| 49  | TR_1_ Control variable heating stage 2                  | Output       | 5,001 | C R T     |
| 50  | TR_1_ Control variable cooling (stage 1)                | Output       | 5,001 | C R T     |
| 51  | TR_1_ Control variable cooling stage 2                  | Output       | 5,001 | C R T     |
| 52  | TR_1_ Status heating 1 (1=ON   0=OFF)                   | Output       | 1,002 | C R T     |
| 53  | TR_1_ Status heating 2 (1=ON   0=OFF)                   | Output       | 1,002 | C R T     |
| 54  | TR_1_ Cooling status 1 (1=ON   0=OFF)                   | Output       | 1,002 | C R T     |
| 55  | TR_1_ Cooling status 2 (1=ON   0=OFF)                   | Output       | 1,002 | C R T     |
| 56  | TR_1_ Comfort Delay Status                              | Input/Output | 1,002 | C R W T   |
| 57  | TR_1_ Comfort extension time (in sec)                   | Input/Output | 7,005 | C R W T   |
| 58  | TR_1_Belimo_Control variable                            | Output       | 5,001 | C R T     |
|     |   |              |       |           |
| 59  | Outside humidity reading                                | Input        | 9,007 | C W       |
| 60  | Inside humidity reading                                 | Output       | 9,007 | C R T     |
| 61  | Overall humidity reading                                | Output       | 9,007 | C R T     |
| 62  | Min./max. humidity value request                        | Input        | 1,017 | C W       |
| 63  | Minimum humidity reading                                | Output       | 9,007 | C R T     |
| 64  | Maximum humidity reading                                | Output       | 9,007 | C R T     |
| 65  | Reset min./max. humidity value                          | Input        | 1,017 | C W       |
|     |   |              |       |           |
| 66  | Humidity threshold value 1: Absolute value              | Input/Output | 9,007 | C R W T U |
| 67  | Humidity threshold value 1: (1:+   0:-)                 | Input        | 1,002 | C W       |
| 68  | Humidity threshold value 1: Switching delay from 0 to 1 | Input        | 7,005 | C W       |
| 69  | Humidity threshold value 1: Switching delay from 1 to 0 | Input        | 7,005 | C W       |
| 70  | Humidity threshold value 1: Switching output            | Output       | 1,001 | C R T     |

| No. | Name   | Function     | DPT   | Flags     |
|-----|--|--------------|-------|-----------|
| 71  | Humidity threshold value 1: Switching output block               | Input        | 1,002 | C W       |
| 72  | Humidity threshold value 2: Absolute value                       | Input/Output | 9,007 | C R W T U |
| 73  | Humidity threshold value 2: (1:+   0:-)                          | Input        | 1,002 | C W       |
| 74  | Humidity threshold value 2: Switching delay from 0 to 1          | Input        | 7,005 | C W       |
| 75  | Humidity threshold value 2: Switching delay from 1 to 0          | Input        | 7,005 | C W       |
| 76  | Humidity threshold value 2: Switching output                     | Output       | 1,001 | C R T     |
| 77  | Humidity threshold value 2: Switching output block               | Input        | 1,002 | C W       |
|     |  |              |       |           |
| 78  | Humidity controller: Blocking object                             | Input        | 1,002 | C W       |
| 79  | Humidity controller: Target value                                | Input/Output | 9,007 | C R W T   |
| 80  | Humidity controller: Target value (1:+   0:-)                    | Input        | 1,002 | C W       |
| 81  | Humidity controller: Control variable dehumidification (stage 1) | Output       | 5,001 | C R T     |
| 82  | Humidity controller: Control variable dehumidification stage 2   | Output       | 5,001 | C R T     |
| 83  | Humidity controller: Control variable humidification             | Output       | 5,001 | C R T     |
| 84  | Humidity controller: Dehumidification 1 status (1=ON   0=OFF)    | Output       | 1,001 | C R T     |
| 85  | Humidity controller: Dehumidification 2 status (1=ON   0=OFF)    | Output       | 1,001 | C R T     |
| 86  | Humidity controller: Humidification status (1=ON   0=OFF)        | Output       | 1,001 | C R T     |
|     |  |              |       |           |
| 87  | Dewpoint temperature   | Output       | 9,001 | C R T     |
| 88  | Coolant temp.: Threshold value                                   | Output       | 9,001 | C R T     |
| 89  | Coolant temp.: Actual value                                      | Input        | 9,001 | C W       |
| 90  | Coolant temp.: Offset change (1:+   0:-)                         | Input        | 1,002 | C W       |
| 91  | Coolant temp.: Switching delay from 0 to 1                       | Input        | 7,005 | C W       |
| 92  | Coolant temp.: Switching delay from 1 to 0                       | Input        | 7,005 | C W       |
| 93  | Coolant temp.: Switching output                                  | Output       | 1,001 | C R T     |
| 94  | Coolant temp.: Switching output block                            | Input        | 1,002 | C W       |

| No. | Name  | Function | DPT    | Flags |
|-----|---|----------|--------|-------|
| 95  | Absolute humidity [g/kg]                                    | Output   | 14,005 | C R T |
| 96  | Absolute humidity [g/m <sup>3</sup> ]                       | Output   | 14,017 | C R T |
| 97  | Ambient climate status: 1 = comfortable   0 = uncomfortable | Output   | 1,002  | C R T |
|     |   |          |        |       |
| 135 | Comparator 1 actuating variable: Input 1                    | Input    | 5,010  | C W   |
| 136 | Comparator 1 actuating variable: Input 2                    | Input    | 5,010  | C W   |
| 137 | Comparator 1 actuating variable: Input 3                    | Input    | 5,010  | C W   |
| 138 | Comparator 1 actuating variable: Input 4                    | Input    | 5,010  | C W   |
| 139 | Comparator 1 actuating variable: Input 5                    | Input    | 5,010  | C W   |
| 140 | Comparator 1 actuating variable: Output                     | Output   | 1,001  | C R T |
| 141 | Comparator 1 actuating variable: Block                      | Input    | 1,002  | C W   |
| 142 | Comparator 2 actuating variable: Input 1                    | Input    | 5,010  | C W   |
| 143 | Comparator 2 actuating variable: Input 2                    | Input    | 5,010  | C W   |
| 144 | Comparator 2 actuating variable: Input 3                    | Input    | 5,010  | C W   |
| 145 | Comparator 2 actuating variable: Input 4                    | Input    | 5,010  | C W   |
| 146 | Comparator 2 actuating variable: Input 5                    | Input    | 5,010  | C W   |
| 147 | Comparator 2 actuating variable: Output                     | Output   | 1,001  | C R T |
| 148 | Comparator 2 actuating variable: Block                      | Input    | 1,002  | C W   |
|     |   |          |        |       |
| 149 | AND logic 1: 1-bit switching output                         | Output   | 1,002  | C R T |
| 150 | AND logic 1: 8-bit output A                                 | Output   | 5,010  | C R T |
| 151 | AND logic 1: 8-bit output B                                 | Output   | 5,010  | C R T |
| 152 | AND logic 1: Block  | Input    | 1,002  | C W   |
| 153 | AND logic 2: 1-bit switching output                         | Output   | 1,002  | C R T |
| 154 | AND logic 2: 8-bit output A                                 | Output   | 5,010  | C R T |
| 155 | AND logic 2: 8-bit output B                                 | Output   | 5,010  | C R T |
| 156 | AND logic 2: Block  | Input    | 1,002  | C W   |
| 157 | AND logic 3: 1-bit switching output                         | Output   | 1,002  | C R T |



| No. | Name                                | Function | DPT   | Flags |
|-----|-------------------------------------|----------|-------|-------|
| 158 | AND logic 3: 8-bit output A         | Output   | 5,010 | C R T |
| 159 | AND logic 3: 8-bit output B         | Output   | 5,010 | C R T |
| 160 | AND logic 3: Block                  | Input    | 1,002 | C W   |
| 161 | AND logic 4: 1-bit switching output | Output   | 1,002 | C R T |
| 162 | AND logic 4: 8-bit output A         | Output   | 5,010 | C R T |
| 163 | AND logic 4: 8-bit output B         | Output   | 5,010 | C R T |
| 164 | AND logic 4: Block                  | Input    | 1,002 | C W   |
| 165 | AND logic 5: 1-bit switching output | Output   | 1,002 | C R T |
| 166 | AND logic 5: 8-bit output A         | Output   | 5,010 | C R T |
| 167 | AND logic 5: 8-bit output B         | Output   | 5,010 | C R T |
| 168 | AND logic 5: Block                  | Input    | 1,002 | C W   |
| 169 | AND logic 6: 1-bit switching output | Output   | 1,002 | C R T |
| 170 | AND logic 6: 8-bit output A         | Output   | 5,010 | C R T |
| 171 | AND logic 6: 8-bit output B         | Output   | 5,010 | C R T |
| 172 | AND logic 6: Block                  | Input    | 1,002 | C W   |
| 173 | AND logic 7: 1-bit switching output | Output   | 1,002 | C R T |
| 174 | AND logic 7: 8-bit output A         | Output   | 5,010 | C R T |
| 175 | AND logic 7: 8-bit output B         | Output   | 5,010 | C R T |
| 176 | AND logic 7: Block                  | Input    | 1,002 | C W   |
| 177 | AND logic 8: 1-bit switching output | Output   | 1,002 | C R T |
| 178 | AND logic 8: 8-bit output A         | Output   | 5,010 | C R T |
| 179 | AND logic 8: 8-bit output B         | Output   | 5,010 | C R T |
| 180 | AND logic 8: Block                  | Input    | 1,002 | C W   |
| 181 | OR logic 1: 1-bit switching output  | Output   | 1,002 | C R T |
| 182 | OR logic 1: 8-bit output A          | Output   | 5,010 | C R T |
| 183 | OR logic 1: 8-bit output B          | Output   | 5,010 | C R T |
| 184 | OR logic 1: Block                   | Input    | 1,002 | C W   |
| 185 | OR logic 2: 1-bit switching output  | Output   | 1,002 | C R T |
| 186 | OR logic 2: 8-bit output A          | Output   | 5,010 | C R T |
| 187 | OR logic 2: 8-bit output B          | Output   | 5,010 | C R T |
| 188 | OR logic 2: Block                   | Input    | 1,002 | C W   |
| 189 | OR logic 3: 1-bit switching output  | Output   | 1,002 | C R T |
| 190 | OR logic 3: 8-bit output A          | Output   | 5,010 | C R T |
| 191 | OR logic 3: 8-bit output B          | Output   | 5,010 | C R T |
| 192 | OR logic 3: Block                   | Input    | 1,002 | C W   |
| 193 | OR logic 4: 1-bit switching output  | Output   | 1,002 | C R T |
| 194 | OR logic 4: 8-bit output A          | Output   | 5,010 | C R T |
| 195 | OR logic 4: 8-bit output B          | Output   | 5,010 | C R T |
| 196 | OR logic 4: Block                   | Input    | 1,002 | C W   |
| 197 | OR logic 5: 1-bit switching output  | Output   | 1,002 | C R T |

| No. | Name                               | Function | DPT   | Flags |
|-----|------------------------------------|----------|-------|-------|
| 198 | OR logic 5: 8-bit output A         | Output   | 5,010 | C R T |
| 199 | OR logic 5: 8-bit output B         | Output   | 5,010 | C R T |
| 200 | OR logic 5: Block                  | Input    | 1,002 | C W   |
| 201 | OR logic 6: 1-bit switching output | Output   | 1,002 | C R T |
| 202 | OR logic 6: 8-bit output A         | Output   | 5,010 | C R T |
| 203 | OR logic 6: 8-bit output B         | Output   | 5,010 | C R T |
| 204 | OR logic 6: Block                  | Input    | 1,002 | C W   |
| 205 | OR logic 7: 1-bit switching output | Output   | 1,002 | C R T |
| 206 | OR logic 7: 8-bit output A         | Output   | 5,010 | C R T |
| 207 | OR logic 7: 8-bit output B         | Output   | 5,010 | C R T |
| 208 | OR logic 7: Block                  | Input    | 1,002 | C W   |
| 209 | OR logic 8: 1-bit switching output | Output   | 1,002 | C R T |
| 210 | OR logic 8: 8-bit output A         | Output   | 5,010 | C R T |
| 211 | OR logic 8: 8-bit output B         | Output   | 5,010 | C R T |
| 212 | OR logic 8: Block                  | Input    | 1,002 | C W   |
|     |                                    |          |       |       |
| 213 | Logic input 1                      | Input    | 1,002 | C W   |
| 214 | Logic input 2                      | Input    | 1,002 | C W   |
| 215 | Logic input 3                      | Input    | 1,002 | C W   |
| 216 | Logic input 4                      | Input    | 1,002 | C W   |
| 217 | Logic input 5                      | Input    | 1,002 | C W   |
| 218 | Logic input 6                      | Input    | 1,002 | C W   |
| 219 | Logic input 7                      | Input    | 1,002 | C W   |
| 220 | Logic input 8                      | Input    | 1,002 | C W   |
| 221 | Logic input 9                      | Input    | 1,002 | C W   |
| 222 | Logic input 10                     | Input    | 1,002 | C W   |
| 223 | Logic input 11                     | Input    | 1,002 | C W   |
| 224 | Logic input 12                     | Input    | 1,002 | C W   |
| 225 | Logic input 13                     | Input    | 1,002 | C W   |
| 226 | Logic input 14                     | Input    | 1,002 | C W   |
| 227 | Logic input 15                     | Input    | 1,002 | C W   |
| 228 | Logic input 16                     | Input    | 1,002 | C W   |

## 4. Parameter setting

### 4.1. Behaviour on power failure/ restoration of power

#### **Behaviour following a failure of the bus power supply:**

The device sends nothing.

#### **Behaviour on bus restoration of power and following programming or reset:**

The device sends all outputs according to their send behaviour set in the parameters with the delays established in the "General settings" parameter block. The "Software version" communications object is sent once after 5 seconds.

### 4.2. General settings

Set the basic data transfer characteristics and select whether or not malfunction objects should be sent.

| Send delay after power-up and programming for: |  |
|--|--|
| Measured values                                | 5 s • ... • 2 h  |
| Threshold values and switching outputs         | 5 s • ... • 2 h  |
| Controller objects                             | 5 s • 10 s • ... • 2 h   |
| Logic outputs                                  | 5 s • 10 s • ... • 2 h   |
| Maximum telegram quota                         | <ul style="list-style-type: none"> <li>• 1 message per second</li> <li>• ...</li> <li>• <u>5 messages per second</u></li> <li>• ...</li> <li>• 20 messages per second</li> </ul> |
| Use temp./humidity malfunction object          | Yes • <u>No</u>  |
| Use CO2 malfunction object                     | Yes • <u>No</u>  |

### 4.3. Measured values: Temperature, humidity

The setting options for temperature and humidity readings are the same.

Use **Offsets** to adjust the readings to be sent.

|                                     |                    |
|-------------------------------------|--------------------|
| <i>Temperature:</i> Offset in 0.1°C | -50...50; <u>0</u> |
| <i>Humidity:</i> Offset in % rH     | -10...10; <u>0</u> |

The unit can calculate a **mixed value** from its own reading and an external value. Set the mixed value calculation if desired.

|  |  |
|--|--|
| Use external reading                         | Yes • <u>No</u>                          |
| Ext. Reading proportion of the total reading | 5% • 10% • ... • <u>50%</u> • ... • 100% |

|                                       |  |
|---------------------------------------|--|
| Send internal and total reading       | <ul style="list-style-type: none"> <li>• <u>never</u></li> <li>• <u>periodically</u></li> <li>• On change</li> <li>• on change and periodically</li> </ul> |
| From change of<br>(if sent on change) | <i>Temperature:</i> 0.1°C • <u>0.2°C</u> • ... • 5.0°C<br><i>Humidity:</i> 0.10% • ... • <u>1.00%</u> • ... • 25.00%                                       |
| Send cycle<br>(if sent periodically)  | <u>5 s</u> • ... • 2 h   |

**Note:** if an external portion is used, all of the following settings (threshold values, etc.) are related to the overall reading!

The **minimum and maximum readings** can be saved and sent to the bus. Use the "Reset temperature (and/or humidity) min/max. value" objects to reset the values to the current readings.

|                           |                 |
|---------------------------|-----------------|
| Use minimum/maximum value | Yes • <u>No</u> |
|---------------------------|-----------------|

**Note:** The values are not retained after a reset.

## 4.4. Threshold values: Temperature, humidity

Activate the threshold values that you want to use here. The **Sensor KNX TH-UP basic** provides three threshold values for temperature and two threshold values for air humidity.

|                           |                 |
|---------------------------|-----------------|
| Use threshold value 1/2/3 | Yes • <u>No</u> |
|---------------------------|-----------------|

### 4.4.1. Threshold value 1, 2, 3: Temperature, humidity

The settings options for temperature and humidity threshold values are the same.

#### Threshold value

Set the threshold values directly in the application program using parameters, or define them via the bus using a communications object.

#### **Threshold value setpoint using parameter:**

Set the threshold values and hysteresis directly.

|  |  |
|--|--|
| Threshold value setpoint using               | <b>Parameter</b> • Communications object |
| <i>Temperature:</i> Threshold value in 0.1°C | -300 ... 800; <u>200</u>                 |
| <i>Humidity:</i> Threshold value in % rH     | 0...100; <u>70</u>                       |
| Hysteresis of the threshold value in %       | 0 ... 50; <u>20</u>                      |

#### **Threshold value setpoint using a communications object:**

Beforehand, enter how the threshold value will be received from the bus. Basically, a new value can be received, or simply a command to increase or decrease.

During initial commissioning, a threshold value must be defined which will be valid until the 1st communication of a new threshold value. For units which have already been taken into service, the last communicated threshold value can be used. Basically, a temperature range is given in which the threshold value can be changed (object value limit).

A set threshold value will be retained until a new value or a change is transferred. The current value is saved in EEPROM, so that this is retained in the event of a power supply failure and will be available once the power supply is restored.

|   |  |
|---|--|
| Threshold value setpoint using  | Parameter • <b>Communications object</b>   |
| The last communicated value should be retained  | <ul style="list-style-type: none"> <li>• <u>never</u></li> <li>• after restoration of power</li> <li>• after restoration of power and programming</li> </ul> |
| Start threshold value<br><i>Temperature: in 0.1°C</i><br><i>Humidity: in % rH</i><br>valid till 1st communication | -300 ... 800; <u>200</u><br>0...100; <u>70</u>   |
| Object value limit (min)<br><i>Temperature: in 0.1°C</i><br><i>Humidity: in % rH</i>                              | <u>-300</u> ...800<br><u>0</u> ...100  |
| Object value limit (max)<br><i>Temperature: in 0.1°C</i><br><i>Humidity: in % rH</i>                              | -300... <u>800</u><br>0... <u>100</u>  |
| Type of threshold change  | <u>Absolute value</u> • Increase/decrease  |
| Step size<br>(upon increase/decrease change)  | <i>Temperature: 0.1°C • ... • <u>1°C</u> • ... • 5°C</i><br><i>Humidity: 1.00% • <u>2.00%</u> • 5.00% • 10.00%</i>   |
| Hysteresis of the threshold value in %  | 0 ... 50; <u>20</u>  |

## Switching output

Set the behaviour of the switching output when a threshold value is exceeded/undercut. The output switching delay can be set using objects or directly as a parameter.

|  |  |
|--|--|
| When the following conditions apply, the output is<br>(LV = Threshold value) | <ul style="list-style-type: none"> <li>• LV above = 1   LV - hysteresis below = 0</li> <li>• LV above = 0   LV - hysteresis below = 1</li> <li>• <u>LV below = 1</u>   LV + hysteresis above = <u>0</u></li> <li>• LV below = 0   LV + hysteresis above = 1</li> </ul> |
| Delays can be set via objects<br>(in seconds)                                | <u>No</u> • Yes  |
| Switching delay from 0 to 1<br>(when delay is not set using objects)         | <u>None</u> • 1 s • 2 s • 5 s • 10 s • ... • 2 h   |
| Switching delay from 1 to 0<br>(when delay is not set using objects)         | <u>None</u> • 1 s • 2 s • 5 s • 10 s • ... • 2 h   |

|  |  |
|--|--|
| Switching output sends                                     | <ul style="list-style-type: none"> <li>• <u>on change</u></li> <li>• on change to 1</li> <li>• on change to 0</li> <li>• on change and periodically</li> <li>• on change to 1 and periodically</li> <li>• on change to 0 and periodically</li> </ul> |
| Send cycle<br>(is only sent if "periodically" is selected) | <u>5 s</u> • 10 s • 30 s... • 2 h  |

## Block

The switching output can be blocked using an object. Define specifications here for the behaviour of the output when blocked.

|  |  |
|--|--|
| Use switching output block                     | <u>No</u> • Yes  |
| Analysis of the blocking object                | <ul style="list-style-type: none"> <li>• At value 1: block   At value 0: release</li> <li>• At value 0: block   At value 1: release</li> </ul> |
| Blocking object value before 1st communication | <u>0</u> • 1   |
| Behaviour of the switching output              |  |
| With blocking                                  | <ul style="list-style-type: none"> <li>• <u>Do not send message</u></li> <li>• send 0</li> <li>• send 1</li> </ul>                             |
| On release<br>(with 2 seconds release delay)   | [Dependent on the "Switching output sends" setting]  |

The behaviour of the switching output on release is dependent on the value of the parameter "Switching output sends" (see "Switching output")

|  |   |
|--|---|
| Switching output sends on change                       | <ul style="list-style-type: none"> <li>• Do not send message</li> <li>• Send switching output status</li> </ul>     |
| Switching output sends on change to 1                  | <ul style="list-style-type: none"> <li>• Do not send message</li> <li>• If switching output = 1 → send 1</li> </ul> |
| Switching output sends on change to 0                  | <ul style="list-style-type: none"> <li>• Do not send message</li> <li>• If switching output = 0 → send 0</li> </ul> |
| Switching output sends on change and periodically      | Send switching output status  |
| Switching output sends on change to 1 and periodically | If switching output = 1 → send 1  |
| Switching output sends on change to 0 and periodically | If switching output = 0 → send 0  |

## 4.5. Temperature PI control

For an adequate regulation of the indoor temperature, comfort, standby, eco and building protection modes may be used.

**Comfort** when present,

**Standby** during short absences,

**Eco** as a night-time mode and

**Frost/heat protection** (building protection) during longer absences.

The settings for the temperature control include the set point temperatures for the individual modes. Objects are used to determine which mode is to be selected. A change of mode may be triggered manually or automatically (e.g. by a timer, window contact).

The **mode** may be switched with two 8 bit objects of different priority. Objects "... HVAC mode (Prio 2)" for switching in everyday operation and "... HVAC mode (Prio 1)" for central switching with higher priority.

The objects are coded as follows:

| ID     | Name         | Encoding  | Range     | Use  |
|--------|--------------|---|-----------|------|
| 20,102 | DPT_HVACMode | field1 = HVACMode<br>0 = Auto<br>1 = Comfort<br>2 = Standby<br>3 = Economy<br>4 = Building Protection | [0 ... 4] | HVAC |

Alternatively, you can use three objects, with one object switching between eco and standby mode and the two others are used to activate comfort mode or frost/heat protection mode. The comfort object then blocks the eco/standby object, and frost/heat protection objects have the highest priority. Objects

"... Mode (1: Eco, 0: Standby)",

"... comfort activation mode" and

"... frost/heat protection activation mode"

|                 |   |
|-----------------|---|
| Switch mode via | <ul style="list-style-type: none"> <li>• two 8-bit objects (HVAC modes)</li> <li>• three 1-bit objects</li> </ul> |
|-----------------|---|

Select the mode to be activated after reset (e.g. power failure, reset of the line via the bus). (Default).

Then configure a block of the temperature control by the blocking object.

|  |   |
|--|---|
| Mode after reset                               | <ul style="list-style-type: none"> <li>• Comfort</li> <li>• Standby</li> <li>• Eco</li> <li>• <u>Building protection</u></li> </ul> |
| Behaviour of the blocking object at value      | <ul style="list-style-type: none"> <li>• <u>1 = block   0 = release</u></li> <li>• 0 = block   1 = release</li> </ul>               |
| Blocking object value before 1st communication | 0 • <u>1</u>  |

Determine when the current settings of the controls are to be transmitted to the bus. Periodic transmission is safer if a message does not reach a recipient. You may also set up periodical monitoring by the actuator with this setting.

|  |  |
|--|--|
| Send actuating variables                         | <ul style="list-style-type: none"> <li>• <u>on change</u></li> <li>• on change and periodically</li> </ul> |
| cycle<br><i>for periodical transmission only</i> | 5 s • ... • <u>5 min</u> • ... • 2 h   |

The status object shows the current status of the output variable (0 = OFF, >0 = ON) and may, for example, be used for visualisations or to switch off the heating pump as soon as the heating is off.

|  |  |
|--|--|
| Send status objects                              | <ul style="list-style-type: none"> <li>• <u>on change</u></li> <li>• on change to 1</li> <li>• on change to 0</li> <li>• on change and periodically</li> <li>• on change to 1 and periodically</li> <li>• on change to 0 and periodically</li> </ul> |
| cycle<br><i>for periodical transmission only</i> | 5 s • ... • <u>5 min</u> • ... • 2 h   |

Then define the type of setting. Heating and/or cooling may be controlled in two levels.

|                 |   |
|-----------------|---|
| Type of control | <ul style="list-style-type: none"> <li>• <u>One-stage heating</u></li> <li>• Dual-speed heating</li> <li>• Single-speed cooling</li> <li>• Dual-stage cooling</li> <li>• Single-speed heating + Single-speed cooling</li> <li>• Dual-speed heating + Single-speed cooling</li> <li>• Dual-speed heating + Dual-speed cooling</li> </ul> |
|-----------------|---|

#### 4.5.1. General set point values

You may enter separate set point values for each mode or use the comfort set point as a basic value.

If you are using the controls for both heating *and* cooling, you may also select the setting "separately with switching object". Systems used for cooling in the summer and for heating in the winter can thus be switched from one to the other.

If you are using the basic value, only the deviation from the comfort set point value is listed for the other modes (e. g., 2°C less for standby mode).

|   |   |
|---|---|
| Setting the nominal values  | <ul style="list-style-type: none"> <li>• <u>separate</u> with switching object</li> <li>• separate without switching object</li> <li>• with comfort set point as a basis</li> </ul> |
| Behaviour of the switching object at value<br><i>only if switching object is used</i>         | <ul style="list-style-type: none"> <li>• <u>0 = Heating   1 = Cooling</u></li> <li>• 1 = Heating   0 = Cooling</li> </ul>   |
| Switching object value<br>before 1st communication<br><i>only if switching object is used</i> | <u>0</u> • 1  |

The grades for the set point changes is predefined. Modifications may only remain active temporarily (do not save) or remain saved even after voltage recovery (and programming). This also applies to a comfort extension.

|  |                    |
|--|--------------------|
| Grading for set point changes<br>(in 0.1 °C) | 1... 50; <u>10</u> |
|--|--------------------|



|  |   |
|--|---|
| Saving set point value(s) and comfort extension time | <ul style="list-style-type: none"> <li>• not</li> <li>• <u>after voltage recovery</u></li> <li>• after voltage recovery and programming (do not use for first start-up!)</li> </ul> |
|--|---|

The control may be manually reset to comfort mode from eco, or night mode. This allows the user to maintain the daily nominal value for a longer time, e.g. when having guests. The duration of this comfort extension period is set. After the comfort extension period is terminated, the system returns to eco mode.

|  |                        |
|--|------------------------|
| Comfort extension time in seconds<br>(can only be activated from eco mode) | 1...36000; <u>3600</u> |
|--|------------------------|

## Set point Comfort

Comfort mode is usually used for daytime mode when people are present. A starting value is defined for the comfort set point as well as a temperature range in which the nominal value may be modified.

|   |                        |
|---|------------------------|
| Initial heating/cooling set point (in 0.1 °C)<br>valid till 1st communication<br><i>not upon saving the set point value after programming</i> | -300...800; <u>210</u> |
| Min. object value heating/cooling (in 0.1 °C)   | -300...800; <u>160</u> |
| Max. object value heating/cooling (in 0.1 °C)   | -300...800; <u>280</u> |

If the comfort set point is used as the basis, a dead zone is determined for the control mode "heating *and* cooling" to avoid direct switching from heating to cooling.

|  |                    |
|--|--------------------|
| Dead zone between heating and cooling<br><i>only if both heating AND cooling are used.</i> | 1...100; <u>50</u> |
|--|--------------------|

## Set point for standby

Standby mode is usually used for daytime mode when people are absent.

### ***If set point values are entered separately:***

A starting set point value is defined as well as a temperature range in which the nominal value may be modified.

|   |                        |
|---|------------------------|
| Initial heating/cooling set point (in 0.1 °C)<br>valid till 1st communication | -300...800; <u>210</u> |
| Min. object value heating/cooling (in 0.1 °C)                                 | -300...800; <u>160</u> |
| Max. object value heating/cooling (in 0.1 °C)                                 | -300...800; <u>280</u> |

**If the comfort set point value is used as a basis:**

If the comfort set point value is used as a basis, the deviation from this value is set.

|   |                    |
|---|--------------------|
| Reduce nominal heating value (in 0.1°C)<br><i>for heating</i>       | 0...200; <u>30</u> |
| Increase nominal cooling value\r\n (in 0.1°C)<br><i>for cooling</i> | 0...200; <u>30</u> |

**Eco set point**

Eco mode is usually used for night mode.

**If set point values are entered separately:**

A starting set point value is defined as well as a temperature range in which the nominal value may be modified.

|   |                        |
|---|------------------------|
| Initial heating/cooling set point (in 0.1 °C)<br>valid till 1st communication | -300...800; <u>210</u> |
| Min. object value heating/cooling (in 0.1 °C)                                 | -300...800; <u>160</u> |
| Max. object value heating/cooling (in 0.1 °C)                                 | -300...800; <u>280</u> |

**If the comfort set point value is used as a basis:**

If the comfort set point value is used as a basis, the deviation from this value is set.

|   |                    |
|---|--------------------|
| Reduce nominal heating value (in 0.1°C)<br><i>for heating</i>       | 0...200; <u>50</u> |
| Increase nominal cooling value\r\n (in 0.1°C)<br><i>for cooling</i> | 0...200; <u>60</u> |

**Set point values for frost/heat protection (building protection)**

The building protection mode is used during longer absences. Set points for frost protection (heating) and heat protection (cooling) are determined which may not be modified from outside (no access via operating devices etc.). The building protection mode may be activated with delay, which allows you to leave the building before the controls switch to frost/heat protection mode.

|   |   |
|---|---|
| Nominal value frost protection\r\n (in 0,1°C) | -300...800; <u>70</u>                     |
| Nominal value heat protection (in 0,1°C)      | -300...800; <u>350</u>                    |
| Activation delay                              | no • 5 s • ... • <u>5 min</u> • ... • 2 h |

**General variables**

This setting appears for the control types "Heating *and* Cooling" only. This is where you can decide whether to use a common variable for heating and cooling. If the 2nd level has a common variable, this is also where you determine the control mode of the 2nd level.

|   |   |
|---|---|
| For heating and cooling   | <ul style="list-style-type: none"> <li>• <u>separate variables are used</u></li> <li>• common variables are used for Level 1</li> <li>• common variables are used for Level 2</li> <li>• common variables are used for Level 1+2</li> </ul> |
| Control type<br><i>only for level 2</i>                               | <ul style="list-style-type: none"> <li>• 2-point control</li> <li>• PI control</li> </ul>   |
| Regulating variable of the 2nd Stage is on<br><i>only for level 2</i> | <ul style="list-style-type: none"> <li>• <u>1-bit object</u></li> <li>• 8-bit object</li> </ul>   |

### 4.5.2. Heating control level 1/2

If a heating control mode is configured, one or two setting sections for the heating levels are displayed.

On the 1st level, heating is controlled by a PI control which allows to either enter control parameters or select predetermined applications.

On the 2nd level (therefore only in case of a 2 level heating), heating is controlled via a PI or a 2-point-control.

On level 2, the set point deviation between the two levels must furthermore be determined, i. e. the lowest set point value from which the 2nd level is then added (when values exceed this set point).

|  |   |
|--|---|
| Set point difference between levels 1 and 2<br>(in 0.1°C)<br><i>only for level 2</i> | 0...100; <u>40</u>  |
| Control type<br><i>only for level 2 and if no common variables are used</i>          | <ul style="list-style-type: none"> <li>• 2-point control</li> <li>• PI control</li> </ul> |

#### **PI control with control parameters:**

This setting allows individual input of the parameters for PI control.

|                   |  |
|-------------------|--|
| Control type      | <ul style="list-style-type: none"> <li>• <b>PI control</b></li> </ul>  |
| Set control using | <ul style="list-style-type: none"> <li>• <b>Controller parameter</b></li> <li>• provided applications</li> </ul> |

Determine the deviation from the set point value which reaches maximum variable value, i. e. the point at which maximum heating power is activated.

The reset time shows how quickly the controls react to deviations from the set point value. In case of a short reset time, the controls react with a fast increase of the varia-

ble. In case of a long reset time, the controls react somewhat more gently and needs longer until the necessary variable for the set point deviation is reached.

You should set the time appropriate to the heating system at this point (note manufacturer instructions).

|   |                    |
|---|--------------------|
| Maximum control variable is reached at set point/actual difference of (in °C) | 0... <u>5</u>      |
| Reset time (in min.)  | 1...255; <u>30</u> |

Now determine what should be transmitted when the control is blocked. Set a value greater 0 (=OFF) to receive a basic heating level, e.g. for floor heating.

Upon release, the control variable follows the rule again.

|   |  |
|---|--|
| When blocked, the variable shall                      | <ul style="list-style-type: none"> <li>• <u>not be transmitted</u></li> <li>• send a specific value</li> </ul> |
| Value (in %)<br><i>only if a value is transmitted</i> | <u>0</u> ...100  |

In case of a common variable for heating and cooling, 0 is always transmitted as a fixed value.

### ***PI control with predetermined application:***

This setting provides fixed parameters for frequent applications.

|   |  |
|---|--|
| Control type  | • <b>PI control</b>  |
| Set control using   | • Controller parameter<br>• <b>provided applications</b>   |
| Application   | <ul style="list-style-type: none"> <li>• Warm water heating</li> <li>• Floor heating</li> <li>• Convection unit</li> <li>• Electric heating</li> </ul> |
| Maximum control variable is reached at set point/actual difference of (in °C) | Warm water heating: 5<br>Floor heating: 5<br>Convection unit: 4<br>Electric heating: 4   |
| Reset time (in min.)  | Warm water heating: 150<br>Floor heating: 240<br>Convection unit: 90<br>Electric heating: 100  |

Now determine what should be transmitted when the control is blocked. Set a value greater 0 (=OFF) to receive a basic heating level, e.g. for floor heating.

Upon release, the control variable follows the rule again.

|   |   |
|---|---|
| When blocked, the variable shall                      | <ul style="list-style-type: none"> <li>• not be transmitted</li> <li>• send a specific value</li> </ul> |
| Value (in %)<br><i>only if a value is transmitted</i> | <u>0</u> ...100   |

In case of a common variable for heating and cooling, 0 is always transmitted as a fixed value.

**2-point-rule (only level 2):**

The 2-point-rule is used for systems which are only set to ON or OFF.

|   |                          |
|---|--------------------------|
| Control type<br><i>is determined at a higher level for common variables</i> | • <b>2-point control</b> |
|---|--------------------------|

Enter the hysteresis that prevents frequent on/off switching of temperatures in the threshold range. Then determine whether a 1 bit object (on/off) or an 8 bit object (on with percentage/off) should be used.

|   |  |
|---|--|
| Hysteresis (in 0.1°C)                         | 0...100; <u>20</u>                             |
| Actuating variable is a                       | • <u>1-bit object</u><br>• <u>8-bit object</u> |
| Value (in %)<br><i>only for 8 bit objects</i> | 0... <u>100</u>                                |

Now determine what should be transmitted when the control is blocked. Set a value greater 0 (=OFF) to receive a basic heating level, e.g. for floor heating.

Upon release, the control variable follows the rule again.

|   |   |
|---|---|
| When blocked, the variable shall                      | • not be transmitted<br>• send a specific value |
| Value (in %)<br><i>only if a value is transmitted</i> | <u>0</u> ...100                                 |

**4.5.3. Cooling control level 1/2**

If a cooling control mode is configured, one or two setting sections for the cooling levels are displayed.

On the 1st level, cooling is controlled by a PI control which allows to either enter control parameters or select predetermined applications.

On the 2nd level (therefore only in case of a 2 level cooling), cooling is controlled via a PI or a 2-point-control.

On level 2, the set point deviation between the two levels must furthermore be determined, i. e. the highest set point value from which the 2nd level is then added (when values exceed this set point).

|  |                                   |
|--|-----------------------------------|
| Set point difference between levels 1 and 2<br>(in 0.1°C)<br><i>only for level 2</i> | 0...100; <u>40</u>                |
| Control type<br><i>only for level 2 and if no common variables are used</i>          | • 2-point control<br>• PI control |

**PI control with control parameters:**

This setting allows individual input of the parameters for PI control.

|              |                     |
|--------------|---------------------|
| Control type | • <b>PI control</b> |
|--------------|---------------------|

|                   |  |
|-------------------|--|
| Set control using | <ul style="list-style-type: none"> <li>• <b>Controller parameter</b></li> <li>• provided applications</li> </ul> |
|-------------------|--|

Determine the deviation from the set point value which reaches maximum variable value, i. e. the point at which maximum cooling power is activated.

The reset time shows how quickly the controls react to deviations from the set point value. In case of a short reset time, the controls react with a fast increase of the variable. In case of a long reset time, the controls react somewhat more gently and needs longer until the necessary variable for the set point deviation is reached.

You should set the time appropriate to the cooling system at this point (note manufacturer instructions).

|   |                    |
|---|--------------------|
| Maximum control variable is reached at set point/actual difference of (in °C) | 0... <u>5</u>      |
| Reset time (in min.)  | 1...255; <u>30</u> |

Now determine what should be transmitted when the control is blocked. Upon release, the control variable follows the rule again.

|   |  |
|---|--|
| When blocked, the variable shall                      | <ul style="list-style-type: none"> <li>• <u>not be transmitted</u></li> <li>• send a specific value</li> </ul> |
| Value (in %)<br><i>only if a value is transmitted</i> | <u>0</u> ...100  |

In case of a common variable for heating and cooling, 0 is always transmitted as a fixed value.

### **PI control with predetermined application:**

This setting provides fixed parameters for a cooling ceiling

|   |  |
|---|--|
| Control type  | <ul style="list-style-type: none"> <li>• <b>PI control</b></li> </ul>  |
| Set control using   | <ul style="list-style-type: none"> <li>• Controller parameter</li> <li>• <b>provided applications</b></li> </ul> |
| Application   | <ul style="list-style-type: none"> <li>• Cooling ceiling</li> </ul>  |
| Maximum control variable is reached at set point/actual difference of (in °C) | Cooling ceiling: 5   |
| Reset time (in min.)  | Cooling ceiling: 30  |

Now determine what should be transmitted when the control is blocked. Upon release, the control variable follows the rule again.

|   |   |
|---|---|
| When blocked, the variable shall                      | <ul style="list-style-type: none"> <li>• not be transmitted</li> <li>• send a specific value</li> </ul> |
| Value (in %)<br><i>only if a value is transmitted</i> | <u>0</u> ...100   |

### **2-point-rule (only level 2):**

The 2-point-rule is used for systems which are only set to ON or OFF.

|   |                          |
|---|--------------------------|
| Control type<br><i>is determined at a higher level for common variables</i> | • <b>2-point control</b> |
|---|--------------------------|

Enter the hysteresis that prevents frequent on/off switching of temperatures in the threshold range. Then determine whether a 1 bit object (on/off) or an 8 bit object (on with percentage/off) should be used.

|   |   |
|---|---|
| Hysteresis (in 0.1°C)                         | 0...100; <u>20</u>                      |
| Actuating variable is a                       | • <u>1-bit object</u><br>• 8-bit object |
| Value (in %)<br><i>only for 8 bit objects</i> | 0... <u>100</u>                         |

Now determine what should be transmitted when the control is blocked. Upon release, the control variable follows the rule again.

|   |   |
|---|---|
| When blocked, the variable shall                      | • not be transmitted<br>• send a specific value |
| Value (in %)<br><i>only if a value is transmitted</i> | <u>0</u> ...100                                 |

In case of a common variable for heating and cooling, 0 is always transmitted as a fixed value.

## 4.6. Humidity PI control

If you activate humidity control, you can use the following settings to define control type, target values, and humidification and dehumidification.

|                      |                        |
|----------------------|------------------------|
| Use Humidity control | <b>Yes</b> • <u>No</u> |
|----------------------|------------------------|

### General control

**Sensor KNX TH-UP basic** can be used to control one- or two-stage dehumidification or combined humidification/dehumidification.

|                 |  |
|-----------------|--|
| Type of control | • <u>One-stage dehumidification</u><br>• Two-stage dehumidification<br>• Humidification and dehumidification |
|-----------------|--|

Configure a block for the humidity control using the blocking object.

|   |  |
|---|--|
| Behaviour of the blocking object with value       | • <u>1 = Block</u>   0 = release<br>• 0 = block   <u>1 = release</u> |
| Blocking object value<br>before 1st communication | 0 • <u>1</u>   |

Determine when the current control settings are to be sent to the bus. Periodic transmission is safer if a message does not reach a recipient. You may also set up periodic monitoring using an actuator with this setting.

|  |  |
|--|--|
| Actuating variable comparator                              | <ul style="list-style-type: none"> <li>• <u>on change</u></li> <li>• on change and periodically</li> </ul> |
| Send cycle<br>(is only sent if "periodically" is selected) | 5 s • ... • <u>5 min</u> • ... • 2 h   |

The status object shows the current status of the output variable (0 = OFF, >0 = ON) and can for example be used for visualisation.

|  |  |
|--|--|
| Send status object(s)                                      | <ul style="list-style-type: none"> <li>• <u>on change</u></li> <li>• on change to 1</li> <li>• on change to 0</li> <li>• on change and periodically</li> <li>• on change to 1 and periodically</li> <li>• on change to 0 and periodically</li> </ul> |
| Send cycle<br>(is only sent if "periodically" is selected) | 5 s • ... • <u>5 min</u> • ... • 2 h   |

## Controller target value

The target values can be set directly in the application program using parameters, or be defined via the bus using a communications object.

### **Target value setting using parameter:**

Set the target value directly.

|                             |  |
|-----------------------------|--|
| Target value setpoint using | <b>Parameter</b> • Communications object |
| Target value in %           | 0 ... 100; <u>70</u>                     |

In "Humidification and dehumidification" control mode, a dead zone is specified so that no direct changeover switching between humidification and dehumidification is possible.

|   |                   |
|---|-------------------|
| Dead zone between humidification and dehumidification in %<br>(only if both humidification and dehumidification are used) | 0...50; <u>15</u> |
|---|-------------------|

Humidification starts when the relative air humidity is lower or equal to the target value - dead zone value.

### **Setting a target value via communications object:**

Enter how the target value will be received from the bus in advance. Basically, a new value can be received, or simply a command to increase or decrease.

During initial commissioning, a target value must be provided which will be valid until the 1st communication of a new target value. For units which have already been taken into service, the last communicated target value can be used. Basically, an air humidity range is given in which the target value can be changed (object value limit).



A set target value will be retained until a new value or a change is transferred. The current value is saved in EEPROM, so that this is retained in the event of a power supply failure and will be available once the power supply is restored.

|  |  |
|--|--|
| Threshold value setpoint using   | Parameter • <b>Communications object</b>   |
| The last communicated value should be retained   | <ul style="list-style-type: none"> <li>• <u>never</u></li> <li>• after restoration of power</li> <li>• after restoration of power and Programming</li> </ul> |
| Start target value in %<br>valid till 1st communication<br><i>(not upon saving the target value after programming)</i> | 0 ... 100; <u>50</u>   |
| Object value limit (min) in 0.1°C  | 0...100; <u>40</u>   |
| Object value limit (max) in 0.1°C  | 0...100; <u>60</u>   |
| Type of threshold change   | <u>Absolute value</u> • Increase/decrease  |
| Step size<br><i>(upon increase/decrease change)</i>  | 1.00% • 2.00% • <u>5.00%</u> • 10.00%  |

## Dehumidification and/or humidification

Depending on the control mode, settings sections for humidification and dehumidification will appear (stage 1/2).

For two-stage dehumidification, the target value difference between the two stages must be defined, i.e. at which target value undercut the 2nd stage is then switched to.

|  |                   |
|--|-------------------|
| Target value difference between stages 1 and 2 in %<br><i>(for stage 2 only)</i> | 0...50; <u>15</u> |
|--|-------------------|

Determine the deviation from the target value at which the maximum variable value is reached, i.e. the point at which maximum output is used.

The reset time shows how quickly the control responds to deviations from the target value. In case of a short reset time, the control responds with a fast increase of the variable. In case of a long reset time, the control responds somewhat less urgently and needs longer until the necessary variable for the target value deviation is reached.

You should set the time appropriate for the humidification/dehumidification system at this point (note manufacturer instructions).

|  |                    |
|--|--------------------|
| Maximum control variable is reached at target/actual difference of % | 1...50             |
| Reset time in minutes  | 1...255; <u>30</u> |

Now determine what should be sent when the control is blocked.

On release, the control variable follows the rule again.

|                                  |   |
|----------------------------------|---|
| When blocked, the variable shall | <ul style="list-style-type: none"> <li>• <u>not be sent</u></li> <li>• send a specific value</li> </ul> |
|----------------------------------|---|

|  |                 |
|--|-----------------|
| Value<br>(if a value is sent for one 1-bit object)       | <u>0</u> • 1    |
| Value (in %)<br>(if a value is sent for an 8-bit object) | <u>0</u> ...100 |

## 4.7. Dewpoint temperature

The **Sensor KNX TH-UP basic** calculates the dewpoint temperature and can output the value to the bus.

|   |   |
|---|---|
| Use dewpoint temperature                                    | No • <b>Yes</b>   |
| Dewpoint temperature sent                                   | <ul style="list-style-type: none"> <li>• <u>never</u></li> <li>• periodically</li> <li>• on change</li> <li>• on change and periodically</li> </ul> |
| From change of<br>(is only sent if "on change" is selected) | <u>0.1°C</u> • 0.2°C • 0.5°C • 1.0°C • 2.0°C • 5.0°C  |
| Send cycle<br>(is only sent if "periodically" is selected)  | <u>5 s</u> • 10 s • 30 s • 1 min • ... • 2 h  |
| Use monitoring of the coolant temperature                   | <u>No</u> • Yes   |

### 4.7.1. Coolant temperature monitoring

A threshold value can be set for the temperature of the coolant, which is based on the current dewpoint temperature. The switching output of the coolant temperature monitoring system can provide a warning prior to any build-up of condensation in the system, and/or activate appropriate countermeasures.

#### Minimum coolant temperature threshold value

Threshold value = dewpoint temperature + offset

|  |  |
|--|--|
| The offset set last shall be maintained  | <ul style="list-style-type: none"> <li>• <u>never</u></li> <li>• after restoration of power</li> <li>• after restoration of power and programming (do not use during initial setup)</li> </ul> |
| Offset in °C<br>(only if the offset is not retained, or retained after restoration of power) | 0...20; <u>3</u>   |
| Step size for offset change using communication object                                       | 0.1°C • 0.2°C • 0.3°C • 0.4°C • 0.5°C • <u>1°C</u> • 2°C • 3°C • 4°C • 5°C   |
| Hysteresis of the threshold value in %   | 0 ... 50; <u>20</u>  |
| Threshold value sends  | <ul style="list-style-type: none"> <li>• <u>never</u></li> <li>• periodically</li> <li>• on change</li> <li>• on change and periodically</li> </ul>  |

|  |  |
|--|--|
| From change of<br><i>(is only sent if "on change" is selected)</i> | <u>0.1°C</u> • 0.2°C • 0.5°C • 1.0°C • 2.0°C • 5.0°C |
| Send cycle<br><i>(is only sent if "periodically" is selected)</i>  | <u>5 s</u> • 10 s • 30 s • 1 min • ... • 2 h         |

## Switching output

The output switching delay can be set using objects or directly as a parameter.

|  |  |
|--|--|
| When the following conditions apply, the output is<br>(LV = Threshold value) | <ul style="list-style-type: none"> <li>• LV above = 1   LV - hysteresis below = 0</li> <li>• LV above = 0   LV - hysteresis below = 1</li> <li>• LV below = 1   LV + hysteresis above = 0</li> <li>• LV below = 0   LV + hysteresis above = 1</li> </ul> |
| Delays can be set via objects<br>(in seconds)                                | <u>No</u> • Yes  |
| Switching delay from 0 to 1<br><i>(when delay is not set using objects)</i>  | <u>None</u> • 1 s • 2 s • 5 s • 10 s • ... • 2 h   |
| Switching delay from 1 to 0<br><i>(when delay is not set using objects)</i>  | <u>None</u> • 1 s • 2 s • 5 s • 10 s • ... • 2 h   |
| Switching output sends   | <ul style="list-style-type: none"> <li>• <u>on change</u></li> <li>• on change to 1</li> <li>• on change to 0</li> <li>• on change and periodically</li> <li>• on change to 1 and periodically</li> <li>• on change to 0 and periodically</li> </ul>     |
| Send cycle<br><i>(is only sent if "periodically" is selected)</i>            | <u>5 s</u> • 10 s • 30 s... • 2 h  |

## Block

The switching output can be blocked using an object. Define specifications here for the behaviour of the output when blocked.

|  |   |
|--|---|
| Use switching output block                     | <u>No</u> • Yes   |
| Analysis of the blocking object                | <ul style="list-style-type: none"> <li>• <u>At value 1: block</u>   At value 0: release</li> <li>• At value 0: block   At value 1: release</li> </ul> |
| Blocking object value before 1st communication | <u>0</u> • 1  |
| Behaviour of the switching output              |   |
| With blocking                                  | <ul style="list-style-type: none"> <li>• <u>Do not send message</u></li> <li>• send 0</li> <li>• send 1</li> </ul>                                    |
| On release<br>(with 2 seconds release delay)   | [Dependent on the "Switching output sends" setting]   |

The behaviour of the switching output on release is dependent on the value of the parameter "Switching output sends" (see "Switching output")

|                                  |   |
|----------------------------------|---|
| Switching output sends on change | <ul style="list-style-type: none"> <li>• Do not send message</li> <li>• Send switching output status</li> </ul> |
|----------------------------------|---|

|  |   |
|--|---|
| Switching output sends on change to 1                  | <ul style="list-style-type: none"> <li>• Do not send message</li> <li>• If switching output = 1 → send 1</li> </ul> |
| Switching output sends on change to 0                  | <ul style="list-style-type: none"> <li>• Do not send message</li> <li>• If switching output = 0 → send 0</li> </ul> |
| Switching output sends on change and periodically      | Send switching output status  |
| Switching output sends on change to 1 and periodically | If switching output = 1 → send 1  |
| Switching output sends on change to 0 and periodically | If switching output = 0 → send 0  |

## 4.8. Absolute humidity

The absolute humidity value for the air is determined from the **KNX TH-UP basic** and can be output to the bus.

|   |   |
|---|---|
| Use absolute humidity                                       | <u>No</u> • Yes   |
| Unit object 65: g/kg  |   |
| Unit object 66: g/m <sup>3</sup>                            |   |
| Send behaviour  | <ul style="list-style-type: none"> <li>• <u>never</u></li> <li>• periodically</li> <li>• on change</li> <li>• on change and periodically</li> </ul> |
| From change of<br>(is only sent if "on change" is selected) | 0.1 g • 0.2 g • 0.5 g • <u>1.0 g</u> • 2.0 g • 5.0 g  |
| Send cycle<br>(is only sent if "periodically" is selected)  | <u>5 s</u> • 10 s • 30 s... • 2 h   |

## 4.9. Comfort field

The **Sensor KNX TH-UP basic** can send a message to the bus if the limits of the comfort field are exceeded. In this way, it is for example possible to monitor compliance with DIN 1946 (standard values) or even to define your own comfort field.

|  |   |
|--|---|
| Use comfort field  | <u>No</u> • Yes   |
| Send behaviour   | <ul style="list-style-type: none"> <li>• never</li> <li>• periodically</li> <li>• <u>on change</u></li> <li>• on change and periodically</li> </ul> |
| Send cycle<br>(is only sent if "periodically" is selected) | <u>5 s</u> • 10 s • 30 s... • 2 h   |
| Maximum temperature in °C<br>(Standard 26°C)               | 25 ... 40; <u>26</u>  |
| Minimum temperature in °C<br>(Standard 20°C)               | 10 ... 21; <u>20</u>  |

|  |                        |
|--|------------------------|
| Maximum relative humidity in %<br>(Standard 65%)             | 52 ... 90; <u>65</u>   |
| Minimum relative humidity in %<br>(Standard 30%)             | 10 ... 43; <u>30</u>   |
| Maximum absolute humidity in 0.1 g/kg<br>(Standard 115 g/kg) | 50 ... 200; <u>115</u> |

Temperature hysteresis: 1°C

Relative humidity hysteresis: 2% rH

Absolute humidity hysteresis: 2 g/kg

## 4.10. Variable comparator

The two integrated control variable comparators can output maximum, minimum and median values.

|                    |                 |
|--------------------|-----------------|
| Use comparator 1/2 | <u>No</u> • Yes |
|--------------------|-----------------|

### 4.10.1. Control variable comparator 1/2

Determine what the control variable comparator should output, and activate the input objects to be used. Send behaviour and blocks can also be set.

|  |   |
|--|---|
| Output delivered   | <ul style="list-style-type: none"> <li>• Maximum value</li> <li>• Minimum value</li> <li>• <u>Average value</u></li> </ul>  |
| Use input 1/2/3/4/5  | No • Yes  |
| Output sends   | <ul style="list-style-type: none"> <li>• <u>on change of output</u></li> <li>• on change of output and periodically</li> <li>• when receiving an input object</li> <li>• when receiving an input object and periodically</li> </ul> |
| Send cycle<br>(is only sent if "periodically" is selected)   | 5 s • 10 s • 30 s • ... • <u>5 min</u> • ... • 2 h  |
| From change of<br>(is only sent if "on change" is selected)  | <u>1%</u> • 2% • 5% • 10% • 20% • 25%   |
| Analysis of the blocking object                              | <ul style="list-style-type: none"> <li>• <u>at value 1: block   at value 0: release</u></li> <li>• at value 0: block   at value 1: release</li> </ul>   |
| Blocking object value<br>before 1st communication            | 0 • 1   |
| Behaviour of the switching output                            |   |
| With blocking  | <ul style="list-style-type: none"> <li>• <u>do not send message</u></li> <li>• Send value</li> </ul>  |
| Sent value in %  | 0 ... 100   |
| on release, output is sent<br>(with 2 seconds release delay) | <ul style="list-style-type: none"> <li>• <u>the current value</u></li> <li>• the current value after receipt of an object</li> </ul>  |

## 4.11. Logic

Activate the logic inputs and assign object values up to 1st communication. Then, activate the required logic outputs.

|   |                 |
|---|-----------------|
| Use logic inputs                            | <u>No</u> • Yes |
| Object value prior to 1. communication for: |                 |
| Logic input 1... 16                         | <u>0</u> • 1    |

### AND logic

|                       |                            |
|-----------------------|----------------------------|
| Logic 1/2/3/4/5/6/7/8 | <u>not active</u> • active |
|-----------------------|----------------------------|

### OR logic

|                       |                            |
|-----------------------|----------------------------|
| Logic 1/2/3/4/5/6/7/8 | <u>not active</u> • active |
|-----------------------|----------------------------|

#### 4.11.1. AND and/or OR logic 1/2/3/4/5/6/7/8

AND- and OR logic gates provide the same setting options. Assign the inputs to a switching event and set the send behaviour.

|                         |   |
|-------------------------|---|
| 1. / 2. / 3. / 4. Input | <ul style="list-style-type: none"> <li>• <u>do not use</u></li> <li>• all switching events which are available to the sensor (siehe <i>AND logic connection inputs</i>, Seite 39“)</li> </ul> |
| Logic output sends      | • <u>one 1-bit object</u> • two 8-bit objects   |

If the logic output sends one 1-bit object:

|                             |                         |
|-----------------------------|-------------------------|
| Logic output sends          | <b>one 1 bit object</b> |
| if logic = 1 → object value | <u>1</u> • 0            |
| if logic = 0 → object value | <u>0</u> • 1            |

If the logic output sends two 8-bit objects:

|                               |  |
|-------------------------------|--|
| Logic output sends            | <b>two 8 bit objects</b>   |
| Type of objects               | <ul style="list-style-type: none"> <li>• <u>Value (0 ... 255)</u></li> <li>• Percent (0% ... 100%)</li> <li>• Angle (0°... 360°)</li> <li>• Scenario load (0 ... 127)</li> </ul> |
| if logic = 1 → object A value | Setting dependent on "type of object"  |
| if logic = 0 → object A value | Setting dependent on "type of object"  |
| if logic = 1 → object B value | Setting dependent on "type of object"  |
| if logic = 0 → object B value | Setting dependent on "type of object"  |

|   |   |
|---|---|
| Send behaviour  | <ul style="list-style-type: none"> <li>• <u>on change of logic</u></li> <li>• on change of logic to 1</li> <li>• on change of logic to 0</li> <li>• on change of logic and periodically</li> <li>• on change of logic to 1 and periodically</li> <li>• on change of logic to 0 and periodically</li> <li>• on change of logic + receipt of object</li> <li>• on change of logic + receipt of object and periodically</li> </ul> |
| Send cycle<br><i>(is only sent if "periodically" is selected)</i> | 5 s • 10 s • 30 s • 1 min • ... • 2 h   |

## Block

Logic outputs can also be blocked using objects.

|  |   |
|--|---|
| Analysis of the blocking object                | <ul style="list-style-type: none"> <li>• <u>at value 1: block</u>   at value 0: release</li> <li>• at value 0: block   at value 1: release</li> </ul> |
| Blocking object value before 1st communication | <u>0</u> • 1  |
| Behaviour of the switching output              |   |
| With blocking                                  | <ul style="list-style-type: none"> <li>• do not send message</li> <li>• send value for logic = 0</li> <li>• send value for logic = 1</li> </ul>       |

Behaviour on release of the switching output is dependent on send behaviour

|   |  |
|---|--|
| Value of the parameter<br>"Send behaviour":               | Settings options<br>"Behaviour of the switching output on release":  |
| on change of logic  | <ul style="list-style-type: none"> <li>• do not send message</li> <li>• send value for current logic status</li> </ul> |
| on change of logic to 1                                   | <ul style="list-style-type: none"> <li>• do not send message</li> <li>• if logic = 1 → send value for 1</li> </ul>     |
| on change of logic to 0                                   | <ul style="list-style-type: none"> <li>• do not send message</li> <li>• if logic = 0 → send value for 0</li> </ul>     |
| on change of logic and periodically                       | send value for current logic status<br>(no selection)  |
| on change of logic to 1 and periodically                  | if logic = 1 → send value for 1<br>(no selection)  |
| on change of logic to 0 and periodically                  | if logic = 0 → send value for 0<br>(no selection)  |
| on change of logic and receipt of object                  | <ul style="list-style-type: none"> <li>• do not send message</li> <li>• Status object/s send/s</li> </ul>              |
| on change of logic and receipt of object and periodically | send value for current logic status<br>(no selection)  |

## 4.11.2. AND logic connection inputs

---

do not use

Logic input 1

Logic input 1 inverted

Logic input 2

Logic input 2 inverted

Logic input 3

Logic input 3 inverted

Logic input 4

Logic input 4 inverted

Logic input 5

Logic input 5 inverted

Logic input 6

Logic input 6 inverted

Logic input 7

Logic input 7 inverted

Logic input 8

Logic input 8 inverted

Logic input 9

Logic input 9 inverted

Logic input 10

Logic input 10 inverted

Logic input 11

Logic input 11 inverted

Logic input 12

Logic input 12 inverted

Logic input 13

Logic input 13 inverted

Logic input 14

Logic input 14 inverted

Logic input 15

Logic input 15 inverted

Logic input 16

Logic input 16 inverted

Temperature/humidity sensor malfunction = ON

Temperature/humidity sensor malfunction = OFF

Switching output temperature 1

Switching output temperature 1 inverted

Switching output temperature 2

Switching output temperature 2 inverted

Switching output temperature 3

Switching output temperature 3 inverted

Switching output temperature 4

Switching output temperature 4 inverted

Temp. control status changeover switching object

Temp. control status changeover switching object inverted

Temp. control status heating 1



Temp. control status heating 1 inverted  
Temp. control status heating 2  
Temp. control status heating 2 inverted  
Temp. control status cooling 1  
Temp. control status cooling 1 inverted  
Temp. control status cooling 2  
Temp. control status cooling 2 inverted  
Temp. control status night reduction  
Temp. control status night reduction inverted  
Temp. control status window  
Temp. control status window inverted  
Switching output humidity 1  
Switching output humidity 1 inverted  
Switching output humidity 2  
Switching output humidity 2 inverted  
Humidity control status dehumidification 1  
Humidity control status dehumidification 1 inv.  
Humidity control status dehumidification 2  
Humidity control status dehumidification 2 inv.  
Humidity control status humidification  
Humidity control status humidification inverted  
Switching output cooling medium temperature  
Switching output cooling medium temperature inv.  
Switching output room climate status  
Switching output room climate status inverted

### **4.11.3. Connection inputs of the OR logic**

---

The OR logic connection inputs correspond to those of the AND logic. In addition the following inputs are available for the OR logic:

AND logic 1  
AND logic output 1 inverted  
AND logic output 2  
AND logic output 2 inverted  
AND logic output 3  
AND logic output 3 inverted  
AND logic output 4  
AND logic output 4 inverted  
AND logic output 5  
AND logic output 5 inverted  
AND logic output 6  
AND logic output 6 inverted  
AND logic output 7  
AND logic output 7 inverted  
AND logic output 8  
AND logic output 8 inverted

