

SIEMENS

Synco™

KNX S-mode data points



Synco 700 devices RM_7xx, RM_7xxB, OZW77x, QAW740

Synco living central apartment units QAX9xx

Synco Room thermostats RD...

Engineering

Siemens Switzerland Ltd
Infrastructure & Cities Sector
Building Technologies Division
Gubelstrasse 22
CH-6301 Zug
Tel. +41 41-724 24 24
<http://www.siemens.com/sbt>

© 2004-2012 Siemens Switzerland Ltd
Subject to change

Table of contents

1	Introduction.....	7
1.1	Notes on this document.....	7
1.1.1	Terms and abbreviations	8
1.1.2	Synco devices with S-mode data points.....	8
1.2	KNX network.....	9
1.2.1	Complete KNX network	9
1.2.2	Network address.....	10
1.2.3	Device address.....	10
1.3	Group addresses, data point inputs/outputs.....	11
1.3.1	Group addresses for system time, fault information	12
1.3.2	Data point inputs / outputs.....	12
1.4	Data point description information	14
1.4.1	Communication flags	14
1.4.2	Data point formats	15
1.4.3	Referenced KNX manuals	15
1.5	Parameterization in ETS.....	17
1.5.1	Notes for parameterization	18
1.5.2	Workflow for parameterization.....	19
1.5.3	Parameterize terminals, inputs and outputs	21
2	RMU7x0, RMU7x0B, RMU7x0B Step 3 Universal controllers.....	23
2.1	Overview.....	23
2.1.1	RMU7x0 Universal controllers	23
2.1.2	RMU7x0B, RMU7x0 Step 3 Universal controllers	24
2.2	RMU7x0, S-mode data points	25
2.3	RMU7x0B, S-mode data points	29
2.4	RMU7x0B Step 3, S-mode data points.....	38
2.4.1	Basic type A, Ventilation controller	38
2.4.2	Basic type P, Primary air handling.....	44
2.4.3	Basic type C, Chilled water precontrol.....	48
2.4.4	Basic type U, Universal controller.....	52
2.4.5	Terminal inputs RMU7x0B Step 3 as reception objects	57
2.4.6	Terminal inputs RMU7x0B Step 3 as transmission objects	58
2.4.7	Terminal outputs RMU7x0B Step 3 as transmission objects.....	59
2.4.8	Terminal inputs as reception objects, Extension modules RMZ78x	60
2.4.9	Terminal inputs as transmission objects, Extension modules RMZ78x.....	61
2.4.10	Terminal outputs as transmission objects, Extension modules RMZ78x	62
3	RMH760, RMH760B Heating controller.....	63
3.1	Overview.....	63

3.1.1	RMH760 Heating controller.....	63
3.1.2	RMH760B Heating controller	64
3.2	RMH760, S-mode data points.....	66
3.3	RMH760B, S-mode data points	72
4	RMK770, RMK770 V2.0 Boiler sequence controller	83
4.1	Overview	83
4.2	RMK770, S-mode data points.....	84
4.3	RMK770 V2.0, S-mode data points	89
5	RMB795, RMB795B Central control unit	97
5.1	Overview	97
5.2	RMB795, S-mode data points.....	99
5.3	RMB795B, S-mode data points	106
5.3.1	Terminal inputs as reception objects, RMB795B	110
5.3.2	Terminal inputs as transmission (send) objects, RMB795B	111
5.3.3	Terminal outputs as transmission (send) objects, RMB795B	112
5.3.4	Terminal inputs as reception objects, Extension modules RMZ78x	113
5.3.5	Terminal inputs as transm. (send) objects, Extension modules RMZ78x....	114
5.3.6	Terminal outputs as transm. (send) objects, Extension modules RMZ78x..	115
6	RMS705, RMS705B switching and monitoring device.....	117
6.1	Overview	117
6.2	RMS705, S-mode data points.....	119
6.3	RMS705B, S-mode data points	126
6.3.1	Terminal inputs and outputs as reception or transmission objects	132
7	RMZ792, RMZ792B Bus operator units.....	137
7.1	Overview	137
7.2	RMZ792, RMZ792B, S-mode data points.....	138
8	OZW771 Central communication unit.....	141
8.1	Overview	141
8.2	OZW771, S-mode data points	142
9	OZW775 Central communication unit.....	145
9.1	Overview	145
9.2	OZW775, S-mode data points	146
10	OZW772 Web server	149
10.1	Overview	149
10.2	OZW772, S-mode data points	150
11	QAW740 Room unit.....	153

11.1	Overview.....	153
11.2	QAW740, S-mode data points.....	154
12	RDF301, RDF301.50, RDF600KN Room thermostats.....	155
12.1	Overview.....	155
12.2	RDF301, RDF301.50, RDF600KN, S-mode data points	156
13	RDU341 Room thermostat	165
13.1	Overview.....	165
13.2	RDU341, S-mode data points.....	166
14	RDG100KN Room thermostat.....	173
14.1	Overview.....	173
14.2	RDG100KN, S-mode data points	174
15	RDG400KN Room thermostat.....	181
15.1	Overview.....	181
15.2	RDG400KN, S-mode data points	182
16	QAX910 Central apartment unit	189
16.1	Overview.....	189
16.1.1	Parameterizing QAX910 series A, B and C.....	190
16.2	QAX910, S-mode data points.....	199
17	QAX903, QAX913 Central apartment units.....	211
17.1	Overview.....	211
17.1.1	Parameterizing QAX9x3	212
17.2	QAX903, QAX913, S-mode data points	220
18	Index.....	233

Blank page

1 Introduction

1.1 Notes on this document

About this document

The information in this document requires the following in-depth knowledge:

- Functionality and communications of Syncro devices and KNX third-party devices.
- KNX technology and handling the engineering tool software ETS.
- Engineering and commissioning KNX networks using Syncro devices.

Target audience

This document is intended for persons planning/engineering and commissioning KNX networks using Syncro devices.

Edition 8.0

The edition 8.0 contains additional S-mode data points for the Syncro RMU7x0B Step 3 controllers, Syncro living central apartment units QAX903, QAX913 as well as Syncro room thermostats RDG100KN and RDG400KN compared to edition 7.0 (April 8, 2010).

Syncro and KNX

Syncro uses KNX TP1 (Twisted Pair) as transmission medium. The Syncro devices intercommunicate in LTE mode. The Syncro LTE mode data points are connected via zone addresses (see document P3127).

S-mode data points

The KNX S-mode data points in the Syncro devices represent a subset of the Syncro LTE mode data points. The KNX S-mode data points are required to exchange process values between Syncro devices and e.g. KNX third-party devices, i.e. if the third-party devices can communicate in S-mode only.

The term "data point" is intrinsic to KNX (see KNX standard, Volume 3: System Specifications, Part: 7: Interworking, Chapter 2: Data Point Types).

The title of this document, "KNX S-mode data points" is derived from the following:

- Transmission medium TP1 → KNX (KNX bus, Twisted Pair).
- Communication mode → S-mode.
- Communication objects → Data points.

Engineering tool software ETS

You can order the **Engineering Tool Software (ETS Professional)** from the KNX Association at <http://www.knx.org/>.

Product data, import files

The product data for the devices are contained in **import-File *.vd5**. Import file *.vd5 requires tool version **ETS3.0f** or **ETS4**.

The product data for just **ETS4** are contained in **Import-File *.knxprod**.

Both import files can be downloaded from Siemens Building Technologies.

Note on EIB

The **European Installation Bus (EIB)** employs TP1 as transmission medium (same as KNX) and communicates via EIB communication objects, or group objects, in S-mode.

In EIB, the term "data point" (common term in building automation and control) is largely unknown. The following convention applies to this document: One S-mode data point corresponds to one communication object or group object.

1.1.1 Terms and abbreviations

Data point type

The data point type (DPT) determines how compatible the devices are. The format and number of bits, bit coding, value range and, where required, the unit (°C, %, m³/h, etc.) are specified in each data point type.

S-mode

S-mode stands for system mode. This mode primarily is characterized by the assignment of (logical) group addresses to S-mode data points to communicate process values.

S-mode data points

Short: S-mode DP

Synco 700 devices provide selected data points in S-mode for control and measuring tasks in HVAC plants and individual rooms, for lighting and security plants, and for integration in higher building automation and control systems.

S-mode data points and EIB communication objects can exchange process values, if both data point type and group address match.

Abbreviations

Abbreviation	Meaning
DP	Data point (or EIB communication object)
DPT	Data point type
E-mode	Easy mode (LTE is one of several Easy modes)
EIB	European Installation Bus (also called Instabus)
ETS	Engineering Tool Software
LTE mode	Logical Tag Extended Mode (Easy mode used in Synco)
KNX	Konnex
S-mode	System mode (communication mode in KNX networks)

1.1.2 Synco devices with S-mode data points

Type / ASN	Designation	Section
RMU7x0, RMU7x0B, RMU7x0B Step 3	Universal controller	2
RMH760, RMH760B	Heating controller	3
RMK770	Boiler sequence controller	4
RMB795, RMB795B	Central control unit	5
RMS705, RMS705B	Switching and monitoring device	6
RMZ792, RMZ792B	Bus operator unit	7
OZW771	Central communication unit	8
OZW775	Central communication unit	9
OZW772 V2.0, OZW772 V3.0	Web server	10
QAW740	Room unit	11
RDF301, RDF301.50, RDF600KN	Room thermostat	12
RDU341	Room thermostat	13
RDG100KN	Room hermostat	14
RDG400KN	Room thermostat	15
QAX910, Serie A, B, C	Central apartment unit (Synco living)	16
QAX903, QAX913	Central apartment unit (Synco living)	17

Room controllers RXB/RXL

This document does not describe S-mode data points of RXB.../RXL... room controllers (RXB... see data sheets N3873, N3874, N3875, RXL... see N3876, N3877, N3878).


1.2 KNX network

1.2.1 Complete KNX network

KNX network, three tiers

A complete KNX network comprises three tiers. It comprises:

- Area line 0 → Area 0 (backbone)
 - Main lines 1...15 → Areas 1...15
 - Lines 1.1...15.15

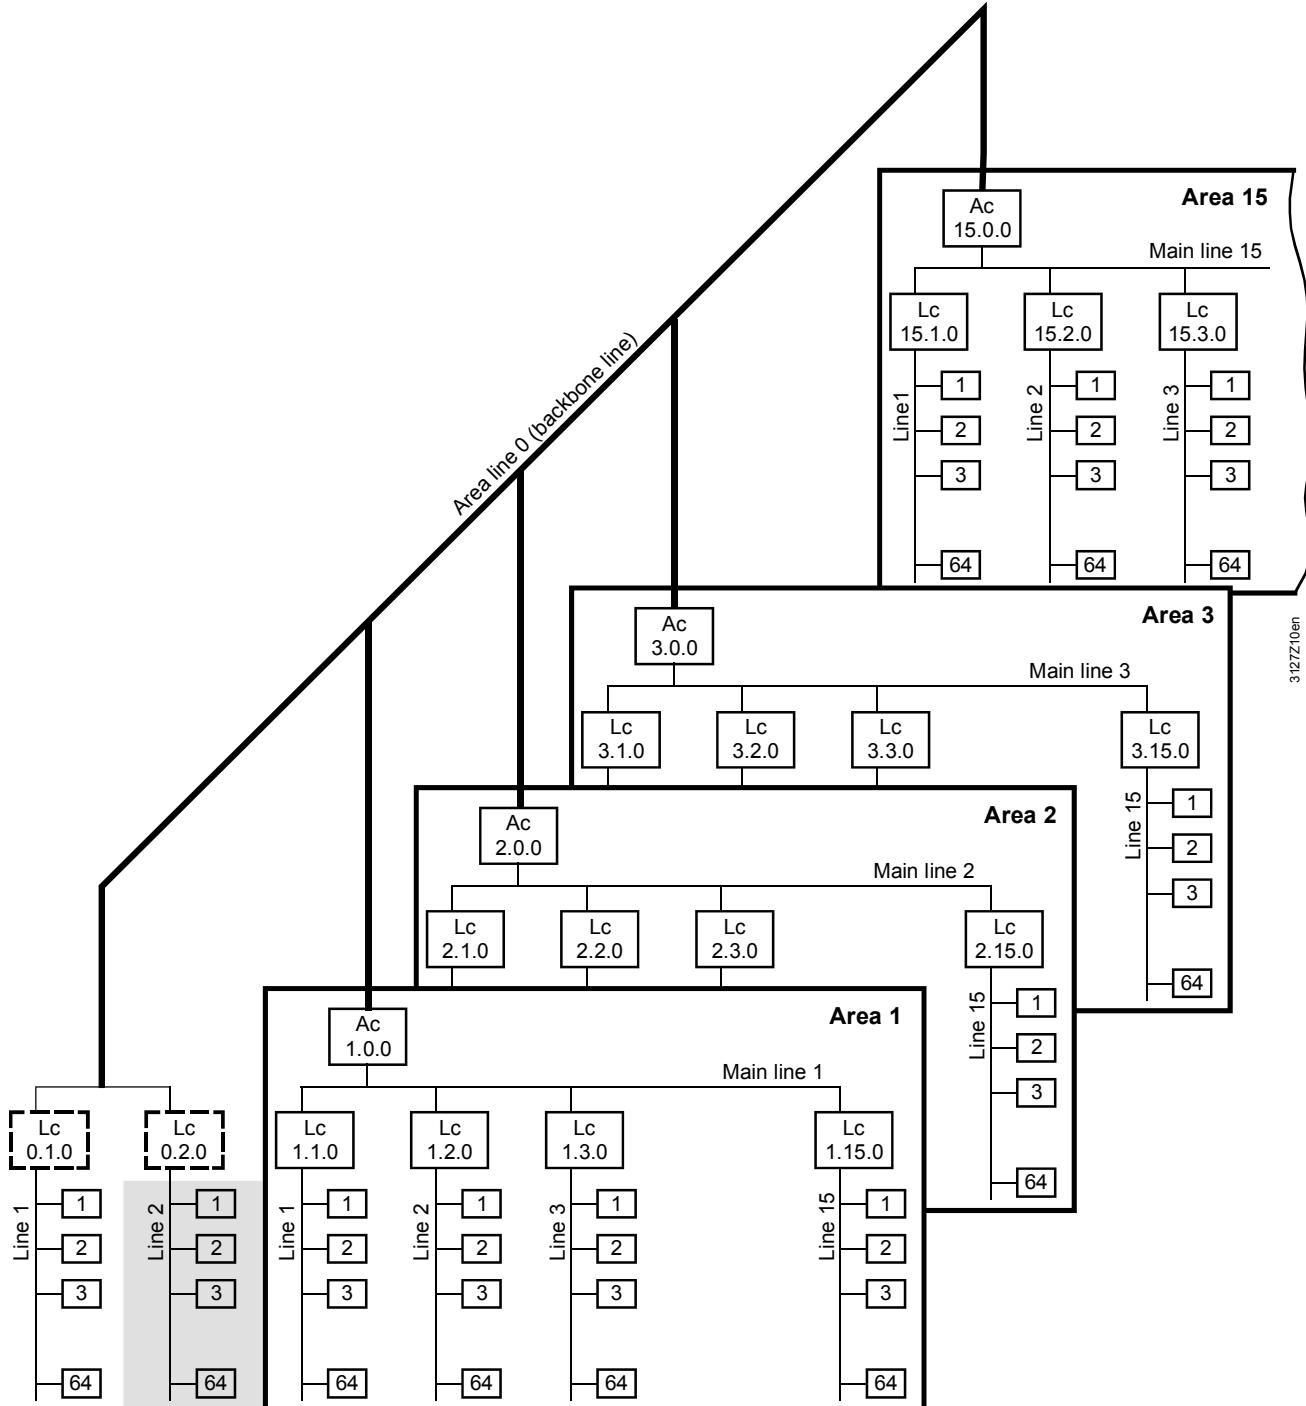

Note

In the above illustration, the device arrangement on the three-tier KNX network, with factory-set area/line address 0.2 on the Sync devices, corresponds to the highlighted area.

1.2.2 Network address

In a complete KNX network, the network address consists of area, line and device address. The address reflects the unambiguous position of a device on the network and is unique.

Network address syntax

A.L.D Area.Line.Device (with dot as separator ".")

Area 0 Area line 0

Area 1...15 Main lines 1...15

Line 1...15

Devices 1...254

Factory-set network address

The factory-set network address for Syncro devices is 0.2.255 (exception: Central communication unit OZW775 with 0.2.150).

Area address "0" and line address "2" applies if no area or line couplers are used.

Device address 255 must be changed to any value between 1 and 254 to allow the unit to spontaneously send process data via KNX.

Individual address


The individual address comprises the positions of the area, line and device address and corresponds to the above network address.

Subnetwork, subnetwork address

In KNX, a subnetwork is a line. Thus, the subnetwork address comprises address parts "Area" and "Line".

1.2.3 Device address

The device address helps identify a device in a particular area and line (Area 0, Line 2 in the illustration below).

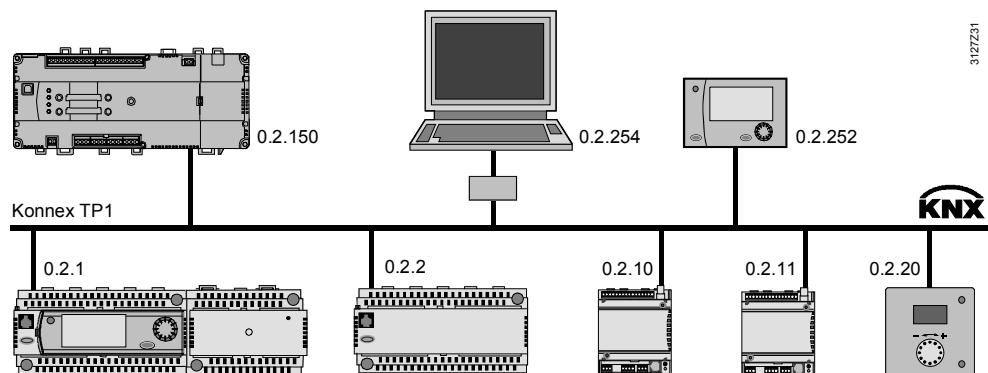

Device addressing

You only need to set the device address in a Syncro device. Area and line address 0.2 are preset or are assumed automatically by the area and line coupler (for addressing, see document P3127).

1.3 Group addresses, data point inputs/outputs

The group address is used for S-mode communication. It is function-related address, structured in three levels as per EIB guidelines. You can freely select assignments, but you should not change them within a project.

Group address syntax

H/M/S Main group/medium group/subgroup (with slash as separator " / ")

Main group 0...15 e.g. plant

Medium group 0...7 e.g. function

Subgroup 0...255 e.g. element

Examples for group addresses

The assignments "Plant/function;element" e.g. provide for group addresses:


1/1/11 Heating/Signaling/Boiler

3/2/102 Room/Measuring/Temperature 2

5/4/151 Electro/Switching/Lighting 1

Group addresses

Group addresses allow you to connect EIB communication objects to S-mode data points. You can assign the addresses only via the ETS tool.

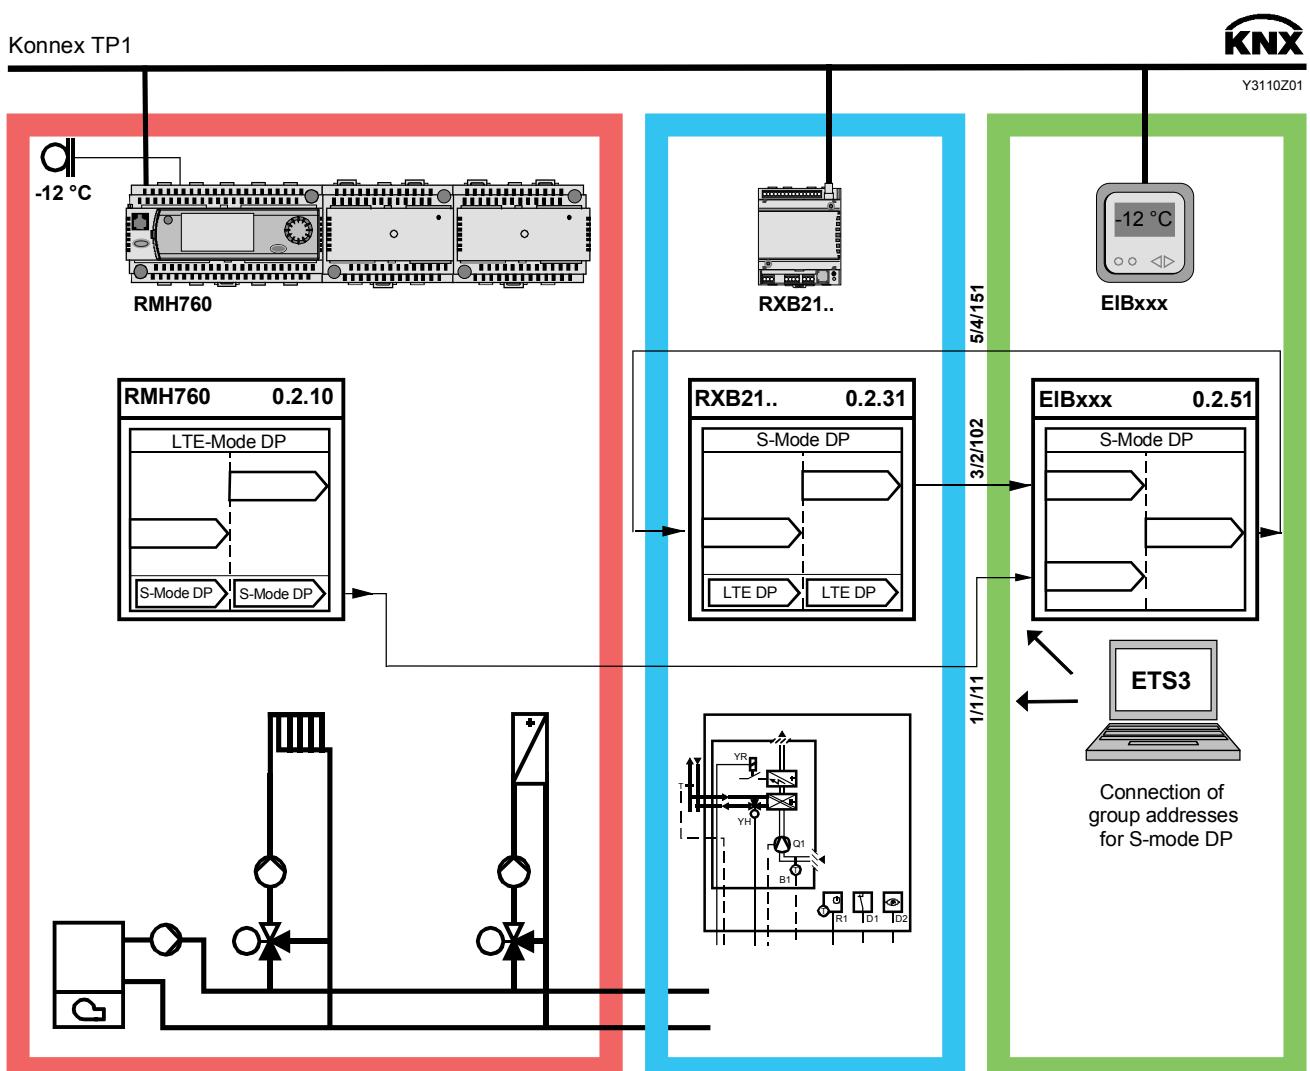

1.3.1 Group addresses for system time, fault information

Fixed group addresses	The KNX standard defines fixed group addresses for some system functions (Functions of Common Interest, FOCI).
	In Synco (see screenshot below), this applies to the following data points:
	<ul style="list-style-type: none">• System time group address 30/3/254• Fault information group address 30/3/250

Notes

All Synco devices featuring system time come with a preset group address and connected to the respective group object.

When you load new group addresses in Synco bus devices, the above group address 30/3/254 must exist and be connected in ETS. Only then can you begin download.

If group address 30/3/254 and the system time connection is not generated, time synchronization between the Synco bus devices will cease to function following initial download.


If you use another group address for system time, you must enter and load that group in all devices featuring system time (master and all slaves).

You cannot create the group address 30/3/254 (main group 30) in ETS via the standard settings. However, you can activate Windows registry entries to create main groups >15. Contact your supplier of ETS on the type of entry required.

1.3.2 Data point inputs / outputs

In Synco devices, S-mode data points are configured as input, output, input/output (or), or input and output respectively (see screenshot).

Number	Name	Object Function	Desc...
40	System time	Input / Output	
41	Date	Input / Output	
42	Time of day	Input / Output	
43	Fault information	Output	
44	Confirm faults	Input	
45	Reset faults	Input	
46	Fault state (normal/faulty)	Output	
47	Fault transmission (enable/disable)	Input	
410	Timer button	Input (Trigger)	
411	Comfort button	Input (Trigger)	
412	Room optg mode: Preselection	Input and Output	
415	Room optg mode: State	Output	
418	Room temperature: Setpoint relative	Input	
420	[Controller 1] Economy heating setpoint	Input and Output	
421	[Controller 1] Precomfort heating setpoint	Input and Output	
422	[Controller 1] Comfort heating setpoint	Input and Output	
423	[Controller 1] Comfort cooling setpoint	Input and Output	
424	[Controller 1] Precomfort cooling setpoint	Input and Output	
425	[Controller 1] Economy cooling setpoint	Input and Output	
427	[Controller 1] Current cooling setpoint supply air	Output	
428	[Controller 1] Current heating setpoint supply air	Output	

S-mode DP object function	The object function of the S-mode DP as input, output, input/output, or input and output is displayed in the "Object Function" column.
	Below is an example for each object function (see the above screenshot for the DP number).
Input, I	S-mode DP "Room temperature: Setpoint relative" (DP number 18).
	→ Input The Synco device receives "Setpoint relative", i.e. the correction of the room temperature in S-mode from a third-party device.
Output, O	S-mode DP "Room optg mode: State" (DP number 15).
	Output → The Synco device sends the stat of the current operating mode in S-mode to one or multiple third-party devices.
Input / Output, I/O	S-mode DP "Time of day" (DP number 2). The S-mode DP is connected to an input <u>or</u> an output. The following applies:
	→ Input The Synco device is the clock time slave and receives the time of day in S-mode from a third-party clock time master. <u>or</u>
	Output → The Synco device is the clock time master and sends the time of day in S-mode to one or multiple clock time slaves.
Note	The basic setting "Rem set clock slave = Yes" in a Synco device does not apply to the S-mode DP inputs / outputs.
Input and Output, I and O	S-mode DP "[Controller 1] Comfort heating setpoint" (DP number 22). The S-mode DP is connected to an input <u>and</u> an output. The following applies:
	→ Input The Synco device receives the setpoint (e.g. external setpoint setting). <u>and</u> Output → The Synco device sends the setpoint (e.g. to other third-party devices).
Other examples	
Parameterization with send <u>or</u> receive	You can configure some S-mode DPs as output <u>or</u> input (e.g. S-mode DP "Outside temperature") as per the parameterization for send and receive.
	Send Output → Outside sensor is connected to the Synco device terminals and the Synco device sends the outside temperature in S-mode via KNX. <u>or</u> Receive → Input The Synco device receives via KNX the outside temperature in S-mode from a third-party sensor.
Note	There are two cases to parameterize send <u>or</u> receive:
	<ul style="list-style-type: none"> • S-mode DPs that change DP number x (Send, Output) to DP number y (Receive, Input) as per the parameterization. • S-mode DPs that retain DP number x and only change to Input or Output in column "Object Function".

1.4 Data point description information

1.4.1 Communication flags

Meaning of communication flags

Meaning and action of the communication flags C, R, W, T, and U is explained in the following table. The order for C, R, W, T, and U corresponds to the default setting in the ETS tool.

Flags	Bit	Meaning
C = Communication	0	Data point value is not communicated.
	1	Data point is connected to the bus and the data point value is communicated. C = 1, default for inputs and outputs.
R = Read	0	Data point value cannot be read.
	1	With a read command, the device send its data point value.
W = Write	0	Data point value cannot be written.
	1	The device receives and overwrites its data point value. W = 1, default for inputs.
T = Transmission	0	Data point value is not transmitted.
	1	For COV, Event or Heartbeat, the device sends its data point value. T = 1, default for outputs.
U = Update	0	Data point value is not updated.
	1	The data point value is updated if flag W = 1 (and / or R = 1). U = 1, default for inputs.

Flags for inputs, receive values

The communication flags must be set as follows (default) for data point inputs (receive values):

Flags ⁽¹⁾					Data point type KNX		Value range ⁽²⁾	Receive value ⁽³⁾
C	R	W	T	U	ID	DPT_Name		
1	0	1	0	1	9.001	_Value_Temp	-273.00...+670760.00 Floating point	From KNX devices without/with timeout monitoring.

Flags for outputs, send values

The communication flags must be set as follows (default) for data point outputs (send values):

Flags ⁽¹⁾					Data point type KNX		Value range ⁽²⁾	Send value ⁽⁴⁾
C	R	W	T	U	ID	DPT_Name		
1	0	0	1	0	9.001	_Value_Temp	-273.00...+670760.00 Floating point	COV, Event, Heartbeat

(1) Flags for data communication with setting values 0 or 1.

(2) Data point value range.

(3) Synco devices receive the values from third-party devices without/with timeout monitoring of the received values.

(4) Synco devices send date and time values cyclically every 10 minutes.
Synco devices send analog process values after COV (change of value) and after heartbeat (e.g. every 15 min).
Synco devices send digital process values after an event, e.g. contact state change and after heartbeat (e.g. every 30 min).

1.4.2 Data point formats

The data point formats in this document are:

Format	Meaning	Comment
B	Boolean / bitset	
F	Floating point value	
N	eNumeration	
U	Unsigned value	Value without preceding sign

Example

F₁₆ means "Floating point 16 bit" coded, e.g. for value range: -670760.00...+670760.00.

1.4.3 Referenced KNX manuals

This document's information on KNX S-mode data points is based on the following manuals (English only):

- KNX, Volume 3: System Specifications, Part 7, Chapter 2: Data Point Types
- Supplement 11: HVAC Data Point Types on
KNX, Volume 3: System Specifications, Part 7, Chapter 2: Data Point Types

**Complex
S-mode data points**

This document does not fully describe the complex S-mode data points. For these data points, we refer to the following manuals and information.

DPT_DateTime ,
ID 19.001

¹⁾ Referenced manual:

KNX, Volume 3: System Specifications, Supplement 14: DateTime

KNX data point type	Value range			
DPT_DateTime 19.001	1900...2155	= Year	0...23	= Hours
	1...12	= Month	0...59	= Minutes
	1...31	= Day of month	0...59	= Seconds
	1...7	= Day of week Monday - Sunday		Status bits (see table below)

Status bits

Synco devices evaluate the status bits 1, 4, 5, 6 and 7.

Status bit	Bit abbr.	Bit status = 0	Bit status = 1
1	F	Normal (no fault)	Fault
2	WD	Workday no (holiday)	Workday
3	NWD	Field "Workday" valid	Field "Workday" invalid
4	NY	Field "Year" valid	Field "Year" invalid
5	ND	Fields "Month" and "Day of month" valid	Fields "Month" and "Day of month" invalid
6	NDoW	Field "Day of week" valid	Field "Day of week" invalid
7	NT	Fields "Hours", "Minutes" and "Seconds" valid	Fields "Hours", "Minutes" and "Seconds" invalid
8	SUTI	Time of day = Universal time+X	Time of day = Universal time+X+1
9	CLQ	Clock without external time synchronization	Clock with external time synchronization

DPT_AlarmInfo ,
ID 219.001

- ²⁾ Referenced manual:
KNX, Application Note No 027/03, pages 21 to 24.

KNX data point type	Value range			
DPT_AlarmInfo ID 219.001	[0]...255	= Log number	[0...4]...255	= Error class
	[0...2]...255	= Alarm priority	[0...15]...63	= Alarm attributes
	[0...14]...255	= Application area	[0...7]	= Fault state

- Log number: Always 0 for Synco devices.
Alarm priority: 0 = High, 1 = Medium, 2 = Low.
Application area: 0 = No error, 1 = System and functions (general errors),
2...9 reserved, 10 = HVAC function blocks, 11 = DHW,
12 = HVAC electrical heating, 13 = Room controllers (terminal units),
14 = Ventilation and air handling.
Error classes: 0 = No error, 1 = Device error (RAM, EEPROM, Watchdog, ...),
2 = Communication error, 3 = Configuration error, 4 = HW error.
Fault state: 0 = No fault, 1 = Fault, 2 = Fault unacknowledged, (3 = Fault + fault
unacknowledged), 4 = Interlocking fault.

DPT_Trigger , ID 1.017

- ³⁾ Referenced manual:
KNX, Volume 7: Application Descriptions, Part:10: General Functional Blocks,
Chapter 4: Common Functional Blocks.

Note the differing functionality of the inputs "Timer button" and "Comfort button" for data point DPT_Trigger.

• **Timer button:**

The trigger signal from the timer button extends Comfort mode by the time set in the Synco 700 controller (default setting = 60 minutes).

Note: With Synco 700 controllers, you can set an extended time of 0...720 minutes (in 15-minute increments) via the RMZ790 and RM791 operator units. Menu e.g. for RMH:

Main menu > Settings > Heating circuit 1 > Space heating > Timer function.

• **Comfort button:**

The first trigger signal of the Comfort button changes over the operating mode from:

- Economy → Comfort
- Precomfort → Comfort
- Comfort → Precomfort

Notes: The second trigger signal from the Comfort button results in a changeover to the previous operating mode, e.g. from Comfort → Economy.

In Protection mode (building protection), the first and second trigger signals from the Comfort button do not change over the operating mode.

DPT_Date , ID 11.001

- ⁴⁾ The value range for 00...99 = year means:
00 – 89 = 2000 – 2089, 90 – 99 = 1990 – 1999

1.5 Parameterization in ETS

Principal workflow

Below is a description of the principal workflow for parameterization in the ETS tool (screenshots ETS3). In this case, the RMU730B universal controller represents the Synco device to be parameterized. Thus, the screenshots refer to this controller.

Note

Procedures in ETS4 are the same as in ETS3, only the user interface is different.


Steps

1. Determine the configuration in the Synco device and then the parameter group(s) and parameters, or the required S-mode data points (short: S-mode DP).
2. Start parameterization in ETS (see 1.5.2).
3. Assign the required parameter value to each parameter (= parameterize) and configure the S-mode DP(s) in ETS.
4. Connect the S-mode DP via group addresses to the communication objects.

The DP in the Synco device and the S-mode are coupled only if the DP is configured in both places. For this reason, start at Step 1.

Terminology

In ETS, we speak of parameterization (= **Edit Parameters...**), parameter groups, parameters, and parameter values.

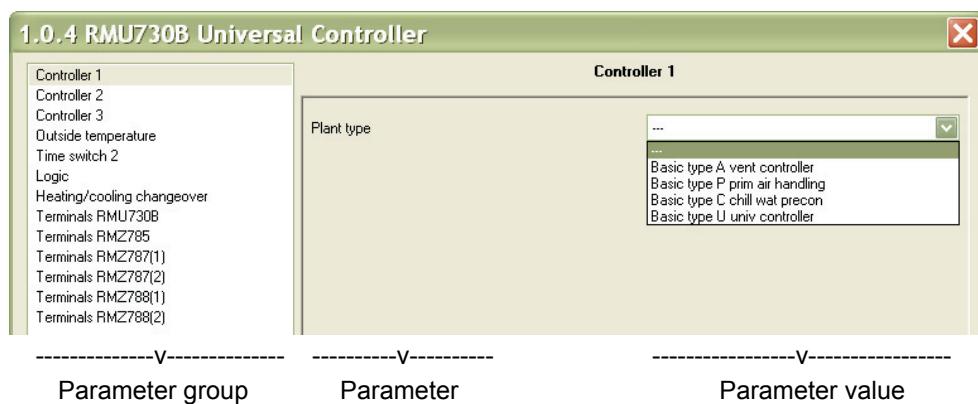


Parameter → S-mode DP

Assigning a parameter value to the parameter configures the S-mode DP. Both parameter and S-mode DP have the same name.

View "All Devices"

The view "All Devices" is set in ETS prior to parameterization.


View > Project Views... > All Devices

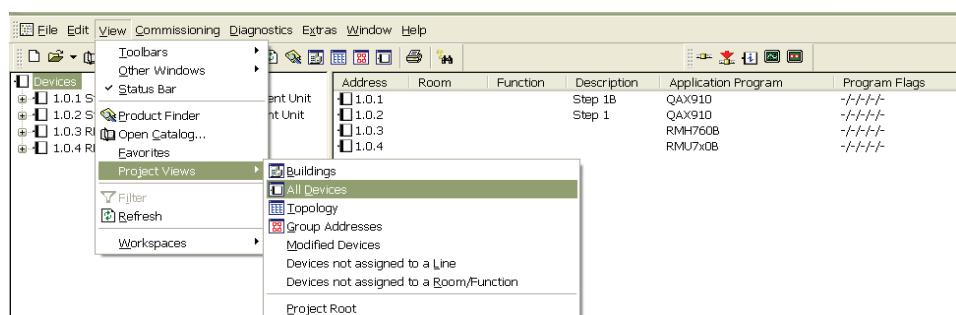

1.5.1 Notes for parameterization

Standard S-mode DP

Click to select the Syncro device you want to parameterize. The right pane automatically displays the standard S-mode DP for the selected Syncro device.

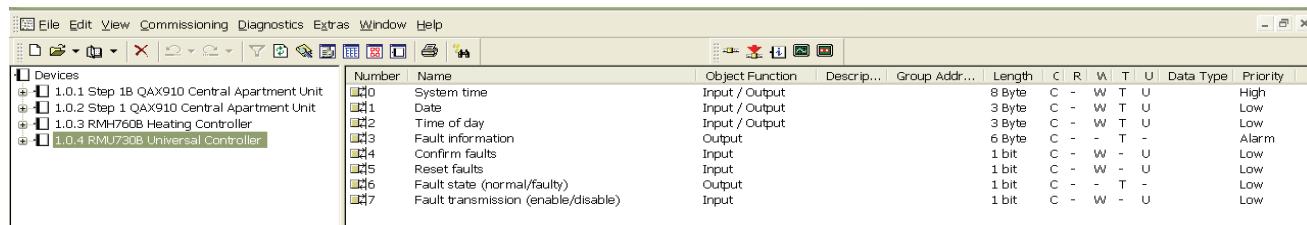

Number	Name	Object Function	Descrip...	Group Addr...	Length	C	R	W	T	U	Data Type	Priority
10	System time	Input / Output			8 Byte	C	-	W	T	U	High	
11	Date	Input / Output			3 Byte	C	-	W	T	U	Low	
12	Time of day	Input / Output			3 Byte	C	-	W	T	U	Low	
13	Fault information	Output			6 Byte	C	-	-	T	-	Alarm	
14	Confirm faults	Input			1 bit	C	-	W	-	U	Low	
15	Reset faults	Input			1 bit	C	-	W	-	U	Low	
16	Fault state (normal/faulty)	Output			1 bit	C	-	-	T	-	Low	
17	Fault transmission (enable/disable)	Input			1 bit	C	-	W	-	U	Low	

5) Standard S-mode DP

S-mode DPs marked as "Always" in the S-mode DP tables for the devices are standard S-mode DPs that are always configured using tool ETS when the corresponding device is selected.

For the Syncro 700 devices RM_7xx, the standard S-mode DPs have numbers 0...7. To some extent, standard S-mode DP in range 0...7 are lacking for the other devices.

Examples:

For room thermostats RDF301... and RDU341, the standard S-mode DPs 2 and 7 are missing and for the Syncro 900 Central Apartment Unit QAX910, the standard S-mode DPs 4 and 5 are missing.

Value transmission

6) Out of Service

If the application sets an S-mode DP to "Out of service", the S-mode DP does not send a value (not even "----" for "OSV").

- Value transmission is interrupted and either the value last transmitted or an error message appears on an external display unit, depending on the display unit's timeout response.

If the application then sets the S-mode DP to "In operation", the S-mode DP resumes sending the current value.

DP not parameterized


7) S-mode DP sends 0

If S-mode DPs are parameterized in ETS and connected via group addresses not configured in the Syncro device, the S-mode DPs send an invalid value (normally value 0 (zero), possibly with a +/- deviation).

1.5.2 Workflow for parameterization

Start parameterization

Right-click the selected Synco device to open the context menu with menu item **Edit Parameters...**.

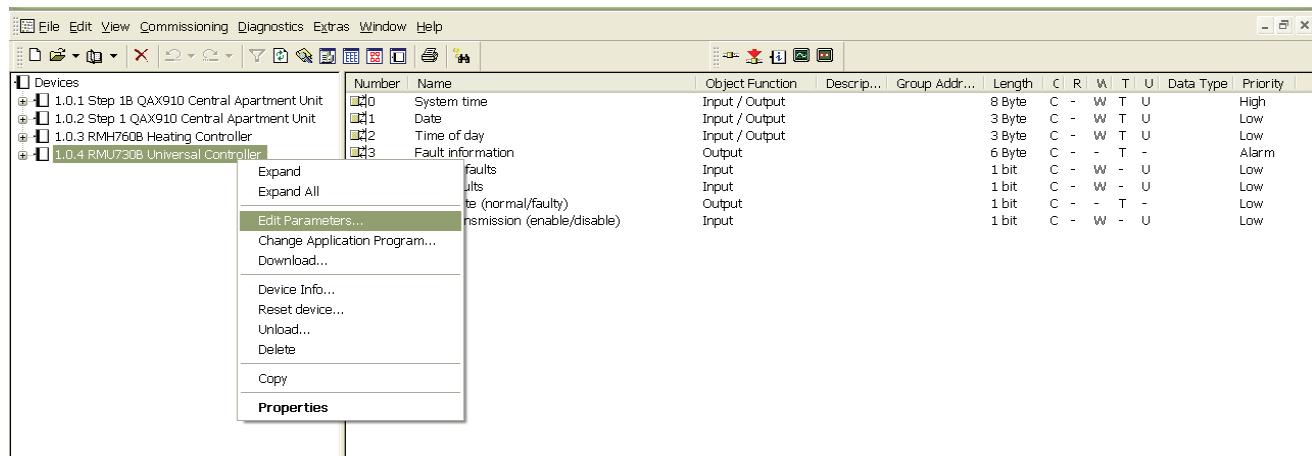

Note

You can also start parameterization by selecting the **Edit** menu and then **Edit Parameters...**.

Edit Parameters

Select **Edit Parameters...** to open the dialog box for the selected Synco device.


The following dialog box is displayed for the RMU730B universal controller:



Assign parameter value


Assigning a parameter value to a parameter configures one S-mode DP or several in ETS.

Select the drop-down list box to display the corresponding parameters (see screenshot for parameter "Plant type").

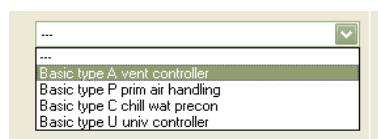

Parameter "Plant type"


The value assignment "Basic type A vent controller" to parameter "Plant type" configures S-mode DP 10, 11, 12, 15, ..., 30 as well as parameters "Room temperature", "Time switch operation" and "Control strategy".

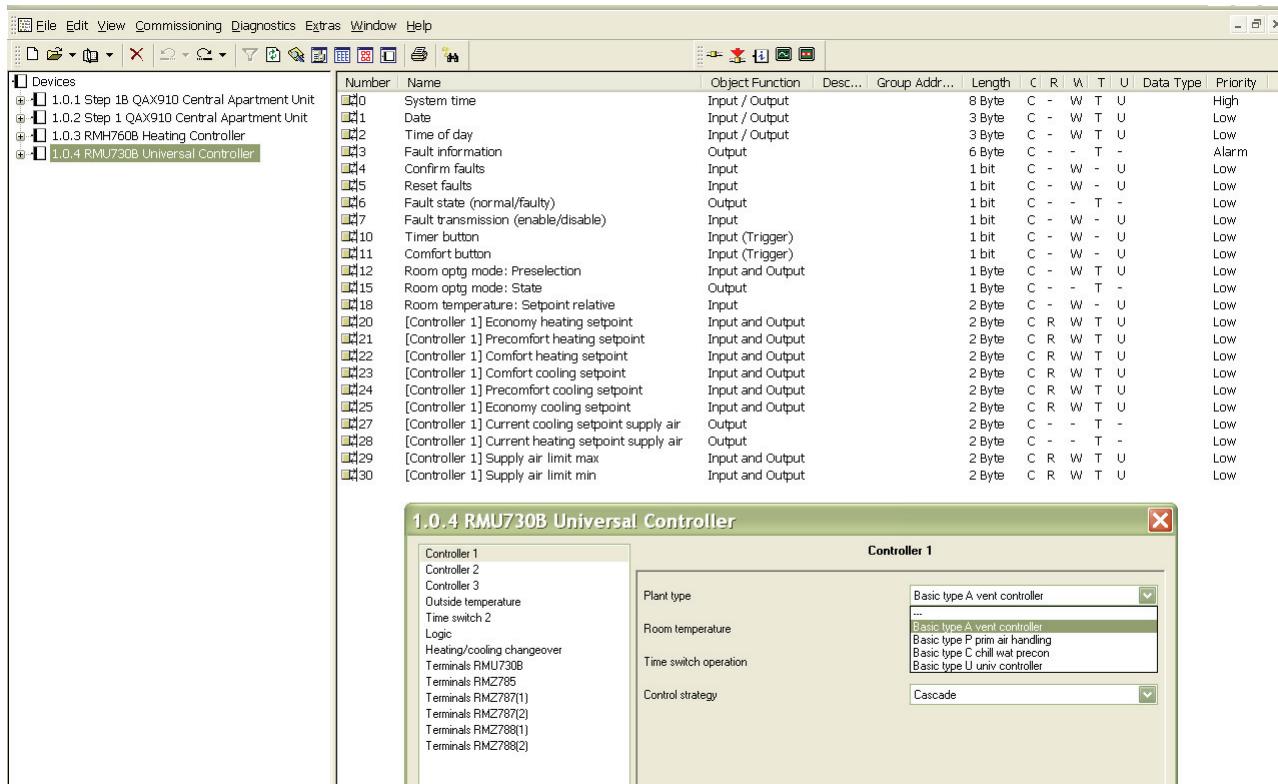

Outside temperature


Transmit, S-mode DP 8

Select **Outside temperature** and parameter value **Transmit** to configure S-mode DP 8 **Outside temperature as Output**.

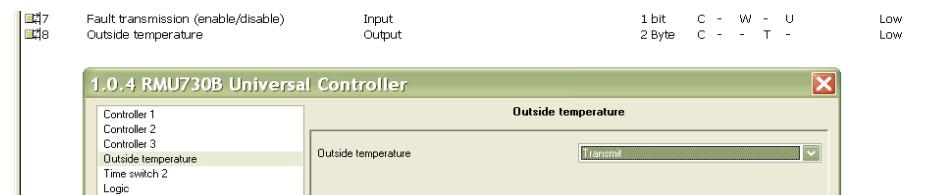

Receive, S-mode DP 9

Select **Outside temperature** and parameter value **Receive** to configure S-mode DP 9 **Outside temperature as Input**.

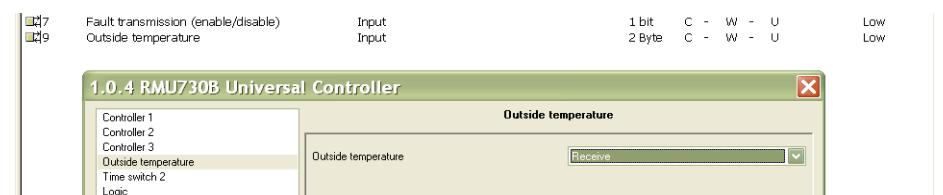


1.5.3 Parameterize terminals, inputs and outputs

Terminals Inputs and outputs

Click **Terminals RMU730B** to display the **Inputs** and **Outputs** for the Synco device (for RMU730B universal controller below).

Click the drop-down list box [v] for either inputs or outputs to display all parameter values (see screenshot below for input N.X1).

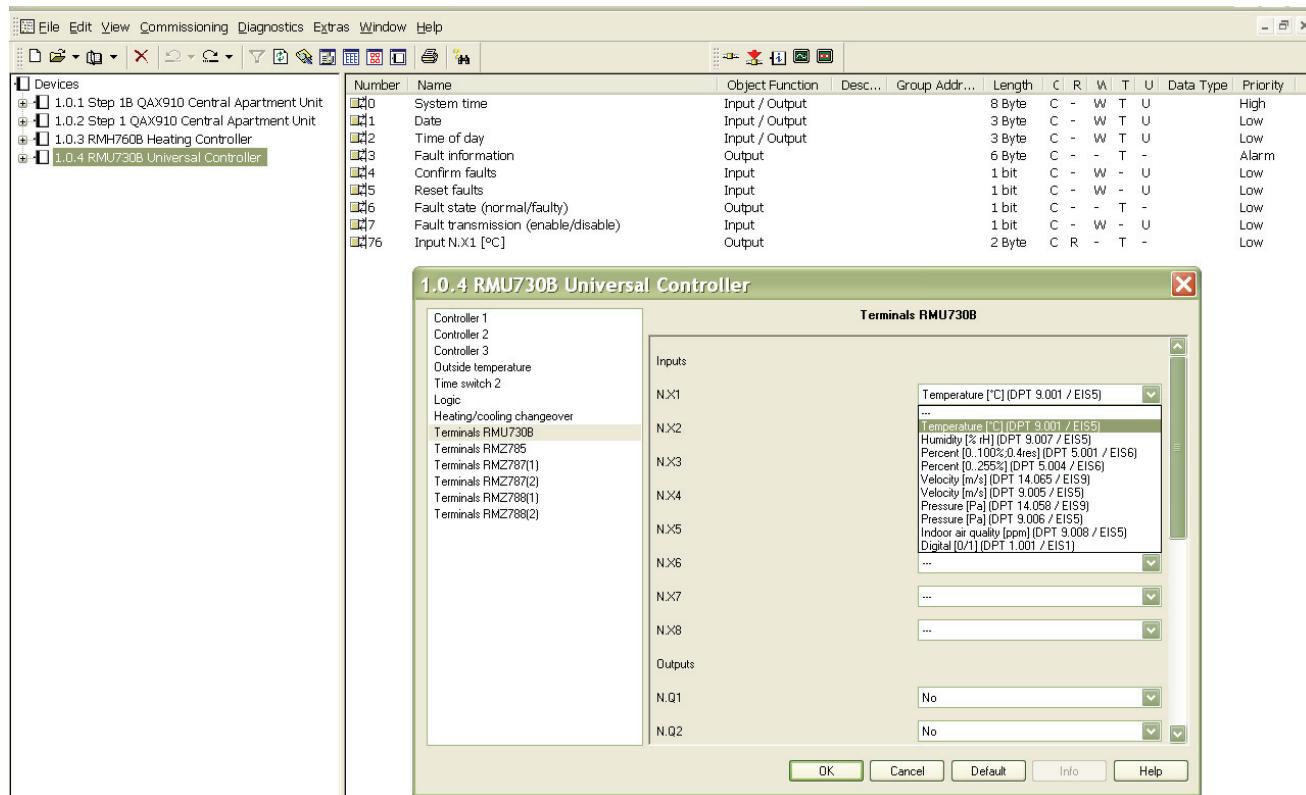

Parameterize inputs N.X_

When you use parameter value **Temperature [°C](DPT 9.001 / EIS5)** to parameterize **Terminals RMU730B > Input N.X1**, S-mode DP 76 is configured with function "Output" (see screenshot below).

Input value N.X1 becomes an output value as S-mode DP that can be used e.g. for value transmission to an display unit.



Notes

When you use parameter value **Humidity [% rH](DPT 9.007 / EIS5)** or another parameter value to parameterize **Terminals RMU730B > Input N.X1**, S-mode DP 76 is configured also.

Thus, the S-mode DP number is retained regardless of parameter value Temperature, Humidity, Percent, etc.

The S-mode DP can only send the value from N.X1 (or N.X2...N.X8), if a sensor is connected to terminal N.X1.

Blank page

2 RMU7x0, RMU7x0B, RMU7x0B Step 3 Universal controllers


2.1 Overview

Brief description

The Syncro 700 universal controllers RMU710, RMU720, and RMU730 (short: RMU7x0) are designed for application in ventilation, air conditioning and chilled water plants.

The Syncro 700 universal controllers series B, thus RMU710B, RMU720B, RMU730B (short: RMU7x0B) and RMU710B Step 3, RMU720B Step 3, RMU730B Step 3 (short: RMU7x0B Step 3) are designed additionally for application in primary plants together with individual room control. Controllers RMU7x0B Step 3 allow for universal data exchange via their own terminals (universal inputs as reception objects in reception zones and as transmission objects in transmission zones).

The controller types RMU7x0, RMU7x0B and RMU7x0B Step 3 are identical with regard to design and dimensions.

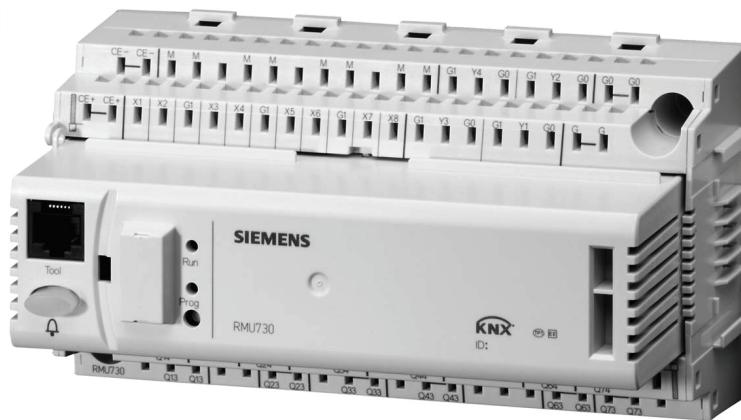

Documentation

Documentation RMU7x0

Data sheet Universal controllers RMU7... **N3144**
Basic documentation Universal controllers RMU710, RMU720, RMU730 **P3140**

Documentation RMU7x0B,
RMU7x0B Step 3

Data sheet Universal controllers RMU7..B **N3150**
Basic documentation Universal controllers RMU710B, RMU720B, RMU730B **P3150**

Number of S-mode DPs

	RMU7x0	RMU7x0B	RMU7x0B Step 3
Inputs / Outputs	3	3	3...4 ^{*)}
Inputs and outputs	0	29	10...17 ^{*)}
Inputs	18	10	6...10 ^{*)}
Outputs	7	17 (+73 Terminals)	13...26 ^{*)}
Terminals as reception objects	--	--	32
Terminals as transmission obj.	--	--	64

^{*)} The number of inputs and outputs depends on the set basic type (A, C, U or P).

2.1.1 RMU7x0 Universal controllers

Basic types A, C, U

The RMU7x0 universal controllers comprise basic types A, C, U. They serve as the basis to configure own, new applications. Selecting a basic type determines the application and use of the controller.

DP in basic type column	The tables in Section 2.2, column DP in basic type , show basic types A, C, U with the data point communicating in S-mode. For more information on the basic types, refer to the documentation on basics P3140.
Parameterization RMU7x0	An S-mode DP must be configured in ETS <u>and</u> the Synco device to ensure that the S-mode DP transmits valid values. See Section 1.5 on workflows.

2.1.2 RMU7x0B, RMU7x0 Step 3 Universal controllers

Basic types A, C, U, P	The RMU7x0B and RMU7x0B Step 3 universal controllers comprise basic types A, C, U and P. They serve as the basis to configure own, new applications. Selecting a basic type determines the application and use of the controller.
-------------------------------	--

Basic type	Typical applications
A	Ventilation / air conditioning plants, e.g. air handling plant control
C	Demand-dependent control of a chilled water treatment
U	Universal applications, e.g. control to flow setpoint
P	Demand-dependent control of an air handling plant with individual room control

DP in basic type column	The tables in Section 2.3 show the basic types A, C, U, P with the data point communicating in S-mode in column DP in basic type . The tables in Section 2.4 show the basic types and parameter settings with the data point communicating in S-mode in column DP active . For more information on the basic types, refer to the documentation on basics P3150.
Parameterization RMU7x0B RMU7x0B Step 3	An S-mode DP must be configured in ETS <u>and</u> the Synco device to ensure that the S-mode DP transmits valid values. See Section 1.5 on workflows.

Universal reception and transmission zones	Only RMU7x0 Step 3 Controllers RMU7x0B Step 3 allows for universal data exchange via own terminals (universal inputs, relay and analog outputs) as well as via terminals of extension modules RMZ78x. Data is exchanged via KNX. The universal inputs can be used as reception objects in reception zones and as transmission objects in transmission zones . The relays and analog outputs can only be used as transmission objects.
	Reception zones Universal inputs Terminals N.X_ and A__.X_ Transmission zones Universal inputs Terminals N.X_ and A__.X_ Relay outputs N.Q_ and A__.Q_ Analog outputs. N.Y_ and A__.Y_

Note	See Sections 2.4.5 to 2.4.10: Rec. object Reception object (terminal value connected as input). Trans. object Transmission object (terminal value connected as output).
------	---

2.2 RMU7x0, S-mode data points

RMU7x0: Inputs / Outputs

Name in ETS	DP in basic type	Flags					Data point type KNX			Format	Unit	Value range	RMU receives or sends:
		C	R	W	T	U	ID	DPT_Name					
System time (input)	Always ⁵⁾	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 ---	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds Status bits ¹⁾	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)													
Date (input)	Always	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1..0.12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)													
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)													

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMU7x0: Inputs

Name in ETS	DP in basic type	Flags					Data point type KNX			Value range		RMU7x0 receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Confirm faults	Always	1	0	1	0	1	1.016	_Ack	1 bit B ₁	---	0 = No action 1 = Acknowledge / confirm	Event from KNX contact. No timeout monitoring.
Reset faults	Always	1	0	1	0	1	1.015	_Reset	1 bit B ₁	---	0 = No action 1 = Reset	Event from KNX contact. No timeout monitoring.
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact. “Disable” time-out monit 24 h.
Outside temperature	A, C, U	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.
Room temperature	A	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.
Timer button	A	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Comfort prolongation ³⁾	Event from KNX contact
Comfort button	A	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Optg mode changeover ³⁾	Event from KNX contact
Room temperature: Setpoint relative	A	1	0	1	0	1	9.002	_Value_Tempd	2 bytes F ₁₆	K	-670760.00...+670760.00 Floating point	COV from KNX setp adj.
Room optg mode: Preselection	A	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr)
Room optg mode: Time switch operation Slave	A	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX operation (device/progr). Timeout monit 31 min.

³⁾ See Section 1.4.3, page 14.

RMU7x0: Inputs (continued)

Name in ETS	DP in basic type	Flags					Data point type KNX			Format	Unit	Value range	RMU7x0 receives:
		C	R	W	T	U	ID	DPT_Name					
Room temp: Protection heating setpoint	A	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
Room temp: Economy heating setpoint	A	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
Room temp: Precomfort heating setpoint	A	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
Room temp: Comfort heating setpoint	A	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
Room temp: Comfort cooling setpoint	A	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
Room temp: Precomfort cooling setpoint	A	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
Room temp: Economy cooling setpoint	A	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
Room temp: Protection cooling setpoint	A	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	

RMU7x0: Outputs

Name in ETS	DP in basic type	Flags					Data point type KNX			Value range		RMU7x0 sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---	[0]...255 = Log no. [RMU = 0] [0...2]...255 = Alarm priority [0...14]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Outside temperature	A, C, U	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Room temperature	A	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Room optg mode: Time switch operation Master	A	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
Room optg mode: State	A	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
Heating/cooling changeover	C	1	0	0	1	0	1.100	_Heat/Cool	1 bit B ₁	---	0 = Cooling 1 = Heating (default)	Event, heart-beat 15 min.

²⁾ See Section 1.4.3, page 14.

2.3 RMU7x0B, S-mode data points

RMU7x0B: Inputs / Outputs

Name in ETS	DP in basic type	Flags					Data point type KNX			Format	Unit	Value range	RMU receives or sends:
		C	R	W	T	U	ID	DPT_Name					
System time (input)	Always ⁵⁾	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 ---	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds Status bits ¹⁾	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)													
Date (input)	Always	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)													
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)													

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMU7x0B: Inputs and outputs

S-mode DPs operated as input and output.

- Input: For operation using external device via KNX, Synco controller RMU7x0B receives the values of the S-mode DPs.
- Output: For operation from the Synco controller RMU7x0B, the S-mode DP values are sent via KNX (synchronization of external unit).

Name in ETS	DP in basic type	Flags C R W T U					Data point type KNX			Value range	RMU7x0B rec., sends
		ID	DPT_Name	Format	Unit						
Room optg mode: Preselection	A, U	1 0 1 1 1	20.102 _HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve				Event from KNX preselect operation (device/progr)	
[Controller 1] Economy heating setpoint	A	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Controller 1] Precomfort heating setpoint	A	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Controller 1] Comfort heating setpoint	A	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Controller 1] Comfort cooling setpoint	A	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Controller 1] Precomfort cooling setpoint	A	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Controller 1] Economy cooling setpoint	A	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Controller 1] Supply air limit max	A, P	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Controller 1] Supply air limit min	A, P	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Controller 1] Limit value high	A	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Controller 1] Limit value low	A	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Controller 1] Heating flow setpoint	C	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Controller 1] Chilled water flow setpoint	C	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	


RMU7x0B: Inputs and outputs (continued)

Name in ETS	DP in basic type	Flags					Data point type KNX			Format	Unit	Value range	RMU7x0B rec., sends
		C	R	W	T	U	ID	DPT_Name					
[Controller 1] Precomfort setpoint high [°C]	U	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 1] Comfort setpoint high [°C]	U	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 1] Comfort setpoint low [°C]	U	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 1] Precomfort setpoint low [°C]	U	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 2...3] Economy setpoint high [°C]	A, C, U, P	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 2...3] Precomfort setpoint high [°C]	A, C, U, P	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 2...3] Comfort setpoint high [°C]	A, C, U, P	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 2...3] Comfort setpoint low [°C]	A, C, U, P	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 2...3] Precomfort setpoint low [°C]	A, C, U, P	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 2...3] Economy setpoint low [°C]	A, C, U, P	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	

For [Controller 1] Basic type U and [Controller 2], [Controller 3] basic types A, C, U, P, parameter "[Controller 2] Main controlled variable unit" ([Controller 2] as example) can be used to configure the setpoint for various units or physical variables.

□47	[Controller 2] Economy setpoint high [°C]	Input and Output	2 Byte	C R W T U
□48	[Controller 2] Precomfort setpoint high [°C]	Input and Output	2 Byte	C R W T U
□49	[Controller 2] Comfort setpoint high [°C]	Input and Output	2 Byte	C R W T U
□50	[Controller 2] Comfort setpoint low [°C]	Input and Output	2 Byte	C R W T U
□51	[Controller 2] Precomfort setpoint low [°C]	Input and Output	2 Byte	C R W T U
□52	[Controller 2] Economy setpoint low [°C]	Input and Output	2 Byte	C R W T U

See screenshot (right) for [Controller 2].

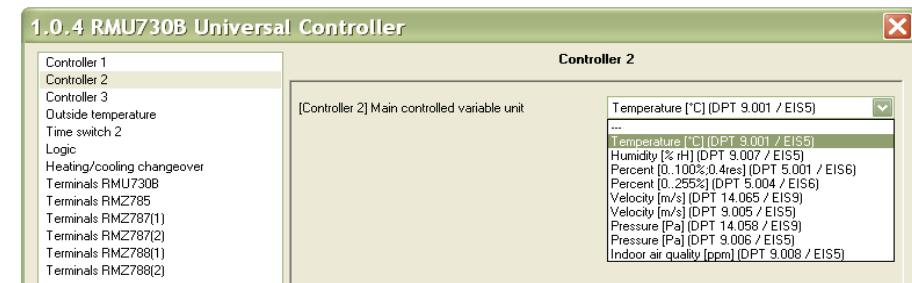

RMU7x0B: Inputs

Name in ETS	DP in basic type	Flags					Data point type KNX			Value range		RMU7x0B receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Confirm faults	Always	1	0	1	0	1	1.016	_Ack	1 bit B ₁	---	0 = No action 1 = Acknowledge / confirm	Event from KNX contact. No timeout monitoring.
Reset faults	Always	1	0	1	0	1	1.015	_Reset	1 bit B ₁	---	0 = No action 1 = Reset	Event from KNX contact. No timeout monitoring.
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact. “Disable” time-out monit 24 h.
Outside temperature	A, C, U, P	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.
Timer button	A	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Comfort prolongation ³⁾	Event from KNX contact.
Comfort button	A	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Optg mode changeover ³⁾	Event from KNX contact.
Room optg mode: Time switch (Parameterization: Slave)	A	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX operation (device/progr). Timeout monit 31 min.
Room temperature	A	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.
Room temperature: Setpoint relative	A	1	0	1	0	1	9.002	_Value_Tempd	2 bytes F ₁₆	K	-670760.00...+670760.00 Floating point	COV from KNX setp adj.
Heating/cooling changeover	A, C, U, P	1	0	1	1	0	1.100	_Heat/Cool	1 bit B ₁	---	0 = Cooling 1 = Heating (default)	Event, heart-beat 15 min.

³⁾ See Section 1.4.3, page 14.

RMU7x0B: Outputs

Name in ETS	DP in basic type	Flags					Data point type KNX			Format	Unit	Value range	RMU7x0B sends:
		C	R	W	T	U	ID	DPT_Name					
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---		[0]...255 = Log no. [RMU = 0] [0...2]...255 = Alarm priority [0...14]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---		0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Outside temperature ⁷⁾	A, C, U, P	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
Room optg mode: Time switch (Parameterization: Master)	A	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.	
Room optg mode: State	A, U	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.	
Room temperature ⁷⁾	A	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[Controller 1] Current cooling setpoint supply air ⁶⁾	A, P	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[Controller 1] Current heating setpoint supply air ⁶⁾	A, P	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[Controller 1] Current supply air temp setpoint ⁶⁾	P	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	

²⁾ See Section 1.4.3, page 14.

⁶⁾ See Section 1.5.1, page 16, Out of service.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMU7x0B: Outputs (continued)

Name in ETS	DP in basic type	Flags C R W T U					Data point type KNX			Value range		RMU7x0B sends:
		ID	DPT_Name	Format	Unit							
[Controller 1] Current setpoint ⁶⁾	A, C	1 0 0 1 0	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	Floating point					COV, heart-beat 15 min.
[Controller 1] Current setpoint [°C] ⁶⁾	U	1 0 0 1 0	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	Floating point					COV, heart-beat 15 min.
[Controller 2...3] Current setpoint [°C] ⁶⁾	A, C, U, P	1 0 0 1 0	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	Floating point					COV, heart-beat 15 min.
[Time switch 2] State	A, C, U, P	1 0 0 1 0	1.001 _Switch	1 bit B ₁	---	0 = Off						Event, heart-beat 15 min.
[Logic 1...2] State	A, C, U, P	1 0 0 1 0	1.001 _Switch	1 bit B ₁	---	0 = Off						Event, heart-beat 15 min.
Heating/cooling changeover	A, C, U, P	1 0 0 1 0	1.100 _Heat/Cool	1 bit B ₁	---	0 = Cooling						Event, heart-beat 15 min.

For the S-mode DPs (see table above).

- [Controller 1] Current setpoint [°C], basic type U.
- [Controller 2] Current setpoint [°C], basic types A, C, U, P.
- [Controller 3] Current setpoint [°C], basic types A, C, U, P.

"Current setpoint" is displayed as per the unit selected during S-mode DP configuration (e.g. "[Controller 2] Comfort setpoint high".

Thus, "Current setpoint" is not always sent as a temperature value [°C], but can also be sent as humidity value [% rH], for example.

The screenshot (right) shows possible units for "Current setpoint".

47	[Controller 2] Economy setpoint high [°C]	Input and Output	2 Byte	C R W T U
48	[Controller 2] Precomfort setpoint high [°C]	Input and Output	2 Byte	C R W T U
49	[Controller 2] Comfort setpoint high [°C]	Input and Output	2 Byte	C R W T U
50	[Controller 2] Comfort setpoint low [°C]	Input and Output	2 Byte	C R W T U
51	[Controller 2] Precomfort setpoint low [°C]	Input and Output	2 Byte	C R W T U
52	[Controller 2] Economy setpoint low [°C]	Input and Output	2 Byte	C R W T U

The screenshot shows the RMU730B Universal Controller software interface. On the left, a tree view lists various controller components: Controller 1, Controller 2, Controller 3, Outside temperature, Time switch 2, Logic, Heating/cooling changeover, Terminals RMU730B, Terminals RMZ785, Terminals RMZ787(1), Terminals RMZ787(2), Terminals RMZ788(1), and Terminals RMZ788(2). On the right, a detailed configuration window for 'Controller 2' is open. It shows the selected 'Main controlled variable unit' is 'Temperature [°C] (DPT 9.001 / EIS5)'. Below this, a dropdown menu lists other possible units: 'Temperature [°C] (DPT 9.001 / EIS5)', 'Humidity [% rH] (DPT 9.007 / EIS5)', 'Percent [0..100%;0..4res] (DPT 5.001 / EIS6)', 'Percent [0..255%] (DPT 5.004 / EIS6)', 'Velocity [m/s] (DPT 14.065 / EIS9)', 'Velocity [m/s] (DPT 9.005 / EIS5)', 'Pressure [Pa] (DPT 14.058 / EIS9)', 'Pressure [Pa] (DPT 9.006 / EIS5)', and 'Indoor air quality [ppm] (DPT 9.008 / EIS5)'.

⁶⁾ See Section 1.5.1, page 16, Out of service.

RMU7x0B: Terminals, Universal controllers RMU7x0B

- Input terminals N.X1...N.X6 (RMU710B) and N.X1...N.X8 (RMU720B, RMU730B) with S-mode function "Output", parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range		RMU7x0B sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input N.X_ [°C]	RMU7x0B	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input N.X_ [% rH]	RMU7x0B	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0...100%]	RMU7x0B	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.
Input N.X_ [0...255%]	RMU7x0B	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input N.X_ [m/s]	RMU7x0B	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [m/s]	RMU7x0B	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [Pa]	RMU7x0B	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [Pa]	RMU7x0B	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [ppm]	RMU7x0B	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0/1]	RMU7x0B	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Output terminals N.Q1, N.Q3 (RMU710B), N.Q1...N.Q5 (RMU720B), N.Q1...N.Q7 (RMU730B), parameterized for digital output value [0/1].

Output N.Q_	RMU7x0B	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
-------------	---------	---	---	---	---	---	-------	---------	----------------------	-----	-------------------	---------------------------

- Output terminals N.Y1, N.Y2 (RMU710B), N.Y1...N.Y3 (RMU720B), N.Y1...N.Y4 (RMU730B), parameterized for analog output value [0...100].

Output N.Y_	RMU7x0B	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.
-------------	---------	---	---	---	---	---	-------	----------	----------------------	---	-------------------------------	-------------------------

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMU7x0B: Terminals, Extension modules RMZ78x on Universal controller RMU7x0B

- Input terminals A__.X_ with S-mode function "Output", parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range		RMU7x0B sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input A__.X_ [°C]	RMZ78x	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input A__.X_ [% rH]	RMZ78x	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0...100%]	RMZ78x	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.
Input A__.X_ [0...255%]	RMZ78x	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input A__.X_ [m/s]	RMZ78x	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [m/s]	RMZ78x	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	RMZ78x	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	RMZ78x	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [ppm]	RMZ78x	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0/1]	RMZ78x	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

Input A5.X1...A5.X8	RMZ785
Input A7(1).X1...A7(1).X4	RMZ787(1)
Input A7(2).X1...A7(2).X4	RMZ787(2)
Input A8(1).X1...A8(1).X4	RMZ788(1)
Input A8(2).X1...A8(2).X4	RMZ788(2)

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMU7x0B: Terminals, Extension modules RMZ78x on Universal controller RMU7x0B (continued)

- Output terminals A__.Q_, parameterized for digital output value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Format	Unit	Value range	RMU7x0B sends:
		C	R	W	T	U	ID	DPT_Name					
Output A__.Q_	RMZ78x	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On		Event, heart-beat 15 min.

Output A7(1).Q1...A7(1).Q5 RMZ787(1) without Q4

Output A7(2).Q1...A7(2).Q5 RMZ787(2) without Q4

Output A8(1).Q1, A8(1).Q5 RMZ788(1)

Output A8(2).Q1, A8(2).Q5 RMZ788(2)

- Output terminals A__.Y_, parameterized for analog output value [0...100].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Format	Unit	Value range	RMU7x0B sends:
		C	R	W	T	U	ID	DPT_Name					
Output A__.Y_	RMZ78x	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %		COV, heart-beat 15 min.

Output A8(1).Y1, A8(1).Y2 RMZ788(1)

Output A8(2).Y1, A8(2).Y2 RMZ788(2)

Note: Max. 4 Extension modules RMZ78x (same or different types) are allowed per Universal controller RMU7x0B.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

2.4 RMU7x0B Step 3, S-mode data points

2.4.1 Basic type A, Ventilation controller

RMU7x0B Step 3: Inputs / Outputs, Basic type A

Name in ETS	DP active	Flags C R W T U					Data point type KNX ID DPT_Name			Format	Unit	Value range		RMU receives or sends:
System time (input)	Always ⁵⁾	1	0	1	1	1	19.001	_DateTime		8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 ---	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds Status bits ¹⁾	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)														
Date (input)	Always	1	0	1	1	1	11.001	_Date		3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)														
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay		3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)														

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMU7x0B Step 3: Inputs and outputs, Basic type A

S-mode DPs operated as input and output.

- Input: For operation using external device via KNX, Syncro controller RMU7x0B Step 3 receives the values of the S-mode DPs.
- Output: For operation from the Syncro controller RMU7x0B Step 3, the S-mode DP values are sent via KNX (synchronization of external unit).

The configuration of some S-mode data points is determined based on one of the following four control strategies for plant type "Basic type A, Ventilation controller":

- With supply air limitation [S'air limit]
- Cascade [Cascade]
- Constant (supply air) [Constant]
- Cascade/const (alternating) [A'nating]

Name in ETS	DP active	Flags C R W T U					Data point type KNX DPT_Name	Format	Unit	Value range	RMU7x0B rec., sends	
Room optg mode: Preselection	Plant type = B.type A	1	1	1	1	1	20.102	_HVACMode	1 Byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr)
[Controller 1] Economy heating setpoint	Plant type = B.type A	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 1] Precomfort heating setpoint		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 1] Comfort heating setpoint		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 1] Comfort cooling setpoint		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 1] Precomfort cooling setpoint		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 1] Economy cooling setpoint		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 1] Supply air limit max	A and [Cascade] [A'nating]	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 1] Supply air limit min		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 1] Limit value high	A and [S'air limit]	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 1] Limit value low		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.

RMU7x0B Step 3: Inputs and outputs, Basic type A (continued)


Name in ETS	DP active	Flags C R W T U					Data point type KNX ID DPT_Name			Format	Unit	Value range	RMU7x0B rec., sends
[Controller 2...3] Economy setpoint high [°C]	A and [Ctr. 2...3] Main ctrd variab. unit = Temp.	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 2...3] Precomfort setpoint high [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 2...3] Comfort setpoint high [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 2...3] Comfort setpoint low [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 2...3] Precomfort setpoint low [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Controller 2...3] Economy setpoint low [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	

[Controller 2...3] Economy setpoint high [°C] is displayed as per the unit selected during S-mode data point configuration.

[Controller 2...3] Economy setpoint high can be received and sent e.g. also as humidity value [% rH].

The screenshot shows the possible units for:

- [Controller 2...3] Economy setpoint high
- [Controller 2...3] Precomfort setpoint high
- [Controller 2...3] Comfort setpoint high
- [Controller 2...3] Comfort setpoint low
- [Controller 2...3] Precomfort setpoint low
- [Controller 2...3] Economy setpoint low

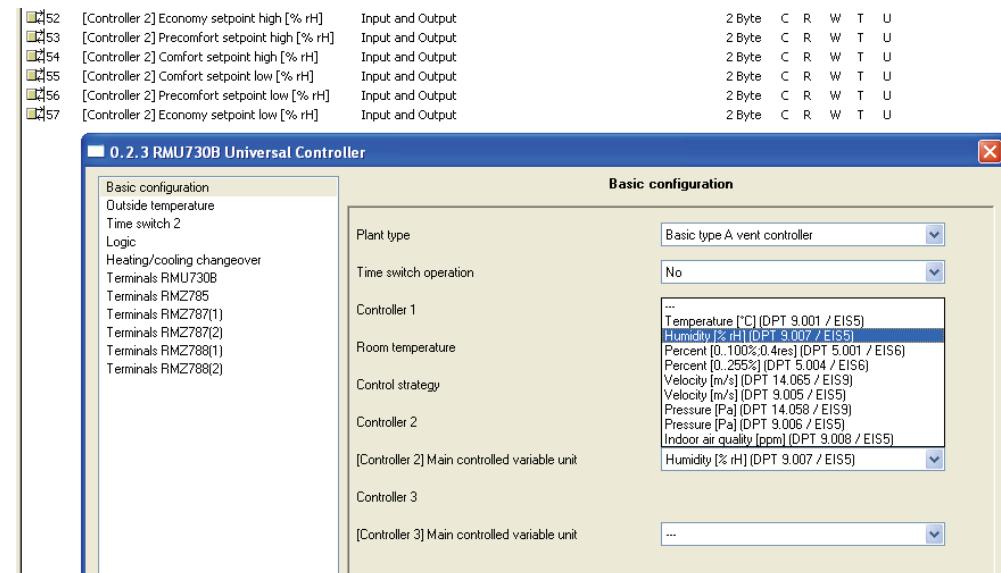

RMU7x0B Step 3: Inputs, Basic type A

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMU7xB receives:
		C	R	W	T	U	ID	DPT_Name					
Confirm faults	Always	1	0	1	0	1	1.016	_Ack	1 Bit B ₁	---	0 = No action 1 = Acknowledge / bestätigen	Event from KNX contact. No timeout monitoring.	
Reset faults	Always	1	0	1	0	1	1.015	_Reset	1 Bit B ₁	---	0 = No action 1 = Reset / zurücksetzen	Event from KNX contact. No timeout monitoring.	
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 Bit B ₁	---	0 = Disable / sperren 1 = Enable / freigeben (default)	Event from KNX contact. “Disable” timeout monit 24 h.	
Outside temperature	Outs.temp. = Receive	1	0	1	0	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.	
Timer button	Plant type = B.type A	1	0	1	0	1	1.017	_Trigger	1 Bit B ₁	---	0 = No action 1 = Comfort prolongation ³⁾	Event from KNX contact.	
Comfort button		1	0	1	0	1	1.017	_Trigger	1 Bit B ₁	---	0 = No action 1 = Optg mode changeover ³⁾	Event from KNX contact.	
Room optg mode: Time switch	A and Time swi. operation = Slave	1	0	1	0	1	20.102	_HVACMode	1 Byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX operation (device/progr). Timeout monit 31 min.	
Room temperature	A and Rm temp. = Receive	1	0	1	0	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.	
Room temperature: Setpoint relative	Plant type = B.type A	1	0	1	0	1	9.002	_Value_Tempd	2 Bytes F ₁₆	K	-670760.00...+670760.00 Floating point	COV from KNX setp adj.	
Heating/cooling changeover	H/C ch'over = Receive	1	0	1	0	1	1.100	_Heat/Cool	1 Bit B ₁	---	0 = Cooling 1 = Heating (default)	Event, heart-beat 15 min.	

³⁾ See Section 1.4.3, page 14.

RMU7x0B Step 3: Outputs, Basic type A

Name in ETS	DP active	Flags					Data point type KNX		Format	Unit	Value range	RMU7x0B sends:
		C	R	W	T	U	ID	DPT_Name				
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 Bytes strukt.	---	[0]...255 = Log no. [RMU = 0] [0...2]...255 = Alarm priority [0...14]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 Bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Outside temperature ⁷⁾	Outs.temp. = Transmit	1	0	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Event, heart-beat 30 min.
Room optg mode: Time switch	A and Time swi. operation = Master	1	0	0	1	0	20.102	_HVACMode	1 Byte N ₈	Enum.	0 = Not used 1 = Komfort 2 = Prekomfort (Standby) 3 = Economy 4 = Schutzbetrieb (BldgProtect) 5...255 Reserve	COV, heart-beat 15 min.
Room optg mode: State	Plant type = B.type A	1	0	0	1	0	20.102	_HVACMode	1 Byte N ₈	Enum.	0 = Not used 1 = Komfort 2 = Prekomfort (Standby) 3 = Economy 4 = Schutzbetrieb (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
Room temperature ⁷⁾	A and Rm temp. = Transmit	1	0	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Event, heart-beat 15 min.
[Controller 1] Current room temp setpoint ⁶⁾	A and [Cascade] [A'natting]	1	0	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.

²⁾ See Section 1.4.3, page 14.

⁶⁾ See Section 1.5.1, page 16, Out of service.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMU7x0B Step 3: Outputs, Basic type A (continued)


Name in ETS	DP active	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	RMU7x0B sends:
[Controller 1] Current setpoint ⁶⁾	A and [S'air limit] [Constant] [A'nating]	1	0	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
[Controller 2...3] Current setpoint [°C] ⁶⁾	A and [Ctr. 2...3] Main ctrd variab. unit = Temp.	1	0	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
[Time switch 2] State	[Time swi. 2] State = Yes	1	0	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On	COV, heart-beat 15 min.
[Logic 1...4] State	[Logic X] State = Yes	1	0	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
Heating/cooling changeover	H/C ch'over = Transmit	1	0	0	1	0	1.100	_Heat/Cool	1 Bit B ₁	---	0 = Cooling 1 = Heating (default)	Event, heart-beat 15 min.

⁶⁾ See Section 1.5.1, page 16, Out of service.

- [Controller 1] Current setpoint (always [°C])
 - [Controller 2...3] Current setpoint [°C] is displayed as per the unit selected during S-mode data point configuration.
- [Controller 2...3] Current setpoint can be sent e.g. also as humidity value [% rH].

The screenshot shows:

- [Controller 1] Current setpoint (always [°C]) and as an example
[Controller 2] Current setpoint [% rH]

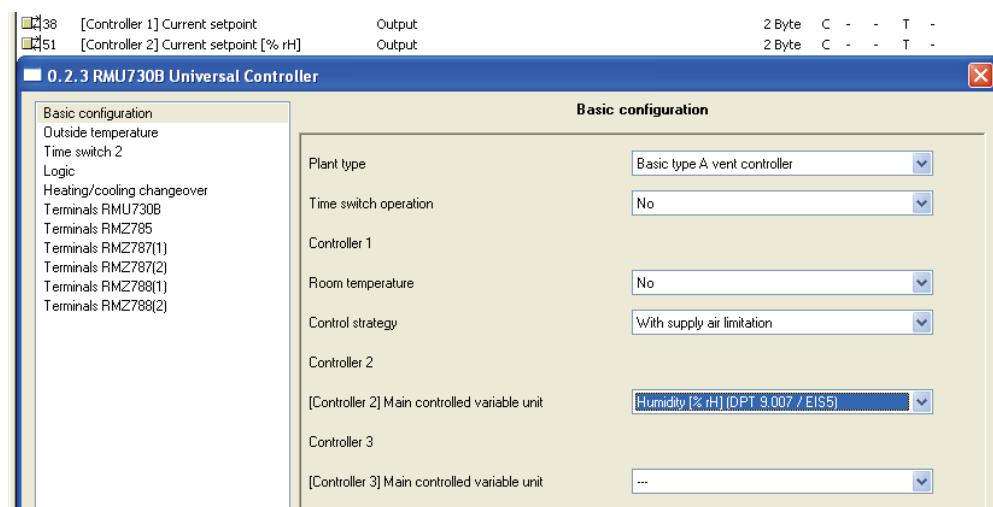

2.4.2 Basic type P, Primary air handling

RMU7x0B Step 3: Inputs / Outputs, Basic type P

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMU receives or sends:
		C	R	W	T	U	ID	DPT_Name					
System time (input)	Always ⁵⁾	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 ---	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds Status bits ¹⁾	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)													
Date (input)	Always	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)													
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)													
[Controller 1] Current supply air temp setpoint	Plant type = B.type P	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point		COV from KNX setp adj.

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMU7x0B Step 3: Inputs and outputs, Basic type P

S-mode DPs operated as input and output.

- Input: For operation using external device via KNX, Syncro controller RMU7x0B Step 3 receives the values of the S-mode DPs.
- Output: For operation from the Syncro controller RMU7x0B Step 3, the S-mode DP values are sent via KNX (synchronization of external unit).

Name in ETS	DP active	Flags					Data point type KNX				Value range	RMU7x0B rec., sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
[Controller 1] Limit value high	Plant type = B.type P	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 1] Limit value low		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 2...3] Precomfort setpoint high [°C]	P and [Ctr. 2...3] Main ctrd variab. unit = Temp.	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 2...3] Comfort setpoint high [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 2...3] Comfort setpoint low [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 2...3] Precomfort setpoint low [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.

RMU7x0B Step 3: Inputs, Basic type P

Name in ETS	DP active	Flags C R W T U					Data point type KNX			Value range		RMU7xB receives:
		ID	DPT_Name	Format	Unit							
Confirm faults	Always	1 0 1 0 1	1.016 _Ack	1 Bit B ₁	---	0 = No action 1 = Acknowledge / bestätigen						Event from KNX contact. No timeout monitoring.
Reset faults	Always	1 0 1 0 1	1.015 _Reset	1 Bit B ₁	---	0 = No action 1 = Reset / zurücksetzen						Event from KNX contact. No timeout monitoring.
Fault transmission (enable/disable)	Always	1 0 1 0 1	1.003 _Enable	1 Bit B ₁	---	0 = Disable / sperren 1 = Enable / freigeben (default)						Event from KNX contact. “Disable” time-out monit 24 h.
Outside temperature	Outs.temp. = Receive	1 0 1 0 1	9.001 _Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point						COV from KNX sensor.
[Controller 1] Request input	Plant type = B.type P	1 0 1 0 1	1.001 _Switch	1 Bit B ₁	---	0 = Off / No request 1 = On / Request						Event, heart-beat 15 min.
Heating/cooling changeover	H/C ch'over = Receive	1 0 1 0 1	1.100 _Heat/Cool	1 Bit B ₁	---	0 = Cooling 1 = Heating (default)						Event, heart-beat 15 min.

RMU7x0B Step 3: Outputs, Basic type P

Name in ETS	DP active	Flags C R W T U					Data point type KNX			Value range		RMU7x0B sends:
		ID	DPT_Name	Format	Unit							
Fault information	Always	1 0 0 1 0	219.001	_AlarmInfo ²⁾	6 Bytes strukt.	---	[0]...255 = Log no. [RMU = 0] [0...2]...255 = Alarm priority [0...14]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state			Heartbeat 30 min.		
Fault state (normal/faulty)	Always	1 0 0 1 0	1.005	_Alarm	1 Bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty			Event, heart- beat 30 min.		
Outside temperature ⁷⁾	Outs.temp. = Transmit	1 0 0 1 0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point			COV, heart- beat 15 min.		
[Controller 1] Current supply air temp setpoint ⁶⁾	Plant type = B.type P]	1 0 0 1 0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point			COV, heart- beat 15 min.		
[Controller 2...3] Current setpoint [°C] ⁶⁾	P and [Ctr. 2...3] Main ctrd variab. unit = Temp.	1 0 0 1 0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point			COV, heart- beat 15 min.		
[Time switch 1] State	P and [Time swi. 1] State = Yes	1 0 0 1 0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On			Event, heart- beat 15 min.		
[Time switch 2] State	[Time swi. 2] State = Yes	1 0 0 1 0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On			Event, heart- beat 15 min.		
[Logic 1...4] State	[Logic X] State = Yes	1 0 0 1 0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On			Event, heart- beat 15 min.		
Heating/cooling changeover	H/C ch'over = Transmit	1 0 0 1 0	1.100	_Heat/Cool	1 Bit B ₁	---	0 = Cooling 1 = Heating (default)			Event, heart- beat 15 min.		

²⁾ See Section 1.4.3, page 14.

⁶⁾ See Section 1.5.1, page 16, Out of service.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

2.4.3 Basic type C, Chilled water precontrol

RMU7x0B Step 3: Inputs / Outputs, Basic type C

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMU receives or sends:
		C	R	W	T	U	ID	DPT_Name					
System time (input)	Always ⁵⁾	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 ---	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds Status bits ¹⁾	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)													
Date (input)	Always	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)													
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)													

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMU7x0B Step 3: Inputs and outputs, Basic type C

S-mode DPs operated as input and output.

- Input: For operation using external device via KNX, Syncro controller RMU7x0B Step 3 receives the values of the S-mode DPs.
- Output: For operation from the Syncro controller RMU7x0B Step 3, the S-mode DP values are sent via KNX (synchronization of external unit).

Name in ETS	DP active	Flags					Data point type KNX				Value range	RMU7x0B rec., sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
[Controller 1] Heating flow setpoint	Plant type = B.type C	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 1] Chilled water flow setpoint		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 2...3] Precomfort setpoint high [°C]	C and [Ctr. 2...3] Main ctrd variab. unit = Temp.	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 2...3] Comfort setpoint high [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 2...3] Comfort setpoint low [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 2...3] Precomfort setpoint low [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.

RMU7x0B Step 3: Inputs, Basic type C

Name in ETS	DP active	Flags C R W T U					Data point type KNX			Value range		RMU7xB receives:
		ID	DPT_Name	Format	Unit							
Confirm faults	Always	1 0 1 0 1	1.016 _Ack	1 Bit B ₁	---	0 = No action 1 = Acknowledge / bestätigen						Event from KNX contact. No timeout monitoring.
Reset faults	Always	1 0 1 0 1	1.015 _Reset	1 Bit B ₁	---	0 = No action 1 = Reset / zurücksetzen						Event from KNX contact. No timeout monitoring.
Fault transmission (enable/disable)	Always	1 0 1 0 1	1.003 _Enable	1 Bit B ₁	---	0 = Disable / sperren 1 = Enable / freigeben (default)						Event from KNX contact. “Disable” time- out monit 24 h.
Outside temperature	Outs.temp. = Receive	1 0 1 0 1	9.001 _Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point						COV from KNX sensor.
[Controller 1] Request input	Plant type = B.type C	1 0 1 0 1	1.001 _Switch	1 Bit B ₁	---	0 = Off / No request 1 = On / Request						Event, heart- beat 15 min.
Heating/cooling changeover	H/C ch'over = Receive	1 0 1 0 1	1.100 _Heat/Cool	1 Bit B ₁	---	0 = Cooling 1 = Heating (default)						Event, heart- beat 15 min.

RMU7x0B Step 3: Outputs, Basic type C

Name in ETS	DP active	Flags C R W T U					Data point type KNX			Value range		RMU7x0B sends:
		ID	DPT_Name	Format	Unit							
Fault information	Always	1 0 0 1 0	219.001	_AlarmInfo ²⁾	6 Bytes strukt.	---	[0]...255 = Log no. [RMU = 0] [0...2]...255 = Alarm priority [0...14]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state			Heartbeat 30 min.		
Fault state (normal/faulty)	Always	1 0 0 1 0	1.005	_Alarm	1 Bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty			Event, heart- beat 30 min.		
Outside temperature ⁷⁾	Outs.temp. = Transmit	1 0 0 1 0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point			COV, heart- beat 15 min.		
[Controller 1] Current setpoint ⁶⁾	Plant type = B.type C]	1 0 0 1 0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point			COV, heart- beat 15 min.		
[Controller 2...3] Current setpoint [°C] ⁶⁾	C and [Ctr. 2...3] Main ctrd variab. unit = Temp.	1 0 0 1 0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point			COV, heart- beat 15 min.		
[Time switch 1] State	C and [Time swi. 1] State = Yes	1 0 0 1 0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On			Event, heart- beat 15 min.		
[Time switch 2] State	[Time swi. 2] State = Yes	1 0 0 1 0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On			Event, heart- beat 15 min.		
[Logic 1...4] State	[Logic X] State = Yes	1 0 0 1 0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On			Event, heart- beat 15 min.		
Heating/cooling changeover	H/C ch'over = Transmit	1 0 0 1 0	1.100	_Heat/Cool	1 Bit B ₁	---	0 = Cooling 1 = Heating (default)			Event, heart- beat 15 min.		

²⁾ See Section 1.4.3, page 14.

⁶⁾ See Section 1.5.1, page 16, Out of service.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

2.4.4 Basic type U, Universal controller

RMU7x0B Step 3: Inputs / Outputs, Basic type U

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMU receives or sends:
		C	R	W	T	U	ID	DPT_Name					
System time (input)	Always ⁵⁾	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 ---	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds Status bits ¹⁾	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)													
Date (input)	Always	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)													
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)													

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMU7x0B Step 3: Inputs and outputs, Basic type U

S-mode DPs operated as input and output.

- Input: For operation using external device via KNX, Syncro controller RMU7x0B Step 3 receives the values of the S-mode DPs.
- Output: For operation from the Syncro controller RMU7x0B Step 3, the S-mode DP values are sent via KNX (synchronization of external unit).

Name in ETS	DP active	Flags					Data point type KNX				Value range	RMU7x0B rec., sends
		C	R	W	T	U	DPT_Name	Format	Unit			
Room optg mode: Preselection	Plant type = B.type U	1	1	1	1	1	20.102	_HVACMode	1 Byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr)
[Controller 2...3] Precomfort setpoint high [°C]	U and [Ctr. 2...3] Main ctrd variab. unit = Temp.	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 2...3] Comfort setpoint high [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 2...3] Comfort setpoint low [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Controller 2...3] Precomfort setpoint low [°C]		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.

RMU7x0B Step 3: Inputs, Basic type U

Name in ETS	DP active	Flags					Data point type KNX			Value range		RMU7xB receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Confirm faults	Always	1	0	1	0	1	1.016	_Ack	1 Bit B ₁	---	0 = No action 1 = Acknowledge / bestätigen	Event from KNX contact. No timeout monitoring.
Reset faults	Always	1	0	1	0	1	1.015	_Reset	1 Bit B ₁	---	0 = No action 1 = Reset / zurücksetzen	Event from KNX contact. No timeout monitoring.
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 Bit B ₁	---	0 = Disable / sperren 1 = Enable / freigeben (default)	Event from KNX contact. "Disable" time-out monit 24 h.
Outside temperature	Outs.temp = Receive	1	0	1	0	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.
Room optg mode: Time switch	U and Time swi. operation = Slave	1	0	1	0	1	20.102	_HVACMode	1 Byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX operation (device/progr). Timeout monit 31 min.
Heating/cooling changeover	H/C ch'over = Receive	1	0	1	0	1	1.100	_Heat/Cool	1 Bit B ₁	---	0 = Cooling 1 = Heating (default)	Event, heart-beat 15 min.

RMU7x0B Step 3: Outputs, Basic type U

Name in ETS	DP active	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	RMU7x0B sends:
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 Bytes strukt.	---	[0]...255 = Log no. [RMU = 0] [0...2]...255 = Alarm priority [0...14]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 Bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty	Event, heart- beat 30 min.
Outside temperature ⁷⁾	Outs.temp. = Transmit	1	0	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Event, heart- beat 30 min.
Room optg mode: Time switch	U and Time swi. operation = Master	1	0	0	1	0	20.102	_HVACMode	1 Byte N ₈	Enum.	0 = Not used 1 = Komfort 2 = Prekomfort (Standby) 3 = Economy 4 = Schutzbetrieb (BldgProtect) 5...255 Reserve	COV, heart- beat 15 min.
Room optg mode: State	Plant type = B.type U	1	0	0	1	0	20.102	_HVACMode	1 Byte N ₈	Enum.	0 = Not used 1 = Komfort 2 = Prekomfort (Standby) 3 = Economy 4 = Schutzbetrieb (BldgProtect) 5...255 Reserve	Event, heart- beat 15 min.
[Controller 1...3] Current setpoint [°C] ⁶⁾	U and [Ctr. 2...3] Main ctrd variab. unit = Temp.	1	0	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart- beat 15 min.

²⁾ See Section 1.4.3, page 14.

⁶⁾ See Section 1.5.1, page 16, Out of service.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMU7x0B Step 3: Outputs, Basic type U (continued)

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMU7x0B sends:
		C	R	W	T	U	ID	DPT_Name					
[Time switch 2] State	[Time swi. 2] State = Yes	1	0	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On	COV, heart-beat 15 min.	
[Logic 1...4] State	[Logic X] State = Yes	1	0	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.	
Heating/cooling changeover	H/C ch'over = Transmit	1	0	0	1	0	1.100	_Heat/Cool	1 Bit B ₁	---	0 = Cooling 1 = Heating (default)	Event, heart-beat 15 min.	

2.4.5 Terminal inputs RMU7x0B Step 3 as reception objects

RMU7x0B Step 3: Terminal inputs as reception objects, all Basic types

- Universal input N.X1...N.X8, parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1]. The value can be received in S-mode via KNX.

Name in ETS	DP	Flags					Data point type KNX				Value range	RMU7x0B receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input N.X_ [°C]	Rec. object	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input N.X_ [% rH]	Rec. object	1	0	1	0	1	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0...100%]	Rec. object	1	0	1	0	1	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input N.X_ [0...255%]	Rec. object	1	0	1	0	1	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input N.X_ [m/s]	Rec. object	1	0	1	0	1	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [m/s]	Rec. object	1	0	1	0	1	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [Pa]	Rec. object	1	0	1	0	1	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [Pa]	Rec. object	1	0	1	0	1	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [ppm]	Rec. object	1	0	1	0	1	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0/1]	Rec. object	1	0	1	0	1	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

Notes:

- Receipt of an S-mode DP via input N.X_ values, that is outside the range limits ("Value high" and "Value low"), is limited by them, e.g. air velocity >20 [m/s] are limited to 20 [m/s] (when "Value high" = 20 [m/s]).
- The following priority applies to communication of data (e.g. sensor values) in S-mode and LTE mode (both modes possible at the same): Value in S-mode before value in LTE mode before terminal input value.

2.4.6 Terminal inputs RMU7x0B Step 3 as transmission objects

RMU7x0B Step 3: Terminal inputs as transmission objects, all Basic types

- Universal inputs N.X1...N.X8 can be parameterized for analog value [°C], [% rH], etc., or for digital value [0/1]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					Data point type KNX				Value range	RMU7x0B sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input N.X_ [°C]	Trans. object	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input N.X_ [% rH]	Trans. object	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0...100%]	Trans. object	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input N.X_ [0...255%]	Trans. object	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input N.X_ [m/s]	Trans. object	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [m/s]	Trans. object	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [Pa]	Trans. object	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [Pa]	Trans. object	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [ppm]	Trans. object	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0/1]	Trans. object	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

2.4.7 Terminal outputs RMU7x0B Step 3 as transmission objects

RMU7x0B Step 3: Terminal outputs as transmission objects, all Basic types

- The relay outputs N.Q1...N.Q7, parameterized for digital output value [0/1]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range	RMU7x0B sends:	
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Output N.Q_	Trans. object	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Analog outputs N.Y1...N.Y4, parameterized for analog output value [0...100]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range	RMU7x0B sends:	
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Output N.Y_	Trans. object	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

2.4.8 Terminal inputs as reception objects, Extension modules RMZ78x

RMU7x0B Step 3: Terminal inputs as reception objects, Extension modules RMZ78x

- Universal inputs A__.X1...A__.X8, parameterized for analog values [°C], [% rH] etc., or digital value [0/1]. The value can be received in S-mode via KNX.

Name in ETS	DP	Flags					Data point type KNX				Value range	RMU7x0B receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input A__.X_ [°C]	Rec. object	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input A__.X_ [% rH]	Rec. object	1	0	1	0	1	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0...100%]	Rec. object	1	0	1	0	1	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input A__.X_ [0...255%]	Rec. object	1	0	1	0	1	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input A__.X_ [m/s]	Rec. object	1	0	1	0	1	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [m/s]	Rec. object	1	0	1	0	1	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	Rec. object	1	0	1	0	1	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	Rec. object	1	0	1	0	1	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [ppm]	Rec. object	1	0	1	0	1	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0/1]	Rec. object	1	0	1	0	1	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Extension modules RMZ78x with universal inputs as reception objects

Input A5.X1...A5.X8	RMZ785
Input A7(1).X1...A7(1).X4	RMZ787(1)
Input A7(2).X1...A7(2).X4	RMZ787(2)
Input A8(1).X1...A8(1).X4	RMZ788(1)
Input A8(2).X1...A8(2).X4	RMZ788(2)

2.4.9 Terminal inputs as transmission objects, Extension modules RMZ78x

RMU7x0B Step 3: Terminal inputs as transmission objects, Extension modules RMZ78x

- Universal inputs A__.X1...A__.X8, can be parameterized for analog value [°C], [% rH] etc., or for digital value [0/1]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					ID	DPT_Name	Format	Unit	Value range	RMU7x0B sends:
		C	R	W	T	U						
Input A__.X_ [°C]	Trans. object	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input A__.X_ [% rH]	Trans. object	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0...100%]	Trans. object	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input A__.X_ [0...255%]	Trans. object	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input A__.X_ [m/s]	Trans. object	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [m/s]	Trans. object	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	Trans. object	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	Trans. object	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [ppm]	Trans. object	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0/1]	Trans. object	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Extension modules RMZ78x with universal inputs as transmission objects

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0

Input A5.X1...A5.X8	RMZ785
Input A7(1).X1...A7(1).X4	RMZ787(1)
Input A7(2).X1...A7(2).X4	RMZ787(2)
Input A8(1).X1...A8(1).X4	RMZ788(1)
Input A8(2).X1...A8(2).X4	RMZ788(2)

2.4.10 Terminal outputs as transmission objects, Extension modules RMZ78x

RMU7x0B Step 3: Terminal outputs as transmission objects, Extension modules RMZ78x

- Relay outputs A__.Q_, parameterized for digital output value [0/1]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	RMU7x0B sends:
Output A__.Q_	Trans. object	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Extension modules RMZ78x with relay outputs as transmission objects

Output A7(1).Q1...A7(1).Q5	RMZ787(1) without Q4
Output A7(2).Q1...A7(2).Q5	RMZ787(2) without Q4
Output A8(1).Q1, A8(1).Q5	RMZ788(1)
Output A8(2).Q1, A8(2).Q5	RMZ788(2)

- Analog outputs A__.Y_, parameterized for analog output value [0...100]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	RMU7x0B sends:
Output A__.Y_	Trans. object	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.

- Extension modules RMZ78x with analog outputs as transmission objects

Output A8(1).Y1, A8(1).Y2	RMZ788(1)
Output A8(2).Y1, A8(2).Y2	RMZ788(2)

Note: Max. 4 Extension modules RMZ78x (same or different types) are allowed per Universal controller RMU7x0B Step 3.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

3 RMH760, RMH760B Heating controller


3.1 Overview

Brief description

The Syncro 700 heating controller RMH760 is used either as heating circuit or primary controller.

The Syncro 700 heating controller series B, i.e. RMH760B, in addition can be deployed in remote heating plants.

The controller types RMU760 and RMU760B are identical with regard to design and dimensions.

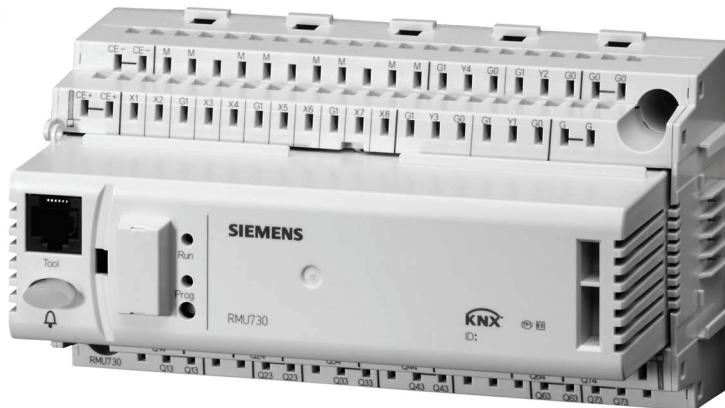

Documentation

Heating controller
RMH760

Data sheet Modular heating controller RMH760 **N3131**
Basic documentation Modular heating controller RMH760 **P3131**

Heating controller
RMH760B

Data sheet Modular heating controller RMH760B **N3133**
Basic documentation Modular heating controller RMH760B **P3133**

Number of S-mode DPs

	RMH760	RMH760B
Inputs / Outputs	3	3
Inputs and Outputs	0	17
Inputs	30	26
Outputs	17	121

3.1.1 RMH760 Heating controller

DP in basic type column

The tables in Section 3.2, column **DP in basic type**, show the basic types with the data point communicating in S-mode. For more information on the basic types, refer to the documentation on basics P3131.

Basic types

The RMH760 heating controller is delivered with 28 basic types. The basic types correspond to combinations of plants and partial plants (see next page).

Basic types n-x	0-x	Heat consumers
	1-x	Primary control for internal and external heat consumers
	2-x	Primary control for external heat consumers
	3-x	Boiler temperature control
	4-x	Boiler temperature control with maintained boiler return temperature
Basic types x-n	x-1	DHW heating
	x-2	Control of 1 heating circuit
	x-3	Control of 1 heating circuit plus DHW heating
	x-4	Control of 2 heating circuits
	x-5	Control of 2 heating circuits plus DHW heating

3.1.2 RMH760B Heating controller

DP in FB column

The tables in Section 3.3, column **DP in FB**, show the function blocks with the data point communicating in S-mode. For more information on the function blocks, refer to the documentation on basics P3133.

Indication:	Meaning:
Always	Standard S-mode DP
All	S-mode in all function blocks
MR	Main controller
PC	Primary controller
B	Boiler
HC 1...3	Heating circuit 1...3
DHW	DHW heating

Plant types

The RMH760B heating controller is delivered with 41 plant types. The plant types are based on function blocks (FB). You can retroactively change or extend the supplementary configuration for each plant type.

Plant type designation

A plant type comprises H and a two-digit number e.g. H3-1.

- The first digit specifies the type of heat generation or distribution.
- The second digit specifies the type and number of internal consumers.

1st digit for plant type: Heat generation / distribution		Function block FB	2nd digit for plant type: Consumer		Function block FB
0	None	--	0	None.	--
1	Primary controller to remote heating	Main controller	1	DHW heating	DHW
2	Primary controller only for external consumers	Primary controller	2	Control of 1 heating circuit	Heating circuit 1
3	Heat generator	Boiler	3	Control of 1 heating circuit plus DHW heating	DHW and heat. circ. 1
4	Heat generator with return temperature control	Boiler	4	Control of 2 heating circuits	Heating circuit 2
5	Consumer to remote heating with storage tank charge and mixing valve control as preset DHW type	--	5	Control of 2 heating circuits plus DHW heating	DHW and heating circuit 2
6	Consumer to remote heating with direct DHW heating as preset DHW type	--	6	Control of 3 heating circuits	Heating circuit 3
			7	Control of 3 heating circuits plus DHW heating	DHW and heating circuit 3

Example,
plant type H3-1

Plant type H3-1 contains function blocks "Boiler" and "domestic hot water heating" (short DHW).

Plant type	Description	Plant diagram
H3-1	<p>N1: Boiler temperature control.</p> <p>A3: DHW circuit with mixing valve controlled primary storage tank and charging pump (DHW 2).</p>	

Basic type H

Basic type H is not preconfigured, i.e. no inputs or outputs are preconfigured. Choose this type when the real plant greatly differs from existing plant types (H with letters), and when manual, supplementary configuration requires greater effort than fully configuring plain basic type H.

Parameterization RMH760, RMH760B

Example: Parameter
"Heating circuit 1"

An S-mode DP must be configured in ETS and the Synco device to ensure that the S-mode DP transmits valid values. See Section 1.5 on workflows.

The value assignment "Yes" to parameter "Heating circuit 1" configures S-mode DPs 16, 17, 18, 19, ... as well as parameters "Room temperature" and "Time switch operation".

The screenshot shows the ETS software interface with the following details:

- Device Tree:** Shows the hierarchy of devices: 1.0.1 Step 1B QAX910 Central Apartment Unit, 1.0.2 Step 1 QAX910 Central Apartment Unit, 1.0.3 RMH760B Heating Controller, and 1.0.4 RMU730B Universal Controller.
- Data Point Table:**

Number	Name	Object Function	Desc...	Group Addr...	Length	C	R	W	T	U	Data Type	Priority
120	System time	Input / Output			8 Byte	C -	W T U				High	
121	Date	Input / Output			3 Byte	C -	W T U				Low	
122	Time of day	Input / Output			3 Byte	C -	W T U				Low	
123	Fault information	Output			6 Byte	C -	- T -				Alarm	
124	Confirm faults	Input			1 bit	C -	W - U				Low	
125	Reset faults	Input			1 bit	C -	W - U				Low	
126	Fault state (normal/faulty)	Output			1 bit	C -	- T -				Low	
127	Fault transmission (enable/disable)	Input			1 bit	C -	W - U				Low	
1216	[Heat circ 1] Timer button	Input (Trigger)			1 bit	C -	W - U				Low	
1217	[Heat circ 1] Comfort button	Input (Trigger)			1 bit	C -	W - U				Low	
1218	[Heat circ 1] Room temp: Setpoint relative	Input			2 Byte	C -	W - U				Low	
1219	[Heat circ 1] Room operating mode: Preselection	Input and Output			1 Byte	C -	W T U				Low	
1220	[Heat circ 1] Room operating mode: State	Output			1 Byte	C -	- T -				Low	
1223	[Heat circ 1] Room temp: Protection setpoint	Input and Output			2 Byte	C R W T U					Low	
1224	[Heat circ 1] Room temp: Economy setpoint	Input and Output			2 Byte	C R W T U					Low	
1225	[Heat circ 1] Room temp: Precomfort setpoint	Input and Output			2 Byte	C R W T U					Low	
1226	[Heat circ 1] Room temp: Comfort setpoint	Input and Output			2 Byte	C R W T U					Low	
1227	[Heat circ 1] Mixing valve position	Output			1 Byte	C R -	- T -				Low	
1210	[Heat circ 1] Flow temperature: Setpoint	Output			2 Byte	C R -	- T -				Low	
1211	[Heat circ 1] Room temp: Setpoint act.	Output			2 Byte	C R -	- T -				Low	
1212	[Heat circ 1] Return temperature max.	Output			2 Byte	C R -	- T -				Low	
- Configuration Dialog:** Shows the "1.0.3 RMH760B Heating Controller" dialog with the "Applications" tab selected. It lists various parameters and their current settings (e.g., "Heating circuit 1" is set to "Yes").

3.2 RMH760, S-mode data points

RMH760: Inputs / Outputs

Name in ETS	DP in basic type	Flags					ID	DPT_Name	Format	Unit	Value range	RMH receives or sends:
		B	R	W	T	U						
System time (input)	Always ⁵⁾	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 Status bits ¹⁾	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds or to KNX system time receiver cycl. 10 min.
System time (output)												
Date (input)	Always	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾
Date (output)												
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds
Time of day (output)												

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMH760: Inputs

Name in ETS	DP in basic type	Flags					Data point type KNX			Format	Unit	Value range	RMH760 receives:
		B	R	W	T	U	ID	DPT_Name					
Confirm faults	Always	1	0	1	0	1	1.016	_Ack	1 bit B ₁	---	0 = No action 1 = Acknowledge / confirm	Event from KNX contact. No timeout monitoring.	
Reset faults	Always	1	0	1	0	1	1.015	_Reset	1 bit B ₁	---	0 = No action 1 = Reset	Event from KNX contact. No timeout monitoring.	
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact. “Disable” timeout monit 24 h.	
Outside temperature	x-x (all)	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.	
Wind speed	x-x (all)	1	0	1	0	1	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	0...670760.00 Floating point	COV from KNX wind speed meter.	
Solar radiation	x-x (all)	1	0	1	0	1	9.022	_PowerDensity	2 bytes F ₁₆	W/m ²	0...670760.00 Floating point	COV from KNX solar sensor.	
Heating circuit 1: Room temperature	x-2, x-4	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.	
Heat circ 1: Timer button	x-2, x-4	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Comfort prolongation ³⁾	Event from KNX contact.	
Heat circ 1: Comfort button	x-2, x-4	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Operating mode ch'over ³⁾	Event from KNX contact.	
Heat circ 1 Room temp: Setpoint relative	x-2, x-4	1	0	1	0	1	9.002	_Value_Tempd	2 bytes F ₁₆	K	-670760.00...+670760.00 Floating point	COV from KNX setp adj.	
Heat circ 1 Room operating mode: Preselection	x-2, x-4	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr)	

³⁾ See Section 1.4.3, page 14.

RMH760: Inputs (continued)

Name in ETS	DP in basic type	Flags					Data point type KNX			Value range		RMH760 receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Heat circ 1 Room optg mode: Time switch op Slave	x-2, x-4	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX operation (device/progr). Timeout monit 31 min.
Heat circ 1 Room temp: Protection setpoint	x-2, x-4	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
Heat circ 1 Room temp: Economy setpoint	x-2, x-4	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
Heat circ 1 Room temp: Precomfort setpoint	x-2, x-4	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
Heat circ 1 Room temp: Comfort setpoint	x-2, x-4	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
Heat circuit 2: Room temperature	x-4	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.
Heat circ 2: Timer button	x-4	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Comfort prolongation ³⁾	Event from KNX contact.
Heat circ 2: Comfort button	x-4	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Operating mode ch'over ³⁾	Event from KNX contact.
Heat circ 2 Room temp: Setpoint relative	x-4	1	0	1	0	1	9.002	_Value_Tempd	2 bytes F ₁₆	K	-670760.00...+670760.00 Floating point	COV from KNX setp adj.
Heat circ 2 Room operating mode: Preselection	x-4	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr)
Heat circ 2 Room optg mode: Time switch op Slave	x-4	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX operation (device/progr). Timeout monit 31 min.

³⁾ See Section 1.4.3, page 14.

RMH760: Inputs (continued)

Name in ETS	DP in basic type	Flags					Data point type KNX			Format	Unit	Value range	RMH760 receives:
		C	R	W	T	U	ID	DPT_Name					
Heat circ 2 Room temp: Protection setpoint	x-4	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
Heat circ 2 Room temp: Economy setpoint	x-4	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
Heat circ 2 Room temp: Precomfort setpoint	x-4	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
Heat circ 2 Room temp: Comfort setpoint	x-4	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
DHW: Forced charging	x-1, x-3, x-5	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Action / forced charging	Event from KNX contact.	
DHW operating mode: Preselection	x-1, x-3, x-5	1	0	1	0	1	20.103	_DHWMode	1 byte N ₈	Enum.	0 = Auto 1 = Legionella prot. (65 °C) 2 = Normal temp. (55 °C) 3 = Reduced temp. (40 °C) 4 = Protection (5 °C) 5...255 Reserve	Event from KNX preselect operation (device/progr)	
DHW operating mode: Time switch op Slave	x-1, x-3, x-5	1	0	1	0	1	20.103	_DHWMode	1 byte N ₈	Enum.	0 = Not used 1 = Legionella prot. (65 °C) 2 = Normal temp. (55 °C) 3 = Reduced temp. (40 °C) 4 = Protection (5 °C) 5...255 Reserve	Event from KNX preselect operation (device/progr). Timeout monit 31 min.	
DHW: Storage tank temp setpoint	x-1, x-3, x-5	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	

RMH760: Outputs

Name in ETS	DP in basic type	Flags					Data point type KNX			Value range		RMH760 sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---	[0]...255 = Log no. [RMH = 0] [0...2]...255 = Alarm priority [0...11]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Outside temperature	x-x (all)	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Wind speed	x-x (all)	1	0	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	0...670760.00 Floating point	COV, heart-beat 15 min.
Solar radiation	x-x (all)	1	0	0	1	0	9.022	_PowerDensity	2 bytes F ₁₆	W/m ²	0...670760.00 Floating point	COV, heart-beat 15 min.
Heat circuit 1: Room temperature	x-2, x-4	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Heat circ 1 Room optg mode: Time switch op Master	x-2, x-4	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
Heat circ 1 Room optg mode: State	x-2, x-4	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
Heat circuit 2: Room temperature	x-4	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.

²⁾ See Section 1.4.3, page 14.

RMH760: Outputs (continued)

Name in ETS	DP in basic type	Flags					Data point type KNX			Format	Unit	Value range	RMH760 sends:
		C	R	W	T	U	ID	DPT_Name					
Heat circ 2 Room optg mode: Time switch op Master	x-4	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.	
Heat circ 2 Room optg mode: State	x-4	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.	
DHW operating mode: Time switch op Master	x-1, x-3, x-5	1	0	0	1	0	20.103	_DHWMode	1 byte N ₈	Enum.	0 = Not used 1 = Legionella prot. (65 °C) 2 = Normal temp. (55 °C) 3 = Reduced temp. (40 °C) 4 = Protection (5 °C) 5...255 Reserve	Event, heart-beat 15 min.	
DHW operating mode: State	x-1, x-3, x-5	1	0	0	0	1	20.103	_DHWMode	1 byte N ₈	Enum.	0 = Not used 1 = Legionella prot. (65 °C) 2 = Normal temp. (55 °C) 3 = Reduced temp. (40 °C) 4 = Protection (5 °C) 5...255 Reserve	Event, heart-beat 15 min.	
DHW: Actual value storage tank temp top	x-1, x-3, x-5	1	0	0	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
DHW: Actual value storage tank temp bottom	x-1, x-3, x-5	1	0	0	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
Actual value boiler temperature	3-x, 4-x	1	0	0	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
Boiler fault	3-x, 4-x	1	0	0	0	1	1.002	_Bool	1 bit B ₁	---	0 = No error (default) 1 = Boiler error	Event, heart-beat 15 min.	

3.3 RMH760B, S-mode data points

RMH760B: Inputs / Outputs

Name in ETS	DP in FB	Flags					Data point type KNX		Format	Unit	Value range		RMH receives or sends:
		C	R	W	T	U	ID	DPT_Name					
System time (input)	Always ⁵⁾	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0..23 0..59 0..59 Status bits ¹⁾	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)													
Date (input)	Always	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)													
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0..23 0..59 0..59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)													

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMH760B: Inputs and outputs

S-mode DPs operated as input and output.

- Input: For operation using external device via KNX, Synco controller RMH760B receives the values of the S-mode DPs.
- Output: For operation from the Synco controller RMH760B, the S-mode DP values are sent via KNX (synchronization of external unit).

Name in ETS	DP in FB	Flags C R W T U					Data point type KNX			Value range		RMH760B rec., sends
		ID	DPT_Name	Format	Unit							
[Heat circ 1...3] Room operating mode: Preselection	HC 1...3	1 0 1 1 1	20.102 _HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve					Event from KNX preselect operation (device/progr).	
[Heat circ 1...3] Room temp: Protection setpoint	HC 1...3	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	Floating point				COV from KNX setp adj.	
[Heat circ 1...3] Room temp: Economy setpoint	HC 1...3	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	Floating point				COV from KNX setp adj.	
[Heat circ 1...3] Room temp: Precomfort setpoint	HC 1...3	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	Floating point				COV from KNX setp adj.	
[Heat circ 1...3] Room temp: Comfort setpoint	HC 1...3	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	Floating point				COV from KNX setp adj.	
[DHW] operating mode: Preselection	DHW	1 0 1 1 1	20.103 _DHWMode	1 byte N ₈	Enum.	0 = Auto 1 = Legionella prot. (65 °C) 2 = Normal temp. (55 °C) 3 = Reduced temp. (40 °C) 4 = Protection (5 °C) 5...255 Reserve					Event from KNX preselect operation (device/progr).	
[DHW] Storage tank temp setpoint	DHW	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	Floating point				COV from KNX setp adj.	

RMH760B: Inputs

Name in ETS	DP in FB	Flags					Data point type KNX			Format	Unit	Value range	RMH760B receives:
		C	R	W	T	U	ID	DPT_Name					
Confirm faults	Always	1	0	1	0	1	1.016	_Ack	1 bit B ₁	---	0 = No action 1 = Acknowledge / confirm	Event from KNX contact. No timeout monitoring.	
Reset faults	Always	1	0	1	0	1	1.015	_Reset	1 bit B ₁	---	0 = No action 1 = Reset	Event from KNX contact. No timeout monitoring.	
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact. “Disable” time-out monit 24 h.	
Outside temperature (1)	Outs./meteo sensor	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.	
Wind speed	Outs./meteo sensor	1	0	1	0	1	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	0...670760.00 Floating point	COV from KNX wind speed meter.	
Solar radiation	Outs./meteo sensor	1	0	1	0	1	9.022	_PowerDensity	2 bytes F ₁₆	W/m ²	0..670760.00 Floating point	COV from KNX solar sensor.	
[Heat circ 1] Room temperature	HC 1	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.	
[Heat circ 1] Timer button	HC 1	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Comfort prolongation ³⁾	Event from KNX contact.	
[Heat circ 1] Comfort button	HC 1	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Operating mode ch'over ³⁾	Event from KNX contact.	
[Heat circ 1] Room temp: Setpoint relative	HC 1	1	0	1	0	1	9.002	_Value_Tempd	2 bytes F ₁₆	K	-670760.00...+670760.00 Floating point	COV from KNX setp adj.	
[Heat circ 1] Room optg mode: Time switch	HC 1	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr). Timeout monit 31 min.	

³⁾ See Section 1.4.3, page 14.

RMH760B: Inputs (continued)

Name in ETS	DP in FB	Flags					Data point type KNX			Format	Unit	Value range	RMH760B receives:
		C	R	W	T	U	ID	DPT_Name					
[Heat circ 2...3] Outside temperature	HC 2...3	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
[Heat circ 2...3] Room temperature	HC 2...3	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.	
[Heat circ 2...3] Timer button	HC 2...3	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Comfort prolongation ³⁾	Event from KNX contact.	
[Heat circ 2...3] Comfort button	HC 2...3	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Operating mode ch'over ³⁾	Event from KNX contact.	
[Heat circ 2...3] Room temp: Setpoint relative	HC 2...3	1	0	1	0	1	9.002	_Value_Tempd	2 bytes F ₁₆	K	-670760.00...+670760.00 Floating point	COV from KNX setp adj.	
[Heat circ 2...3] Room optg mode: Time switch (Parameterization: Slave)	HC 2...3	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX operation (device/progr). Timeout monit 31 min.	
[DHW] Forced charging	DHW	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Action / forced charging	Event from KNX contact.	
[DHW] Operating mode: Time switch (Parameterization: Slave)	DHW	1	0	1	0	1	20.103	_DHWMode	1 byte N ₈	Enum.	0 = Not used 1 = Legionella prot. (65 °C) 2 = Normal temp. (55 °C) 3 = Reduced temp. (40 °C) 4 = Protection (5 °C) 5...255 Reserve	Event from KNX preselect operation (device/progr). Timeout monit 31 min.	
[Main controller] Flow temp: Setpoint relative	MC	1	0	1	0	1	9.002	_Value_Tempd	2 bytes F ₁₆	K	-670760.00...+670760.00 Floating point	COV from KNX setp adj.	

³⁾ See Section 1.4.3, page 14.

RMH760B: Outputs

Name in ETS	DP in FB	Flags					Data point type KNX			Value range		RMH760B sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	- - -	[0]...255 = Log no. [RMH = 0] [0...2]..255 = Alarm priority [0...11]..255 = Application area [0...4]..255 = Error class [0...15]..63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	- - -	0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Outside temperature (1) ⁷⁾	Outs./meteo sensor	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Wind speed ⁷⁾	Outs./meteo sensor	1	0	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	0...670760.00 Floating point	COV, heart-beat 15 min.
Solar radiation ⁷⁾	Outs./meteo sensor	1	0	0	1	0	9.022	_PowerDensity	2 bytes F ₁₆	W/m ²	0...670760.00 Floating point	COV, heart-beat 15 min.
[Heat circ 1] Room temperature ⁷⁾	HC 1	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
[Heat circ 1] Room optg mode: Time switch (Parameterization: Master)	HC 1	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
[Heat circ 1] Room operating mode: State	HC 1	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
[Heat circ 1] Mixing valve position	HC 1	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.

²⁾ See Section 1.4.3, page 14.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMH760B: Outputs (continued)

Name in ETS	DP in FB	Flags					Data point type KNX			Format	Unit	Value range	RMH760B sends:
		C	R	W	T	U	ID	DPT_Name					
[Heat circ 2..3] Outside temperature ⁷⁾	HC 2...3	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[Heat circ 2..3] Room temperature ⁷⁾	HC 2...3	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[Heat circ 2..3] Room optg mode: Time switch (Parameterization: Master)	HC 2...3	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX operation (device/progr). Timeout monit 31 min.	
[Heat circ 2..3] Room operating mode: State	HC 2...3	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.	
[Heat circ 2..3] Mixing valve position	HC 2...3	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.	
[DHW] Operating mode: Time switch (Parameterization: Master)	DHW	1	0	0	1	0	20.103	_DHWMode	1 byte N ₈	Enum.	0 = Not used 1 = Legionella prot. (65 °C) 2 = Normal temp. (55 °C) 3 = Reduced temp. (40 °C) 4 = Protection (5 °C) 5...255 Reserve	Event from KNX preselect operation (device/progr). Timeout monit 31 min.	
[DHW] operating mode: State	DHW	1	0	0	1	0	20.103	_DHWMode	1 byte N ₈	Enum.	0 = Not used 1 = Legionella prot. (65 °C) 2 = Normal temp. (55 °C) 3 = Reduced temp. (40 °C) 4 = Protection (5 °C) 5...255 Reserve	Event from KNX preselect operation (device/progr). Timeout monit 31 min.	

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMH760B: Outputs (continued)

Name in ETS	DP in FB	Flags					Data point type KNX			Format	Unit	Value range	RMH760B sends:
		C	R	W	T	U	ID	DPT_Name					
[DHW] Actual value storage tank temp top	DHW	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[DHW] Actual value storage tank temp bottom	DHW	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[DHW] Mixing valve position primary	DHW	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.	
[DHW] Mixing valve pos maintained secondary temp	DHW	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.	
[DHW] Mixing valve position consumers	DHW	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.	
[Main controller] Mixing valve position	MC	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.	
[Primary controller] Mixing valve position	PC	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.	
[Boiler] Signal modulating burner	B	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.	
[Boiler] Mixing valve pos maintained return temp	B	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.	
[Heat circ 1...3] Flow temperature: Setpoint ⁶⁾	HC 1...3	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[Heat circ 1...3] Room temp: Setpoint act. ⁶⁾	HC 1...3	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[Heating circuit 1...3] Return temperature max. ⁶⁾	HC 1...3	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[DHW] Flow temperature: Setpoint primary ⁶⁾	DHW	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[DHW] Flow temperature: Setpoint secondary ⁶⁾	DHW	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[DHW] Storage tank temp setpoint act. ⁶⁾	DHW	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[DHW] Return temperature max. ⁶⁾	DHW	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[DHW] Flow temperature: Setpoint consumer ⁶⁾	DHW	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	

⁶⁾ See Section 1.5.1, page 16, Out of service.

RMH760B: Outputs (continued)

Name in ETS	DP in FB	Flags					Data point type KNX			Format	Unit	Value range	RMH760B sends:
		C	R	W	T	U	ID	DPT_Name					
[Primary controller] Flow temp: Setpoint act. ⁶⁾	PC	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point		COV, heart-beat 15 min.
[Primary controller] Return temperature max. ⁶⁾	PC	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point		COV, heart-beat 15 min.
[Main controller] Flow temp: Setpoint act. ⁶⁾	MC	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point		COV, heart-beat 15 min.
[Main controller] Return temperature max. ⁶⁾	MC	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point		COV, heart-beat 15 min.
[Boiler] Temperature: Setpoint act. ⁶⁾	B	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point		COV, heart-beat 15 min.
[Boiler] Return temp min.	B	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point		COV, heart-beat 15 min.
[Boiler] Flue gas temperature maximum	B	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point		COV, heart-beat 15 min.
[Boiler] Flue gas temperature limit value	B	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point		COV, heart-beat 15 min.

⁶⁾ See Section 1.5.1, page 16, Out of service.

RMH760B: Terminals, Heating controller RMH760B

- Input terminals N.X1...N.X6 with S-mode function "Output", parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range		RMH760B sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input N.X_ [°C]	RMH760B	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input N.X_ [% rH]	RMH760B	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0...100%]	RMH760B	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input N.X_ [0...255%]	RMH760B	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input N.X_ [m/s]	RMH760B	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [m/s]	RMH760B	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [Pa]	RMH760B	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [Pa]	RMH760B	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [ppm]	RMH760B	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0/1]	RMH760B	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Output terminals N.Q1...N.Q5, parameterized for digital output value [0/1].

Output N.Q_	RMH770 V2.0	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
-------------	-------------	---	---	---	---	---	-------	---------	----------------------	-----	-------------------	---------------------------

- Output terminals N.Y1, N.Y2, parameterized for analog output value [0...100].

Output N.Y_	RMH770 V2.0	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.
-------------	-------------	---	---	---	---	---	-------	----------	----------------------	---	-------------------------------	-------------------------

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMH760B: Terminals, Extension modules RMZ78x on Heating controller RMH760B

- Input terminals A__.X_ with S-mode function "Output", parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX		Format	Unit	Value range	RMU7x0B sends:
		C	R	W	T	U	ID	DPT_Name				
Input A__.X_ [°C]	RMZ78x	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input A__.X_ [% rH]	RMZ78x	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0...100%]	RMZ78x	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.
Input A__.X_ [0...255%]	RMZ78x	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input A__.X_ [m/s]	RMZ78x	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [m/s]	RMZ78x	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	RMZ78x	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	RMZ78x	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [ppm]	RMZ78x	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0/1]	RMZ78x	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

Input A2(1).X1...A2(1).X3	RMZ782(1)
Input A2(2).X1...A2(2).X3	RMZ782(2)
Input A3.X1...A3.X4	RMZ783
Input A7.X1...A7.X4	RMZ787
Input A9(1).X1...A9(1).X6	RMZ789(1)
Input A9(2).X1...A9(2).X6	RMZ789(2)

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMH760B: Terminals, Extension modules RMZ78x on Heating controller RMH760B (continued)

- Output terminals A__.Q_, parameterized for digital output value [0/1].

Name in ETS	DP ⁷⁾	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	RMH760B sends:
Output A__.Q_	RMZ78x	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

Output A2(1).Q1...A2(1).Q3	RMZ782(1)
Output A2(2).Q1...A2(2).Q3	RMZ782(2)
Output A3.Q1...A3.Q5	RMZ783
Output A7.Q1...A7.Q5 (without Q4)	RMZ787
Output A9(1).Q1...A9(1).Q4	RMZ789(1)
Output A9(2).Q1...A9(2).Q4	RMZ789(2)

- Output terminals A__.Y_, parameterized for analog output value [0...100].

Name in ETS	DP ⁷⁾	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	RMH760B sends:
Output A__.Y_	RMZ78x	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.

Output A2(1).Y1	RMZ782(1)
Output A2(2).Y1	RMZ782(2)
Output A3.Y1	RMZ783
Output A9(1).Y1, A9(1).Y2	RMZ789(1)
Output A9(2).Y1, A9(2).Y2	RMZ789(2)

Note: Max. 4 Extension modules RMZ78x (same or different types) are allowed per Heating controller RMH760B.


⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

4 RMK770, RMK770 V2.0 Boiler sequence controller

4.1 Overview

Brief description

The Sync 700 Boiler sequence controllers RMK770 and RMK770 V2.0 are responsible for controlling multi-boiler plants (up to 6 boilers), to control the boiler temperature as well as an additional heating and/or primary control loop. When used together with RMZ78x universal modules, additional control functions are possible.

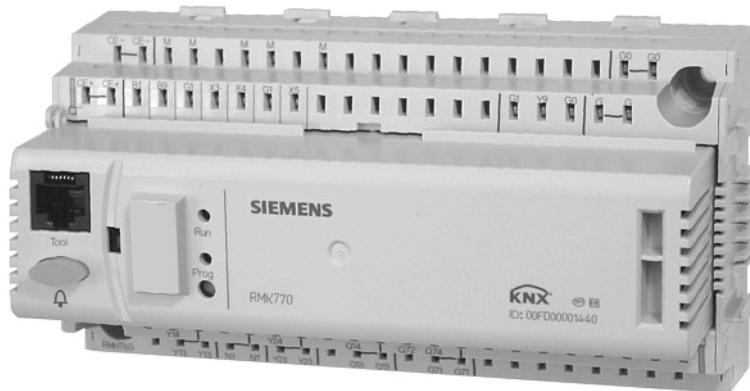

Documentation

Data sheet	Boiler sequence controller RMK770	N3132
Basic documentation	Boiler sequence controller RMK770	P3132

Number of S-mode DPs

	RMK770	RMK770 V2.0
Inputs / Outputs	3	7
Inputs	15	10
Outputs	38	205

Column "DP active"

	Indication:	Meaning:
Always		Standard S-mode DP
HC		Heating circuit
HC or T'swi		Heating circuit <u>or</u> time switch
Boiler 1...6		Boiler 1...6
Boiler seq. manager		Boiler sequence manager
MF sensor		Main flow sensor

Note

"Always" points to a standard S-mode DP that is always configured in ETS when the Sync device is selected.

Parameterization

RMK770, RMK770 V2.0

An S-mode DP must be configured in ETS and the Sync device to ensure that the S-mode DP transmits valid values. See Section 1.5 on workflows.

Note

For RMK770, of a total of 56 S-mode DPs, a maximum of 50 can be connected via group addresses.

For RMK770 V2.0, all 222 S-mode DPs can be connected via group addresses.

4.2 RMK770, S-mode data points

RMK770: Inputs / Outputs

Name in ETS	DP active	Flags					Data point type KNX		Format	Unit	Value range	RMK rec. or sends:	
		C	R	W	T	U	ID	DPT_Name					
System time (input)	Always ⁵⁾	r	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 Status bits ¹⁾	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds = Year	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)													
Date (input)	Always	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)													
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)													

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMK770: Inputs

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMK770 receives:
		C	R	W	T	U	ID	DPT_Name					
Confirm faults	Always	1	0	1	0	1	1.016	_Ack	1 bit B ₁	---	0 = No action 1 = Acknowledge / confirm	Event from KNX contact. No timeout monitoring.	
Reset faults	Always	1	0	1	0	1	1.015	_Reset	1 bit B ₁	---	0 = No action 1 = Reset	Event from KNX contact. No timeout monitoring.	
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact. “Disable” timeout monit 24 h.	
Outside temperature	Receive	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.	
Room temperature	Receive	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.	
Timer button	HC	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Comfort prolongation ³⁾	Event from KNX contact.	
Comfort button	HC	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Operating mode ch'over ³⁾	Event from KNX contact	
Room temperature: Setpoint relative	HC	1	0	1	0	1	9.002	_Value_Tempd	2 bytes F ₁₆	K	-670760.00...+670760.00 Floating point	COV from KNX setp adj.	
Room optg mode: Preselection	HC	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr)	

³⁾ See Section 1.4.3, page 14.

RMK770: Inputs (continued)

Name in ETS	DP active	Flags					Data point type KNX			Value range		RMK770 receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Room optg mode: Time switch operation Slave	HC or T'swi	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX operation (device/progr). Timeout monit 31 min.
Room temp: Protection heating setpoint	HC	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
Room temp: Economy heating setpoint	HC	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
Room temp: Precomfort heating setpoint	HC	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
Room temp: Comfort heating setpoint	HC	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
Main flow temperature: Setpoint relative	MF sensor	1	0	1	0	1	9.002	_Value_Tempd	2 bytes F ₁₆	K	-670760.00...+670760.00 Floating point	COV from KNX setp adj.

RMK770: Outputs

Name in ETS	DP active	Flags					Data point type KNX		Format	Unit	Value range	RMK770 sends:
		C	R	W	T	U	ID	DPT_Name				
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---	[0]...255 = Log no. [RMK = 0] [0...2]...255 = Alarm priority [0...11]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Outside temperature	Send	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Room temperature	Send	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Room optg mode: Time switch operation Master	HC or T'swi	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
Room optg mode: State	HC	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
Main flow temperature actual value	MF sensor	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Boiler seq manager: Fault state (normal/faulty)	MF sensor	1	0	0	1	0	1.002	_Bool	1 bit B ₁	---	0 = No error (default) 1 = Boiler sequence error	Event, heart-beat 15 min.

²⁾ See Section 1.4.3, page 14.

RMK770: Outputs (continued)

Name in ETS	DP active	Flags					Data point type KNX				Value range	RMK770 sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Boiler 1...6: Actual value boiler temperature	Boiler 1...6	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Boiler 1...6: Current burner output [%]	Boiler 1...6	1	0	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 3 min.
Boiler 1...6: Burner stage 1	Boiler 1...6	1	0	0	1	0	1.003	_Enable	1 bit B ₁	---	0 = Stage 1 disabled 1 = Stage 1 enabled	Event, heart-beat 3 min.
Boiler 1...6: Burner stage 2	Boiler 1...6	1	0	0	1	0	1.003	_Enable	1 bit B ₁	---	0 = Stage 2 disabled 1 = Stage 2 enabled	Event, heart-beat 3 min.
Boiler 1...6: Fault state (normal/faulty)	Boiler 1...6	1	0	0	1	0	1.002	_Bool	1 bit B ₁	---	0 = No error (default) 1 = Boiler error	Heartbeat 3 min.

- Selection of boilers 1...6 is free (e.g. boiler 2, boiler 3, and boiler 5).

4.3 RMK770 V2.0, S-mode data points

RMK770 V2.0: Inputs / Outputs

Name in ETS	DP active	Flags C R W T U					Data point type KNX ID DPT_Name			Format	Unit	Value range	RMK rec. or sends:	
System time (input)	Always ⁵⁾	r	0	1	1	1	19.001	_DateTime		8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 ---	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds Status bits ¹⁾	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)														
Date (input)	Always	1	0	1	1	1	11.001	_Date		3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)														
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay		3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)														
Heating circuit room operating mode: Preselection	Heating circuit	1	0	1	1	1	20.102	_HVACMode		1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr.).	
Heating circuit room temp: Economy heating setpoint	Heating circuit	1	1	1	1	1	9.001	_Value_Temp		2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
Heating circuit room temp: Precomfort heating setpoint	Heating circuit	1	1	1	1	1	9.001	_Value_Temp		2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	
Heating circuit room temp: Comfort heating setpoint	Heating circuit	1	1	1	1	1	9.001	_Value_Temp		2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.	

¹⁾ See Section 1.4.3, page 13. ⁴⁾ See Section 1.4.3, page 14. ⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMK770 V2.0: Inputs

Name in ETS	DP active	Flags					Data point type KNX			Value range		RMK770 V2.0 receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Confirm faults	Always	1	0	1	0	1	1.016	_Ack	1 bit B ₁	---	0 = No action 1 = Acknowledge / confirm	Event from KNX contact. No timeout monitoring.
Reset faults	Always	1	0	1	0	1	1.015	_Reset	1 bit B ₁	---	0 = No action 1 = Reset	Event from KNX contact. No timeout monitoring.
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact. “Disable” time-out monit 24 h.
Outside temperature	Receive	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.
Boiler seq. manager: Main flow temperature setpoint relative	Boiler seq. manager	1	0	1	0	1	9.002	_Value_Tempd	2 bytes F ₁₆	K	-670760.00...+670760.00 Floating point	COV from KNX setp adj.
Heating circuit: Timer button	Heating circuit	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Comfort prolongation ³⁾	Event from KNX contact.
Heating circuit: Comfort button	Heating circuit	1	0	1	0	1	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Operating mode ch'over ³⁾	Event from KNX contact
Heating circuit room temp.: Setpoint relative	Heating circuit	1	0	1	0	1	9.002	_Value_Tempd	2 bytes F ₁₆	K	-670760.00...+670760.00 Floating point	COV from KNX setp adj.
Heating circuit: Room temperature →	Receive	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.
Heating circuit room operating mode: Time switch operation →	Slave	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX operation (device/progr). Timeout monit 31 min.

³⁾ See Section 1.4.3, page 14.

RMK770 V2.0: Outputs

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMK770 V2.0 sends:
		C	R	W	T	U	ID	DPT_Name					
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---		[0]...255 = Log no. [RMK = 0] [0...2]...255 = Alarm priority [0...11]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.	
Outside temperature	Transmit (Send)	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
Boiler seq manager: Main flow temperature actual value	Boiler seq. manager	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
Boiler seq manager: Flow temperature current setpoint	Boiler seq. manager	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
Boiler seq manager: Return temperature minimum	Boiler seq. manager	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
Boiler seq manager: Mixing valve pos maintained return temp	Boiler seq. manager	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 3 min.	
Boiler seq manager: Fault state (normal/faulty)	Boiler seq. manager	1	1	0	1	0	1.002	_Bool	1 bit B ₁	---	0 = No error (default) 1 = Boiler sequence error	Event, heart-beat 15 min.	
Boiler 1...6: Actual value boiler temperature	Boiler 1...6	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
Boiler 1...6: Boiler temperature setpoint	Boiler 1...6	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
Boiler 1...6: Signal modulating burner	Boiler 1...6	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 3 min.	
Boiler 1...6: Burner stage 1	Boiler 1...6	1	1	0	1	0	1.003	_Enable	1 bit B ₁	---	0 = Stage 1 disabled 1 = Stage 1 enabled	Event, heart-beat 3 min.	
Boiler 1...6: Burner stage 2	Boiler 1...6	1	1	0	1	0	1.003	_Enable	1 bit B ₁	---	0 = Stage 2 disabled 1 = Stage 2 enabled	Event, heart-beat 3 min.	
Boiler 1...6: Flue gas temperature maximum	Boiler 1...6	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
Boiler 1...6: Flue gas temperature limit value	Boiler 1...6	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	

²⁾ See Section 1.4.3, page 14.

RMK770 V2.0: Outputs (continued)

Name in ETS	DP active	Flags					Data point type KNX				Value range	RMK770 V2.0 sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Boiler 1...6: Return temperature minimum	Boiler 1...6	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Boiler 1...6: Mixing valve pos maintained return temp	Boiler 1...6	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 3 min.
Boiler 1...6: Fault state (normal/faulty)	Boiler 1...6	1	1	0	1	0	1.002	_Bool	1 bit B ₁	---	0 = No error (default) 1 = Boiler error	Heartbeat 3 min.
Primary controller: Flow temperature current setpoint	Primary controller	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Primary controller: Return temperature maximum	Primary controller	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Primary controller: Mixing valve position	Primary controller	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Heating circuit: Flow temperature setpoint	Heating circuit	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Heating circuit: Return temperature maximum	Heating circuit	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Heating circuit: Mixing valve position	Heating circuit	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Heating circuit room temp.: Current setpoint	Heating circuit	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Heating circuit room operating mode: State	Heating circuit	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	COV, heart-beat 15 min.
Heating circuit: Room temperature →	Transmit	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Heating circuit room operating mode: Time switch operation →	Master	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.

- Selection of boilers 1...6 is free (e.g. boiler 2, boiler 3, and boiler 5).

RMK770 V2.0: Terminals, Boiler sequence controller RMK770 V2.0

- Input terminals N.X1...N.X8 with S-mode function "Output", parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range		RMK770 V2.0 sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input N.X_ [°C]	RMK770 V2.0	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input N.X_ [% rH]	RMK770 V2.0	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0...100%]	RMK770 V2.0	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input N.X_ [0...255%]	RMK770 V2.0	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input N.X_ [m/s]	RMK770 V2.0	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [m/s]	RMK770 V2.0	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [Pa]	RMK770 V2.0	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [Pa]	RMK770 V2.0	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [ppm]	RMK770 V2.0	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0/1]	RMK770 V2.0	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Input terminals N.D1, N.D2 with S-mode function "Output", parameterized for digital input value [0/1].

Input N.D_ [0/1]	RMK770 V2.0	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
------------------	-------------	---	---	---	---	---	-------	---------	----------------------	-----	-------------------	---------------------------

- Output terminals N.Q1...N.Q7, parameterized for digital output value [0/1].

Output N.Q_	RMK770 V2.0	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
-------------	-------------	---	---	---	---	---	-------	---------	----------------------	-----	-------------------	---------------------------

- Output terminals N.Y1, N.Y2, parameterized for analog output value [0...100].

Output N.Y_	RMK770 V2.0	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.
-------------	-------------	---	---	---	---	---	-------	----------	----------------------	---	-------------------------------	-------------------------

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMK770 V2.0: Terminals, Extension modules RMZ78x on Boiler sequence controller RMK770 V2.0

- Input terminals A__.X_ with S-mode function "Output", parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range	RMK770 V2.0 sends:	
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input A__.X_ [°C]	RMZ78x	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input A__.X_ [% rH]	RMZ78x	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0...100%]	RMZ78x	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.
Input A__.X_ [0...255%]	RMZ78x	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input A__.X_ [m/s]	RMZ78x	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [m/s]	RMZ78x	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	RMZ78x	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	RMZ78x	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [ppm]	RMZ78x	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0/1]	RMZ78x	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

Input A5(1).X1...A5(1).X8	RMZ785(1)
Input A5(2).X1...A5(2).X8	RMZ785(2)
Input A5(3).X1...A5(3).X8	RMZ785(3)
Input A7(1).X1...A7(1).X4	RMZ787(1)
Input A7(2).X1...A7(2).X4	RMZ787(2)
Input A7(3).X1...A7(3).X4	RMZ787(3)
Input A8(1).X1...A8(1).X4	RMZ788(1)
Input A8(2).X1...A8(2).X4	RMZ788(2)
Input A8(3).X1...A8(3).X4	RMZ788(3)
Input A9(1).X1...A9(1).X6	RMZ789(1)
Input A9(2).X1...A9(2).X6	RMZ789(2)
Input A9(3).X1...A9(3).X6	RMZ789(3)

RMK770 V2.0: Terminals, Extension modules RMZ78x on Boiler sequence controller RMK770 V2.0 (continued)

- Output terminals A__.Q_, parameterized for digital output value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Format	Unit	Value range	RMK770 V2.0 sends:
		C	R	W	T	U	ID	DPT_Name					
Output A__.Q_	RMZ78x	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On		Event, heart-beat 15 min.

Output A7(1).Q1...A7(1).Q5	RMZ787(1) without Q4
Output A7(2).Q1...A7(2).Q5	RMZ787(2) without Q4
Output A7(3).Q1...A7(3).Q5	RMZ787(3) without Q4
Output A8(1).Q1, A8(1).Q5	RMZ788(1)
Output A8(2).Q1, A8(2).Q5	RMZ788(2)
Output A8(3).Q1, A8(3).Q5	RMZ788(3)
Output A9(1).Q1...A9(1).Q4	RMZ789(1)
Output A9(2).Q1...A9(2).Q4	RMZ789(2)
Output A9(3).Q1...A9(3).Q4	RMZ789(3)

- Output terminals A__.Y_, parameterized for analog output value [0...100].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Format	Unit	Value range	RMK770 V2.0 sends:
		C	R	W	T	U	ID	DPT_Name					
Output A__.Y_	RMZ78x	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %		COV, heart-beat 15 min.

Output A8(1).Y1, A8(1).Y2	RMZ788(1)
Output A8(2).Y1, A8(2).Y2	RMZ788(2)
Output A8(3).Y1, A8(3).Y2	RMZ788(3)
Output A9(1).Y1, A9(1).Y2	RMZ789(1)
Output A9(2).Y1, A9(2).Y2	RMZ789(2)
Output A9(3).Y1, A9(3).Y2	RMZ789(3)

Note: Max. 3 Extension modules RMZ78x (same or different types) are allowed per **Boiler sequence controller** RMK770 V2.0.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.


Blank page

5 RMB795, RMB795B Central control unit

5.1 Overview

Brief description

The Synco 700 central control units RMB795 and RMB795B allows you to centrally control room groups with RXB/RXL room controllers and RDG/RDF/RDU room thermostats as well as provides menu-assisted operation of room groups.

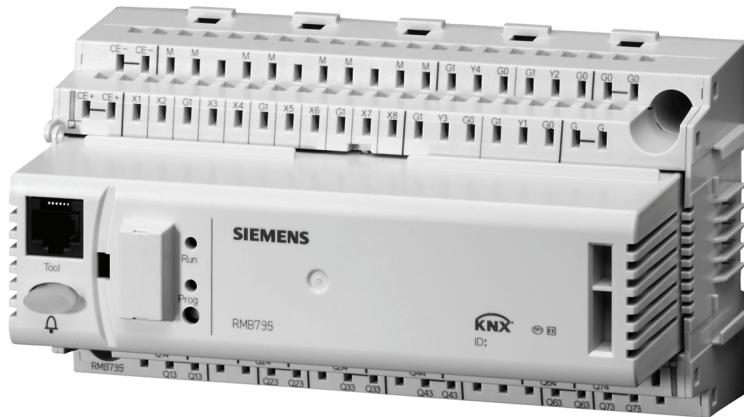

Documentation

Central control unit RMB795	Data sheet Basic documentation	Central control unit RMB795 Central control unit RMB795	N3121 P3121
Central control unit RMB795B	Data sheet Basic documentation	Central control unit RMB795 Central control unit RMB795	N3122 P3122

Number of S-mode DPs

	RMB795	RMB795B
Inputs / Outputs	3	3
Inputs and outputs	70	70
Inputs	4	27
Outputs	79	90

Column "DP active"

	Indication:	Meaning:
Always		Standard S-mode DP
All appl.		S-mode DP in all applications
Room grp. 1...10		Room group 1...10 = Yes
Logic 1...10		Logic 1...10 = Send (only RMB795B)
Receive		S-mode "Receive object" (connected as input)
Transmit/Send		S-mode "Send object" (connected as output)

Note

"Always" points to a standard S-mode DP that is always configured in ETS when the Synco device is selected.

Parameterization RMB795, RMB795B	An S-mode DP must be configured in ETS <u>and</u> the Synco device to ensure that the S-mode DP transmits (sends) valid values. See Section 1.5 on workflows.												
Note	<p>For RMB795, of a total of 156 S-mode DPs, a maximum of 50 can be connected via group addresses.</p> <p>For RMB795B, all S-mode DPs can be connected via group addresses (maximal 250 group addresses).</p>												
Universal reception and transmission zones	<p>Device RMB795B allows for universal data exchange via own terminals (universal inputs, relay and analog outputs) as well as via terminals of extension modules RMZ78x. Data is exchanged via KNX.</p> <p>The universal inputs can be used as reception objects in reception zones and as transmission (send) objects in transmission zones. The relays and analog outputs can only be used as transmission (send) objects.</p> <table border="0"> <tr> <td>Reception zones</td> <td>Universal inputs</td> <td>Terminals N.X_ and A__.X_</td> </tr> <tr> <td>Transmission zones</td> <td>Universal inputs</td> <td>Terminals N.X_ and A__.X_</td> </tr> <tr> <td></td> <td>Relay outputs</td> <td>N.Q_ and A__.Q_</td> </tr> <tr> <td></td> <td>Analog outputs.</td> <td>N.Y_ and A__.Y_</td> </tr> </table>	Reception zones	Universal inputs	Terminals N.X_ and A__.X_	Transmission zones	Universal inputs	Terminals N.X_ and A__.X_		Relay outputs	N.Q_ and A__.Q_		Analog outputs.	N.Y_ and A__.Y_
Reception zones	Universal inputs	Terminals N.X_ and A__.X_											
Transmission zones	Universal inputs	Terminals N.X_ and A__.X_											
	Relay outputs	N.Q_ and A__.Q_											
	Analog outputs.	N.Y_ and A__.Y_											

Note See Sections 5.3.1 to 5.3.6, pages 110 to 115:

5.2 RMB795, S-mode data points

RMB795: Inputs / Outputs

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMB receives or sends:
		C	R	W	T	U	ID	DPT_Name					
System time (input)	Always ⁵⁾	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 ---	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds Status bits ¹⁾	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)													
Date (input)	Always	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)													
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)													

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMB795: Inputs and outputs

S-mode DPs operated as input and output.

- Input: For operation using external device via KNX, Synco unit RMB795 receives the values of the S-mode DPs.
- Output: For operation from the Synco unit RMB795, the S-mode DP values are sent via KNX (synchronization of external unit).

Name in ETS	DP active	Flags C R W T U					Data point type KNX			Value range	RMB795 rec., sends:
		ID	DPT_Name	Format	Unit						
[Room group 1...10] Preselection	Room grp. 1...10	1 0 1 1 1	20.102 _HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve				Event from KNX preselect operation (device/progr).	
[Room group 1...10] Economy cooling setpoint	Room grp. 1...10	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Room group 1...10] Precomfort cooling setpoint	Room grp. 1...10	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Room group 1...10] Comfort cooling setpoint	Room grp. 1...10	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Room group 1...10] Economy heating setpoint	Room grp. 1...10	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Room group 1...10] Precomfort heating setpoint	Room grp. 1...10	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	
[Room group 1...10] Comfort heating setpoint	Room grp. 1...10	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point				COV from KNX setp adj.	

- You can freely select room groups 1...10 (e.g. room group 2, room group 3, and room group 9).

RMB795: Inputs

Name in ETS	DP active	Flags					Data point type KNX			Value range	RMB795 receives:	
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Confirm faults	Always	1	0	1	0	1	1.016	_Ack	1 bit B ₁	---	0 = No action 1 = Acknowledge / confirm	Event from KNX contact. No timeout monitoring.
Reset faults	Always	1	0	1	0	1	1.015	_Reset	1 bit B ₁	---	0 = No action 1 = Reset	Event from KNX contact. No timeout monitoring.
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact. “Disable” timeout monit 24 h.
Outside temperature	Receive	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.

RMB795: Outputs

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMB795 sends:
		C	R	W	T	U	ID	DPT_Name					
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---		[0]...255 = Log no. [RMB = 0] [0...2]...255 = Alarm priority [0...14]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---		0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Outside temperature.	Transmit	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[Room group 1...10] Emergency mode	Room grp. 1...10	1	0	0	1	0	20.106	_HVACEmergMode	1 byte N ₈	Enum.	0 = Normal 1 = Smoke extr with supply air 2 = Smoke extr with extract air 3 = Smoke extr with supp/extr air 4 = Emergency off 5 = Emergency fire alarm 6...255 Reserve	Event, heart-beat 15 min.	
[Room group 1...10] State	Room grp. 1...10	1	0	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.	
[Room group 1...10] Highest room temperature	Room grp. 1...10	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[Room group 1...10] Lowest room temperature	Room grp. 1...10	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
Heating/cooling changeover	All appl.	1	0	0	1	0	1.100	_Heat/Cool	1 bit B ₁	---	0 = Cooling 1 = Heating (default)	Event, heart-beat 15 min.	

²⁾ See Section 1.4.3, page 14.

- You can freely select room groups 1...10 (e.g. room group 2, room group 3, and room group 9).

RMB795: Terminals, Central control unit RMB795

- Input terminals N.X1...N.X6 with S-mode function "Output", parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range		RMB795 sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input N.X_ [°C]	RMB795	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input N.X_ [% rH]	RMB795	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0...100%]	RMB795	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input N.X_ [0...255%]	RMB795	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input N.X_ [m/s]	RMB795	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [m/s]	RMB795	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [Pa]	RMB795	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [Pa]	RMB795	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [ppm]	RMB795	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0/1]	RMB795	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Output terminals N.Q1...N.Q5, parameterized for digital output value [0/1].

Output N.Q_	RMB795	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
-------------	--------	---	---	---	---	---	-------	---------	----------------------	-----	-------------------	---------------------------

- Output terminals N.Y1, N.Y2, parameterized for analog output value [0...100].

Output N.Y_	RMB795	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.
-------------	--------	---	---	---	---	---	-------	----------	----------------------	---	-------------------------------	-------------------------

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMB795: Terminals, Extension modules RMZ78x on Central control unit RMB795

- Input terminals A .X with S-mode function "Output", parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Format	Unit	Value range	RMB795 sends:
		C	R	W	T	U	ID	DPT_Name					
Input A__.X_ [°C]	RMZ78x	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
Input A__.X_ [% rH]	RMZ78x	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.	
Input A__.X_ [0...100%]	RMZ78x	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.	
Input A__.X_ [0...255%]	RMZ78x	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.	
Input A__.X_ [m/s]	RMZ78x	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.	
Input A__.X_ [m/s]	RMZ78x	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.	
Input A__.X_ [Pa]	RMZ78x	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.	
Input A__.X_ [Pa]	RMZ78x	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.	
Input A__.X_ [ppm]	RMZ78x	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.	
Input A__.X_ [0/1]	RMZ78x	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.	

Input A5.X1...A5.X8

RMZ785

Input A7(1).X1...A7(1).X4

RMZ787(1)

Input A7(2).X1..A7(2).X4

RMZ787(2)

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMB795: Terminals, Extension modules RMZ78x on Central control unit RMB795 (continued)

- Output terminals A__.Q_, parameterized for digital output value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX		Format	Unit	Value range	RMB795 sends:
		C	R	W	T	U	ID	DPT_Name				
Output A__.Q_	RMZ78x	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

Output A7(1).Q1...A7(1).Q5 RMZ787(1) without Q4
 Output A7(2).Q1...A7(2).Q5 RMZ787(2) without Q4

Note: Max. 3 Extension modules RMZ78x (same or different types) are allowed per Central control unit RMB795.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

5.3 RMB795B, S-mode data points

RMB795B: Inputs (Receive) / Outputs (Send)

Name in ETS	DP active	Flags					Data point type KNX		Format	Unit	Value range	RMB receives or sends:
		C	R	W	T	U	ID	DPT_Name				
System time (Receive)	Always ⁵⁾	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 Status bits ¹⁾	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds or to KNX system time receiver cycl. 10 min.
System time (Send)												
Date (Receive)	Always	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾
Date (Send)												
Time of day (Receive)	Always	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds
Time of day (Send)												

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMB795B: Inputs (Receive) and Outputs (Send)

S-mode DPs operated as input and output.

- Input: For operation using external device via KNX, Sync unit RMB795B receives the values of the S-mode DPs.
- Output: For operation from the Sync unit RMB795B, the S-mode DP values are sent via KNX (synchronization of external unit).

Name in ETS	DP active	Flags C R W T U					Data point type KNX			Value range		RMB795 rec., sends:
		ID	DPT_Name	Format	Unit							
[Room group 1...10] Room optg mode: Preselection	Room grp. 1...10 = Yes	1	1	1	1	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr.).
[Room group 1...10] Economy cooling setpoint	Room grp. 1...10	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Room group 1...10] Precomfort cooling setpoint	Room grp. 1...10	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Room group 1...10] Comfort cooling setpoint	Room grp. 1...10	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Room group 1...10] Economy heating setpoint	Room grp. 1...10	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Room group 1...10] Precomfort heating setpoint	Room grp. 1...10	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.
[Room group 1...10] Comfort heating setpoint	Room grp. 1...10	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX setp adj.

- You can freely select room groups 1...10 (e.g. room group 2, room group 3, and room group 9).

RMB795B: Inputs (Receive)

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMB795 receives:
		C	R	W	T	U	ID	DPT_Name					
Confirm faults	Always	1	0	1	0	1	1.016	_Ack	1 bit B ₁	---	0 = No action 1 = Acknowledge / confirm	Event from KNX contact. No timeout monitoring.	
Reset faults	Always	1	0	1	0	1	1.015	_Reset	1 bit B ₁	---	0 = No action 1 = Reset	Event from KNX contact. No timeout monitoring.	
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact. “Disable” time-out monit 24 h.	
Outside temperature	Receive	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.	
Heating/cooling changeover	Receive	1	0	1	0	1	1.100	_Heat/Cool	1 bit B ₁	---	0 = Cooling 1 = Heating (default)	Event from KNX contact. No timeout monitoring.	

RMB795B: Outputs (Send)

Name in ETS	DP active	Flags					Data point type KNX		Format	Unit	Value range	RMB795 sends:
		C	R	W	T	U	ID	DPT_Name				
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---	[0]...255 = Log no. [RMB = 0] [0...2]...255 = Alarm priority [0...14]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Outside temperature.	Send	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
[Room group 1...10] Emergency mode	Room grp. 1...10	1	1	0	1	0	20.106	_HVACEmergMode	1 byte N ₈	Enum.	0 = Normal 1 = Smoke extr with supply air 2 = Smoke extr with extract air 3 = Smoke extr with supp/extr air 4 = Emergency off 5 = Emergency fire alarm 6...255 Reserve	Event, heart-beat 15 min.
[Room group 1...10] Room optg mode: State	Room grp. 1...10	1	1	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Not used 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
[Room group 1...10] Highest room temperature	Room grp. 1...10	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
[Room group 1...10] Lowest room temperature	Room grp. 1...10	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Heating/cooling changeover	Send	1	1	0	1	0	1.100	_Heat/Cool	1 bit B ₁	---	0 = Cooling 1 = Heating (default)	Event, heart-beat 15 min.
[Logic 1...10] State	Send	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

²⁾ See Section 1.4.3, page 14.

- You can freely select room groups 1...10 (e.g. room group 2, room group 3, and room group 9).

5.3.1 Terminal inputs as reception objects, RMB795B

RMB795B: Terminal inputs as reception objects

- Universal input N.X1...N.X6, parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1]. The value can be received in S-mode via KNX.

Name in ETS	DP	Flags					Data point type KNX				Value range	RMB795B receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input N.X_ [°C]	Receive	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input N.X_ [% rH]	Receive	1	0	1	0	1	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0...100%]	Receive	1	0	1	0	1	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input N.X_ [0...255%]	Receive	1	0	1	0	1	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input N.X_ [m/s]	Receive	1	0	1	0	1	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [m/s]	Receive	1	0	1	0	1	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [Pa]	Receive	1	0	1	0	1	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [Pa]	Receive	1	0	1	0	1	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [ppm]	Receive	1	0	1	0	1	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0/1]	Receive	1	0	1	0	1	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

Notes:

- Receipt of an S-mode DP via input N.X_ values, that is outside the range limits ("Value high" and "Value low"), is limited by them, e.g. air velocity >20 [m/s] are limited to 20 [m/s] (when "Value high" = 20 [m/s]).
- The following priority applies to communication of data (e.g. sensor values) in S-mode and LTE mode (both modes possible at the same): Value in S-mode before value in LTE mode before terminal input value.

5.3.2 Terminal inputs as transmission (send) objects, RMB795B

RMB795B: Terminal inputs as transmission (send) objects

- Universal inputs N.X1...N.X6 can be parameterized for analog value [°C], [% rH], etc., or for digital value [0/1]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					Data point type KNX				Value range	RMB795B sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input N.X_ [°C]	Send	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input N.X_ [% rH]	Send	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0...100%]	Send	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input N.X_ [0...255%]	Send	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input N.X_ [m/s]	Send	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [m/s]	Send	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [Pa]	Send	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [Pa]	Send	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [ppm]	Send	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0/1]	Send	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

5.3.3 Terminal outputs as transmission (send) objects, RMB795B

RMB795B: Terminal outputs as transmission (send) objects,

- The relay outputs N.Q1...N.Q5 (without Q4), parameterized for digital output value [0/1]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range	RMB795B sends:	
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Output N.Q_	Send	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Analog outputs N.Y1...N.Y2, parameterized for analog output value [0...100]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range	RMB795B sends:	
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Output N.Y_	Send	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

5.3.4 Terminal inputs as reception objects, Extension modules RMZ78x

RMB795B: Terminal inputs as reception objects, Extension modules RMZ78x

- Universal inputs A__.X1...A__.X8, parameterized for analog values [°C], [% rH] etc., or digital value [0/1]. The value can be received in S-mode via KNX.

Name in ETS	DP	Flags C R W T U					Data point type KNX ID	DPT_Name	Format	Unit	Value range	RMB795B receives:
Input A__.X_ [°C]	Receive	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input A__.X_ [% rH]	Receive	1	0	1	0	1	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0...100%]	Receive	1	0	1	0	1	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input A__.X_ [0...255%]	Receive	1	0	1	0	1	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input A__.X_ [m/s]	Receive	1	0	1	0	1	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [m/s]	Receive	1	0	1	0	1	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	Receive	1	0	1	0	1	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	Receive	1	0	1	0	1	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [ppm]	Receive	1	0	1	0	1	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0/1]	Receive	1	0	1	0	1	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Extension modules RMZ78x with universal inputs as reception objects

Input A5(1).X1...A5(1).X8 RMZ785

Input A7(1).X1...A7(1).X4 RMZ787(1)

Input A7(2).X1...A7(2).X4 RMZ787(2)

5.3.5 Terminal inputs as transm. (send) objects, Extension modules RMZ78x

RMB795B: Terminal inputs as transmission (send) objects, Extension modules RMZ78x

- Universal inputs A__.X1...A__.X8, can be parameterized for analog value [°C], [% rH] etc., or for digital value [0/1]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range	RMB795B sends:	
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input A__.X_ [°C]	Send	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input A__.X_ [% rH]	Send	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0...100%]	Send	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input A__.X_ [0...255%]	Send	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input A__.X_ [m/s]	Send	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [m/s]	Send	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	Send	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	Send	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [ppm]	Send	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0/1]	Send	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Extension modules RMZ78x with universal inputs as transmission (send) objects

Input A5(1).X1...A5(1).X8 RMZ785

Input A7(1).X1...A7(1).X4 RMZ787(1)

Input A7(2).X1...A7(2).X4 RMZ787(2)

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

5.3.6 Terminal outputs as transm. (send) objects, Extension modules RMZ78x

RMB795B: Terminal outputs as transmission (send) objects, Extension modules RMZ78x

- Relay outputs A___.Q_, parameterized for digital output value [0/1]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					Data point type KNX		Format	Unit	Value range	RMB795B sends:
		C	R	W	T	U	ID	DPT_Name				
Output A___.Q_	Send	1	1	0	1	0	1.001	_Switch	1 bit B ₁	- - -	0 = Off 1 = On	Event, heart-beat 15 min.

- Extension modules RMZ787 with relay outputs as transmission (send) objects

Output A7(1).Q1...A7(1).Q5 RMZ787(1) without Q4
Output A7(2).Q1...A7(2).Q5 RMZ787(2) without Q4

Note: Max. 3 Extension modules RMZ78x are allowed per Central control unit RMB795B (1 x RMZ787 and/or max. 2 x RMZ787).

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.


Empty page

6 RMS705, RMS705B switching and monitoring device

6.1 Overview

Brief description

The Sync 700 switching and monitoring device RMS705 and RMS705B contains a multitude of function blocks to acquire counter values and operating hours, to log trends, and to log and record events (event logger). Furthermore, lead/lag control of aggregates with runtime equalization and, via freely configurable logic blocks, switching functions can be implemented.

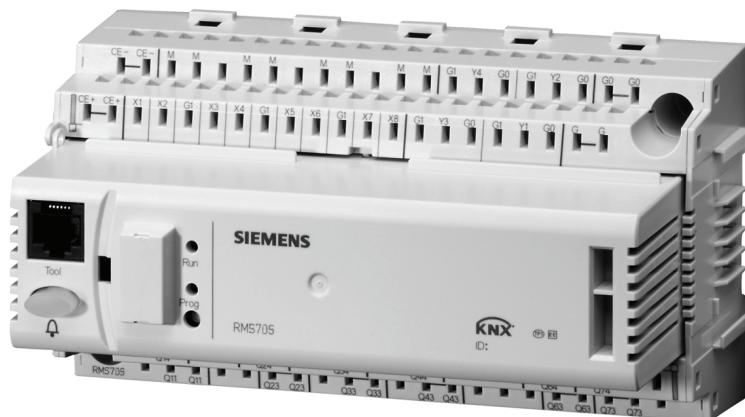

Documentation

Documentation RMS705	Data sheet	Switching and monitoring device RMS705	N3123
	Basic documentation	Switching and monitoring device RMS705	P3123
Documentation RMS705B	Data sheet	Switching and monitoring device RMS705B	N3124
	Basic documentation	Switching and monitoring device RMS705B	P3124

Number of S-mode DPs

	RMS705	RMS705B
Inputs / Outputs	3	3
Inputs and outputs	22	12
Inputs	4	37
Outputs	70	91

Column "DP active"

RMS705

	Indication:	Meaning:
Always		Standard S-mode DP
All appl.		S-mode DP in all applications
Controller 1...3		Controller setpoints (sequence controller) 1...3
Logic 1...10		Operation selector Logic 1...10
T'swi 1...6		Operation selector time switch 1...6
Receive		Receive outside temperature (linked as input)
Transmit		Transmit outside temperature (linked as output)

Note

"Always" points to a standard S-mode DP that is always configured in ETS when the Sync device is selected.

Column "DP active" RMS705B	Indication:	Meaning:
	Always	Standard S-mode DP
	Controller 1...3	Controller setpoints (sequence controller) 1...3
	Logic 1...10	Operation selector Logic 1...10
	T'swi 1...6	Operation selector time switch 1...6
	Receive	Receive outside temperature (linked as input)
	Transmit	Transmit outside temperature (linked as output)
	H/C chov. Receive	Receive heating/cooling changeover signal (linked as input)
	H/C chov. Transmit	Transmit heating/cooling changeover signal (linked as output)
	Calcul. 1, Calcul. 2	Calculator 1, Calculator 2 (calculated using formula)
	Enthalpy	Dew point temperature / Wet bulb temperature
	Sig-Inv	Signal doubler-inverter
	Rec.object	Reception object (terminal value connected as input).
	Trans. object	Transmission object (terminal value connected as output).

Note "Always" points to a standard S-mode DP that is always configured in ETS when the Synco device is selected.

Parameterization
RMS705, RMS705B

An S-mode DP must be configured in ETS and the Synco device to ensure that the S-mode DP transmits valid values. See Section 1.5 on workflows.

Note For RMS705, of a total of 99 S-mode DPs, a maximum of 50 can be connected via group addresses.
For RMS705B, all 143 S-mode DPs can be connected via group addresses.

Universal reception and transmission zones

Device RMS705B allows for universal data exchange via own terminals (universal inputs, relay and analog outputs) as well as via terminals of extension modules RMZ78x. Data is exchanged via KNX.

The universal inputs can be used as reception objects in **reception zones** and as transmission objects in **transmission zones**. The relays and analog outputs can only be used as transmission objects.

Reception zones	Universal inputs	Terminals N.X_ and A__.X_
Transmission zones	Universal inputs	Terminals N.X_ and A__.X_
	Relay outputs	N.Q_ and A__.Q_
	Analog outputs.	N.Y_ and A__.Y_

Note See Section 6.3.1, pages 132 to 136:

Rec. object	Reception object (terminal value connected as input).
Trans. object	Transmission object (terminal value connected as output).

6.2 RMS705, S-mode data points

RMS705: Inputs / Outputs

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMS receives or sends:
		C	R	W	T	U	ID	DPT_Name					
System time (input)	Always ⁵⁾	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 ---	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds Status bits ¹⁾	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)													
Date (input)	Always	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)													
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)													

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMS705: Inputs and outputs

S-mode DPs operated as input and output.

- Input: For operation using external device via KNX, Synco unit RMS705 receives the values of the S-mode DPs.
- Output: For operation from the Synco unit RMS705, the S-mode DP values are sent via KNX (synchronization of external unit).

Name in ETS	DP active	Flags C R W T U					Data point type KNX			Value range		RMS705 rec., sends
		ID	DPT_Name	Format	Unit							
[Operation selector time switch 1...6] Preselection	Ti Swi 1...6	1 0 1 1 1	20.102 _HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve						Event from KNX preselect operation (device/progr.).
[Operation selector Logic 1...10] Preselection	Logic 1...10	1 0 1 1 1	(20.102) (_HVACMode)	1 byte N ₈	Enum.	0 = --- OSV (Auto) 1 = Auto (Comfort) 2 = Off (Precomf, Standby) 3 = On (Economy) 4 = Reserve (Protection, BldgProtect) 5...255 Reserve						Event from KNX preselect operation (device/progr.).
[Controller 1...3] Setpoint high [°C]	Controller 1...3	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point						COV from KNX setp adj.
[Controller 1...3] Setpoint low [°C]	Controller 1...3	1 1 1 1 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point						COV from KNX setp adj.


For [Controller 1...3], you can configure the setpoint for the various units or physical variables via the parameter "[Controller 1...3] Main controlled variable unit".

44 [Controller 2] Setpoint high [°C]
 45 [Controller 2] Setpoint low [°C]
 48 Heating/cooling changeover

Input and Output
Input and Output
Output

2 Byte C R W T U
2 Byte C R W T U
1 bit C - - T -

See screenshot to the right for [Controller 2].

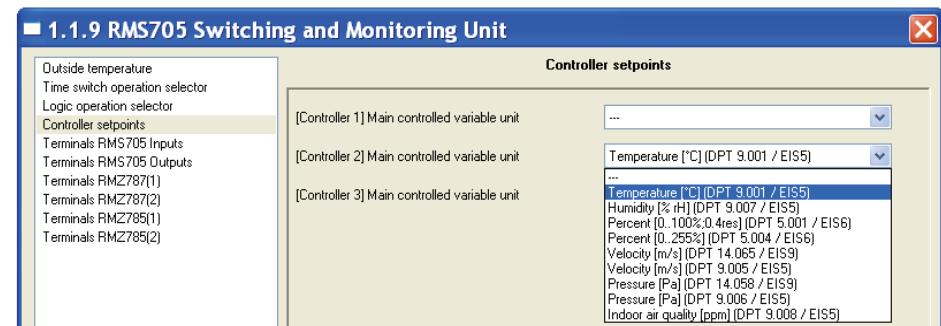

RMS705: Inputs

Name in ETS	DP active	Flags					Data point type KNX			Value range	RMS705 receives:	
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Confirm faults	Always	1	0	1	0	1	1.016	_Ack	1 bit B ₁	---	0 = No action 1 = Acknowledge / confirm	Event from KNX contact. No timeout monitoring.
Reset faults	Always	1	0	1	0	1	1.015	_Reset	1 bit B ₁	---	0 = No action 1 = Reset	Event from KNX contact. No timeout monitoring.
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact. “Disable” timeout monit 24 h.
Outside temperature	Receive	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.

RMS705: Outputs

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMS705 sends:
		C	R	W	T	U	ID	DPT_Name					
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---		[0]...255 = Log no. [RMS = 0] [0...2]...255 = Alarm priority [0...14]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---		0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Outside temperature	Transmit	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C		-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
[Time switch 1...6] State	T'swi 1...6	1	0	0	1	0	1.003	_Enable	1 bit B ₁	---		0 = Disable 1 = Enable (default)	Event, heart-beat 15 min.
[Logic 1...10] State	Logic 1...10	1	0	0	1	0	1.003	_Enable	1 bit B ₁	---		0 = Disable 1 = Enable (default)	Event, heart-beat 15 min.
Heating/cooling changeover	All appl.	1	0	0	1	0	1.100	_Heat/Cool	1 bit B ₁	---		0 = Cooling 1 = Heating (default)	Event, heart-beat 15 min.

²⁾ See Section 1.4.3, page 14.

- You can freely select time switches 1...6 and logic 1...10.

RMS705: Terminals, Switching and monitoring device RMS705

- Input terminals N.X1...N.X8 with S-mode function "Output", parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range		RMS705 sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input N.X_ [°C]	RMS705	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input N.X_ [% rH]	RMS705	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0...100%]	RMS705	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input N.X_ [0...255%]	RMS705	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input N.X_ [m/s]	RMS705	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [m/s]	RMS705	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [Pa]	RMS705	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [Pa]	RMS705	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [ppm]	RMS705	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0/1]	RMS705	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Output terminals N.Q1...N.Q7 (without Q5), parameterized for digital output value [0/1].

Output N.Q_	RMS705	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
-------------	--------	---	---	---	---	---	-------	---------	----------------------	-----	-------------------	---------------------------

- Output terminals N.Y1...N.Y4, parameterized for analog output value [0...100].

Output N.Y_	RMS705	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.
-------------	--------	---	---	---	---	---	-------	----------	----------------------	---	-------------------------------	-------------------------

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMS705: Terminals, Extension modules RMZ78x on Switching and monitoring device RMS705

- Input terminals A__.X_ with S-mode function "Output", parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range		RMS705 sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input A__.X_ [°C]	RMZ78x	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input A__.X_ [% rH]	RMZ78x	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0...100%]	RMZ78x	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4 %	COV, heart-beat 15 min.
Input A__.X_ [0...255%]	RMZ78x	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input A__.X_ [m/s]	RMZ78x	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [m/s]	RMZ78x	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	RMZ78x	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	RMZ78x	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [ppm]	RMZ78x	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0/1]	RMZ78x	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

Input A5(1).X1...A5(1).X8 RMZ785(1)

Input A5(2).X1...A5(2).X8 RMZ785(2)

Input A7(1).X1...A8(1).X4 RMZ787(1)

Input A7(2).X1...A8(2).X4 RMZ787(2)

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMS705: Terminals, Extension modules RMZ78x on Switching and monitoring device RMS705 (continued)

- Output terminals A__.Q_, parameterized for digital output value [0/1].

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range	RMS705 sends:	
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Output A__.Q_	RMZ78x	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

Output A7(1).Q1...A7(1).Q5 RMZ787(1) without Q4
 Output A7(2).Q1...A7(2).Q5 RMZ787(2) without Q4

Note: Max. 3 Extension modules RMZ78x (same or different types) are allowed per **Switching and monitoring device RMS705**.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

6.3 RMS705B, S-mode data points

RMS705B: Inputs / Outputs

Name in ETS	DP active	Flags					Data point type KNX		Format	Unit	Value range	RMS705B rec. or sends:	
		C	R	W	T	U	ID	DPT_Name					
System time (input)	Always ⁵⁾	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 Status bits ¹⁾	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds = Year	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)													
Date (input)	Always	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)													
Time of day (input)	Always	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)													

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RMS705B: Inputs and outputs

S-mode DPs operated as input and output.


- Input: For operation using external device via KNX, Sync unit RMS705 receives the values of the S-mode DPs.
- Output: For operation from the Sync unit RMS705, the S-mode DP values are sent via KNX (synchronization of external unit).

Name in ETS	DP active	Flags C R W T U					Data point type KNX		Format	Unit	Value range	RMS705B rec., sends
		ID	DPT_Name									
[Controller 1...3] Setpoint high [°C]	Controller 1...3	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	COV from KNX setp adj.
[Controller 1...3] Setpoint low [°C]	Controller 1...3	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	COV from KNX setp adj.
[Controller 1...3] Eco setpoint high [°C]	Controller 1...3	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	COV from KNX setp adj.
[Controller 1...3] Eco setpoint low [°C]	Controller 1...3	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	COV from KNX setp adj.

For [Controller 1...3], parameter "[Controller 1...3] Main controlled variable unit" can be used to configure the setpoint for various units or physical variables.

[33] [Controller 2] Eco setpoint high [°C]	Input and Output	2 Byte C R W T U
[34] [Controller 2] Setpoint high [°C]	Input and Output	2 Byte C R W T U
[35] [Controller 2] Setpoint low [°C]	Input and Output	2 Byte C R W T U
[36] [Controller 2] Eco setpoint low [°C]	Input and Output	2 Byte C R W T U
[37] [Controller 2] Current setpoint [°C]	Output	2 Byte C - - T -

See screenshot (right) for [Controller 2].

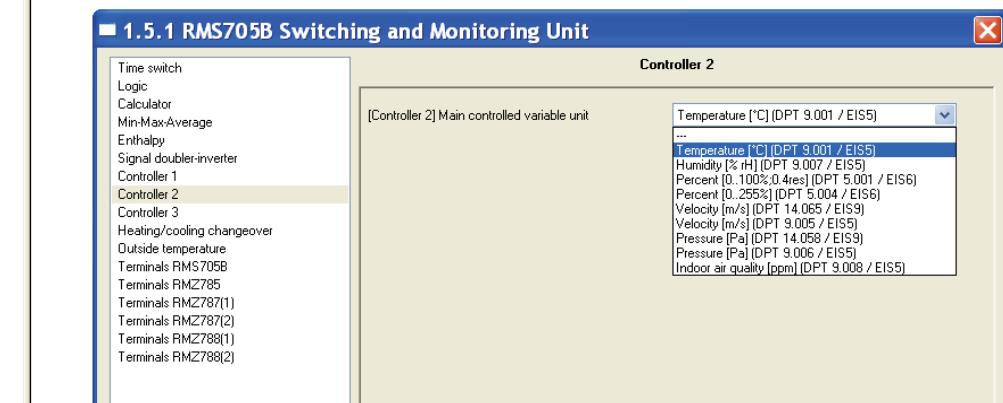

RMS705B: Inputs

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMS705B receives:
		C	R	W	T	U	ID	DPT_Name					
Confirm faults	Always	1	0	1	0	1	1.016	_Ack	1 bit B ₁	---	0 = No action 1 = Acknowledge / confirm	Event from KNX contact. No timeout monitoring.	
Reset faults	Always	1	0	1	0	1	1.015	_Reset	1 bit B ₁	---	0 = No action 1 = Reset	Event from KNX contact. No timeout monitoring.	
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact. “Disable” time-out monit 24 h.	
Outside temperature	Receive	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.	
Heating/cooling changeover	H/C chov. Receive	1	0	0	1	0	1.100	_Heat/Cool	1 bit B ₁	---	0 = Cooling 1 = Heating (default)	Event, heart-beat 15 min.	

RMS705B: Outputs


Name in ETS	DP active	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	RMS705B sends:
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---	[0]...255 = Log no. [RMS = 0] [0...2]...255 = Alarm priority [0...14]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty	Event, heart- beat 30 min.
Outside temperature	Transmit	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart- beat 15 min.
[Time switch 1...6] State	T'swi 1...6	1	0	0	1	0	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event, heart- beat 15 min.
[Logic 1...10] State	Logic 1...10	1	0	0	1	0	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event, heart- beat 15 min.
[Controller 1...3] Current setpoint [°C] ⁶⁾	Controller 1...3	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart- beat 15 min.
Heating/cooling changeover	H/C chov. Transmit	1	0	0	1	0	1.100	_Heat/Cool	1 bit B ₁	---	0 = Cooling 1 = Heating (default)	Event, heart- beat 15 min.

For the S-mode DPs (see table above).

- [Controller 1...3] Current setpoint [°C]

"Current setpoint" is displayed in the unit selected during S-mode DP configuration.
Thus, "Current setpoint" can also be sent as temperature value [°C] or as humidity
value [% rH], for example.

The screenshot (right) shows possible units for "Current setpoint".

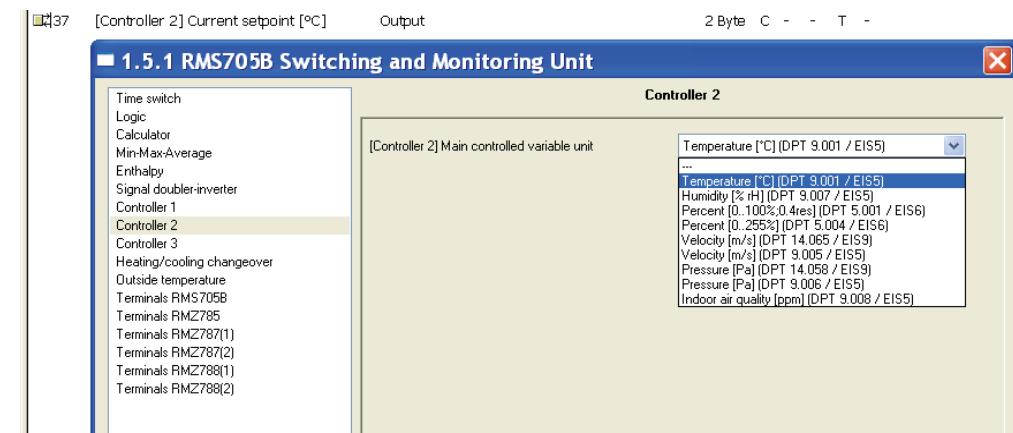

²⁾ See Section 1.4.3, page 14.

⁶⁾ See Section 1.5.1, page 16, Out of service.

RMS705B: Outputs (continued)

Name in ETS	DP active	Flags					Data point type KNX			Value range		RMS705B sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
[Calculator 1]	Calcul. 1	1	0	0	1	0	9.00x	EIS5	2 bytes F ₁₆	°C	-50.00...+9999.00 Floating point	COV, heart-beat 15 min.
[Calculator 2]	Calcul. 2	1	0	0	1	0	9.00x	EIS5	2 bytes F ₁₆	°C	-50.00...+9999.00 Floating point	COV, heart-beat 15 min.
[Min-Max-Average 1] A [°C]	①	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
[Min-Max-Average 1] B [°C]		1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
[Min-Max-Average 2] A [ppm]	②	1	0	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
[Min-Max-Average 2] B [ppm]		1	0	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
[Min-Max-Average 1] A [% rH]	③	1	0	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
[Min-Max-Average 1] B [0...100%]		1	0	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
[Min-Max-Average 2] A [°C]	④	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
[Min-Max-Average 2] B [0...255%]		1	0	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.

Min-Max-Average: Calculates the minimum or maximum or average value from 5 input values or (if inputs are splitted) from 2 and 3 input values.

- ① [Min-Max-Average 1] Inputs splitted = No → [Min-Max-Average 1] = Temperature [°C] or Humidity [% rH], Percent [0...100%], Percent [0...255%], Indoor air quality [ppm]
- ② [Min-Max-Average 2] Inputs splitted = No → [Min-Max-Average 2] = Indoor air quality [ppm]
- Note on ① and ② Inputs splitted = No → 1A and 1B or 2A and 2B always have the same unit, e.g. ① [°C], ② [ppm] or [% rH] [0...100%] [0..255%]
- ③ [Min-Max-Average 1] Inputs splitted = Yes → [Min-Max-Average 1] A = Humidity [% rH] or Temperature [°C], Percent [0...100%], Percent [0...255%], Indoor air quality [ppm]
- [Min-Max-Average 1] Inputs splitted = Yes → [Min-Max-Average 1] B = Percent [0...100%]
- ④ [Min-Max-Average 2] Inputs splitted = Yes → [Min-Max-Average 2] A = Temperature [°C]
- [Min-Max-Average 2] Inputs splitted = Yes → [Min-Max-Average 2] B = Percent [0...255%]
- Note on ③ and ④ Inputs splitted = Yes → 1A, 1B, 2A, 2B can have different units: [°C] [% rH] [0...100%] [0...255%] [ppm]

RMS705B: Outputs (continued)

Name in ETS	DP active	Flags					Data point type KNX			Format	Unit	Value range	RMS705B sends:
		C	R	W	T	U	ID	DPT_Name					
[Enthalpy] Dew point temperature	Enthalpy	1	0	0	1	0	9.001	_Value_DewPnt	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[Enthalpy] Wet bulb temperature		1	0	0	1	0	9.001	_Value_WetBib	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.	
[Signal doubler-inverter] A	Sig-Inv	1	0	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.	
[Signal doubler-inverter] B		1	0	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.	

6.3.1 Terminal inputs and outputs as reception or transmission objects

RMS705B: Terminal inputs as reception objects, Switching and monitoring device RMS705B

- Universal input N.X1...N.X8, parameterizable for analog input value [°C], [% rH] etc. or for digital input value [0/1]. The value can be received in S-mode via KNX.

Name in ETS	DP	Flags					Data point type KNX				Value range	RMS705B receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input N.X_ [°C]	Rec. object	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input N.X_ [% rH]	Rec. object	1	0	1	0	1	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0...100%]	Rec. object	1	0	1	0	1	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input N.X_ [0...255%]	Rec. object	1	0	1	0	1	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input N.X_ [m/s]	Rec. object	1	0	1	0	1	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [m/s]	Rec. object	1	0	1	0	1	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [Pa]	Rec. object	1	0	1	0	1	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [Pa]	Rec. object	1	0	1	0	1	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [ppm]	Rec. object	1	0	1	0	1	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input N.X_ [0/1]	Rec. object	1	0	1	0	1	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

Notes:

- Receipt of an S-mode DP via input N.X_ values, that is outside the range limits ("Value high" and "Value low"), is limited by them, e.g. air velocity >20 [m/s] are limited to 20 [m/s] (when "Value high" = 20 [m/s]).
- The following priority applies to communication of data (e.g. sensor values) in S-mode and LTE mode (both modes possible at the same): Value in S-mode before value in LTE mode before terminal input value.

RMS705B: Terminal inputs as transmission objects, switching and monitoring device RMS705B

- Universal inputs N.X1...N.X8 can be parameterized for analog value [°C], [% rH], etc., or for digital value [0/1]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range	RMS705B sends:
		C	R	W	T	U	ID	DPT_Name	Format		
Input N.X_ [°C]	Trans. object	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C Floating point	COV, heart-beat 15 min.
Input N.X_ [% rH]	Trans. object	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	% [0...670760]	COV, heart-beat 15 min.
Input N.X_ [0...100%]	Trans. object	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	% [0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input N.X_ [0...255%]	Trans. object	1	1	0	1	0	5.004	_Percent	8 bit U ₈	% [0...255] Resolution 1%	COV, heart-beat 15 min.
Input N.X_ [m/s]	Trans. object	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [m/s]	Trans. object	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s [0...670760]	COV, heart-beat 15 min.
Input N.X_ [Pa]	Trans. object	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ² [0...255].[0...8388607]	COV, heart-beat 15 min.
Input N.X_ [Pa]	Trans. object	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ² [0...670760]	COV, heart-beat 15 min.
Input N.X_ [ppm]	Trans. object	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm [0...670760]	COV, heart-beat 15 min.
Input N.X_ [0/1]	Trans. object	1	1	0	1	0	1.001	_Switch	1 bit B ₁	--- 0 = Off 1 = On	Event, heart-beat 15 min.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMS705B: Terminal outputs as transmission objects, switching and monitoring device RMS705B

- The relay outputs N.Q1...N.Q7 (without Q5), parameterized for digital output value [0/1]. The value can be sent in S-mode via KNX.

Output N.Q_	Trans. object	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
-------------	---------------	---	---	---	---	---	-------	---------	-------------------------	-----	-------------------	---------------------------

- Analog outputs N.Y1...N.Y4, parameterized for analog output value [0...100]. The value can be sent in S-mode via KNX.

Output N.Y_	Trans. object	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	% [0...100] Resolution 0.4%	COV, heart-beat 15 min.
-------------	---------------	---	---	---	---	---	-------	----------	-------------------------	-----------------------------------	-------------------------

RMS705B: Terminal inputs as reception objects, Extension modules RMZ78x on the Switching and monitoring device RMS705B

- Universal inputs A__.X1...A__.X8, parameterized for analog values [°C], [% rH] etc., or digital value [0/1]. The value can be received in S-mode via KNX.

Name in ETS	DP	Flags C R W T U					Data point type KNX			Value range	RMS705B receives:
		ID	DPT_Name	Format	Unit						
Input A__.X_ [°C]	Rec. object	1 0 1 0 1	9.001 _Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00	Floating point			COV, heart-beat 15 min.	
Input A__.X_ [% rH]	Rec. object	1 0 1 0 1	9.007 _Value_Humidity	2 bytes F ₁₆	%	[0...670760]				COV, heart-beat 15 min.	
Input A__.X_ [0...100%]	Rec. object	1 0 1 0 1	5.001 _Scaling	8 bit U ₈	%	[0...100]	Resolution 0.4%			COV, heart-beat 15 min.	
Input A__.X_ [0...255%]	Rec. object	1 0 1 0 1	5.004 _Percent	8 bit U ₈	%	[0...255]	Resolution 1%			COV, heart-beat 15 min.	
Input A__.X_ [m/s]	Rec. object	1 0 1 0 1	14.065 _Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating	[0...255].[0...8388607]			COV, heart-beat 15 min.	
Input A__.X_ [m/s]	Rec. object	1 0 1 0 1	9.005 _Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]				COV, heart-beat 15 min.	
Input A__.X_ [Pa]	Rec. object	1 0 1 0 1	14.058 _Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating	[0...255].[0...8388607]			COV, heart-beat 15 min.	
Input A__.X_ [Pa]	Rec. object	1 0 1 0 1	9.006 _Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]				COV, heart-beat 15 min.	
Input A__.X_ [ppm]	Rec. object	1 0 1 0 1	9.008 _Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]				COV, heart-beat 15 min.	
Input A__.X_ [0/1]	Rec. object	1 0 1 0 1	1.001 _Switch	1 bit B ₁	---	0 = Off	1 = On			Event, heart-beat 15 min.	

- Extension modules RMZ78x with universal inputs as reception objects

Input A5(1).X1...A5(1).X8	RMZ785
Input A7(1).X1...A7(1).X4	RMZ787(1)
Input A7(2).X1...A7(2).X4	RMZ787(2)
Input A8(1).X1...A8(1).X4	RMZ788(1)
Input A8(2).X1...A8(2).X4	RMZ788(2)

RMS705B: Terminal inputs as transmission objects, Extension modules RMZ78x on the Switching and monitoring device RMS705B

- Universal inputs A__.X1...A__.X8, can be parameterized for analog value [°C], [% rH] etc., or for digital value [0/1]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Value range		RMS705B sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Input A__.X_ [°C]	Trans. object	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV, heart-beat 15 min.
Input A__.X_ [% rH]	Trans. object	1	1	0	1	0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0...100%]	Trans. object	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	COV, heart-beat 15 min.
Input A__.X_ [0...255%]	Trans. object	1	1	0	1	0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%	COV, heart-beat 15 min.
Input A__.X_ [m/s]	Trans. object	1	1	0	1	0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [m/s]	Trans. object	1	1	0	1	0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	Trans. object	1	1	0	1	0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]	COV, heart-beat 15 min.
Input A__.X_ [Pa]	Trans. object	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [ppm]	Trans. object	1	1	0	1	0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]	COV, heart-beat 15 min.
Input A__.X_ [0/1]	Trans. object	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

- Extension modules RMZ78x with universal inputs as transmission objects

Input A5(1).X1...A5(1).X8	RMZ785
Input A7(1).X1...A7(1).X4	RMZ787(1)
Input A7(2).X1...A7(2).X4	RMZ787(2)
Input A8(1).X1...A8(1).X4	RMZ788(1)
Input A8(2).X1...A8(2).X4	RMZ788(2)

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

RMS705B: Terminal outputs as transmission objects, Extension modules RMZ78x on the Switching and monitoring device RMS705B

- Relay outputs A__.Q_, parameterized for digital output value [0/1]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Format	Unit	Value range	RMS705B sends:
		C	R	W	T	U	ID	DPT_Name					
Output A__.Q_	Trans. object	1	1	0	1	0	1.001	_Switch	1 bit	---	B ₁	0 = Off 1 = On	Event, heart-beat 15 min.

- Extension modules RMZ78x with relay outputs as transmission objects

Output A7(1).Q1...A7(1).Q5 RMZ787(1) without Q4
 Output A7(2).Q1...A7(2).Q5 RMZ787(2) without Q4
 Output A8(1).Q1, A8(1).Q5 RMZ788(1)
 Output A8(2).Q1, A8(2).Q5 RMZ788(2)

- Analog outputs A__.Y_, parameterized for analog output value [0...100]. The value can be sent in S-mode via KNX.

Name in ETS	DP ⁷⁾	Flags					Data point type KNX			Format	Unit	Value range	RMS705B sends:
		C	R	W	T	U	ID	DPT_Name					
Output A__.Y_	Trans. object	1	1	0	1	0	5.001	_Scaling	8 bit	%	U ₈	[0...100] Resolution 0.4%	COV, heart-beat 15 min.

- Extension modules RMZ78x with analog outputs as transmission objects

Output A8(1).Y1, A8(1).Y2 RMZ788(1)
 Output A8(2).Y1, A8(2).Y2 RMZ788(2)

Note: Max. 4 Extension modules RMZ78x (same or different types) are allowed per Switching and monitoring device RMS705B.

⁷⁾ See Section 1.5.1, page 16, S-mode DP sends 0.

7 RMZ792, RMZ792B Bus operator units

7.1 Overview

Brief description

Synco 700 bus operator units RMZ792 and RMZ792B are used to operate Synco 700 control units via KNX. They can be installed e.g. in control panels or used for mobile application.

Note

The bus operator units does not allow to configure and commission the devices on the KNX network. To do this, use the RMZ790, RMZ791 operator units locally or together with the OCI700.1 service tool via KNX.



Documentation

Data sheet	Bus operator unit RMZ792 Series B	N3113
Basic documentation	Bus operator unit RMZ792 Series B	P3113

Number of S-mode DPs

	RMZ792, RMZ792B
Inputs	5
Outputs	2

Parameterization

An S-mode DP must be configured in ETS and the Synco device to ensure that the S-mode DP transmits valid values. See Section 1.5 on workflows.

Note

ETS configures all S-mode DPs after selecting the bus operator unit.

7.2 RMZ792, RMZ792B, S-mode data points

RMZ792, RMZ792B: Inputs

Name in ETS	Flags					Data point type KNX		Format	Unit	Value range	RMZ... receives:	
	C	R	W	T	U	ID	DPT_Name					
System time	1	0	1	0	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 Status bits ¹⁾	From KNX system time source, cycl.	
Date	1	0	1	0	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	= Day of month = Month = Year ⁴⁾	From KNX date source, cycl. 10 min.
Time	1	0	1	0	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	From KNX time source, cycl. 10 min.

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

Note on system time, date, time

- Contrary to Sync 700 control devices with master/slave function and input/output, the RMZ792, RMZ792B bus operator units can only receive system time, date and time, i.e. slave function, input only.

RMZ792, RMZ792B: Inputs (continued)

Name in ETS	Flags					Data point type KNX			Format	Unit	Value range	RMZ... receives:
	C	R	W	T	U	ID	DPT_Name					
Confirm faults	1	0	1	0	1	1.016	_Ack	1 bit B ₁	---		0 = No action 1 = Acknowledge / confirm	Event from KNX contact. No timeout monitoring.
Fault transmission (enable/disable)	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---		0 = Disable 1 = Enable (default)	Event from KNX contact. "Disable" time-out monit 48 h.

RMZ792, RMZ792B: Outputs

Name in ETS	Flags					Data point type KNX			Format	Unit	Value range	RMZ... sends:
	C	R	W	T	U	ID	DPT_Name					
Fault information	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---		[0]...255 = Log no.[RMZ = 0] [0...2]...255 = Alarm priority [0...10]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---		0 = No alarm / normal (default) 1 = Alarm / faulty	Event, heart-beat 30 min.

²⁾ See Section 1.4.3, page 14.


Blank page

8 OZW771 Central communication unit

8.1 Overview

Brief description

The central communication unit OZW771 is used to remote control and supervise HVAC plants and Synco 700 devices in KNX networks (for 4, 10, or 64 devices depending on the type of OZW771.xx).

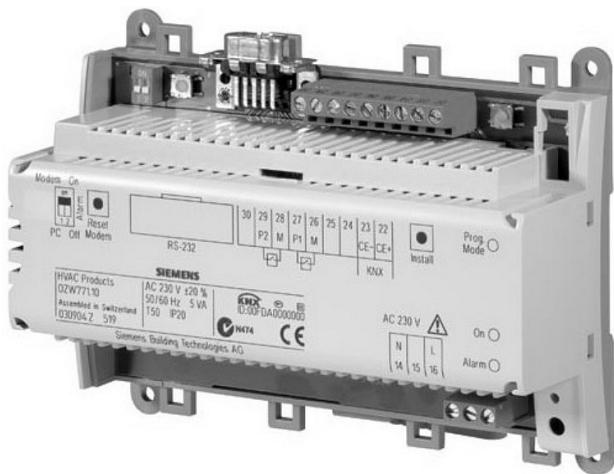

Documentation

Data sheet Central communication unit OZW771.xx **N3117**
Basic documentation Central communication unit OZW771.xx **P3117**

Number of S-mode DPs

OZW771.xx	
Inputs / Outputs	3
Inputs	1
Outputs	4

Parameterization

An S-mode DP must be configured in ETS and the Synco device to ensure that the S-mode DP transmits valid values. See Section 1.5 on workflows.

Note

ETS configures all S-mode DPs after selecting the central communication unit.

8.2 OZW771, S-mode data points

OZW771: Inputs / Outputs

Name in ETS	Flags					Data point type KNX		Format	Unit	Value range	OZW receives or sends:
	C	R	W	T	U	ID	DPT_Name				
System time (input)	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 Status bits ¹⁾	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)											
Date (input)	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	From KNX date source or to KNX date receiver cycl. 10 min
Date (output)											
Time of day (input)	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)											

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

OZW771: Inputs

Name in ETS	Flags					Data point type KNX			Format	Unit	Value range	OZW771 receives:
	C	R	W	T	U	ID	DPT_Name					
Fault transmission (enable/disable)	1	0	1	0	1	1.003	_Enable		1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact. "Disable" time-out monit 48 h.

OZW771: Outputs

Name in ETS	Flags					Data point type KNX			Format	Unit	Value range	OZW771 sends:
	C	R	W	T	U	ID	DPT_Name					
Fault information	1	0	0	1	0	219.001	_AlarmlInfo ²⁾		6 bytes struct.	---	[0]...255 = Log no.[OZW = 0] [0...2]...255 = Alarm priority [0...10]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	1	0	0	1	0	1.005	_Alarm		1 bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Fault 1	1	0	0	1	0	1.006	_BinaryValue		1 bit B ₁	---	0 = Low / no fault (default) 1 = High / fault	Event, heart-beat 30 min.
Fault 2	1	0	0	1	0	1.006	_BinaryValue		1 bit B ₁	---	0 = Low / no fault (default) 1 = High / fault	Event, heart-beat 30 min.

²⁾ See Section 1.4.3, page 14.

Fault 1 and Fault 2

- The OZW771 central communication unit transmits the state pending at "Fault input 1" and "Fault input 2".


Blank page

9 OZW775 Central communication unit

9.1 Overview

Brief description

The OZW775 Central communication unit allows for remote operation and monitoring of HVAC plants comprising max. 250 Synco devices, and for operation using a web browser from Version 2.0.

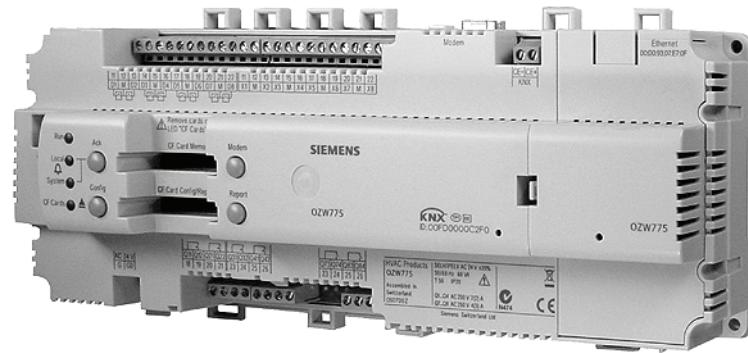

Documentation

Data sheet	Central communication unit OZW775	N5663
Commissioning instructions	Central communication unit OZW775	C5663

Number of S-mode DPs

	OZW775	OZW775 from V2.0
Inputs / Outputs	3	3
Inputs	2	2
Outputs	2	2 (+26, see table on page 148)

Parameterization

An S-mode DP must be configured in ETS and the Synco device to ensure that the S-mode DP transmits valid values. See Section 1.5 on workflows.

Note

ETS configures all S-mode DPs after selecting the central communication unit.

9.2 OZW775, S-mode data points

OZW775: Inputs / Outputs

Name in ETS	Flags					Data point type KNX		Format	Unit	Value range	OZW receives or sends:
	C	R	W	T	U	ID	DPT_Name				
System time (input)	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 Status bits ¹⁾	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)											
Date (input)	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	From KNX date source or to KNX date receiver cycl. 10 min.
Date (output)											
Time of day (input)	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)											

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

OZW775: Inputs

Name in ETS	Flags					Data point type KNX			Format	Unit	Value range	OZW775 receives:
	C	R	W	T	U	ID	DPT_Name					
Confirm faults	1	0	1	0	1	1.016	_Ack	1 bit B1	---		0 = No action 1 = Acknowledge / confirm	Event from KNX contact. No timeout monitoring.
Fault transmission (enable/disable)	1	0	1	0	1	1.003	_Enable	1 bit B1	---		0 = Disable 1 = Enable (default)	Event from KNX contact. “Disable” time-out monit 48 h.

OZW775: Outputs

Name in ETS	Flags					Data point type KNX			Format	Unit	Value range	OZW775 sends:
	C	R	W	T	U	ID	DPT_Name					
Fault information	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---		[0]...255 = Log no.[OZW = 0] [0...2]...255 = Alarm priority [0...10]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Heartbeat 30 min.
Fault state (normal/faulty)	1	0	0	1	0	1.005	_Alarm	1 bit B1	---		0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.

²⁾ See Section 1.4.3, page 14.

OZW775 from V2.0: Outputs

Input N.D1...8 and input N.X1...8 with S-mode function "Output"

- The S-mode DPs of OZW775 (new SW version) send the values pending at terminals D1...D8 (digital inputs [0/1]) and X1...X8 (analog inputs [C°], [% rH] etc.) via KNX (e.g. value transmission to an display unit).

Name in ETS	DP	Flags C R W T U					Data point type KNX			Value range	OZW775 sends:
		ID	DPT_Name	Format	Unit						
Input N.D1...8	Digital input	1 1 0 1 0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On			Event, heart-beat 15 min.	
Input N.X1...8 [C°]	Temperature	1 1 0 1 0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point			COV, heart-beat 15 min.	
Input N.X1...8 [% rH]	Humidity	1 1 0 1 0	9.007	_Value_Humidity	2 bytes F ₁₆	%	[0...670760]			COV, heart-beat 15 min.	
Input N.X1...8 [0...100%]	Percent	1 1 0 1 0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%			COV, heart-beat 15 min.	
Input N.X1...8 [0...255%]	Percent	1 1 0 1 0	5.004	_Percent	8 bit U ₈	%	[0...255] Resolution 1%			COV, heart-beat 15 min.	
Input N.X1...8 [m/s]	Speed	1 1 0 1 0	14.065	_Value_Speed	4 bytes F ₃₂	m/s	IEEE 754 floating [0...255].[0...8388607]			COV, heart-beat 15 min.	
Input N.X1...8 [m/s]	Speed	1 1 0 1 0	9.005	_Value_Wsp	2 bytes F ₁₆	m/s	[0...670760]			COV, heart-beat 15 min.	
Input N.X1...8 [Pa]	Pressure	1 1 0 1 0	14.058	_Value_Pressure	4 bytes F ₃₂	Pa = N/m ²	IEEE 754 floating [0...255].[0...8388607]			COV, heart-beat 15 min.	
Input N.X1...8 [Pa]	Pressure	1 1 0 1 0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]			COV, heart-beat 15 min.	
Input N.X1...8 [ppm]	Air quality	1 1 0 1 0	9.008	_Value_AirQuality	2 bytes F ₁₆	ppm	[0...670760]			COV, heart-beat 15 min.	
Input N.X1...8 [0/1]	Digital input	1 1 0 1 0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On			Event, heart-beat 15 min.	
Output N.Q1...4, N.Q7, N.Q8	Digital output	1 1 0 1 0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On			Event, heart-beat 15 min.	
[Time switch 1...4] State	Digital output	1 0 0 1 0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On			Event, heart-beat 15 min.	

10 OZW772 Web server

10.1 Overview

Brief description

Web server OZW772 V2.0 can connect 1 to 64 devices and OZW772 V3.0 1 to 250 devices from the product ranges: Synco 700, Synco RXB/RXL, Synco room thermostats RDF/RDU/RDG, and Synco living QAX9xx central apartment units.

Web servers OZW772... allows local operation/monitoring as well as remote operation/monitoring of Synco devices in a KNX network via web browser, smartphone and/or ACS operator station (PC/Laptop with ACS Commissioning and plant operating software).



Documentation

Data sheet

Web server OZW772...

N5701

Commissioning instructions

Web server OZW772...

C5701

Number of S-mode DPs

	OZW772...
Inputs / Outputs	3
Inputs	2
Outputs	2

Parameterization

An S-mode DP must be configured in ETS and the Synco device to ensure that the S-mode DP transmits valid values. See Section 1.5 on workflows.

Note

ETS configures all S-mode DPs after selecting the web server.

10.2 OZW772, S-mode data points

OZW772: Inputs / Outputs

Name in ETS	Flags					Data point type KNX		Format	Unit	Value range	OZW receives or sends:
	C	R	W	T	U	ID	DPT_Name				
System time (input)	1	0	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 Status bits ¹⁾	From KNX system time source or to KNX system time receiver cycl. 10 min.
System time (output)											
Date (input)	1	0	1	1	1	11.001	_Date	3 bytes struct.	DD MM YY	1...31 1...12 00...99	From KNX date source or to KNX date receiver cycl. 10 min
Date (output)											
Time of day (input)	1	0	1	1	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	From KNX time source or to KNX time receiver cycl. 10 min.
Time of day (output)											

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

OZW772: Inputs

Name in ETS	Flags					Data point type KNX			Value range	OZW775 receives:
	C	R	W	T	U	ID	DPT_Name	Format	Unit	
Confirm faults	1	0	1	0	1	1.016	_Ack	1 bit B1	---	0 = No action 1 = Acknowledge / confirm
Fault transmission (enable/disable)	1	0	1	0	1	1.003	_Enable	1 bit B1	---	0 = Disable 1 = Enable (default)

OZW772: Outputs

Name in ETS	Flags					Data point type KNX			Value range	OZW775 sends:
	C	R	W	T	U	ID	DPT_Name	Format	Unit	
Fault information	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---	[0]...255 = Log no.[OZW = 0] [0...2]...255 = Alarm priority [0...10]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state
Fault state (normal/faulty)	1	0	0	1	0	1.005	_Alarm	1 bit B1	---	0 = No alarm (default) 1 = Alarm / faulty

²⁾ See Section 1.4.3, page 14.

Blank page

11 QAW740 Room unit

11.1 Overview

Brief description

The QAW740 room unit is a digital, multifunctional room unit. It has an LCD to display room temperature, operating mode or room setpoint adjustments.

The operating elements on the room unit allow for remote intervention in the control functions of the Synco 700 controllers. Both remote intervention and acquired room temperature are transmitted to the same-zone controller via KNX.

Note: The QAW740 room unit is not suited for use with the RXB room controllers.



Documentation

Data sheet

Room unit QAW740 **N1633**

Installation and operating instructions

Room unit QAW740 **B1633**

(multilingual, enclosed with unit)

Number of S-mode DPs

- Outputs 2

Parameterization

An S-mode DP must be configured in ETS and the Synco device to ensure that the S-mode DP transmits valid values. See Section 1.5 on workflows.

Note

ETS configures all S-mode DPs after selecting the room unit.

11.2 QAW740, S-mode data points

QAW740: Outputs

Name in ETS	Flags					Data point type KNX			Format	Unit	Value range	QAW740 sends:
	C	R	W	T	U	ID	DPT_Name					
Room temperature	1	0	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point ^{*)}	COV, heart-beat 15 min.	
Room temperature: Setpoint relative	1	0	0	1	0	9.002	_Value_Tempd	2 bytes F ₁₆	K	-670760.00...+670760.00 Floating point ^{**)}	COV, heart-beat 15 min.	

^{*)} For the QAW740 room unit, the value range is limited to measuring range 0...45 °C.

^{**)} For the QAW740 room unit, the value range is limited to a setpoint readjustment of ± 3 K (relative to setpoint).

12 RDF301, RDF301.50, RDF600KN Room thermostats

12.1 Overview

Brief description

Room thermostat RDF301, RDF301.50 and RDF600KN are used for applications with fan coils and heat pumps. Type RDF301.50 also has buttons for lighting and blinds control via KNX.

The room thermostats have an LCD to display (depending on operating function) room temperature, room setpoint, outside air temperature, operating mode, fan speed, alarm state and time.

The operating elements allow for remote intervention in the control functions.



RDF301.50



RDF301 / RDF600KN

Documentation

Data sheet	Room thermostats RDF301... / RDF600KN	N3171
Operating instructions	Room thermostats RDF301... / RDF600KN	B3171
Basic documentation	Room thermostats RDF301... / RDF600KN	P3171

Number of S-mode DPs

	RDF301 RDF600KN	RDF301.50
Inputs and outputs ¹⁾	2	2
Outputs and inputs (Synchronization inputs) ²⁾	---	4
Inputs	19	19
Output	20	32

¹⁾ Input and Output S-mode DP receives a value, e.g. the setpoint from an external setpoint default S-mode DP sends a value, e.g. the setpoint to another (third-party) device.

²⁾ Output and Input S-mode DP sends primarily one value.
S-mode DP receives a value, if the parameter setting:
→ Function button ... = Toggle
is selected, i.e. the button is used as toggle (switch), e.g. lighting control. The input is synchronized with the output (of another device). An input with this function is identified as "synchronization input".

Column

"DP visible in ETS"

The data in column "DP visible in ETS" (see table below) refers to parameter settings where the S-mode DP is visible in the ETS.

Parameterization

An S-mode DP must be configured in ETS and the Synco device to ensure that the S-mode DP transmits valid values. See Section 1.5 on workflows.

12.2 RDF301, RDF301.50, RDF600KN, S-mode data points

RDF301... / RDF600KN: Inputs and outputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX		Format	Unit	Value range	RDF receives, sends:
		C	R	W	T	U	ID	DPT_Name				
Room operating mode: Preselection	①	1	0	1	1	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort, mapped in 1 or 3 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Receives event from KNX preselect operation (device/progr). Sends at local change (local operation).
Room temperature: Comfort setpoint	②	1	0	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 5...40 °C	Receives event from KNX preselect operation (device/progr). Sends at local change (local operation).

① Preselection reception: Group object type = 1 byte (Enumeration)

② Room temperature: Comfort setpoint = Yes

RDF301.50: Outputs and inputs (Synchronization inputs)

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Format	Unit	Value range	RDF sends, receives:
		C	R	W	T	U	ID	DPT_Name					
Button top left: On/Off	①	1	0	1	1	1	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Sends button activation (output). <u>and</u> Receives (as Event via KNX) the button activation (Synchronization input).	
Button bottom left: On/Off		1	0	1	1	1	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On		
Button top right: On/Off		1	0	1	1	1	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On		
Button bottom right: On/Off		1	0	1	1	1	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On		

- ① Function buttons left = Switch → On/Off function = Twice On/Off → Function button top = Toggle
- ② Function buttons left = Switch → On/Off function = Twice On/Off → Function button bottom = Toggle
- ③ Function buttons right = Switch → On/Off function = Twice On/Off → Function button top = Toggle
- ④ Function buttons right = Switch → On/Off function = Twice On/Off → Function button bottom = Toggle



RDF301... / RDF600KN: Inputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Value range		RDF receives:	
		C	R	W	T	U	ID	DPT_Name	Format	Unit			
System time	Always ⁵⁾	1	0	1	0	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 ---	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds Status bits ¹⁾	KNX system clock (for RDF weekday and time).
Time of day	Always	1	0	1	0	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	KNX clock.
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact.	
Room operating mode: Preselection Auto	①	1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Auto	Event from KNX preselect operation (device/progr). No reception timeout.	
Room operating mode: Preselection Comfort		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Comfort		
Room operating mode: Preselection Economy		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Economy		
Room operating mode: Preselection Protection		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Protection		

① Preselection reception: Group object type = 1 bit

¹⁾ See Section 1.4.3, page 13.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RDF301... / RDF600KN: Inputs (continued)

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Format	Unit	Value range	RDF receives:
		C	R	W	T	U	ID	DPT_Name					
Room operating mode: Time switch	①	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	1 = Comfort 2 = Precomfort, mapped in 1 or 3 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr).	
Room operating mode: Time switch Comfort	②	1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Comfort	Event from KNX preselect operation (device/progr).	
Room operating mode: Time switch Economy		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Economy		
Room operating mode: Time switch Protection		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Protection		
Room operating mode: Window state	③	1	0	1	0	1	1.019	_Window_Door	1 bit B ₁	---	0 = Closed 1 = Open	Event from window contact (via KNX).	
Room temperature: Comfort basic setpoint	④	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 5...40 °C (default = 21 °C)	Event from KNX preselect operation (device/progr).	
Enable electric heater	⑤	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX preselect operation (device/progr).	
Heating/cooling changeover	⑥	1	0	1	0	1	1.100	_Heat/Cool	1 bit B ₁	---	0 = Cooling 1 = Heating (default)	Event from KNX preselect operation (device/progr).	

① Time switch reception: Group object type = 1 byte (Enumeration)

② Time switch reception: Group object type = 1 bit

③ Window state input = Bus Note: The S-mode DP has no function if window contact is recorded locally via terminal input.

④ Room temperature: Comfort basic setpoint = Receive

⑤ Plant type = 2-pipe with electric heater Note: The S-mode DP has no function if the enable is recorded locally via the terminal input.

⑥ Plant type (all) → Control sequence = H/C changeover auto

RDF301... / RDF600KN: Inputs (continued)

Name in ETS	DP visible in ETS	Flags					Data point type KNX				Value range	RDF receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Application mode	①	1	0	1	0	1	20.105	_HVACContrMode	1 byte N ₈	Enum.	0 = Auto 1 = Heat 2 = Heat 3 = Cool 4 = Auto 5 = Cool 6 = Off 7 = Auto 8 = Heat 9 = Fan only 10 = Cool 11...255 = Reserve	Event from KNX mode preselection (device/progr), especially from Synco living central apartment units.
Enable fan command value	②	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX preselect operation (device/progr).
Fan command value	③	1	0	1	0	1	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event from KNX preselect operation (device/progr).
Outside temperature	④	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display -99...655.3 °C	COV from outside air sensor.

① Plant type (all) → Application mode = Receive

② Fan operation = Yes → Enable/disable command value = Receive

③ Fan operation = Yes → Fan speed: Command value and output [%] = Yes

④ Outside temperature = Receive

RDF301... / RDF600KN: Outputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Format	Unit	Value range	RDF sends:
		C	R	W	T	U	ID	DPT_Name					
Fault information	Always	1	0	0	1	0	219.001	_AlarmlInfo ²⁾	6 bytes strukt.	---		[0]...255 = Log no. [RDF = 0] [0...2]...255 = Alarm priority [0...11]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Event, heart-beat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---		0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Room operating mode: State	①	1	1	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.		0 = Auto (Not used) 1 = Comfort 2 = PreComfort (Not used) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
Room operating mode: State Comfort	②	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---		0 = Not used 1 = Comfort	Event, last change of state applies. No heartbeat.
Room operating mode: State Economy		1	0	0	1	0	1.001	_Switch	1 bit B ₁	---		0 = Not used 1 = Economy	
Room operating mode: State Protection		1	0	0	1	0	1.001	_Switch	1 bit B ₁	---		0 = Not used 1 = Protection	
Room temperature	③	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C		-273.00...+670760.00 Floating point LCD display 0...49 °C	COV, heart-beat 15 min.
Room temperature: Current setpoint	④	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C		-273.00...+670760.00 Floating point LCD display 5...40 °C	Event, heart-beat 15 min.
Heating output primary	⑤	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%		[0...100] Resolution 0.4%	Event, heart-beat 15 min.

① State transmission: Group object type = 1 byte (Enumeration)

② State transmission: Group object type = 1 bit

③ Room temperature = Transmit

④ Room temperature: Current setpoint = Transmit

⑤ Plant type (all) → Control sequence = Heating only or H/C changeover auto or H/K changeover manual

²⁾ See Section 1.4.3, page 14.

RDF301... / RDF600KN: Outputs (continued)

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Value range		RDF sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Heating output secondary	①	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
Cooling output primary	②	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
Fan operation (0=Auto/1=Manual)	③	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Auto 1 = Manual	Event, heart-beat 15 min.
Fan output	④	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
Fan speed 1	⑤	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
Fan speed 2		1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	
Fan speed 3		1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	
X1: Temperature [°C]	⑥	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 0...49 °C	COV, heart-beat 15 min.
X1: Digital [0/1]	⑦	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
X2: Temperature [°C]	⑧	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 0...49 °C	COV, heart-beat 15 min.
X2: Digital [0/1]	⑨	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

① Plant type = 2-pipe with electric heater

② Plant type (all) → Control sequence = Cooling only or H/C changeover auto or H/C changeover manual

③ Fan operation = Yes → Current operating mode = Transmit

④ Fan operation = Yes → Fan speed: Command value and output [%] = Yes

⑤ Fan operation = Yes → Fan speed: Speed 1...3 = Yes

⑥ Universal input X1 = Temperature [°C]

⑦ Universal input X1 = Digital [0/1]

⑧ Universal input X2 = Temperature [°C]

⑨ Universal input X2 = Digital [0/1]

RDF301.50: Outputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Format	Unit	Value range	RDF sends:
		C	R	W	T	U	ID	DPT_Name					
Buttons left: On/Off	① / ④	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On		Event for button activation.
Button top left: On/Off	②												
Button bottom left: On/Off	③	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On		Event for button activation.
Buttons left: Dim up/down	④	1	0	0	1	0	3.007	_Control_Dimming	4 bit U ₄	---	On/Off via switching U ₄ U ₃ U ₂ U ₁ 0 0 0 1 = Darker 1 0 0 1 = Brighter 0 0 0 0 = Stop		Event for button activation.
Buttons left: Blind step/stop	⑤	1	0	0	1	0	1.007	_Step	1 bit B ₁	---	0 = Step up 1 = Step down		Event for button activation.
Buttons left: Blind up/down		1	0	0	1	0	1.008	_UpDown	1 bit B ₁	---	0 = Up 1 = Down		Event for button activation.
Buttons left: Scene	⑥	1	0	0	1	0	18.001	_SceneControl	1 byte B ₁ r ₁ U ₆	---	B ₁ 0 = Activate scene 1 = Learn scene r ₁ = (Reserve) U ₆ = Scene number 0...63		Event for button activation.

- ① Function buttons left = Switch → On/Off function = Top: On / Bottom: Off
- ② Function buttons left = Switch → On/Off function = Twice On/Off → Function button top = On or Function button top = Off
- ③ Function buttons left = Switch → On/Off function = Twice On/Off → Function button bottom = On or Function button bottom = Off
- ④ Function buttons left = Dim
- ⑤ Function buttons left = Blind
- ⑥ Function buttons left = Scene

RDF301.50: Outputs (continued)

Name in ETS	DP visible in ETS	Flags C R W T U					Data point type KNX			Value range		RDF sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Buttons right: On/Off	① / ④	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event for button activation.
Button top right: On/Off	②											
Button bottom right: On/Off	③	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event for button activation.
Buttons right: Dim up/down	④	1	0	0	1	0	3.007	_Control_Dimming	4 bit U ₄	---	On/Off via switching U ₄ U ₃ U ₂ U ₁ 0 0 0 1 = Darker 1 0 0 1 = Brighter 0 0 0 0 = Stop	Event for button activation.
Buttons right: Blind step/stop	⑤	1	0	0	1	0	1.007	_Step	1 bit B ₁	---	0 = Step up 1 = Step down	Event for button activation.
Buttons right: Blind up/down		1	0	0	1	0	1.008	_UpDown	1 bit B ₁	---	0 = Up 1 = Down	Event for button activation.
Buttons right: Scene	⑥	1	0	0	1	0	18.001	_SceneControl	1 byte B ₁ r ₁ U ₆	---	B ₁ 0 = Activate scene 1 = Learn scene r ₁ = (Reserve) U ₆ = Scene number 0...63	Event for button activation.

- ① Function buttons right = Switch → On/Off function = Top: On / Bottom: Off
- ② Function buttons right = Switch → On/Off function = Twice On/Off → Function button top = On or Function button top = Off
- ③ Function buttons right = Switch → On/Off function = Twice On/Off → Function button bottom = On or Function button bottom = Off
- ④ Function buttons right = Dim
- ⑤ Function buttons right = Blind
- ⑥ Function buttons right = Scene

13 RDU341 Room thermostat

13.1 Overview

Brief description

Room thermostat RDU341 is used for VAV applications. It has an LCD to display (depending on operating function) room temperature, room setpoint, outside air temperature, operating mode, alarm state and time.

The operating elements on the room unit allow for remote intervention in the control functions.



Documentation

Data sheet	Room thermostat RDU341	N3172
Operating instructions	Room thermostat RDU341	B3172
Basic documentation	Room thermostat RDU341	P3172

Number of S-mode DPs

	RDU341
Inputs and outputs	2
Inputs	17
Outputs	14

Parameterization

An S-mode DP must be configured in ETS and the Synco device to ensure that the S-mode DP transmits valid values. See Section 1.5 on workflows.

13.2 RDU341, S-mode data points

RDU341: Inputs and outputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Format	Unit	Value range	RDU receives, sends:
		C	R	W	T	U	ID	DPT_Name					
Room operating mode: Preselection	①	1	0	1	1	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort, mapped in 1 or 3 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve		Receives event from KNX preselect operation (device/progr). Sends at local change (local operation).
Room temperature: Comfort setpoint	②	1	0	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 5...40 °C		Receives event from KNX preselect operation (device/progr). Sends at local change (local operation).

① Preselection reception: Group object type = 1 byte (Enumeration)

② Room temperature: Comfort setpoint = Yes

RDU341: Inputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Format	Unit	Value range	RDU receives:
		C	R	W	T	U	ID	DPT_Name					
System time	Always ⁵⁾	1	0	1	0	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 ---	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds Status bits ¹⁾	KNX system clock (for RDU weekday and time).
Time of day	Always	1	0	1	0	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	KNX clock.
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)		Event from KNX contact.
Room operating mode: Preselection Auto	①	1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Auto		Event from KNX preselect operation (device/progr). No reception timeout.
Room operating mode: Preselection Comfort		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Comfort		
Room operating mode: Preselection Economy		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Economy		
Room operating mode: Preselection Protection		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Protection		

① Preselection reception: Group object type = 1 bit

¹⁾ See Section 1.4.3, page 13.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RDU341: Inputs (continued)

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Value range		RDU receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Room operating mode: Time switch	①	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	1 = Comfort 2 = Precomfort, mapped in 1 or 3 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr).
Room operating mode: Time switch Comfort	②	1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Comfort	Event from KNX preselect operation (device/progr).
Room operating mode: Time switch Economy		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Economy	
Room operating mode: Time switch Protection		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Protection	
Room operating mode: Window state	③	1	0	1	0	1	1.019	_Window_Door	1 bit B ₁	---	0 = Closed 1 = Open	Event from window contact (via KNX).
Room temperature: Comfort basic setpoint	④	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 5...40 °C (default = 21 °C)	Event from KNX preselect operation (device/progr).
Enable electric heater	⑤	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX preselect operation (device/progr).

① Time switch reception: Group object type = 1 byte (Enumeration)

② Time switch reception: Group object type = 1 bit

③ Window state input = Bus Note: The S-mode DP has no function if window contact is recorded locally via terminal input.

④ Room temperature: Comfort basic setpoint = Receive

⑤ Plant type = Single duct with electric heater Note: The S-mode DP has no function if the enable is recorded locally via the terminal input.

RDU341: Inputs (continued)

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Format	Unit	Value range	RDU receives:
		C	R	W	T	U	ID	DPT_Name					
Supply air temperature	①	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from supply air sensor.	
Application mode	②	1	0	1	0	1	20.105	_HVACContrMode	1 byte N ₈	Enum.	0 = Auto 1 = Heat 2 = Heat 3 = Cool 4 = Night purge 5 = Cool 6 = Off 7 = Auto 8 = Heat 9 = Fan only 10 = Cool 11...255 = Reserve	Event from KNX mode preselection (device/progr), especially from Synco living central apartment units.	
Outside temperature	③	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display -99...655.3 °C	COV from outside air sensor.	

① Plant type (all) → Supply air temperature = Receive

② Plant type (all) → Application mode input = Receive

③ Outside temperature = Receive

RDU341: Outputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX		Format	Unit	Value range	RDU sends:
		C	R	W	T	U	ID	DPT_Name				
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes strukt.	---	[0]...255 = Log no. [RDU = 0] [0...2]...255 = Alarm priority [0...11]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Event, heart-beat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Room operating mode: State	①	1	1	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto (Not used) 1 = Comfort 2 = PreComfort (Not used) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
Room operating mode: State Comfort	②	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Comfort	Event, last change of state applies. No heartbeat.
Room operating mode: State Economy	②	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Economy	
Room operating mode: State Protection	②	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Protection	
Room temperature	③	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 0...49 °C	COV, heart-beat 15 min.
Room temperature: Current setpoint	④	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 5...40 °C	Event, heart-beat 15 min.

① State transmission: Group object type = 1 byte (Enumeration)

② State transmission: Group object type = 1 bit

③ Room temperature = Transmit

④ Room temperature: Current setpoint = Transmit

²⁾ See Section 1.4.3, page 14.

RDU341: Outputs (continued)

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Value range	RDU sends:	
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Controller output VAV	① / ②	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
Heating output primary	②	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
X1: Temperature [°C]	③	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 0...49 °C	COV, heart-beat 15 min.
X1: Digital [0/1]	④	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
X2: Temperature [°C]	⑤	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 0...49 °C	COV, heart-beat 15 min.
X2: Digital [0/1]	⑥	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

① Plant type = Single duct

② Plant type = Single duct with electric heater

③ Universal input X1 = Temperature [°C]

④ Universal input X1 = Digital [0/1]

⑤ Universal input X2 = Temperature [°C]

⑥ Universal input X2 = Digital [0/1]

Blank page

14 RDG100KN Room thermostat

14.1 Overview

Brief description

Room thermostat RDG100KN is used for applications with fan coils and heating/cooling systems. It has an LCD to display (depending on the operating function) room temperature, room setpoint, outside air temperature, operating mode, fan speed, alarm state, and time.

The operating elements allow for remote intervention in the control functions.



Documentation

Data sheet	Room thermostat RDG100KN	N3191
Operating instructions	Room thermostat RDG100KN	B3191
Basic documentation	Room thermostat RDG100KN	P3191

Number of S-mode DPs

	RDG100KN
Inputs and outputs	2
Inputs	19
Outputs	22

Column "DP visible in ETS"

The data in column "DP visible in ETS" (see table below) refers to parameter settings where the S-mode DP is visible in the ETS.

Parameterization

An S-mode DP must be configured in ETS and the thermostat to ensure that the S-mode DP transmits valid values.

14.2 RDG100KN, S-mode data points

RDG100KN: Inputs and outputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Format	Unit	Value range	RDG receives, sends:
		C	R	W	T	U	ID	DPT_Name					
Room operating mode: Preselection	①	1	0	1	1	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort, mapped in 1 or 3 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve		Receives event from KNX preselect operation (device/progr). Sends at local change (local operation).
Room temp: Comfort setpoint	②	1	0	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 5...40 °C		Receives event from KNX preselect operation (device/progr). Sends at local change (local operation).

① Preselection reception: Group object type = 1 byte (Enumeration)

② Room temperature: Comfort setpoint = Yes

RDG100KN: Inputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Value range		RDG100KN receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
System time	Always ⁵⁾	1	0	1	0	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 Status bits ¹⁾	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds
Time of day	Always	1	0	1	0	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact.
Room operating mode: Preselection Auto	①	1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Auto	Event from KNX preselect operation (device/progr). No reception timeout.
Room operating mode: Preselection Comfort		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Comfort	
Room operating mode: Preselection Economy		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Economy	
Room operating mode: Preselection Protection		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Protection	

① Preselection reception: Group object type = 1 bit

¹⁾ See Section 1.4.3, page 13.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RDG100KN: Inputs (continued)

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Value range		RDG100KN receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Room operating mode: Time switch	①	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	1 = Comfort 2 = Precomfort, mapped in 1 or 3 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr).
Room operating mode: Time switch Comfort	②	1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Comfort	Event from KNX preselect operation (device/progr).
Room operating mode: Time switch Economy		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Economy	
Room operating mode: Time switch Protection		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Protection	
Room operating mode: Window state	③	1	0	1	0	1	1.019	_Window_Door	1 bit B ₁	---	0 = Closed 1 = Open	Event from window contact (via KNX).
Room temp: Comfort basic setpoint	④	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 5...40 °C (default = 21 °C)	Event from KNX preselect operation (device/progr).
Enable electric heater	⑤	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX preselect operation (device/progr).
Heating/cooling changeover	⑥	1	0	1	0	1	1.100	_Heat/Cool	1 bit B ₁	---	0 = Cooling 1 = Heating (default)	Event from KNX preselect operation (device/progr).

① Time switch reception: Group object type = 1 byte (Enumeration)

② Time switch reception: Group object type = 1 bit

③ Window state input = Bus Note: The S-mode DP has no function if window contact is recorded locally via terminal input.

④ Room temperature: Comfort basic setpoint = Receive

⑤ Plant type = 2-pipe with electric heater Note: The S-mode DP has no function if the enable is recorded locally via the terminal input.

⑥ Plant type (all) → Control sequence = H/C changeover auto

RDG100KN : Inputs (continued)

Name in ETS	DP visible in ETS	Flags					Data point type KNX				Value range	RDG100KN receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Application mode	①	1	0	1	0	1	20.105	_HVACContrMode	1 byte N ₈	Enum.	0 = Auto 1 = Heat 2 = Heat 3 = Cool 4 = Auto 5 = Cool 6 = Off 7 = Auto 8 = Heat 9 = Fan only 10 = Cool 11...255 = Reserve	Event from KNX mode preselection (device/progr), especially from Synco living central apartment units.
Enable fan command value	②	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX preselect operation (device/progr).
Fan command value	③	1	0	1	0	1	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event from KNX preselect operation (device/progr).
Outside temperature	④	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display -99....655.3 °C	COV from outside air sensor.

① Plant type (all) → Application mode input = Receive

② Fan operation = Yes → Enable/disable command value = Receive

③ Fan operation = Yes → Fan speed: Command value and output [%] = Yes

④ Outside temperature = Receive

RDG100KN: Outputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Value range		RDG100KN sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes strukt.	---	[0]...255 = Log no. [RDG = 0] [0..2]...255 = Alarm priority [0..11]...255 = Application area [0..4]...255 = Error class [0..15]...63 = Alarm attributes [0..7] = Fault state	Event, heart-beat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Room operating mode: State	①	1	1	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto (Not used) 1 = Comfort 2 = PreComfort (Not used) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
Room operating mode: State Comfort	②	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Comfort	Event, last change of state applies. No heartbeat.
Room operating mode: State Economy	②	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Economy	
Room operating mode: State Protection	②	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Protection	
Room temperature	③	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 0...49 °C	COV, heart-beat 15 min.
Room temp: Current setpoint	④	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 5...40 °C	Event, heart-beat 15 min.
Heating output primary	⑤	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
Heating output secondary	⑥	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.

① State transmission: Group object type = 1 byte (Enumeration)

② State transmission: Group object type = 1 bit

③ Room temperature = Transmit

④ Room temperature: Current setpoint = Transmit

⑤ Plant type (all) → Control sequence = Heating only or H/C changeover manual or H/K changeover auto

⑥ Plant type = 2-pipe with electric heater or 2-pipe with radiator or 2-stage heating or cooling → Control sequence: Heating only or H/C changeover manual / auto

2) See Section 1.4.3, page 14.

RDG100KN: Outputs (continued)

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Value range		RDG100KN sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Cooling output primary	①	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
Cooling output secondary	②	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
Fan operation (0=Auto/1=Manual)	③	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Auto 1 = Manual	Event, heart-beat 15 min.
Fan output	④	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
Fan speed 1	⑤	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
Fan speed 2		1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	
Fan speed 3		1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	
X1: Temperature [°C]	⑥	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 0...49 °C	COV, heart-beat 15 min.
X1: Digital [0/1]	⑦	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
X2: Temperature [°C]	⑥	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 0...49 °C	COV, heart-beat 15 min.
X2: Digital [0/1]	⑦	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
D1: Digital [0/1]	⑧	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

① Plant type (all) → Control sequence = Cooling only or H/C changeover manual or H/C changeover auto

② Plant type = 2-stage heating or cooling → Control sequence: Cooling only or H/C changeover manual or H/C changeover auto

③ Fan operation = Yes → Current operating mode = Transmit

④ Fan operation = Yes → Fan speed: Command value and output [%] = Yes

⑤ Fan operation = Yes → Fan speed: Speed 1...3 = Yes

⑥ Universal input X1 = Temperature [°C], Universal input X2 = Temperature [°C]

⑦ Universal input X1 = Digital [0/1], Universal input X2 = Digital [0/1]

⑧ Digital input D1 = Yes

Blank page

15 RDG400KN Room thermostat

15.1 Overview

Brief description

Room thermostat RDG400KN is used for VAV applications. It has an LCD to display (depending on operating function) room temperature, room setpoint, outside air temperature, operating mode and alarm state.

The operating elements on the room unit allow for remote intervention in the control functions.



Documentation

Data sheet	Room thermostat RDG400KN	N3192
Operating instructions	Room thermostat RDG400KN	B3192
Basic documentation	Room thermostat RDG400KN	P3192

Number of S-mode DPs

	RDG400KN
Inputs and outputs	2
Inputs	18
Outputs	15

Column "DP visible in ETS"

The data in column "DP visible in ETS" (see table below) refers to parameter settings where the S-mode DP is visible in the ETS.

Parameterization

An S-mode DP must be configured in ETS and the thermostat to ensure that the S-mode DP transmits valid values.

15.2 RDG400KN, S-mode data points

RDG400KN: Inputs and outputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Format	Unit	Value range	RDG receives, sends:
		C	R	W	T	U	ID	DPT_Name					
Room operating mode: Preselection	①	1	0	1	1	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort, mapped in 1 or 3 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Receives event from KNX preselect operation (device/progr). Sends at local change (local operation).	
Room temp: Comfort setpoint	②	1	0	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 5...40 °C	Receives event from KNX preselect operation (device/progr). Sends at local change (local operation).	

① Preselection reception: Group object type = 1 byte (Enumeration)

② Room temperature: Comfort setpoint = Yes

RDG400KN: Inputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Value range		RDG400KN receives:	
		C	R	W	T	U	ID	DPT_Name	Format	Unit			
System time	Always ⁵⁾	1	0	1	0	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 1...7 0...23 0...59 0...59 Status bits ¹⁾	= Year = Month = Day of month = Monday - Sunday = Hours = Minutes = Seconds = Status bits ¹⁾	KNX system clock (for RDU weekday and time).
Time of day	Always	1	0	1	0	1	10.001	_TimeOfDay	3 bytes struct.	d hh mm ss	1...7 0...23 0...59 0...59	= Monday - Sunday = Hours = Minutes = Seconds	KNX clock.
Fault transmission (enable/disable)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact.	
Room operating mode: Preselection Auto	①	1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Auto	Event from KNX preselect operation (device/progr). No reception timeout.	
Room operating mode: Preselection Comfort		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Comfort		
Room operating mode: Preselection Economy		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Economy		
Room operating mode: Preselection Protection		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Protection		

① Preselection reception: Group object type = 1 bit

¹⁾ See Section 1.4.3, page 13.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

RDG400KN: Inputs (continued)

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Value range		RDG400KN receives:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Room operating mode: Time switch	①	1	0	1	0	1	20.102	_HVACMode	1 byte N ₈	Enum.	1 = Comfort 2 = Precomfort, mapped in 1 or 3 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event from KNX preselect operation (device/progr).
Room operating mode: Time switch Comfort	②	1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Comfort	Event from KNX preselect operation (device/progr).
Room operating mode: Time switch Economy		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Economy	
Room operating mode: Time switch Protection		1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Protection	
Room operating mode: Window state	③	1	0	1	0	1	1.019	_Window_Door	1 bit B ₁	---	0 = Closed 1 = Open	Event from window contact (via KNX).
Room temp: Comfort basic setpoint	④	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 5...40 °C (default = 21 °C)	Event from KNX preselect operation (device/progr).
Enable electric heater	⑤	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX preselect operation (device/progr).
Heating/cooling changeover	⑥	1	0	1	0	1	1.100	_Heat/Cool	1 bit B1	---	0 = Cooling 1 = Heating (default)	Event from KNX preselect operation (device/progr).

① Time switch reception: Group object type = 1 byte (Enumeration)

② Time switch reception: Group object type = 1 bit

③ Window state input = Bus Note: The S-mode DP has no function if window contact is recorded locally via terminal input.

④ Room temperature: Comfort basic setpoint = Receive

⑤ Plant type = Single duct with electric heater Note: The S-mode DP has no function if the enable is recorded locally via the terminal input.

⑥ Plant type (all) → Control sequence = H/C changeover auto

RDG400KN: Inputs (continued)

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Format	Unit	Value range	RDG400KN receives:
		C	R	W	T	U	ID	DPT_Name					
Supply air temperature	①	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from supply air sensor.	
Application mode	②	1	0	1	0	1	20.105	_HVACContrMode	1 byte N ₈	Enum.	0 = Auto 1 = Heat 2 = Heat 3 = Cool 4 = Night purge 5 = Cool 6 = Off 7 = Auto 8 = Heat 9 = Fan only 10 = Cool 11...255 = Reserve	Event from KNX mode preselection (device/progr), especially from Synco living central apartment units.	
Outside temperature	③	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display -99...655.3 °C	COV from outside air sensor.	

① Plant type (all) → Supply air temperature = Receive

② Plant type (all) → Application mode input = Receive

③ Outside temperature = Receive

RDG400KN: Outputs

Name in ETS	DP visible in ETS	Flags					Data point type KNX		Format	Unit	Value range	RDG400KN sends:
		C	R	W	T	U	ID	DPT_Name				
Fault information	Always	1	0	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes strukt.	---	[0]...255 = Log no. [RDG = 0] [0...2]...255 = Alarm priority [0...11]...255 = Application area [0...4]...255 = Error class [0...15]...63 = Alarm attributes [0...7] = Fault state	Event, heart-beat 30 min.
Fault state (normal/faulty)	Always	1	0	0	1	0	1.005	_Alarm	1 bit B ₁	---	0 = No alarm (default) 1 = Alarm / faulty	Event, heart-beat 30 min.
Room operating mode: State	①	1	1	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto (Not used) 1 = Comfort 2 = PreComfort (Not used) 3 = Economy 4 = Protection (BldgProtect) 5...255 Reserve	Event, heart-beat 15 min.
Room operating mode: State Comfort	②	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Comfort	Event, last change of state applies. No heartbeat.
Room operating mode: State Economy	②	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Economy	
Room operating mode: State Protection	②	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Not used 1 = Protection	
Room temperature	③	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 0...49 °C	COV, heart-beat 15 min.
Room temp: Current setpoint	④	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 5...40 °C	Event, heart-beat 15 min.

① State transmission: Group object type = 1 byte (Enumeration)

② State transmission: Group object type = 1 bit

③ Room temperature = Transmit

④ Room temperature: Current setpoint = Transmit

²⁾ See Section 1.4.3, page 14.

RDG400KN: Outputs (continued)

Name in ETS	DP visible in ETS	Flags					Data point type KNX			Value range		RDG400KN sends:
		C	R	W	T	U	ID	DPT_Name	Format	Unit		
Controller output VAV	①	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
Heating output primary	②	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
Cooling output primary	③	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
X1: Temperature [°C]	④	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point LCD display 0...49 °C	COV, heart-beat 15 min.
X1: Digital [0/1]	⑤	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.
U1: 0-10V [%]	⑥	1	1	0	1	0	5.001	_Scaling	8 bit U ₈	%	[0...100] Resolution 0.4%	Event, heart-beat 15 min.
D1: Digital [0/1]	⑦	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event, heart-beat 15 min.

① Plant type = Single duct or Single duct with electric heater or Single duct with radiator or Single duct with h/c coil

② Plant type = Single duct with electric heater or Single duct with radiator or Single duct with h/c coil → Control sequence: Heating only or H/C changeover manual / auto

③ Plant type = Single duct with h/c coil → Control sequence: Cooling only or H/C changeover manual or H/C changeover auto

④ Universal input X1 = Temperature [°C]

⑤ Universal input X1 = Digital [0/1]

⑥ Voltage input U1 = Yes

⑦ Digital input D1 = Yes

Blank page

16 QAX910 Central apartment unit

16.1 Overview

Brief description

The QAX910 Central apartment unit (Syncro living) controls heating, cooling, ventilation and DHW in an apartment with max. 12 rooms. The function for absence is used to implement heat and security-related functionality such as reduced heat generation (heating, DHW), lighting control, door and window contact monitoring and smoke detection.



Documentation

Data sheet
Instructions
Operating instructions

Central apartment unit QAX910
Mounting and commissioning

N2707
C2707
B2707

Overview of series for versions

	Software version QAX910 Central apartment unit	Product data import file *.vd3 / *.vd5 ETS Program version
Series A	V1.00 and V1.01	1.0
Series B	V2.00	1.1
Series C	V3.00 and V3.01	3.0
Series C	V3.02	3.1

Note

Note the interdependence of software and program version listed in the above table if you want to add new devices to a line or area in ETS via [Add Devices](#).

Number of S-mode DPs

Number of S-mode DPs	Series A, V1.xx	Series B, V2.00	Series C, V3.xx
Visible in ETS	182	195	252
In group address table	50	250	250
In association table	50	250	250

Parameterization

See Section 16.1.1 to parameterize the central apartment unit QAX910. See also Section 1.5 for a principal workflow.


The central apartment unit QAX910 series A allows you to connect max. 50 S-mode DPs via group addresses; QAX910 series B and C allows for max. 250.

An S-mode DP must be configured in ETS [and](#) the Syncro device to ensure that the S-mode DP transmits valid values.

16.1.1 Parameterizing QAX910 series A, B and C

Start parameterization


Start parameterization via view "All Devices" in ETS (screenshots ETS3).

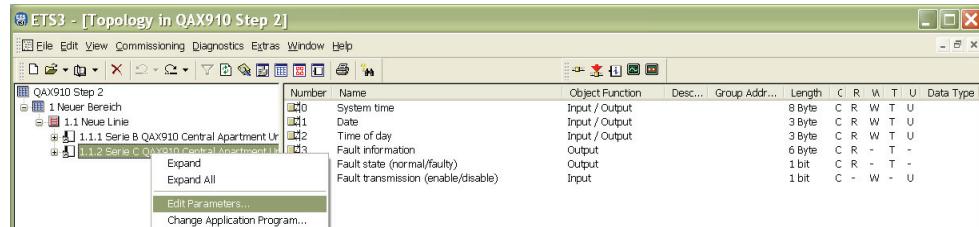

Select the QAX910 central apartment unit and right-click to open the context menu.

Select **Edit Parameters...** to open the following dialog box.

Dialog box (series C)

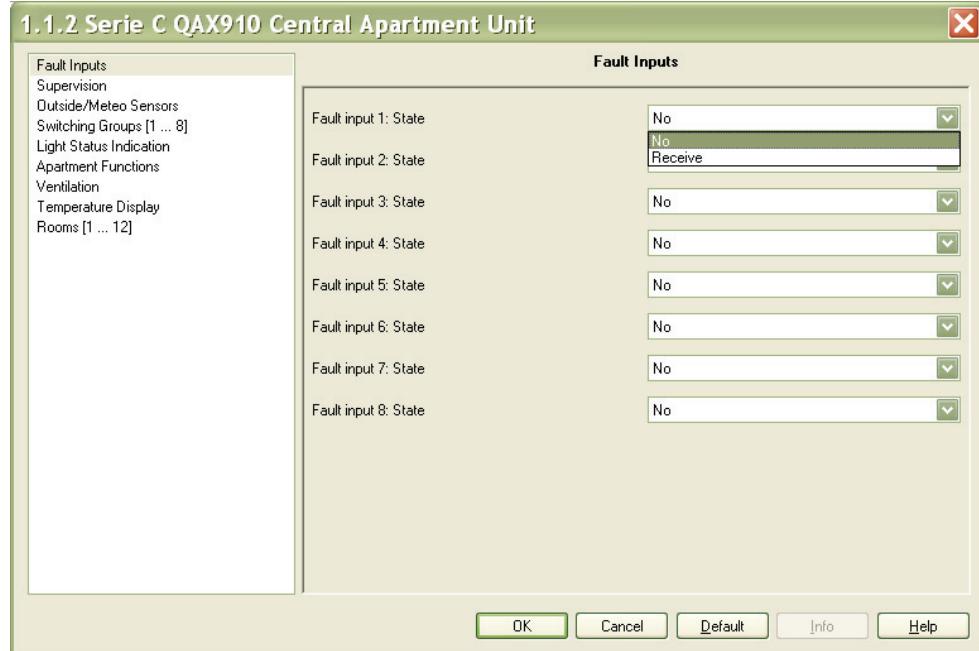

Select a parameter group in the dialog box to start parameterization. This configures or makes visible the corresponding parameters, allowing you to set the parameter values.

Parameter group	Fault inputs
Parameter	Fault input 1: State
	...
	Fault input 8: State
Parameter value	No (default) Receive

Differences between series A, B, and C

- Some values of parameters with identical names in series A, B, and C differ.
See below: 1. Parameter values.
- The **contents** of the dialog boxes differ depending on the parameter group.
- Number and order** of S-mode DPs or DP numbers differ depending on the parameter group.
- Configuration** of the S-mode DPs depends on the set parameter values.
See below: 4. Configuration.

1. Parameter values

Series A

Fault inputs → Fault input 1: State → No communication / Receive



No communication
→ Receive

When you set parameter value **No communication** (default) to **Receive** and click [OK], ETS configures the S-mode DP **Fault input 1: State**.

Series B and C

Fault inputs → Fault input 1: State → No / Receive



No → Receive

When you set parameter value **No** (default) to **Receive** and click [OK], ETS also configures the S-mode DP **Fault input 1: State**.

Number, Object Function
columns

From an QAX910 viewpoint, parameter value **Receive** configures S-mode DP 8 (see **Number** column) with **Object Function = Input** (see **Object Function** column).

Number	Name	Object Function	Desc...	Group Addr...	Length	C	R	W	T	U	Data Type
0	System time	Input / Output			8 Byte	C	R	W	T	U	
1	Date	Input / Output			3 Byte	C	R	W	T	U	
2	Time of day	Input / Output			3 Byte	C	R	W	T	U	
3	Fault information	Output			6 Byte	C	R	-	T	-	
6	Fault state (normal/faulty)	Output			1 bit	C	R	-	T	-	
7	Fault transmission (enable/disable)	Input			1 bit	C	-	W	-	U	
8	Fault input 1: State	Input			1 bit	C	-	W	-	U	

1.1.2 Serie C QAX910 Central Apartment Unit	
Fault Inputs	Fault Inputs
Status Outputs Central Apartment Unit	
Outside/Meteo Sensors	
Switching Groups [1 ... 8]	
Light Status Indication	
Apartment Functions	
Ventilation	
Temperature Display	
Rooms [1 ... 12]	
Fault input 1: State	Receive
Fault input 2: State	No
Fault input 3: State	No
Fault input 4: State	No

Fault inputs 1...4

You can parameterize Fault input 1...4 as needed by changing the parameter value **No communication** (series A) or **No** (series B and C) to **Receive**. In this case, the S-mode DPs 8...11 are configured.


Series C

Fault inputs 5...8

In the QAX910 series C, Fault inputs 5...8 additionally can be configured with S-mode DPs 12...15.

2. Contents

Series A

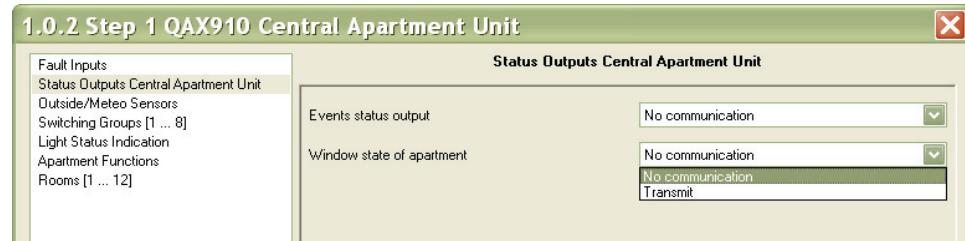

Parameter group	Status Outputs Central Apartment Unit	
Parameter	Events status output	
Parameter value	No communication Transmit	
Events status output	→ Event status output not used (default) → DP 16, output	
Window state of apartment	→ Window state for apartment not used (default) → DP 17, output	

Series B and C




Parameter group **Supervision** (series A **Status Outputs Central Apartment Unit**)

Events status output	No Send	→ Events status output not used (default) → DP 12 (series B), DP 16 (series C), output
Window/door state of apartment	No Send	→ Window/door state of apartment not used (default) → DP 13 (B), DP 17 (C), output
[Door 1] Door state	No Send Receive	→ [Door 1] Door state not used (default) → DP 14 (B), DP 18 (C), output → DP 14 (B), DP 18 (C), input
[Door 2] Door state	No Send Receive	→ [Door 2] Door state not used (default) → DP 15 (B), DP 19 (C), output → DP 15 (B), DP 19 (C), input
Supervision	No Yes	→ Supervision not used (default) → DP 16 (B), 20 (C), output and input ¹⁾

¹⁾ S-mode DP number 16 (B) and 20 (C) and other S-mode DP are configured as input and output; see screenshot "S-mode DP in ETS" on the following page.

S-mode DP in ETS

Parameter values **Transmit / Send** (series A / B+C), **Receive** and **Yes** configure the S-mode DPs in ETS.

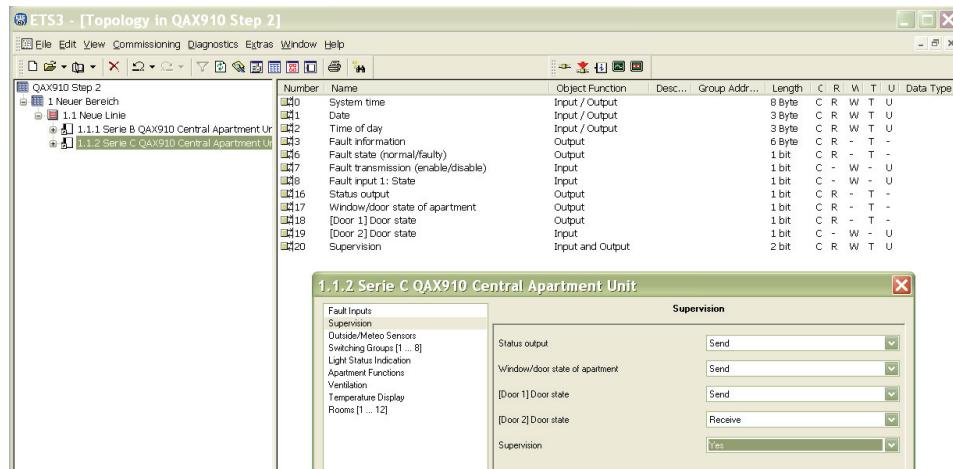

3. Number and order

Series A

Parameter group **Outside/Meteo sensors** with three parameters.

Outside temperature	No communication Transmit Receive	→ Outside temperature not used (default) → DP 18, Outside temperature , Output → DP 19, Outside temperature , Input
Atmospheric pressure	No communication Transmit	→ Atmospheric pressure (measurement) not used (default) → DP 20, Atmospheric pressure , Output
Twilight switch	No communication Receive	→ Twilight switch not used (default) → DP 21, Twilight switch , Input

Series B and C

Parameter group **Outside/Meteo sensors** with three parameters (same as series A). Number and order of the configurable S-mode DPs differ between series A (see above) and series B and C (see below).

Outside temperature	No Send Receive	→ Outside temperature not used (default) → DP 17 (B), 21 (C), Meteo sensor: Outside temperature , Output → DP 18 (B), 22 (C), Outside temperature , Input
Atmospheric pressure	No Send	→ Atmospheric pressure not used (default) → DP 19 (B), 23 (C), Meteo sensor: Atmospheric pressure measured value , Output → DP 20 (B), 24 (C), Meteo sensor: Atmospheric pressure on sea level , Output
Twilight switch	No Receive	→ Twilight switch not used (default) → DP 21 (B), 25 (C), Twilight switch , Input

4. Configuration

Series B and C

Name	Object Function	Desc...	Group Addr...	Length	C	R	W	T	U
System time	Input / Output			8 Byte	C	R	W	T	U
Date	Input / Output			3 Byte	C	R	W	T	U
Time of day	Input / Output			3 Byte	C	R	W	T	U
Fault information	Output			6 Byte	C	R	-	T	-
Fault state (normal/faulty)	Output			1 bit	C	R	-	T	-
Fault transmission (enable/disable)	Input			1 bit	C	-	W	-	U
Fault input 1: State	Input			1 bit	C	-	W	-	U
Status output	Output			1 bit	C	R	-	T	-
Window/door state of apartment	Output			1 bit	C	R	-	T	-
[Door 1] Door state	Output			1 bit	C	R	-	T	-
[Door 2] Door state	Input			1 bit	C	-	W	-	U
Supervision	Input and Output			2 bit	C	R	W	T	U

The following configuration information pertain to S-mode DPs of QAX910 series B and C. The following applies:

Parameter group and Parameter	See information in margin.
Parameter value	Receive, Send, Yes, ...
Name	See column Name in ETS.
Object Function	See column Object function in ETS.

	Parameter value	Name	Object Function
Fault inputs			
Fault input 1...4 (B)	Receive	Fault input X: State	Input
Fault input 1...8 (C)			
Supervision			
Status output	Send	Status output	Output
Window/door state of apartment	Send	Window/door state of apartment	Output
[Door 1...2] Door state	Send	[Door X] Door state	Output
	Receive	[Door X] Door state	Input
Supervision	Superv. = Yes	Supervision	Input and Output
Outside/Meteo sensors			
Outside temperature	Send	Meteo sensor: Outside temperature	Output
	Receive	Outside temperature	Input
Atmospheric pressure	Send	Meteo sensor: Atmospheric pressure measured value	Output
		Meteo sensor: Atmospheric pressure on sea level	Output
Twilight switch	Receive	Twilight switch	Input

	Parameter value	Name	Object Function
Switching groups [1...8]			
[Switching group 1...4]	[Swi grp. X] = Yes	configures: Switch [Switching group X] Switch [Switching group X] Trigger On/Off Dim [Switching group X] Switch [Switching group X] Dim [Switching group X] Trigger On/Off Blind [Switching group X] Blind Step/Stop [Switching group X] Blind Up/Down [Switching group X] Trigger Up/Down Scene [Switching group X] Scene [Switching group X] Trigger (0= Scene A, 1=Scene B)	Output Input Output Output Input Output Output Input Output Input
[Switching group 5...8]	[Swi grp. X] = Yes	configures: Switch [Switching group X] Switch [Switching group X] Trigger On/Off Blind [Switching group X] Blind Up/Down [Switching group X] Trigger Up/Down Scene [Switching group X] Scene [Switching group X] Trigger (0= Scene A, 1=Scene B)	Output Input Output Input Output Input
Light status indication			
Lamp 1...4	Lamp X = Yes	Light status indication Lamp X	Input
Apartment functions			
Domestic hot water	DHW = Yes	Domestic hot water: Forced charging Domestic hot water operating mode: Preselection Domestic hot water operating mode: State Domestic hot water storage tank temp: Setpoint Domestic hot water storage tank temp: Actual value	Input (Trigger) Input and Output Output Input and Output Output
Absence	Absence = Yes	Absence: Contact Absence: State	Input Output
Apartment operating mode	Ap op mode = Yes	Apartment operating mode: Preselection Apartment operating mode: Comfort release	Input and Output Output
Heating summer operation	Send Receive	Heating summer operation: State Heating summer operation: Preselection	Output Input
2-pipe H/C system	2-pipe = Yes	Heating/Cooling changeover	Input
Heat demand	Heat dem = Yes	Heat demand absolute [°C]	Output
From series C		Exhaust hood (under Apartment functions)	
Exhaust hood	Exh hood = Yes	Exhaust hood: Release	Output

	Parameter value	Name	Object Function
From series C	Parameter group Ventilation		
Ventilation	Vent. = Yes	configures S-mode DPs: [Ventilation] Stage selection [Ventilation] Ventilation stage and parameters: [Ventilation] Contact 1 [Ventilation] Contact 2 Air quality Air humidity Fireplace mode	Input and Output Output
[Ventilation] Contact 1...2	Contact X = Yes	[Ventilation] Contact X	Input
Air quality	Send Receive	Air quality Air quality	Output Input
Air humidity	Send Receive	Air humidity Air humidity	Output Input
Fireplace mode	Send Receive	Fireplace mode Fireplace mode	Output Input
From series C	Parameter group Temperature display		
Temperature display			
Sensor 1...3	Send Receive	[Temperature display] Sensor X [Temperature display] Sensor X	Output Input
Series B	Parameter group Rooms [1...12]		
	[Rm X] = Yes	configures parameters: Room heating = Yes Window state = Send Smoke indication = Send	
Room heating	Rm heat. = Yes	configures S-mode DPs: [Room X] Room temperature [Room X] Operating mode: Preselection [Room X] Operating mode: State [Room X] Room temp: Economy heating setpoint [Room X] Room temp: Precomfort heating setpoint [Room X] Room temp: Comfort heating setpoint [Room X] Valve position	Output Input and Output Output Input and Output Input and Output Input and Output Output
Window state	Send Receive	[Room X] Window [Room X] Window	Output Input
Smoke indication	Send Receive	[Room X] Smoke [Room X] Smoke	Output Input

	Parameter value	Name	Object Function
Series C V3.01		Parameter group Rooms [1...12]	
	[Rm X] = Yes	configures S-mode DPs: [Room X] Room temperature [Room X] Operating mode: Preselection [Room X] Operating mode: State [Room X] Room temp: Economy heating setpoint [Room X] Room temp: Precomfort heating setpoint [Room X] Room temp: Comfort heating setpoint [Room X] Valve position [Room X] Window [Room X] Smoke	Output Input and Output Output Input and Output Input and Output Input and Output Output Output Output
		configures parameters: Room control = Yes Cooling = No Window state = Send Smoke indication = Send	
Room control	Rm ctrl. = Yes	configures the same S-mode DPs as [Rm X] = Yes	
Cooling	With cooling release	configures S-mode DP: [Room X] Cooling: Release	Output
	With air conditioner	configures S-mode DPs: [Room X] Air conditioner: On/Off [Room X] Air conditioner: Operating mode [Room X] Air conditioner: Room temp. setpoint act. [Room X] Room temp: Economy cooling setpoint [Room X] Room temp: Precomfort cooling setpoint [Room X] Room temp: Comfort cooliwng setpoint	Output Output Output Input and Output Input and Output Input and Output
Window state	Send	[Room X] Window	Output
	Receive	[Room X] Window	Input
Smoke indication	Send	[Room X] Smoke	Output
	Receive	[Room X] Smoke	Input
From series C V3.02		Parameter group Räume [1...12]	
	[Rm X] = Yes	configures S-mode DPs: [Room X] Room temperature [Room X] Operating mode: Preselection [Room X] Operating mode: State [Room X] Room temp: Economy heating setpoint [Room X] Room temp: Precomfort heating setpoint [Room X] Room temp: Comfort heating setpoint [Room X] Valve position [Room X] Window [Room X] Smoke	Output Input and Output Output Input and Output Input and Output Input and Output Output Output Output
		configures parameters: Room control = Yes Room temperature = Send Cooling / Room controller = No Window state = Send Smoke indication = Send	

	Parameter value	Name	Object Function
From series C V3.02		Parameter group Räume [1...12] (continued)	
Room control	Rm ctr = Yes	configures the same S-mode DPs as [Rm X] = Yes	
Room temperature	Send	[Room X] Room temperature	Output
	Receive	[Room X] Room temperature	Input
Cooling / Room controller	With cooling release (Zennio)	configures S-mode DP: [Room X] Cooling: Release	Output
	With air conditioner	configures S-mode DPs: [Room X] Air conditioner: On/Off	Output
		[Room X] Air conditioner: Operating mode	Output
		[Room X] Air conditioner: Room temp. setpoint act.	Output
		[Room X] Room temp: Economy cooling setpoint	Input and Output
		[Room X] Room temp: Precomfort cooling setpoint	Input and Output
		[Room X] Room temp: Comfort cooliwng setpoint	Input and Output
	With room controller Siemens	configures S-mode DPs: [Room X] Room controller: Application mode	Output
		[Room X] Room temp: Economy cooling setpoint	Input and Output
		[Room X] Room temp: Precomfort cooling setpoint	Input and Output
		[Room X] Room temp: Comfort cooliwng setpoint	Input and Output
Window state	Send	[Room X] Window	Output
	Receive	[Room X] Window	Input
Smoke indication	Send	[Room X] Smoke	Output
	Receive	[Room X] Smoke	Input

Tables with S-mode DP The tables in Section 16.2 are sorted by application (not inputs/outputs as for the Syncro 700 devices). The S-mode DPs refer to the central apartment unit QAX910 series B and C.

Notes In the tables, "Always" in column "DP active" means that it is standard S-mode DP that is always configured in the ETS tool when the central apartment unit is selected.
"[Swi grp. X] = Yes" in column "DP active" means that parameter "[Switching group 1] = Yes" must be set.

16.2 QAX910, S-mode data points

QAX910: Time

Name in ETS	Input Output	DP active	Flags					Data point type KNX		Format	Unit	Value range	QAX910 receives or sends:
			C	R	W	T	U	ID	DPT_Name				
System time ⁵⁾	I / O	Always	1	1	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 0, 1...7 0...23 0...59 0...59 --- = Year = Month = Day of Month = Any day, Monday...Sunday = Hours = Minutes = Seconds Status bits ¹⁾	From KNX system time source, receive timeout of 21 min. or to KNX system time receiver, heartbeat 10 min. or for system time adjustment.
Date ⁵⁾	I / O	Always	1	1	1	1	1	11.001	_Date	3 bytes struct.	YY MM DD	00...99 1...12 1...31 = Year ⁴⁾ = Month = Day of Month	From KNX date source, receive timeout of 21 min. or to KNX date receiver, heartbeat 10 min. or for date adjustment.
Time of day ⁵⁾	I / O	Always	1	1	1	1	1	10.001	_Time	3 bytes struct.	hh d mm ss	0...23 1...7 0...59 0...59 = Hours = Monday...Sunday = Minutes = Seconds	From KNX time source, receive timeout of 21 min. or to KNX time receiver, heartbeat 10 min. or for time of day adjustment.

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

QAX910: Fault

Name in ETS	Input Output	DP active	Flags					ID	DPT_Name	Format	Unit	Value range	QAX910 rec. (I), sends (O)
			C	R	W	T	U						
Fault information ⁵⁾	O	Always	1	1	0	1	0	219.001	_AlarmInfo ²⁾	6 bytes struct.	---	[0]...255 = Log no. [0...2]...255 = Alarm priority [0...14]...255 = Applicat. area [0...4]...255 = Error class [0...15]...255 = Alarm attributes [0...7]...255 = Fault state	Heartbeat 30 min. or when an error occurs.
Fault state (normal/faulty) ⁵⁾	O	Always	1	1	0	1	0	1.005	_Alarm	1 bit B ₁	---	0 = No alarm / normal (default) 1 = Alarm / faulty	Heartbeat 30 min. and for change.
Fault transmission (enable/disable) ⁵⁾	I	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact, set automatically to 1 without receipt after 48 hours.

²⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

QAX910: Fault inputs

Name in ETS	Input Output	DP active	Flags					ID	DPT_Name	Format	Unit	Value range	QAX910 receives:
			C	R	W	T	U						
Fault input 1...4: State From series C Fault input 1...8: State	I	Receive	1	0	1	0	1	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On (settable)	Event, no receive timeout.

- You can freely select Fault input 1...4 or Fault input 1...8, i.e. you can first configure e.g. Fault input 2.

QAX910: Supervision

Name in ETS	Input Output	DP active	Flags C R W T U					Data point type KNX		Format	Unit	Value range	QAX910 rec. (I), sends (O)
			C	R	W	T	U	ID	DPT_Name				
Events status output	O	Send	1	1	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	For change.
Door/window state of apartment	O	Send	1	1	0	1	0	1.019	_Window_Door	1 bit B ₁	---	0 = Closed 1 = Open	Heartbeat 15 min. and for change.
[Door 1..2] Door state	O	Send	1	1	0	1	0	1.019	_Window_Door	1 bit B ₁	---	0 = Closed 1 = Open	For change.
[Door 1..2] Door state	I	Receive	1	0	1	0	1	1.019	_Window_Door	1 bit B ₁	---	0 = Closed 1 = Open	Event from KNX contact, no receive timeout.
Supervision	I and O	Superv. = Yes	1	1	1	1	1	2.005	_Alarm_Control	2 bit B ₂	---	v c 0 0 = Inactive 0 1 = Inactive 1 0 = Partially monit. 1 1 = All monitored	No receive timeout or heartbeat 15 min. and for change.

- You can freely select [Door 1...2], i.e. you can first configure e.g. [Door 2].

QAX910: Outside/Meteo sensors

Name in ETS	Input Output	DP active	Flags C R W T U					Data point type KNX		Format	Unit	Value range	QAX910 rec. (I), sends (O)
			C	R	W	T	U	ID	DPT_Name				
Meteo sensor: Outside temperature	O	Send	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >0.2 °C.
Outside temperature	I	Receive	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.
Meteo sensor: Atmospheric pressure measured value	O	Send	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	Heartbeat 15 min. and for change >20 Pa.
Meteo sensor: Atmospheric pressure on sea level	O	Send	1	1	0	1	0	9.006	_Value_Pres	2 bytes F ₁₆	Pa = N/m ²	[0...670760]	Heartbeat 15 min. and for change >20 Pa.
Twilight switch	I	Receive	1	0	1	0	1	1.001	_Switch	1 bit B ₁	---	0 = Dark 1 = Bright	Event from KNX twilight switch.

QAX910: Switching groups [1...8]

Name in ETS	Input Output	DP active	Flags C R W T U					Data point type KNX ID	DPT_Name	Format	Unit	Value range	QAX910 rec. (I), sends (O)
[Switching group 1...8] Switch	O	[Swi grp. X] = Yes, Fct. = Switch	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event
[Switching group 1...8] Trigger On/Off	I	[Swi grp. X] = Yes, Fct. = Switch	1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	From KNX switch, no receive timeout.
[Switching group 1...4] Switch	O	[Swi grp. X] = Yes, Fct. = Dim	1	0	0	1	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	Event
[Switching group 1...4] Dim	O	[Swi grp. X] = Yes, Fct. = Dim	1	0	0	1	0	3.007	_Control_Dimming	4 bit U ₄	---	On/Off via switching U ₄ U ₃ U ₂ U ₁ 0 0 0 1 = Darker 1 0 0 1 = Brighter 0 0 0 0 = Stop	Event
[Switching group 1...4] Trigger On/Off	I	[Swi grp. X] = Yes, Fct. = Dim	1	0	1	0	0	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	From KNX switch, no receive timeout.
[Switching group 1...4] Blind Step/Stop	O	[Swi grp. X] = Yes, Fct. = Blind	1	0	0	1	0	1.007	_Step	1 bit B ₁	---	0 = Step up 1 = Step down	Event
[Switching group 1...8] Blind Up/Down	O	[Swi grp. X] = Yes, Fct. = Blind	1	0	0	1	0	1.008	_UpDown	1 bit B ₁	---	0 = Up 1 = Down	Event
[Switching group 1...8] Trigger Up/Down	I	[Swi grp. X] = Yes, Fct. = Blind	1	0	1	0	0	1.008	_Switch	1 bit B ₁	---	0 = Up 1 = Down	From KNX switch, no receive timeout.
[Switching group 1...8] Scene	O	[Swi grp. X] = Yes, Fct. = Scene	1	0	0	1	0	18.001	_SceneControl	1 byte B ₁ r ₁ U ₆	---	B ₁ 0 = Activate scene 1 = Learn scene r ₁ (Reserve) U ₆ Scene number 0...63	Event
[Switching group 1...8] Trigger (0=Scene A, 1=Scene B)	I	[Swi grp. X] = Yes, Fct. = Scene	1	0	1	0	0	1.022	_Scene_AB	1 bit B ₁	---	0 = Activate scene A 1 = Activate scene B	From KNX switch, no receive timeout.

- You can freely select [Switching group 1...8], i.e. you can first configure e.g. [Switching group 4].

QAX910: Light status indication

Name in ETS	Input Output	DP active	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	QAX910 receives:
Light status indication Lamp 1...4	I	Lamp X = Yes	1	0	1	0	1	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On	From KNX light actor, no receive timeout.

- You can freely select Lamp 1...4, i.e. you can first configure e.g. Lamp 3.

QAX910: Apartment functions

Name in ETS	Input Output	DP active	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	QAX910 rec. (I), sends (O)
Domestic hot water: Forced charging	I	DHW = Yes	1	0	1	0	0	1.017	_Trigger	1 bit B ₁	---	0 = No action 1 = Forced charging	Event from KNX contact, no receive timeout.
Domestic hot water operating mode: Preselection	I and O	DHW = Yes	1	1	1	1	1	20.103	_DHWMode	1 byte N ₈	Enum.	0 = Auto 1 = Legionella protection 2 = Normal temp. 3 = Reduced temp. 4 = Protection mode	No receive timeout or heartbeat 15 min. and for change.
Domestic hot water operating mode: State	O	DHW = Yes	1	1	0	1	0	20.103	_DHWMode	1 byte N ₈	Enum.	1 = Legionella protection 2 = Normal temp. 3 = Reduced temp. 4 = Protection mode	Heartbeat 15 min. and for change.
Domestic hot water storage tank temp: Setpoint	I and O	DHW = Yes	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	No receive timeout or heartbeat 15 min. and for change.
Domestic hot water storage tank temp: Actual value	O	DHW = Yes	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >2 °C.

QAX910: Apartment functions (continued)

Name in ETS	Input Output	DP active	Flags					ID	DPT_Name	Format	Unit	Value range	QAX910 rec. (I), sends (O)
			C	R	W	T	U						
Absence: Contact	I	Absence = Yes	1	0	1	0	1	1.018	_Occupancy	1 bit B ₁	---	0 = Not occupied / absent 1 = Occupied / present	From KNX contact, no receive timeout.
Absence: State	O	Absence = Yes	1	1	0	1	0	1.018	_Occupancy	1 bit B ₁	---	0 = Not occupied / absent 1 = Occupied / present	Heartbeat 15 min. and for change.
Apartment operating mode: Preselection	I and O	Ap op mode = Yes	1	1	1	1	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection mode (Building protection)	No receive timeout or for change.
Apartment operating mode: Comfort release	I	Ap op mode = Yes	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Receive timeout 31 min.
Heating summer operation: State	O	Send	1	1	0	1	0	1.002	_Bool	1 bit B ₁	---	0 = No preselection (default) 1 = Summer mode	Heartbeat 15 min. and for change.
Heating summer operation: Preselection	I	Receive	1	0	1	0	1	1.002	_Bool	1 bit B ₁	---	0 = No preselection (default) 1 = Summer mode	From KNX contact, receive timeout 31 min.
Heating/cooling changeover	I	2-pipe = Yes	1	0	1	0	1	1.002	_Bool	1 bit B ₁	---	0 = Cooling mode 1 = Heating mode (default)	From KNX contact, receive timeout 31 min.
Heat demand absolute	O	Heat dem = Yes	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >2 °C.
From series C Exhaust hood: Release	O	Exh hood = Yes	1	1	0	1	0	1.003	_Enable	1 Bit B ₁	---	0 = Disable 1 = Enable	Heartbeat 15 min. and for change.

QAX910: Ventilation

From series C Parameter group Ventilation

Name in ETS	Input Output	DP active	Flags					Data point type KNX		Format	Unit	Value range	QAX910 rec. (I), sends (O)
			C	R	W	T	U	ID	DPT_Name				
[Ventilation] Stage selection	I and O	Vent. = Yes	1	1	1	1	1	20.60172	_StepSelectorSwitch	1 Byte N ₈	Enum.	0 = Auto 1 = Off 2 = Stage 1 3 = Stage 2 4 = Stage 3	No receive timeout or heartbeat 15 min. and for change.
[Ventilation] Ventilation stage	O	Vent. = Yes	1	1	0	1	0	5.010	_Value_1_Ucount	1 Byte U ₈	Enum.	0 = Off 1 = Stage 1 2 = Stage 2 3 = Stage 3	Heartbeat 15 min. and for change.
[Ventilation] Contact 1...2	I	Vent. = Yes Contact X = Yes	1	0	1	0	1	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On	Event, no receive timeout.
Air quality	O	Vent. = Yes Send	1	1	0	1	0	9.008	_Value_AirQuality	2 Bytes F ₁₆	ppm	[0...670760]	Heartbeat 15 min. and for change >10 ppm.
Air quality	I	Vent. = Yes Receive	1	0	1	0	1	9.008	_Value_AirQuality	2 Bytes F ₁₆	ppm	[0...670760]	Event, no receive timeout.
Air humidity	O	Vent. = Yes Send	1	1	0	1	0	9.007	_Value_Humidity	2 Bytes F ₁₆	%	[0...670760]	Heartbeat 15 min. and for change >5 %
Air humidity	I	Vent. = Yes Receive	1	0	1	0	1	9.007	_Value_Humidity	2 Bytes F ₁₆	%	[0...670760]	Event, no receive timeout.
Fireplace mode	O	Vent. = Yes Send	1	1	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On	Heartbeat 15 min. and for change.
Fireplace mode	I	Vent. = Yes Receive	1	0	1	0	1	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On	Event, no receive timeout.

QAX910: Temperature display

From series C Parameter group Temperature display

Name in ETS	Input Output	DP active	Flags C R W T U					ID	DPT_Name	Format	Unit	Value range	QAX910 rec. (I), sends (O)
[Temperature display] Sensor 1...3	O	Sensor X = Send	1	1	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >0.2 °C
[Temperature display] Sensor 1...3	I	Sensor X = Receive	1	0	1	0	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Event, no receive timeout.

- You can freely select [Temperature display] Sensor 1...3, i.e. you can first configure e.g. [Temperature display] Sensor 3.

QAX910: Rooms [1...12]

Name in ETS	Input Output	DP active	Flags C R W T U					Data point type KNX			Value range	QAX910 rec. (I), sends (O)	
			C	R	W	T	U	ID	DPT_Name	Format	Unit		
Series B and series C V3.01 [Room 1...12] Room temperature	O	[Rm X] = Yes Rm heat. = Yes	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >0.04 °C.
From series C V3.02 [Room 1...12] Room temperature	O	[Rm X] = Yes Rm ctr = Yes Send	1	1	0	1	0	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >0.04 °C.
From series C V3.02 [Room 1...12] Room temperature	I	[Rm X] = Yes Rm heat. / Rm ctr = Yes Receive	1	0	1	0	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX sensor, receive timeout 31 min.
[Room 1...12] Operating mode: Preselection	I and O	[Rm X] = Yes Rm heat. / Rm ctrl. = Yes	1	1	1	1	1	20.102	_HVACMode	1 byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection mode (Building protection)	Event from KNX mode preselection (device/program), no receive timeout or for change.
[Room 1...12] Operating mode: State	O	[Rm X] = Yes Rm heat. / Rm ctrl. = Yes	1	1	0	1	0	20.102	_HVACMode	1 byte N ₈	Enum.	1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection mode (Building protection)	Heartbeat 15 min. and for change.
[Room 1...12] Room temperature: Economy heating setpoint	I and O	[Rm X] = Yes Rm heat. / Rm ctrl. = Yes	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout or for change.
[Room 1...12] Room temperature: Precomfort heating setpoint	I and O	[Rm X] = Yes Rm heat. / Rm ctrl. = Yes	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout or for change.
[Room 1...12] Room temperature: Comfort heating setpoint	I and O	[Rm X] = Yes Rm heat. / Rm ctrl. = Yes	1	1	1	1	1	9.001	_Value_Temp	2 bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout or for change.

QAX910: Rooms [1...12] (continued)

Name in ETS	Input Output	DP active	Flags					Data point type KNX			Value range	QAX910 rec. (I), sends (O)	
			C	R	W	T	U	ID	DPT_Name	Format			
[Room 1...12] Valve position	O	[Rm X] = Yes Rm heat. / Rm ctrl. = Yes	1	1	0	1	0	5.001	_Scaling	1 byte U ₈	%	[0...100] Resolution 1%	Heartbeat 15 min. and for change >5%.
[Room 1...12] Window	O	[Rm X] = Yes Send	1	1	0	1	0	1.019	_Window_Door	1 bit B ₁	---	0 = Closed 1 = Open	For change only.
[Room 1...12] Window	I	[Rm X] = Yes Receive	1	0	1	0	1	1.019	_Window_Door	1 bit B ₁	---	0 = Closed 1 = Open	From KNX window contact, no receive timeout.
[Room 1...12] Smoke	O	[Rm X] = Yes Send	1	1	0	1	0	1.005	_Alarm	1 bit B ₁	---	0 = No alarm / normal (default) 1 = Alarm / faulty	For change only.
[Room 1...12] Smoke	I	[Rm X] = Yes Receive	1	0	1	0	1	1.005	_Alarm	1 bit B ₁	---	0 = No alarm / normal (default) 1 = Alarm / faulty	No actual receive timeout (if no alarms are received for 15 min., input is set to 0).

- You can freely select [Room 1...12], i.e. you can first configure e.g. [Room 7].

QAX910: Rooms [1...12] (continued)

Series C V3.01 Rooms [1...12] Room control, Cooling

Name in ETS	Input Output	DP active	Flags C R W T U					Data point type KNX ID	DPT_Name	Format	Unit	Value range	QAX910 rec. (I), sends (O)
[Room 1...12] Cooling: Release	O	[Rm X] = Yes Rm ctrl. = Y With cooling release	1	1	0	1	0	1.003	_Enable	1 Bit B ₁	---	0 = Disable 1 = Enable	Heartbeat 15 min. and for change.
[Room 1...12] Air conditioner: On/Off	O	[Rm X] = Yes Rm ctrl. = Y With air conditioner	1	1	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On	Upon a change of one of the three DPs, all three DPs are sent (e.g. to ZN1CL-IRSC by Zennio).
[Room 1...12] Air conditioner: Operating mode	O	[Rm X] = Yes Rm ctrl. = Y With air conditioner	1	1	0	1	0	20.60174	_SPUCOpMode	1 Byte N ₈	Enum.	0 = Auto 1 = Heating 4 = Cooling	
[Room 1...12] Air conditioner: Room temp. setpoint act.	O	[Rm X] = Yes Rm ctrl. = Y With air conditioner	1	1	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	
[Room 1...12] Room temp: Economy cooling setpoint	I and O	[Rm X] = Yes Rm ctrl. = Y With air conditioner	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout <u>or</u> for change.
[Room 1...12] Room temp: Precomfort cooling setpoint	I and O	[Rm X] = Yes Rm ctrl. = Y With air conditioner	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout <u>or</u> for change.
[Room 1...12] Room temp: Comfort cooling setpoint	I and O	[Rm X] = Yes Rm ctrl. = Y With air conditioner	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout <u>or</u> for change.

- You can freely select [Room 1...12], i.e. you can first configure e.g. [Room 7].

QAX910: Rooms [1...12] (continued)

From C V3.02 Rooms [1...12] Room control, Cooling / Room controller

Name in ETS	Input Output	DP active	Flags					Data point type KNX			Value range	QAX910 rec. (I), sends (O)	
			C	R	W	T	U	ID	DPT_Name	Format			
[Room 1...12] Cooling: Release	O	[Rm X] = Yes Rm ctrl. = Y With cooling release	1	1	0	1	0	1.003	_Enable	1 Bit B ₁	---	0 = Disable 1 = Enable	Heartbeat 15 min. and for change.
[Room 1...12] Air conditioner: On/Off	O	[Rm X] = Yes Rm ctrl. = Y With air conditioner	1	1	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On	Upon a change of one of the three DPs, all three DPs are sent (e.g. to ZN1CL-IRSC by Zennio).
[Room 1...12] Air conditioner: Operating mode	O	[Rm X] = Yes Rm ctrl. = Y With air conditioner	1	1	0	1	0	20.60174	_SPUCOpMode	1 Byte N ₈	Enum.	0 = Auto 1 = Heating 4 = Cooling	
[Room 1...12] Air conditioner: Room temp. setpoint act.	O	[Rm X] = Yes Rm ctrl. = Y With air conditioner	1	1	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	
[Room 1...12] Room controller: Application mode	O	[Rm X] = Yes Rm ctr = Yes With room controller	1	1	0	1	0	20.105	_HVCContrMode	1 Byte N ₈	Enum	0 = Auto 1 = Heating 3 = Cooling 6 = Off	Heartbeat 15 min. and for change.
[Room 1...12] Room temp: Economy cooling setpoint	I and O	[Rm X] = Yes Rm ctr = Yes With room controller	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout or for change.
[Room 1...12] Room temp: Precomfort cooling setpoint	I and O	[Rm X] = Yes Rm ctr = Yes With room controller	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout or for change.
[Room 1...12] Room temp: Comfort cooling setpoint	I and O	[Rm X] = Yes Rm ctr = Yes With room controller	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout or for change.

- You can freely select [Room 1...12], i.e. you can first configure e.g. [Room 7].

17 QAX903, QAX913 Central apartment units

17.1 Overview

Note

See Section 16.2 for S-mode DPs of the QAX910 central apartment unit.

Brief description

The QAX903 and QAX913 central apartment units (both Synco living) control heating, cooling, ventilation in an apartment with max. 12 rooms, while QAX913 additionally controls DHW. The absence function is used to implement heating and security-related functions (QAX913 only) such as reduced heat generation (heating, DHW), lighting control, door and window contact monitoring. The consumption values of the connected meters are used to bill heating costs.



QAX903



QAX913

Documentation

Data sheet	Central apartment unit QAX903	N2741
Data sheet	Central apartment unit QAX913	N2740
Instructions	Mounting and commissioning	C2740
Operating instructions		B2740

Overview of series for versions

	Software version Central apartment unit	Product data import-File *.vd5 ETS Program version
QAX903	V1.00	1.0
QAX913	V1.01 and 1.02	1.0

Note

Note the interdependence of software and program version listed in the above table if you want to add new devices to a line or area in ETS via **Add Devices**.

Number of S-mode DPs

Number of S-mode DPs	QAX903, V1.xx	QAX913, V1.xx
Visible in ETS	278	362
In group address table	370	370
In association table	370	370

Parameterization

See Section 17.1.1 to parameterize the central apartment units QAX903 and QAX913.
See also Section 1.5 for a principal workflow.

The central apartment units QAX903 and QAX913 allows you to connect max. 370 S-mode DPs via group addresses.


An S-mode DP must be configured in ETS and the Syncro device to ensure that the S-mode DP transmits valid values.

17.1.1 Parameterizing QAX9x3


Start parameterization

Start parameterization in ETS3 or ETS4 (screenshots ETS4).

Parameter groups

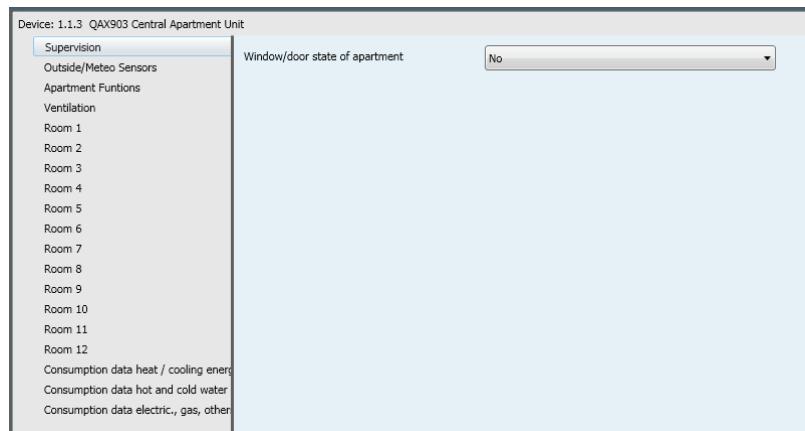

QAX903

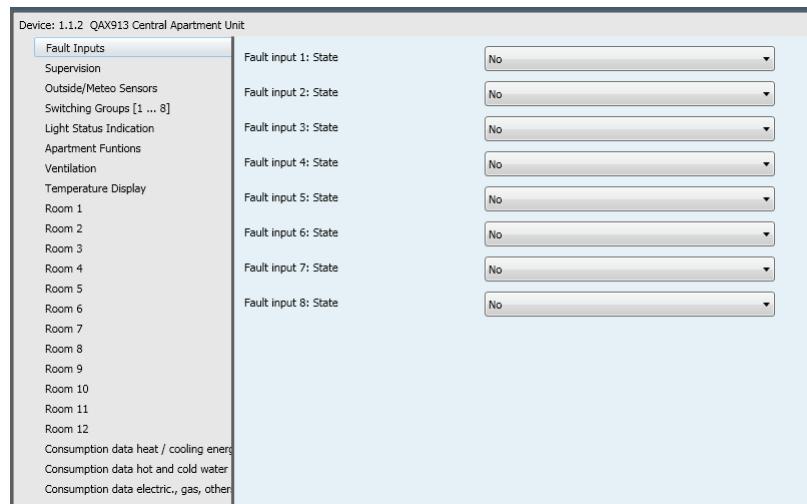

QAX913

Device: 1.1.2 QAX913 Central Apartment Unit	
Fault Inputs	
Supervision	Supervision: contact
Outside/Meteo Sensors	Receive
Switching Groups [1 ... 8]	Transmit
Light Status Indication	No
Apartment Functions	No
Ventilation	No
Temperature Display	No
Room 1	No
Room 2	No
Room 3	No
Room 4	No
Room 5	No
Room 6	No
Room 7	No
Room 8	No
Room 9	No
Room 10	No
Room 11	No
Room 12	No
Consumption data heat / cooling energy	No
Consumption data hot and cold water	No
Consumption data electric., gas, other	No
Supervision (enable/disable)	Yes

Parameters and Parameter values

Configuration

S-mode DP in ETS

Parameter values **Receive**, **Transmit** and **Yes** (and depending on parameter also other values) configure the S-mode DPs in ETS.

Supervision: Contact

- | | |
|---------|--|
| No | → Supervision contact not used (default) |
| Receive | → DP 17, Supervision: Contact (configured in ETS) |
| | → Object Function: Receive (input) |

Supervision: State

- | | |
|----------|--|
| No | → Supervision state not used (default) |
| Transmit | → DP 18, Supervision: State (configured in ETS) |
| | → Object Function: Transmit (output) |

Supervision (enable/disable)

- | | |
|-----|---|
| No | → Supervision not used (default) |
| Yes | → DP 28, Supervision (enable/disable) (configured in ETS) |
| | → Object Function: Receive and Transmit (input and output) ¹⁾ |

¹⁾ S-mode DP number 28 (and other S-mode DP) are configured as input and output.
The "Object Function" column indicates this through Receive and Transmit (see below).

Number	Name	Object Function	Description	Group Addresses	Length	C	R	W	T	U	Data Type	Priority
1	System time	Receive / Transmit			8 Byte	C	R	W	T	U		High
2	Date	Receive / Transmit			3 Byte	C	R	W	T	U	date	Low
3	Time of day	Receive / Transmit			3 Byte	C	R	W	T	U	time of day	Low
4	Fault information	Transmit			6 Byte	C	R	-	T	-		Alarm
7	Fault state (normal/faulty)	Transmit			1 bit	C	R	-	T	-		Low
8	Fault transmission (enable/disable)	Receive			1 bit	C	-	W	-	U	enable	Low
17	Supervision: contact	Receive			1 bit	C	-	W	-	U		Low
18	Supervision: state	Transmit			1 bit	C	R	-	T	-	on/off	Low
28	Supervision (enable/disable)	Receive and Transmit			2 bit	C	R	W	T	U		Low

Note

S-mode data points numbers 1 to 4 and 7, 8 are standard S-mode data points that are always configured automatically when a central apartment unit is selected in ETS.

The screenshot shows the ETS4 software interface with two main windows. The top window displays the configuration of a device named '1.1.2 QAX913 Central Apartment Unit'. It lists various parameters under 'Fault Inputs' and 'Supervision'. The bottom window shows a table of 'S-mode data points: Numbers and names in ETS', listing items from 1 to 28 with their corresponding names, object functions, descriptions, and properties.

Number	Name	Object Function	Description	Group Addresses	Length	C	R	W	T	U	Data Type	Priority
1	System time	Receive / Transmit			8 Byte	C	R	W	T	U		High
2	Date	Receive / Transmit			3 Byte	C	R	W	T	U	date	Low
3	Time of day	Receive / Transmit			3 Byte	C	R	W	T	U	time of day	Low
4	Fault information	Transmit			6 Byte	C	R	-	T	-	Alarm	
7	Fault state (normal/faulty)	Transmit			1 bit	C	R	-	T	-	Low	
8	Fault transmission (enable/disable)	Receive			1 bit	C	-	W	-	U	enable	Low
17	Supervision: contact	Receive			1 bit	C	-	W	-	U		Low
18	Supervision: state	Transmit			1 bit	C	R	-	T	-	on/off	Low
28	Supervision (enable/disable)	Receive and Transmit			2 bit	C	R	W	T	U		Low

S-mode data points: Numbers and names in ETS

Note

The configured S-mode data points are displayed following the standard S-mode data points (Number 1 to 4 and 7, 8).

Parameter group Fault inputs

Fault input 1...8: State	No	→ Fault input X not used (default)
	Receive	→ DP 9...16, Fault input 1...8: State

Parameter group Supervision

Supervision: Contact	No	→ Supervision contact not used (default)
	Receive	→ DP 17, Supervision: Contact

Supervision: State	No	→ Supervision state not used (default)
	Transmit	→ DP 18, Supervision: State

Water shutoff valve	No	→ Water shutoff valve not used (default)
	Transmit	→ DP 19, Water shutoff valve

Gas shutoff valve	No Transmit	→ Gas shutoff valve not used (default) → DP 20, Gas shutoff valve
Status output 1...4	No Transmit	→ Status output X not used (default) → DP 21...24, Status output 1...4
Window/door state of apartment	No Transmit	→ Window/door state of apartment not used (default) → DP 25, Window/door state of apartment
[Door 1] Door state	No Transmit Receive	→ [Door 1] Door state not used (default) → DP 26, [Door 1] Door state (Transmit = Output) → DP 26, [Door 1] Door state (Receive = Input)
[Door 2] Door state	No Transmit Receive	→ [Door 2] Door state not used (default) → DP 27, [Door 2] Door state (Transmit = Output) → DP 27, [Door 2] Door state (Receive = Input)
Supervision (enable/disable)	No Yes	→ Supervision not used (default) → DP 28, Supervision (enable/disable) (Input and Output)

Parameter group Outside/Meteo sensors

Outside temperature	No Transmit Receive	→ Outside temperature not used (default) → DP 29, Outside temperature (Transmit = Output) → DP 30, Outside temperature (Receive = Input)
Atmospheric pressure	No Transmit	→ Atmospheric pressure not used (default) → DP 31, Meteo sensor: Atmospheric pressure measured value → DP 32, Meteo sensor: Atmospheric pressure on sea level
Twilight switch	No Receive	→ Twilight switch not used (default) → DP 33, Twilight switch (0=Dark; 1=Bright)

Example

Standard S-mode data points and some configured S-mode data points for parameter groups: Fault inputs, Supervision, Outside/Meteo sensors.

Number	Name	Object Function	Description	Group Addresses	Length	C	R	W	T	U	Data Type	Priority
1	System time	Receive / Transmit			8 Byte	C	R	W	T	U		High
2	Date	Receive / Transmit			3 Byte	C	R	W	T	U	date	Low
3	Time of day	Receive / Transmit			3 Byte	C	R	W	T	U	time of day	Low
4	Fault information	Transmit			6 Byte	C	R	-	T	-		Alarm
7	Fault state (normal/faulty)	Transmit			1 bit	C	R	-	T	-		Low
8	Fault transmission (enable/disable)	Receive			1 bit	C	-	W	-	U	enable	Low
9	Fault input 1: State	Receive			1 bit	C	-	W	-	U	on/off	Low
16	Fault input 8: State	Receive			1 bit	C	-	W	-	U	on/off	Low
17	Supervision: contact	Receive			1 bit	C	-	W	-	U		Low
18	Supervision: state	Transmit			1 bit	C	R	-	T	-	on/off	Low
28	Supervision (enable/disable)	Receive and Transmit			2 bit	C	R	W	T	U		Low
29	Outside temperature	Transmit			2 Byte	C	R	-	T	-	temperature (°C)	Low

Configuration information

The following configuration information pertain to S-mode DPs of QAX903 and QAX913 central apartment units. The following applies:

Parameter group and Parameter	See information in margin.
Parameter value	Receive, Transmit, Yes, ...
Name	See column Name in ETS.
Object Function	See column Object Function in ETS.

	Parameter value	Name	Object Function
Fault inputs (QAX913 only)			
Fault input 1...8: State	Receive	Fault input X: State	Receive
Supervision			
Supervision: Contact (QAX913 only)	Receive	Supervision: Contact	Receive
Supervision: State (QAX913 only)	Transmit	Supervision: State	Transmit
Water shutoff valve (QAX913 only)	Transmit	Water shutoff valve	Transmit
Gas shutoff valve (QAX913 only)	Transmit	Gas shutoff valve	Transmit
Status output 1...4 (QAX913 only)	Transmit	Status output X	Transmit
Window/door state of apartment	Transmit	Window/door state of apartment	Transmit
[Door 1...2] Door state (QAX913 only)	Transmit Receive	[Door X] Door state [Door X] Door state	Transmit Receive
Supervision (enable/disable) (QAX913 only)	Yes	Supervision (enable/disable)	Receive and Transmit
Outside/Meteo sensors			
Outside temperature	Transmit Receive	Outside temperature Outside temperature	Transmit Receive
Atmospheric pressure	Transmit	Meteo sensor: Atmospheric pressure measured value Meteo sensor: Atmospheric pressure on sea level	Transmit Transmit
Twilight switch (QAX913 only)	Receive	Twilight switch (0=Dark; 1=Bright)	Receive

	Parameter value	Name	Object Function
Switching groups [1...8] (QAX913 only)			
Switching group 1...4: Function	Switch	[Switching group X] Switch [Switching group X] Trigger On/Off	Transmit Receive
	Dim	[Switching group X] Switch [Switching group X] Dim [Switching group X] Trigger On/Off	Transmit Transmit Receive
	Blind	[Switching group X] Blind Up/Down [Switching group X] Blind Step/Stop [Switching group X] Trigger Up/Down	Transmit Transmit Receive
	Scene	[Switching group X] Scene [Switching group X] Trigger (0=Scene A, 1=Scene B)	Transmit Receive
Switching group 5...8: Function	Switch	[Switching group X] Switch [Switching group X] Trigger On/Off	Transmit Receive
	Blind	[Switching group X] Blind Up/Down [Switching group X] Trigger Up/Down	Transmit Receive
	Scene	[Switching group X] Scene [Switching group X] Trigger (0=Scene A, 1=Scene B)	Transmit Receive
Light status indication (QAX913 only)			
Lamp 1...4	Receive	Light status indication Lamp X	Receive
Apartment functions			
Domestic hor water (QAX913 only)	Yes	[Domestic hot water] Forced charging [Domestic hot water] Operating mode: Preselection [Domestic hot water] Operating mode: State [Domestic hot water] Storage tank temp: Setpoint [Domestic hot water] Storage tank temp: Curr value	Receive (Trigger) Receive and Transmit Transmit Receive and Transmit Transmit
Absence	Yes	Absence: Contact Absence: State	Receive Transmit
Apartment oportanig mode	Yes	Apartment operating mode: Preselection Apartment operating mode: Comfort release	Receive and Transmit Receive
Heating summer operation	Transmit Receive	Heating summer operation: State Heating summer operation: Preselection	Transmit Receive
Cooling release	Yes	Cooling release: Preselection Cooling release: State	Receive Transmit
2-pipe H/C system	Receive	Heating/cooling changeover	Receive
Dew point	Receive	Dew point	Receive
Heat demand	Transmit	Heat demand absolute [°C]	Transmit
Refrigeration demand	Transmit	Refrigeration demand absolute [°C]	Transmit
Exhaust hood	Transmit	Exhaust hood: Release	Transmit

	Parameter value	Name	Object Function
Ventilation			
Ventilation stage	Yes	[Ventilation] Stage selection [Ventilation] Ventilation stage [Ventilation] Ventilation stage [%]	Receive and Transmit Transmit Transmit
Ventilation contact 1...2	Receive	[Ventilation] Contact X	Receive
Air quality	Transmit Receive	Air quality Air quality	Transmit Receive
Air humidity	Transmit Receive	Air humidity Air humidity	Transmit Receive
Fireplace mode	Transmit Receive	Fireplace mode Fireplace mode	Transmit Receive
Temperature display (QAX913 only)			
Sensor 1...3	Transmit Receive	[Temperature display] Sensor X [Temperature display] Sensor X	Transmit Receive
Room 1...12			
Room temperature: Current value	Transmit Receive	[Room X] Room temperature: Current value [Room X] Room temperature: Current value	Transmit Receive
Room temperature: Current setpoint	Transmit	[Room X] Room temperature: Current setpoint	Transmit
Room control (heating)	Yes	[Room X] Operating mode: Preselection [Room X] Operating mode: State [Room X] Room temp: Economy heating setpoint [Room X] Room temp: Precomfort heating setpoint [Room X] Room temp: Comfort heating setpoint	Receive and Transmit Transmit Receive and Transmit Receive and Transmit Receive and Transmit
Valve position	Transmit	[Room X] Valve position	Transmit
Cooling / Room controller	With cooling release With air conditioner With r.cont.Siemens	[Room X] Cooling: Release [Room X] Air conditioner: On/Off [Room X] Air conditioner: Operating mode [Room X] Air conditioner: Room temp. curr. setp. [Room X] Room temp: Economy cooling setpoint [Room X] Room temp: Precomfort cooling setpoint [Room X] Room temp: Comfort cooling setpoint [Room X] Room controller: Application mode [Room X] Room temp: Economy cooling setpoint [Room X] Room temp: Precomfort cooling setpoint [Room X] Room temp: Comfort cooling setpoint	Transmit Transmit Transmit Receive and Transmit Receive and Transmit Receive and Transmit Transmit Receive and Transmit Receive and Transmit Transmit Receive and Transmit Receive and Transmit

	Parameter value	Name	Object Function
Window state	Transmit Receive	[Room X] Window [Room X] Window	Transmit Receive
Smoke indication (QAX913 only)	Transmit Receive	[Room X] Smoke [Room X] Smoke	Transmit Receive
Consumption data heat / cooling energy			
Heat / cooling energy 1...4	Comb. h. and c. ener. Heat or cool. energy	[Heat X] Meter reading current [Cooling energy X] Meter reading current [Heat/cooling energy X] Meter reading current	Transmit Transmit Transmit
	Comb. h. and c. ener. Heat or cool. energy	Combined heat and cooling energy meter Heat or cooling energy meter	
Consumption data hot and cold water			
Hot water 1...4	Yes	[Hot water X] Meter reading current	Transmit
Cold water 1...4	Yes	[Cold water X] Meter reading current	Transmit
Consumption data electric., gas, others			
Electricity 1...3	Yes	[Electricity X] Meter reading current	Transmit
Gas 1...3	Yes	[Gas X] Meter reading current	Transmit
Others 1...2	Yes	[Others X] Meter reading current	Transmit

Tables with S-mode DP The tables in Section 17.2 are sorted by application (not inputs/outputs as for the Syncro 700 devices).

Notes In the tables, "Always" in column "DP active" means that it is standard S-mode DP that is always configured in the ETS tool when the central apartment unit is selected.
"S'vis: cont. = Receive" in column "DP active" means that the parameter "Supervision: Contact = Receive" must be set.

Important note With QAX903 and QAX913 central apartment units and in contrast to all other Syncro devices, the following applies under **Function** (ETS3) or **Object Function** (ETS4) in place of:

Input	Receive	Recv (I)
Input / Output	Receive / Transmit	Recv / Trns
Input and Output	Receive and Transmit	Recv and Trns
Output	Transmit	Trns (O)

The meaning of **Receive**, **Transmit** for the QAX9x3 central apartment units is the same as that for **Input**, **Output** in all other Syncro devices. For more information, see Section 1.3.2.

17.2 QAX903, QAX913, S-mode data points

QAX9x3: Time

Name in ETS	Receive Transmit	DP active	Flags C R W T U					Data point type KNX ID	DPT_Name	Format	Unit	Value range	QAX9x3 receives or sends:
System time ⁵⁾	Recv / Trns	Always	1	1	1	1	1	19.001	_DateTime	8 bytes struct.	YYYY MM DD d hh mm ss ---	1900...2155 1...12 1...31 0, 1...7 0...23 0...59 0...59 = Year = Month = Day of Month = Any day, Monday...Sunday = Hours = Minutes = Seconds Status bits ¹⁾	From KNX system time source, receive timeout of 21 min. <u>or</u> to KNX system time receiver, heartbeat 10 min. or for system time adjustment.
Date ⁵⁾	Recv / Trns	Always	1	1	1	1	1	11.001	_Date	3 bytes struct.	YY MM DD	00...99 1...12 1...31 = Year ⁴⁾ = Month = Day of Month	From KNX date source, receive timeout of 21 min. <u>or</u> to KNX date receiver, heartbeat 10 min. or for date adjustment.
Time of day ⁵⁾	Recv / Trns	Always	1	1	1	1	1	10.001	_Time	3 bytes struct.	hh d mm ss	0...23 1...7 0...59 0...59 = Hours = Monday... Sunday = Minutes = Seconds	From KNX time source, receive timeout of 21 min. <u>or</u> to KNX time receiver, heartbeat 10 min. or for time of day adjustment.

¹⁾ See Section 1.4.3, page 13.

⁴⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

QAX9x3: Fault

Name in ETS	Receive Transmit	DP active	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	QAX9x3 receives (I), transmits (O)
Fault information ⁵⁾	Trns (O)	Always	1	1	0	1	0	219.001	_AlarmlInfo ²⁾	6 bytes struct.	---	[0]...255 = Log no. [0..2]...255 = Alarm priority [0..14]...255 = Applicat. area [0..4]...255 = Error class [0..15]...255 = Alarm attributes [0...7]...255 = Fault state	Heartbeat 30 min. or when an error occurs.
Fault state (normal/faulty) ⁵⁾	Trns (O)	Always	1	1	0	1	0	1.005	_Alarm	1 bit B ₁	---	0 = No alarm / normal (default) 1 = Alarm / faulty	Heartbeat 30 min. and for change.
Fault transmission (enable/disable) ⁵⁾	Recv (I)	Always	1	0	1	0	1	1.003	_Enable	1 bit B ₁	---	0 = Disable 1 = Enable (default)	Event from KNX contact, set automatically to 1 without receipt after 48 hours.

²⁾ See Section 1.4.3, page 14.

⁵⁾ See Section 1.5.1, page 16, Standard S-mode DP.

QAX913: Fault inputs

Name in ETS	Receive Transmit	DP active	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	QAX913 receives:
Fault input 1...8: State	Recv (I)	Fault inp X = Receive	1	0	1	0	1	1.001	_Switch	1 bit B ₁	---	0 = Off 1 = On (settable)	Event, no receive timeout.

- You can freely select Fault input 1...8, i.e. you can first configure e.g. Fault input 2.

QAX913: Supervision

Name in ETS	Receive Transmit	DP active	Flags					ID	DPT_Name	Format	Unit	Value range	QAX913 receives (I), transmits (O)
			C	R	W	T	U						
Supervision: Contact	Recv (I)	S'vis: cont. = Receive	1	0	1	0	1	1.017	_Trigger	1 Bit B ₁	---	0 = No action 1 = Toggle supervi-sion state	Event from KNX contact, no receive timeout.
Supervision: State	Trns (O)	S'vis: state = Transmit	1	1	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Not monitored 1 = Monitored	Heartbeat 15 min. and for change.
Water shutoff valve	Trns (O)	W s'off v. = Transmit	1	1	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Open 1 = Closed	Heartbeat 15 min. and for change.
Gas shutoff valve	Trns (O)	Gas s'off v. = Transmit	1	1	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Open 1 = Closed	Heartbeat 15 min. and for change.
Status output [1...4]	Trns (O)	Sta outp X = Transmit	1	1	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On	Heartbeat 15 min. and for change.
Window/door state of apartment (also QAX903)	Trns (O)	Window/ door sta = Transmit	1	1	0	1	0	1.019	_Window_Door	1 Bit B ₁	---	0 = Closed 1 = Open	Heartbeat 15 min. and for change.
[Door 1..2] Door state	Trns (O)	Door sta X = Transmit	1	1	0	1	0	1.019	_Window_Door	1 Bit B ₁	---	0 = Closed 1 = Open	For change.
[Door 1..2] Door state	Recv (I)	Door sta X = Receive	1	0	1	0	1	1.019	_Window_Door	1 Bit B ₁	---	0 = Closed 1 = Open	Event from KNX contact, no receive timeout.
Supervision (enable/disable)	Recv and Trns	Supervis = Yes	1	1	1	1	1	2.005	_Alarm_Control	2 Bit B ₂	---	v c 0 0 = Inactive 0 1 = Inactive 1 0 = Partially monit. 1 1 = All monitored	No receive timeout or heartbeat 15 min. and for change.

- You can freely select [Door 1...2], i.e. you can first configure e.g. [Door 2].

QAX9x3: Outside/Meteo sensors

Name in ETS	Receive Transmit	DP active	Flags					Data point type KNX		Format	Unit	Value range	QAX9x3 receives (I), transmits (O)
			C	R	W	T	U	ID	DPT_Name				
Outside temperature	Trns (O)	Outs temp = Transmit	1	1	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >0.2 °C.
	Recv (I)	Outs temp = Receive	1	0	1	0	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	COV from KNX sensor.
Meteo sensor: Atmospheric pressure measured	Trns (O)	Atmosph pressure = Transmit	1	1	0	1	0	9.006	_Value_Pres	2 Bytes F ₁₆	Pa = N/m ²	[0...670760]	Heartbeat 15 min. and for change >20 Pa.
Meteo sensor: Atmospheric pressure on sea level	Trns (O)		1	1	0	1	0	9.006	_Value_Pres	2 Bytes F ₁₆	Pa = N/m ²	[0...670760]	Heartbeat 15 min. and for change >20 Pa.
Twilight switch (0=Dark; 1=Bright) (QAX913 only)	Recv (I)	Twilight swi = Receive	1	0	1	0	1	1.001	_Switch	1 Bit B ₁	---	0 = Dark 1 = Bright	Event from KNX twilight switch.

QAX913: Switching groups [1...8]

Name in ETS	Receive Transmit	DP active	Flags					ID	DPT_Name	Format	Unit	Value range		QAX913 receives (I), transmits (O)
			C	R	W	T	U							
[Switching group 1...8] Switch	Trns (O)	Swi grp X: Function = Switch	1	0	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On		Event
[Switching group 1...8] Trigger On/Off	Recv (I)		1	0	1	0	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On		From KNX switch, no receive timeout.
[Switching group 1...4] Switch	Trns (O)	Swi grp X: Function = Dim	1	0	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On		Event
[Switching group 1...4] Dim	Trns (O)		1	0	0	1	0	3.007	_Control_Dimming	4 Bit U ₄	---	On/Off via switching U ₄ U ₃ U ₂ U ₁ 0 0 0 1 = Dunkler 1 0 0 1 = Heller 0 0 0 0 = Stop		Event
[Switching group 1...4] Trigger On/Off	Recv (I)		1	0	1	0	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On		From KNX switch, no receive timeout.
[Switching group 1...4] Blind Step/Stop	Trns (O)	Swi grp X: Function = Blind	1	0	0	1	0	1.007	_Step	1 Bit B ₁	---	0 = Step up 1 = Step down		Event
[Switching group 1...8] Blind Up/Down	Trns (O)		1	0	0	1	0	1.008	_UpDown	1 Bit B ₁	---	0 = Up 1 = Down		Event
[Switching group 1...8] Trigger Up/Down	Recv (I)		1	0	1	0	0	1.008	_Switch	1 Bit B ₁	---	0 = Up 1 = Down		From KNX switch, no receive timeout.
[Switching group 1...8] Scene	Trns (O)	Swi grp X: Function = Scene	1	0	0	1	0	18.001	_SceneControl	1 Byte B ₁ r ₁ U ₆	---	B ₁ 0 = Activate Scene 1 = Learn Scene r ₁ (Reserve) U ₆ Scene number 0...63		Event
[Switching group 1...8] Trigger (0=Scene A, 1=Scene B)	Recv (I)		1	0	1	0	0	1.022	_Scene_AB	1 Bit B ₁	---	0 = Activate Scene A 1 = Activate Scene B		From KNX switch, no receive timeout.

- You can freely select [Switching group 1...8], i.e. you can first configure e.g. [Switching group 4].

QAX913: Light status indication

Name in ETS	Receive Transmit	DP active	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	QAX913 receives
Light status indication Lamp 1...4	Recv (I)	Lamp X = Receive	1	0	1	0	1	1.001	_Switch	1 Bit B1	---	0 = Off 1 = On	From KNX light actor, no receive timeout.

- You can freely select Lamp 1...4, i.e. you can first configure e.g. Lamp 3.

QAX9x3: Apartment functions

Name in ETS	Receive Transmit	DP active	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	QAX9x3 receives (I), transmits (O)
[Domestic hot water] Forced charging (QAX913 only)	Recv (I)	Domestic hot water = Yes	1	0	1	0	0	1.017	_Trigger	1 Bit B1	---	0 = No action 1 = Forced charging	Event from KNX contact, no receive timeout.
[Domestic hot water] Operating mode: Preselection (QAX913 only)	Recv and Trns		1	1	1	1	1	20.103	_DHWMode	1 Byte N ₈	Enum.	0 = Auto 1 = Legionella protection 2 = Normal temp. 3 = Reduced temp. 4 = Protection mode	No receive timeout or heartbeat 15 min. and for change.
[Domestic hot water] Operating mode: State (QAX913 only)	Trns (O)		1	1	0	1	0	20.103	_DHWMode	1 Byte N ₈	Enum.	1 = Legionella protection 2 = Normal temp. 3 = Reduced temp. 4 = Protection mode	Heartbeat 15 min. and for change.
[Domestic hot water] Storage tank temp: Setpoint (QAX913 only)	Recv and Trns		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	No receive timeout or heartbeat 15 min. and for change.
[Domestic hot water] Storage tank temp: Curr value (QAX913 only)	Trns (O)		1	1	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >2 °C.
Absence: Contact	Recv (I)	Absence = Yes	1	0	1	0	1	1.018	_Occupancy	1 Bit B1	---	0 = Not occupied / absent 1 = Occupied / present	From KNX contact, no receive timeout.
Absence: State	Trns (O)		1	1	0	1	0	1.018	_Occupancy	1 Bit B1	---	0 = Not occupied / absent 1 = Occupied / present	Heartbeat 15 min. and for change.

QAX9x3: Apartment functions (continued)

Name in ETS	Receive Transmit	DP active	Flags					ID	Data point type KNX DPT_Name	Format	Unit	Value range	QAX9x3 receives (I), transmits (O)
			C	R	W	T	U						
Apartment operating mode: Preselection	Recv and Trns	Apartment operating mode = Yes	1	1	1	1	1	20.102	_HVACMode	1 Byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection mode (Building protection)	No receive timeout or bei Änderung
Apartment operating mode: Comfort release	Recv (I)		1	0	1	0	1	1.003	_Enable	1 Bit B ₁	---	0 = Disable 1 = Enable (default)	Receive timeout 31 min.
Heating summer operation: State	Trns (O)	Heating sum. oper = Transmit	1	1	0	1	0	1.002	_Bool	1 Bit B ₁	---	0 = Kein Vorgabe (default) 1 = Sommerbetrieb	Heartbeat 15 min. and for change.
Heating summer operation: Preselection	Recv (I)	Heating sum. oper = Receive	1	0	1	0	1	1.002	_Bool	1 Bit B ₁	---	0 = No preselection (default) 1 = Summer mode	From KNX contact, receive timeout 31 min.
Cooling release: Preselection	Recv (I)	Cooling release = Yes	1	1	0	1	0	1.002	_Bool	1 Bit B ₁	---	0 = No preselection (default) 1 = Summer mode	From KNX contact, receive timeout 31 min.
Cooling release: State	Trns (O)		1	0	1	0	1	1.002	_Bool	1 Bit B ₁	---	0 = No preselection (default) 1 = Summer mode	Heartbeat 15 min. and for change.
Heating/cooling changeover	Recv (I)	2-pipe H/C system = Receive	1	0	1	0	1	1.002	_Bool	1 Bit B ₁	---	0 = Kühlbetrieb 1 = Heizbetrieb (default)	From KNX contact, receive timeout 31 min.
Dew point	Recv (I)	Dew point = Receive	1	0	1	0	1	1.002	_Bool	1 Bit B ₁	---	0 = nicht aktiv (default) 1 = aktiv	From KNX contact, receive timeout 31 min.
Heat demand absolute [°C]	Trns (O)	Heat demand = Transmit	1	1	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >2 °C.
Refrigeration demand absolute [°C]	Trns (O)	Refrig. demand = Transmit	1	1	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >2 °C.
Exhaust hood: Release	Trns (O)	Exhaust hood = Transmit	1	1	0	1	0	1.003	_Enable	1 Bit B ₁	---	0 = Disable 1 = Enable	Heartbeat 15 min. and for change.

QAX9x3: Ventilation

Name in ETS	Receive Transmit	DP active	Flags					Data point type KNX			Value range	QAX9x3 receives (I), transmits (O)
			C	R	W	T	U	ID	DPT_Name	Format	Unit	
[Ventilation] Stage selection	Recv and Trns	Ventilation stage = Yes	1	1	1	1	1	20.60172	_StepSelectorSwitch	1 Byte N ₈	Enum.	0 = Auto 1 = Off 2 = Stage 1 3 = Stage 2 4 = Stage 3
[Ventilation] Ventilation stage	Trns (O)		1	1	0	1	0	20.60190	_StepSelectorSwitch2	1 Byte U ₈	Enum.	0 = Off 1 = Stage 1 2 = Stage 2 3 = Stage 3
[Ventilation] Ventilation stage [%]	Trns (O)		1	1	0	1	0	5.001	_Scaling	1 Byte U ₈	%	[0...100] Resolution 1%
[Ventilation] Contact 1...2	Recv (I)	Vent cont X = Receive	1	0	1	0	1	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On
Air quality	Trns (O)	Air quality = Transmit	1	1	0	1	0	9.008	_Value_AirQuality	2 Bytes F ₁₆	ppm	[0...670760]
	Recv (I)	Air quality = Receive	1	0	1	0	1	9.008	_Value_AirQuality	2 Bytes F ₁₆	ppm	[0...670760]
	Trns (O)	Air humidity = Transmit	1	1	0	1	0	9.007	_Value_Humidity	2 Bytes F ₁₆	%	[0...670760]
Air humidity	Recv (I)	Air humidity = Receive	1	0	1	0	1	9.007	_Value_Humidity	2 Bytes F ₁₆	%	[0...670760]
	Trns (O)	Firepl mode = Transmit	1	1	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On
Fireplace mode	Recv (I)	Firepl mode = Receive	1	0	1	0	1	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On

QAX913: Temperature display

Name in ETS	Receive Transmit	DP active	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	QAX913 receives (I), transmits (O)
[Temperature display] Sensor 1...3	Trns (O)	Sensor X = Transmit	1	1	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >0.2 °C.
	Recv (I)	Sensor X = Receive	1	0	1	0	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Event, no receive timeout

- You can freely select [Temperature display] Sensor 1...3, i.e. you can first configure e.g. [Temperature display] Sensor 3.

QAX9x3: Rooms [1...12]

Name in ETS	Receive Transmit	DP active	Flags C R W T U					Data point type KNX ID DPT_Name		Format	Unit	Value range	QAX9x3 receives (I), transmits (O)
[Room 1...12] Room temperature: Current value	Trns (O)	Rm temp.: Current val = Transmit	1	1	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >0.04 °C.
	Recv (I)	Rm temp.: Current val = Receive	1	0	1	0	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX sensor, receive timeout 31 min.
[Room 1...12] Room temperature: Current setpoint	Trns (O)	Rm temp.: Curr. setp = Transmit	1	1	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	Heartbeat 15 min. and for change >0.04 °C.
[Room 1...12] Operating mode: Preselection	Recv and Trns	Room control (heating) = Yes	1	1	1	1	1	20.102	_HVACMode	1 Byte N ₈	Enum.	0 = Auto 1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection mode (Building protection)	Event from KNX mode preselection (device/program), no receive timeout <u>or</u> for change.
[Room 1...12] Operating mode: State	Trns (O)		1	1	0	1	0	20.102	_HVACMode	1 Byte N ₈	Enum.	1 = Comfort 2 = Precomfort (Standby) 3 = Economy 4 = Protection mode (Building protection)	Heartbeat 15 min. and for change.

QAX9x3: Rooms [1...12] (continued)

Name in ETS	Receive Transmit	DP active	Flags					Data point type KNX			Value range		QAX9x3 receives (I), transmits (O)
			C	R	W	T	U	ID	DPT_Name	Format	Unit		
[Room 1...12] Room temperature: Economy heating setpoint	Recv and Trns	Room control (heating) = Yes	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout or for change.
[Room 1...12] Room temperature: Precomfort heating setpoint	Recv and Trns		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout or for change.
[Room 1...12] Room temperature: Comfort heating setpoint	Recv and Trns		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout or for change.
[Room 1...12] Valve position	Trns (O)	Valve pos = Transmit	1	1	0	1	0	5.001	_Scaling	1 Byte U ₈	%	[0...100] Resolution 1%	Heartbeat 15 min. and for change >5%.
[Room 1...12] Cooling: Release	Trns (O)	Cool / Rm controller = With cool release	1	1	0	1	0	1.003	_Enable	1 Bit B ₁	---	0 = Disable 1 = Enable	Heartbeat 15 min. and for change.
[Room 1...12] Air conditioner: On/Off	Trns (O)	Cool / Rm controller = With air conditioner	1	1	0	1	0	1.001	_Switch	1 Bit B ₁	---	0 = Off 1 = On	Upon a change of one of the three DPs, all three DPs are sent (e.g. to ZN1CL-IRSC by Zennio).
Series A [Room 1...12] Air conditioner: Operating mode ¹⁾	Trns (O)		1	1	0	1	0	20.60174	_SPUCOpMode	1 Byte N ₈	Enum.	0 = Auto 1 = Heating 4 = Cooling	
From series B [Room 1...12] Air conditioner: Operating mode ²⁾	Trns (O)		1	1	0	1	0	20.105	_HVCCContrMode	1 Byte N ₈	Enum.	0 = Auto 1 = Heating 3 = Cooling 6 = Off	
[Room 1...12] Air conditioner: Room temp. curr. setp.	Trns (O)		1	1	0	1	0	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	
[Room 1...12] Room controller: Application mode	Trns (O)	Cool / Rm controller = With room controller	1	1	0	1	0	20.105	_HVCCContrMode	1 Byte N ₈	Enum.	0 = Auto 1 = Heating 3 = Cooling 6 = Off	Heartbeat 15 min. and for change.

¹⁾ Compatible with Zennio IRSC Plus **V4.xx**

²⁾ Compatible with Zennio IRSC Plus **from V5.xx**

QAX9x3: Rooms [1...12] (continued)

Name in ETS	Receive Transmit	DP active	Flags					ID	DPT_Name	Format	Unit	Value range	QAX9x3 receives (I), transmits (O)
			C	R	W	T	U						
[Room 1...12] Room temperature: Economy heating setpoint	Recv and Trns	Cool / Rm controller = With air conditioner = With room controller	1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout or for change.
[Room 1...12] Room temperature: Precomfort heating setpoint	Recv and Trns		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout or for change.
[Room 1...12] Room temperature: Comfort heating setpoint	Recv and Trns		1	1	1	1	1	9.001	_Value_Temp	2 Bytes F ₁₆	°C	-273.00...+670760.00 Floating point	From KNX setpoint source, no receive timeout or for change.
[Room 1...12] Window	Trns (O)	Wind. state = Transmit	1	1	0	1	0	1.019	_Window_Door	1 Bit B ₁	---	0 = Closed 1 = Open	For change only.
	Recv (I)	Wind. state = Receive	1	0	1	0	1	1.019	_Window_Door	1 Bit B ₁	---	0 = Closed 1 = Open	From KNX window contact, no receive timeout.
[Room 1...12] Smoke (QAX913 only)	Trns (O)	Smoke indic = Transmit	1	1	0	1	0	1.005	_Alarm	1 Bit B ₁	---	0 = No alarm / normal (default) 1 = Alarm / faulty	For change only.
	Recv (I)	Smoke indic = Receive	1	0	1	0	1	1.005	_Alarm	1 Bit B ₁	---	0 = No alarm / normal (default) 1 = Alarm / faulty	No actual receive timeout (if no alarms are received for 15 min., input is set to 0).

- You can freely select [Room 1...12], i.e. you can first configure e.g. [Room 7].

QAX9x3: Consumption data heat / cooling energy

Name in ETS	Transmit	DP active	Flags C R W T U					Data point type KNX ID DPT_Name			Value range		QAX9x3 transmits (O)	
[Heat 1...4] Meter reading current	Trns (O)	Heat / cool energy X = Comb. heat and cool energy	1	1	0	1	0	12.001 _Value_4_Ucount			4 Bytes U ₃₂	---	0...+2 ³²	For change.
[Cooling energy 1...4] Meter reading current	Trns (O)		1	1	0	1	0	12.001 _Value_4_Ucount			4 Bytes U ₃₂	---	0...+2 ³²	For change.
[Heat/cooling energy 1...4] Meter reading current	Trns (O)	Heat / cool energy X = heat or cool energy	1	1	0	1	0	12.001	_Value_4_Ucount		4 Bytes U ₃₂	---	0...+2 ³²	For change.

QAX9x3: Consumption data hot and cold water

Name in ETS	Transmit	DP active	Flags C R W T U					Data point type KNX ID DPT_Name			Value range		QAX9x3 transmits (O)	
[Hot water 1...4] Meter reading current	Trns (O)	Hot water X = Yes	1	1	0	1	0	12.001 _Value_4_Ucount			4 Bytes U ₃₂	---	0...+2 ³²	For change.
[Cold water 1...4] Meter reading current	Trns (O)	Cold w X = Yes	1	1	0	1	0	12.001 _Value_4_Ucount			4 Bytes U ₃₂	---	0...+2 ³²	For change.

QAX9x3: Consumption data electric., gas, others

Name in ETS	Transmit	DP active	Flags C R W T U					Data point type KNX ID DPT_Name			Value range		QAX9x3 transmits (O)	
[Electricity 1...3] Meter reading current	Trns (O)	Electricity X = Yes	1	1	0	1	0	12.001 _Value_4_Ucount			4 Bytes U ₃₂	---	0...+2 ³²	For change.
[Gas 1...3] Meter reading current	Trns (O)	Gas X = Yes	1	1	0	1	0	12.001 _Value_4_Ucount			4 Bytes U ₃₂	---	0...+2 ³²	For change.
[Others 1...2] Meter reading current	Trns (O)	Others X = Yes	1	1	0	1	0	12.001 _Value_4_Ucount			4 Bytes U ₃₂	---	0...+2 ³²	For change.

Blank page

18 Index

A	
Abbreviations	8
Area 0	9
Area line 0	9
Areas 1...15	9
Assign parameter value	19
B	
Basic types RMH760	63
Basic types RMU7x0B	24
Basic types RMU7x0B Step 3	24
C	
Comfort button	16
Communication flags	14
Communication object	7
D	
Data point formats.....	15
Data point inputs / outputs	12
Device address	10
DPT, data point type	8
DPT_AlarmInfo	16
DPT_Date	16
DPT_DateTime	15
DPT_Trigger	16
E	
Edit Parameters	19
F	
Fixed group addresses	12
G	
Group address	11
Group object:	7
I	
Import files	7
Individual address	10
K	
KNX network	9
L	
Lines 1...15.....	9
LTE mode	7
M	
Main lines 1..15.....	9
N	
Network address	10
O	
Out of Service	18
Overview	
Boiler sequence controller RMK770	83
Boiler sequence controller RMK770 V2.0.....	83
Bus operator units RMZ792, RMZ792B	137
Central apartment unit QAX910	189
Central apartment units QAX903, QAX913	211
Central communication unit OZW771	141
Central communication unit OZW775.....	145
Central control unit RMB795.....	97
Central control unit RMB795B	97
Heating controller RMH760	63
Heating controller RMH760B	63
Room thermostat RD600KN	155
Room thermostat RDG100KN	173
Room thermostat RDG400KN	181
Room thermostat RDU341	165
Room thermostats RDF301, RDF301.50.....	155
Room unit QAW740	153
Switching and monitoring device RMS705	117
Switching and monitoring device RMS705B.....	117
Universal controllers RMU7x0	23
Universal controllers RMU7x0B	23
Universal controllers RMU7x0B Step 3	23
Web server OZW772 V2.0, OZW772 V3.0	149
OZW771: Inputs	143
OZW771: Inputs / Outputs	142
OZW771: Outputs	143
OZW772: Inputs	151
OZW772: Inputs / Outputs	150
OZW772: Outputs	151
OZW775: Inputs	147
OZW775: Inputs / Outputs	146
OZW775: Outputs	147
P	
Parameterization in ETS	17
Plant types, RMH760B.....	64
Product data	7
Q	
QAW740: Outputs	154
QAX910: Apartment functions.....	203
QAX910: Fault.....	200
QAX910: Fault inputs	200
QAX910: Light status indication	203
QAX910: Outside/Meteo sensors.....	201
QAX910: Rooms [1...12]	207
QAX910: Rooms [1...12] Room control, Cooling	209
QAX910: Rooms [1...12] Room control, Cooling / Room controller.....	210
QAX910: Supervision.....	201
QAX910: Switching groups [1...8].....	202
QAX910: Temperature display	206
QAX910: Time	199
QAX910: Ventilation.....	205
QAX913: Fault inputs	221
QAX913: Light status indication	225
QAX913: Supervision	222
QAX913: Switching groups [1...8].....	224
QAX913: Temperature display	228
QAX9x3: Apartment functions	225
QAX9x3: Consumption data electric., gas, others ..	231

QAX9x3: Consumption data heat / cooling energy	231	RMK770 V2.0: Outputs	91
QAX9x3: Consumption data hot and cold water	231	RMK770 V2.0: Terminals	93
QAX9x3: Fault	221	RMK770: Inputs	85
QAX9x3: Outside/Meteo sensors	223	RMK770: Inputs / Outputs	84
QAX9x3: Rooms [1...12]	228	RMK770: Outputs	87
QAX9x3: Time	220	RMS705: Inputs	121
QAX9x3: Ventilation	227	RMS705: Inputs / Outputs	119
R		RMS705: Inputs and outputs	120
RDF301... : Inputs	158	RMS705: Outputs	122
RDF301... : Inputs and outputs	156	RMS705: Terminals	123
RDF301... : Outputs	161	RMS705B: Inputs	128
RDF301.50: Outputs	163	RMS705B: Inputs / Outputs	126
RDF301.50: Outputs and inputs (Synchr. inputs)	157	RMS705B: Inputs and outputs	127
RDF600KN: Inputs	158	RMS705B: Outputs	129
RDF600KN: Inputs and outputs	156	RMS705B: Terminal inputs as Rec. objects	132
RDF600KN: Outputs	161	RMS705B: Terminal outputs as Trans. objects	133
RDG100KN: Inputs	175	RMS705B: Terminals inputs as Trans. objects	133
RDG100KN: Inputs and outputs	174	RMU7x0: Inputs	26
RDG100KN: Outputs	178	RMU7x0: Inputs / Outputs	25
RDG400KN: Inputs	183	RMU7x0: Outputs	28
RDG400KN: Inputs and outputs	182	RMU7x0B Step 3: Inputs / Outputs, Type A	38
RDG400KN: Outputs	186	RMU7x0B Step 3: Inputs / Outputs, Type C	48
RDU341: Inputs	167	RMU7x0B Step 3: Inputs / Outputs, Type P	44
RDU341: Inputs and outputs	166	RMU7x0B Step 3: Inputs / Outputs, Type U	52
RDU341: Outputs	170	RMU7x0B Step 3: Inputs and outputs, Type A	39
RMB795: Inputs	101	RMU7x0B Step 3: Inputs and outputs, Type C	49
RMB795: Inputs / Outputs	99	RMU7x0B Step 3: Inputs and outputs, Type P	45
RMB795: Inputs and outputs	100	RMU7x0B Step 3: Inputs and outputs, Type U	53
RMB795: Outputs	102	RMU7x0B Step 3: Inputs, Basic type A	41
RMB795: Terminals	103	RMU7x0B Step 3: Inputs, Basic type C	50
RMB795B: Inputs (Reveive)	108	RMU7x0B Step 3: Inputs, Basic type P	46
RMB795B: Inputs / Outputs	106	RMU7x0B Step 3: Inputs, Basic type U	54
RMB795B: Inputs and Outputs	107	RMU7x0B Step 3: Outputs, Basic type A	42
RMB795B: Outputs (Send)	109	RMU7x0B Step 3: Outputs, Basic type C	51
RMB795B: Terminal inputs as reception objects	110	RMU7x0B Step 3: Outputs, Basic type P	47
RMB795B: Terminal inputs as reception objects, Extension modules RMZ78x	113	RMU7x0B Step 3: Outputs, Basic type U	55
RMB795B: Terminal inputs as transmis. objects	111	RMU7x0B Step 3: Terminal inputs as reception objects, all Basic types	57
RMB795B: Terminal inputs as transmis. objects, Extension modules RMZ78x	114	RMU7x0B Step 3: Terminal inputs as transmission objects, all Basic types	58
RMB795B: Terminal outputs as transmis. objects	112	RMU7x0B Step 3: Terminal outputs as transmission objects, all Basic types	59
RMB795B: Terminal outputs as transmis. objects, Extension modules RMZ78x	115	RMU7x0B: Basic types	24
RMH760: Basic types	63	RMU7x0B: Inputs	32
RMH760: Inputs	67	RMU7x0B: Inputs / Outputs	29
RMH760: Inputs / Outputs	66	RMU7x0B: Inputs and outputs	30
RMH760: Outputs	70	RMU7x0B: Outputs	33
RMH760B: Inputs	74	RMU7x0B: Terminals	35
RMH760B: Inputs / Outputs	72	RMZ792, RMZ792B: Inputs	138
RMH760B: Inputs and outputs	73	RMZ792, RMZ792B: Outputs	139
RMH760B: Outputs	76	S	
RMH760B: Plant types	64	S-mode data points	8
RMH760B: Terminals	80	S-mode DP	8
RMK770 V2.0: Inputs	90	S-mode DP sends 0	18
RMK770 V2.0: Inputs / Outputs	89	Standard S-mode DP	18

Subnetwork	10
T	
Terminal inputs as reception objects, Extension modules RMZ78x	60
Terminal inputs as transmission objects, Extension modules RMZ78x	61
Terminal outputs as transmission objects, Extension modules RMZ78x	62
Timer button	16
Transmission medium KNX TP1	7
V	
View, All Devices	17
Z	
Zone addresses	7

Siemens Switzerland Ltd
Infrastructure & Cities Sector
Building Technologies Division
Gubelstrasse 22
CH-6301 Zug
Tel. +41 41-724 24 24
<http://www.siemens.com/sbt>

© 2004-2012 Siemens Switzerland Ltd
Subject to change